
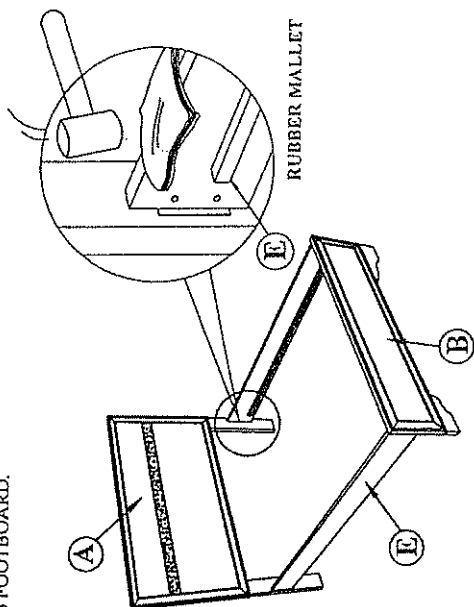


MODEL : 0138B/0162B  
TWIN BED

MODEL: 0138B/0162B  
TWIN BED

**STEP 1:** Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

**STEP 2 :** Hook SIDE RAIL (E) TO HEAD BOARD closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD.

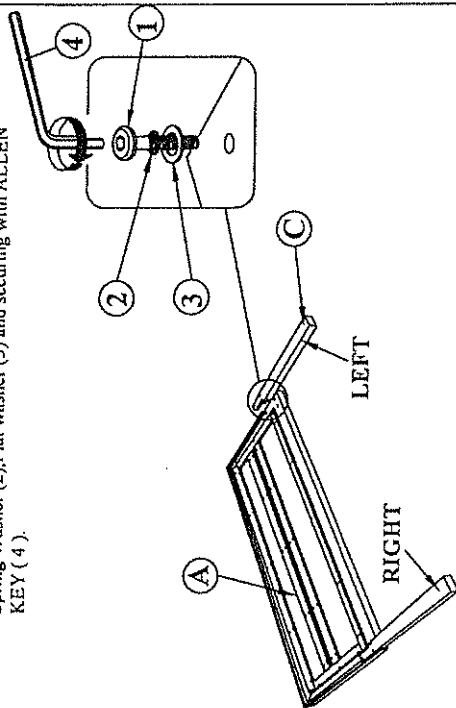


(Box 2)  
BOX OF SIDE RAIL

| No | ITEM                                                                                             | Qty   |
|----|--------------------------------------------------------------------------------------------------|-------|
| E  | Side Rail<br> | 2 pcs |

**STEP 2 :** Install the bed slat ( D ) to side rail ( E ) and tighten with Csk Screw ( 5 ) as per diagram shown. (NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

### STEP 3.1:

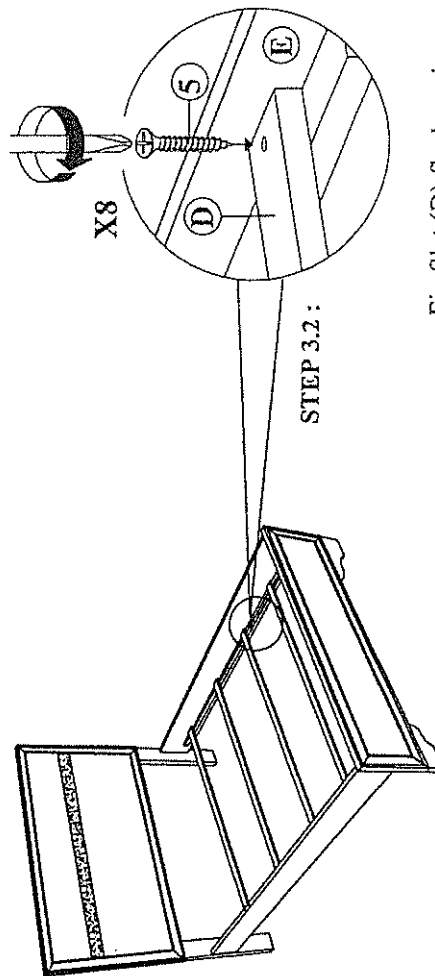

**STEP 3.2:**

Fix Slat (D) flush against Side Rail (E) using screw driver & CSK screw (5).

NOTE: MUST TIGHTEN SCREWS PERIODICALLY. SCREW NATURALLY LOOSEN WITH USE. CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.