

CLASSIC DESIGNS

BY



CARSEN COLLECTION



- Made in America since 1966 -

CARSEN

LOREM IPSUM DOLOR SIT AMET, CONSECTETUR ADIPISCING ELIT, SED DO EIUSMOD TEMPOR INCIDIDUNT UT LABORE ET DOLORE MAGNA ALIQUA. UT ENIM AD MINIM VENIAM, QUIS NOSTRUD EXERCITATION ULLAMCO LABORIS NISI UT ALIQUIP EX EA COMMODO CONSEQUAT.



STYLE: 91-22 CHAIR
90 OTTOMAN



STYLE: 93-72-3/3
*SHOWN WITH BF-17 BUN FOOT AND
WELT TRIM OPTION.

SELECT YOUR FOOT STYLE:



BF-17
H3" D4¼"



BF-19
H3" D4"



BF-25
H2½" D3¾"



BF-30
H2" D4"

SELECT YOUR BACK AND SEAT CUSHION TRIM:



SADDLE STITCH - SS




TOP STITCH - TS



WELT TRIM - WT

TRANSITIONAL

***Overall height & seat height are based on 3" leg height. Different leg options will determine overall height & seat height.*

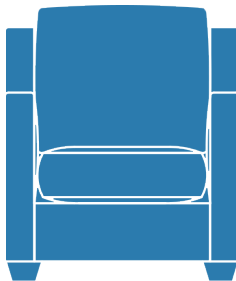

22" CHAIR
91-22

OVERALL:

H	37
W	30½
D	38

INSIDE:

SH	20
W	22
D	21
AH	25



CARSEN OTTOMAN
90

18

****SEAT DEPTH MAY BE INCREASED 3" BY ADDING "X" AFTER THE STYLE NUMBER (I.E. 36X, 37X, 38X). WHEN INCREASING CHAIR DEPTH BY 3", INSIDE WIDTH WILL INCREASE TO 24".**



SIDEVIEW OF THE CARSEN COLLECTION

SOFAS

78" - 3 OVER 3
93 - 78 - 3/3

OVERALL:

H	37
W	86½
D	38

INSIDE:

SH	20
W	78
D	21
AH	25

72" - 3 OVER 3
93 - 72 - 3/3


H	37
W	80½
D	38

SH	20
W	72
D	21
AH	25

66" - 3 OVER 3
93 - 66 - 3/3

H	37
W	74½
D	38

SH	20
W	66
D	21
AH	25

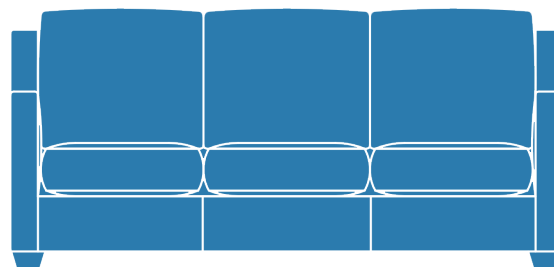

66" - 2 OVER 2
93 - 66 - 2/2

OVERALL:

H	37
W	74½
D	38

INSIDE:

SH	20
W	66
D	21
AH	25

60" - 2 OVER 2
93 - 60 - 2/2

H	37
W	68½
D	38

SH	20
W	60
D	21
AH	25

60" - 2 OVER 1
93 - 60 - 2/1

H	37
W	68½
D	38

SH	20
W	60
D	21
AH	25



LOVESEATS

44" - 2 OVER 2
92 - 44 - 2/2

OVERALL:

H	37
W	52½
D	38


INSIDE:

SH	20
W	44
D	21
AH	25


44" - 2 OVER 1
92 - 44 - 2/1

H	37
W	52½
D	38

SH	20
W	44
D	21
AH	25

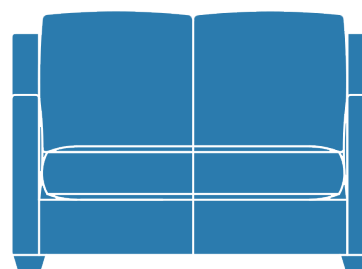

CARSEN SECTIONAL

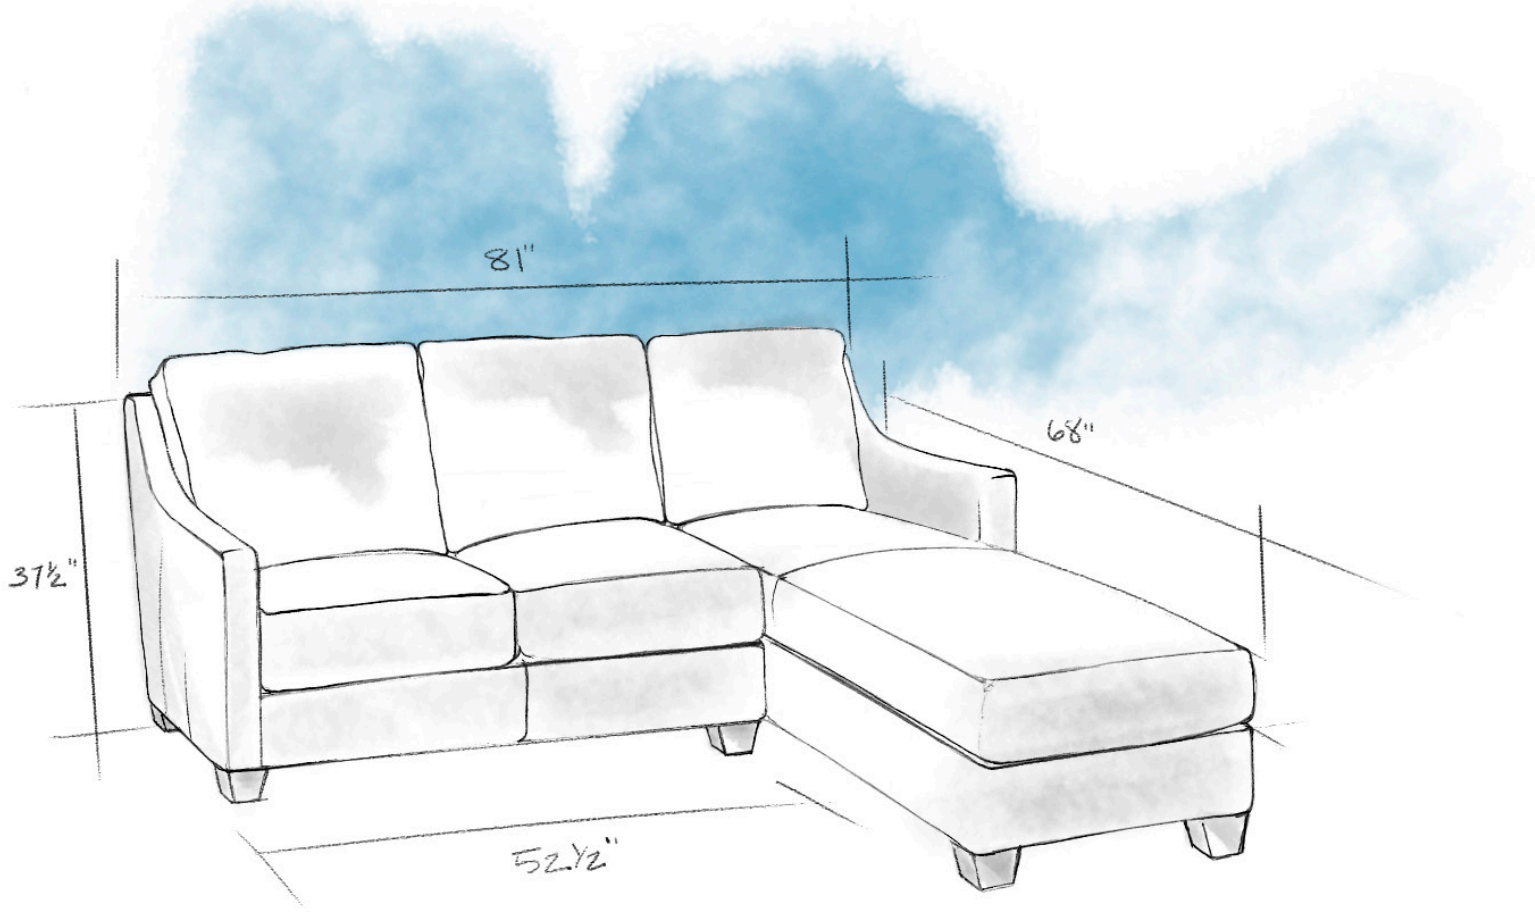

STYLE: 92-48-2/2-LAF & 91-24-CH-RAF
*SHOWN WITH BF-17 BUN FOOT AND SADDLE-STITCH TRIM OPTION.

SELECT YOUR FOOT STYLE:



BF-17
H3" D4 1/4"



BF-19
H3" D4"



BF-25
H2 1/2" D3 3/4"



BF-30
H2" D4"

SELECT YOUR BACK AND SEAT CUSHION TRIM:



SADDLE STITCH - SS




TOP STITCH - TS




WELT TRIM - WT

ARMLESS

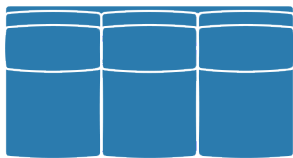

ARMLESS SOFA
93-72-3/3-A
OVERALL: H37 W72 D38
INSIDE: W72 D21
SEAT: H20

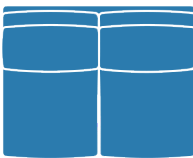


ARMLESS LOVESEAT
92-48-2/2-A
OVERALL: H37 W48 D38
INSIDE: W48 D21
SEAT: H20




ARMLESS CHAIR
91-24-A
OVERALL: H37 W24 D38
INSIDE: W24 D21
SEAT: H20


ARM FACING

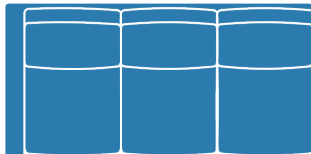


LEFT ARM FACING SOFA
93-72-3/3-LAF
OVERALL: H37 W76½ D38
INSIDE: W72 D21
SEAT: H20
ARM: H25

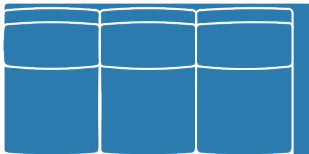

RIGHT ARM FACING SOFA
93-72-3/3-RAF
OVERALL: H37 W76½ D38
INSIDE: W72 D21
SEAT: H20
ARM: H25

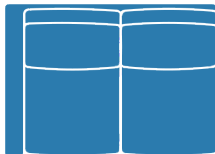

LEFT ARM FACING LOVESEAT
92-48-2/2-LAF
OVERALL: H37 W52½ D38
INSIDE: W48 D21
SEAT: H20
ARM: H25

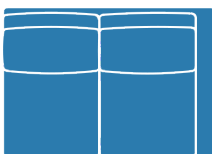


RIGHT ARM FACING LOVESEAT
92-48-2/2-RAF
OVERALL: H37 W52½ D38
INSIDE: W48 D21
SEAT: H20
ARM: H25




LEFT ARM FACING CHAIR
91-24-LAF
OVERALL: H37 W28½ D38
INSIDE: W24 D21
SEAT: H20
ARM: H25




RIGHT ARM FACING CHAIR
91-24-RAF
OVERALL: H37 W28½ D38
INSIDE: W24 D21
SEAT: H20
ARM: H25

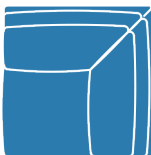

CORNER CHAIR
91-C
OVERALL: H37 W38 D38
INSIDE: W21 D21
SEAT: H20

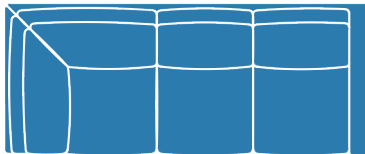

LEFT ARM FACING CORNER SOFA
94-70-3/3-LAF
OVERALL: H37 W92 D38
INSIDE: W69 D21
SEAT: H20
ARM: H25

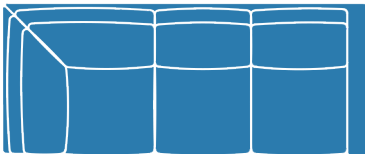


RIGHT ARM FACING CORNER SOFA
94-70-3/3-RAF
OVERALL: H37 W92 D38
INSIDE: W69 D21
SEAT: H20
ARM: H25




LEFT ARM FACING CHAISE
91-24-CH-LAF
OVERALL: H37 W28½ D68
INSIDE: W24 D51
SEAT: H20
ARM: H25



RIGHT ARM FACING CHAISE
91-24-CH-RAF
OVERALL: H37 W28½ D68
INSIDE: W24 D51
SEAT: H20
ARM: H25

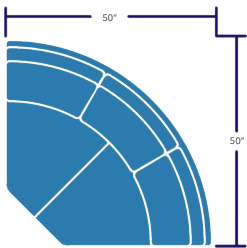

ROUND CHAIR
91-R
OVERALL: H37 W73 D38
INSIDE: W48½ D25
SEAT: H20

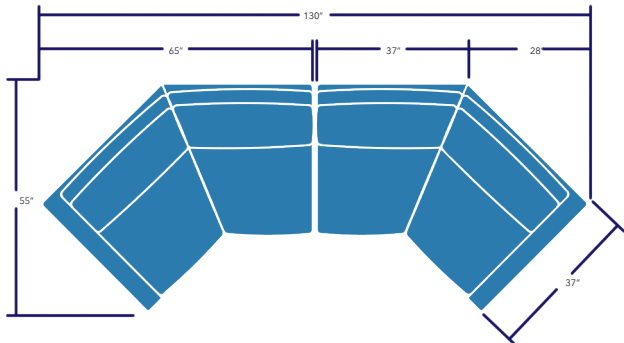

LEFT/RIGHT ARM FACING WEDGE LOVESEAT
92-2/2-LA/
OVERALL: H37 W68 D59
INSIDE: W53 D21
SEAT: H20
ARM: H25