


Alaterre Furniture





Large Desk


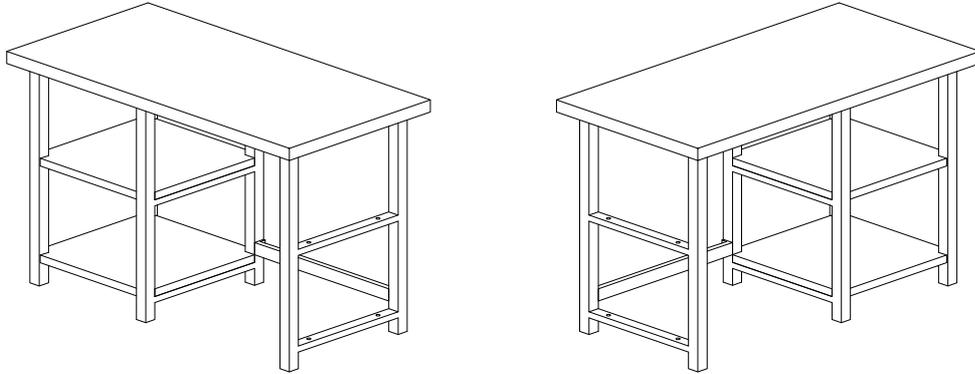


Thank you for purchasing the Large Desk from ALATERRE FURNITURE. We have found it helpful to have a second person present during the assembly process.

Large Desk Assembly Instructions


Parts

NO.	DRAWING	DESCRIPTION	QTY
A		METAL FRAME	1
B		METAL FRAME	1
C		METAL FRAME	1
D		BACK RAIL	1

NO.	DRAWING	DESCRIPTION	QTY
E		TABLE TOP	1
F		SHELF	2

NO.	DRAWING	DESCRIPTION	QTY
G		M6x35MM BOLT	14
H		M6x20MM BOLT	2
I		ALLEN KEY	2
J		M6x15MM BOLT	4
K		CONNECTOR BOLT	4

IF YOU WANT SUB ASSEMBLY ON LEFT HAND

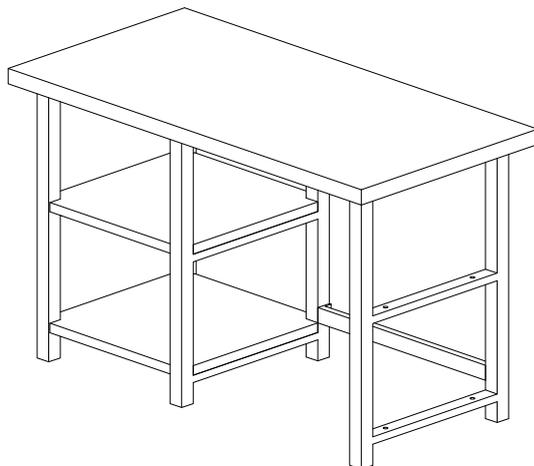

Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non-abrasive surface to prevent damage to the finish


Step 3

Lay Metal Frame Assembly (A) & (B) on a non-abrasive surface. Attach Shelf (F) to Metal Frame (A) & (B) using 8-M6x35MM Hex Bolts (G). NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME !

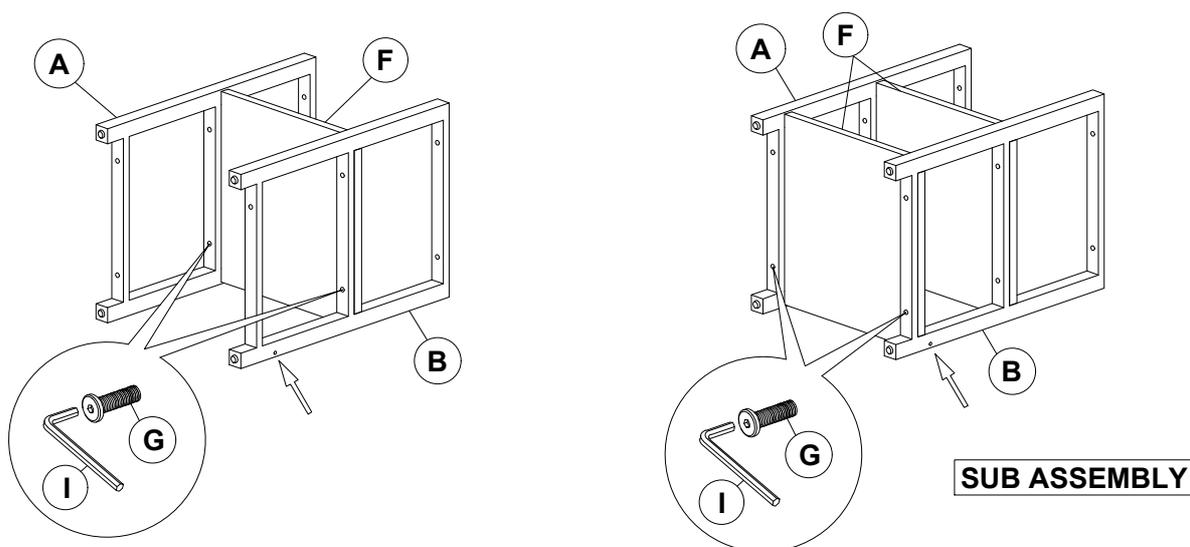


Step 4

Lay Table Top Assembly (E) on a non-abrasive surface. Attach Sub Assembly from Step 3 to Table Top (E) using 4-M6x35MM Hex Bolts (G). Attach Metal Frame (C) to Table Top (E) using 2-M6x35MM Hex Bolts (G) NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME !

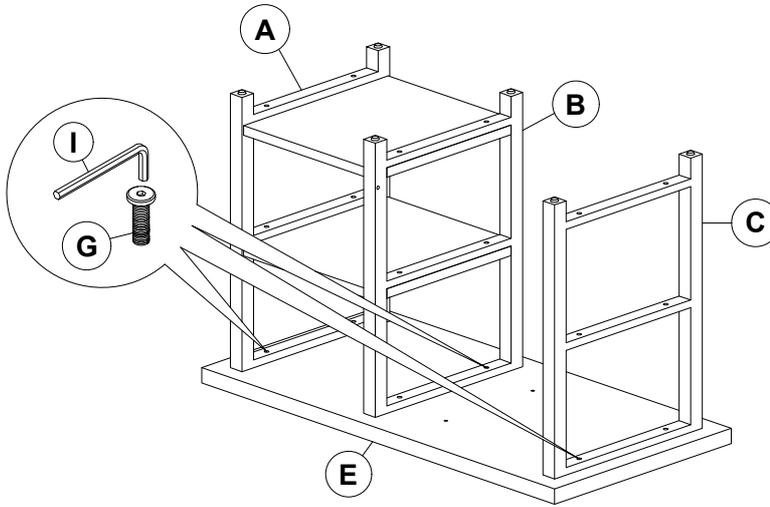

Step

Attach Back Rail (D) to Metal Frame (B) & (C) using 2-M6x20MM Hex Bolts (H) NOTE: TIGHTEN ALL BOLTS AT THIS TIME ! Attach 4-M6x15MM Hex Bolts (J) and Connector Bolts (K) to holes on Metal Frame (C).

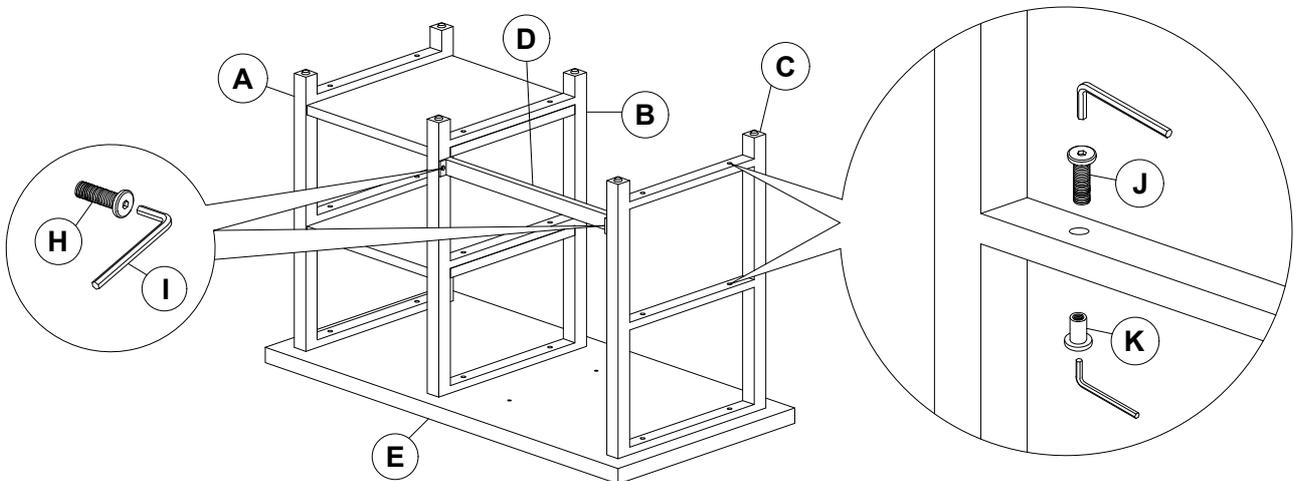


CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

REPLACEMENT PARTS:

For best service, to order replacement parts go to www.alaterrefurniture.com. Use the order form on the website to order your replacement parts. Thank You!

IF YOU WANT SUB ASSEMBLY ON RIGHT HAND

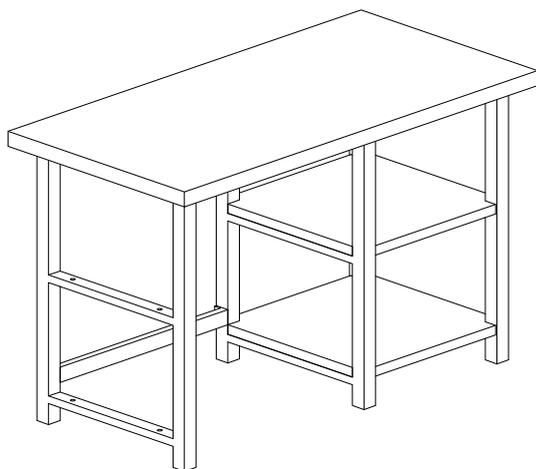

Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non-abrasive surface to prevent damage to the finish


Step 3

Lay Metal Frame Assembly (A) & (C) on a non-abrasive surface. Attach Shelf (F) to Metal Frame (A) & (C) using 8-M6x35MM Hex Bolts (G). NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME !

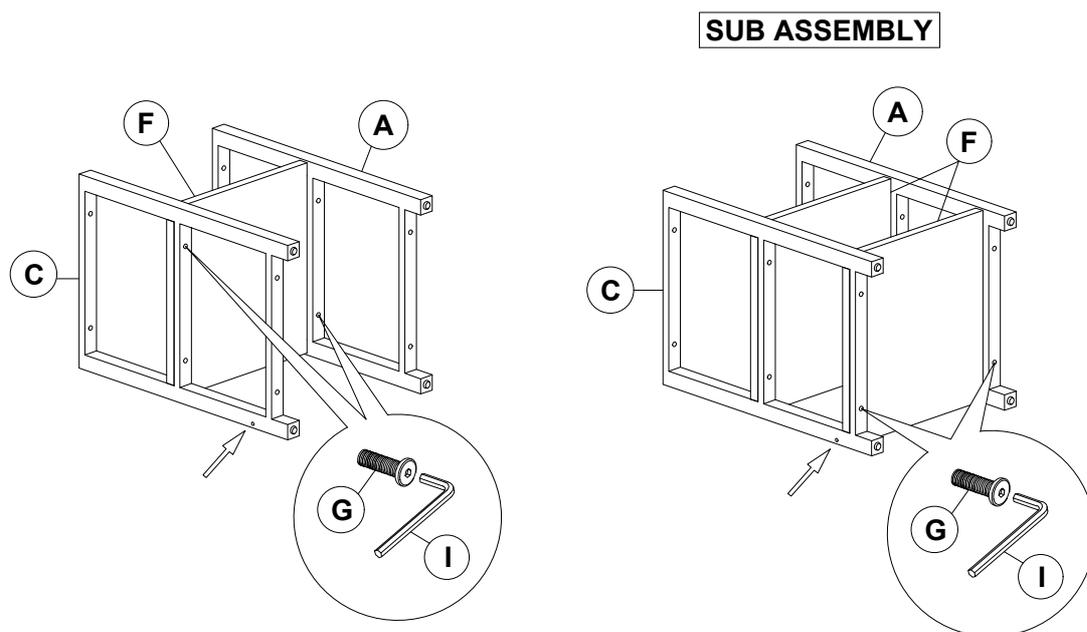


Step 4

Lay Table Top Assembly (E) on a non abrasive surface. Attach Sub Assembly from Step 3 to Table Top (E) using 4-M6x35MM Hex Bolts (G). Attach Metal Frame (B) to Table Top (E) using 2-M6x35MM Hex Bolts (G) NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME !

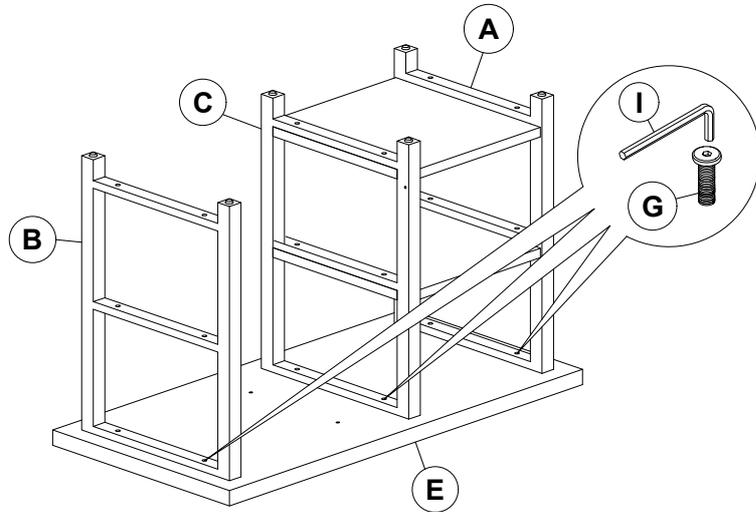

Step 5

Attach Back Rail (D) to Metal Frame (B) & (C) using 2-M6x20MM Hex Bolts (H) NOTE: TIGHTEN ALL BOLTS AT THIS TIME ! Attach 4-M6x15MM Hex Bolts (J) and Connector Bolts (K) to holes on Metal Frame (B).

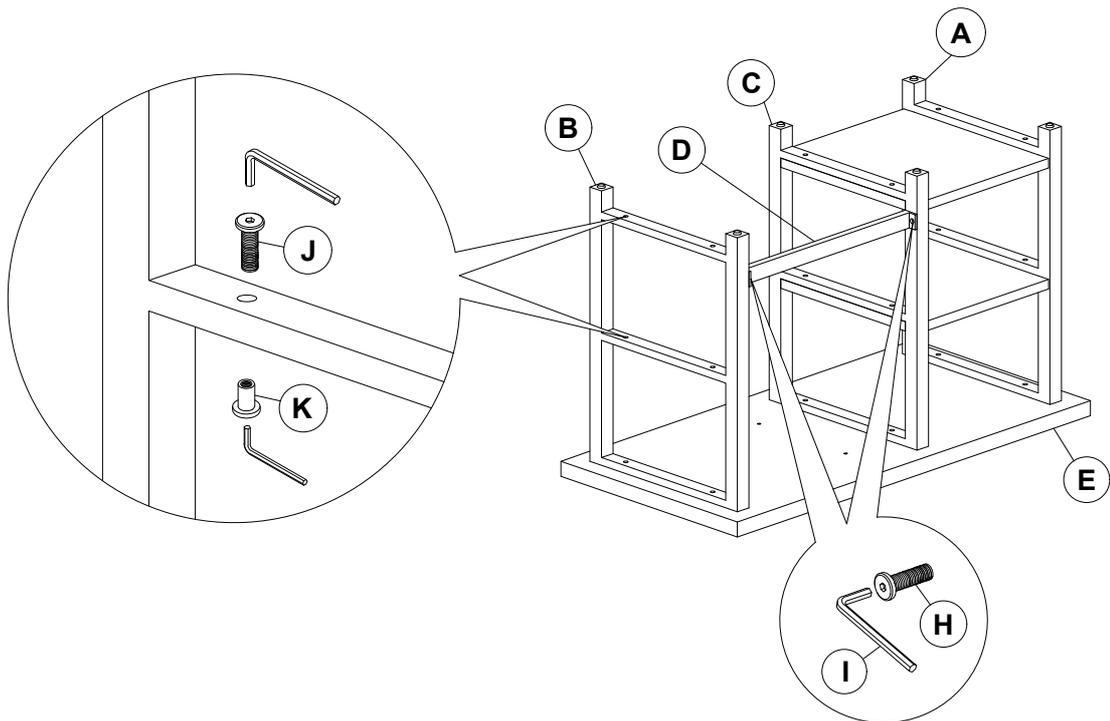

CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

REPLACEMENT PARTS:

For best service, to order replacement parts go to www.alaterrefurniture.com. Use the order form on the website to order your replacement parts. Thank You!