
Riverside FURNITURE
email: info@riverside-furniture.com

Knob Creek Occasional Assembly Instructions

Made in Viet Nam



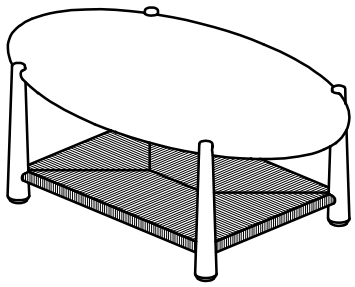


83801
Coffee Table


Warning :
- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.

Important Use Information: We recommend using coasters, placemats and trivets when placing hot or cold containers on this item. It is also recommended to quickly cleanup any spills to minimize exposure to moisture. Doing so will prolong the life and look of the item for many years.


Components and Hardware List

Top	Bottom Shelf	Leg	Allen Head Bolt Ø1/4"-20 x 2-3/8"	Spring Washer Ø1/4"	Flat Washer Ø1/4"x Ø3/4"	Allen Key 4mm
						
A 1 pc.	B 1 pc.	C 4 pcs.	D 8 pcs.	E 8 pcs.	F 8 pcs.	G 1 pc.

Step 1: Do not fully tighten all bolts

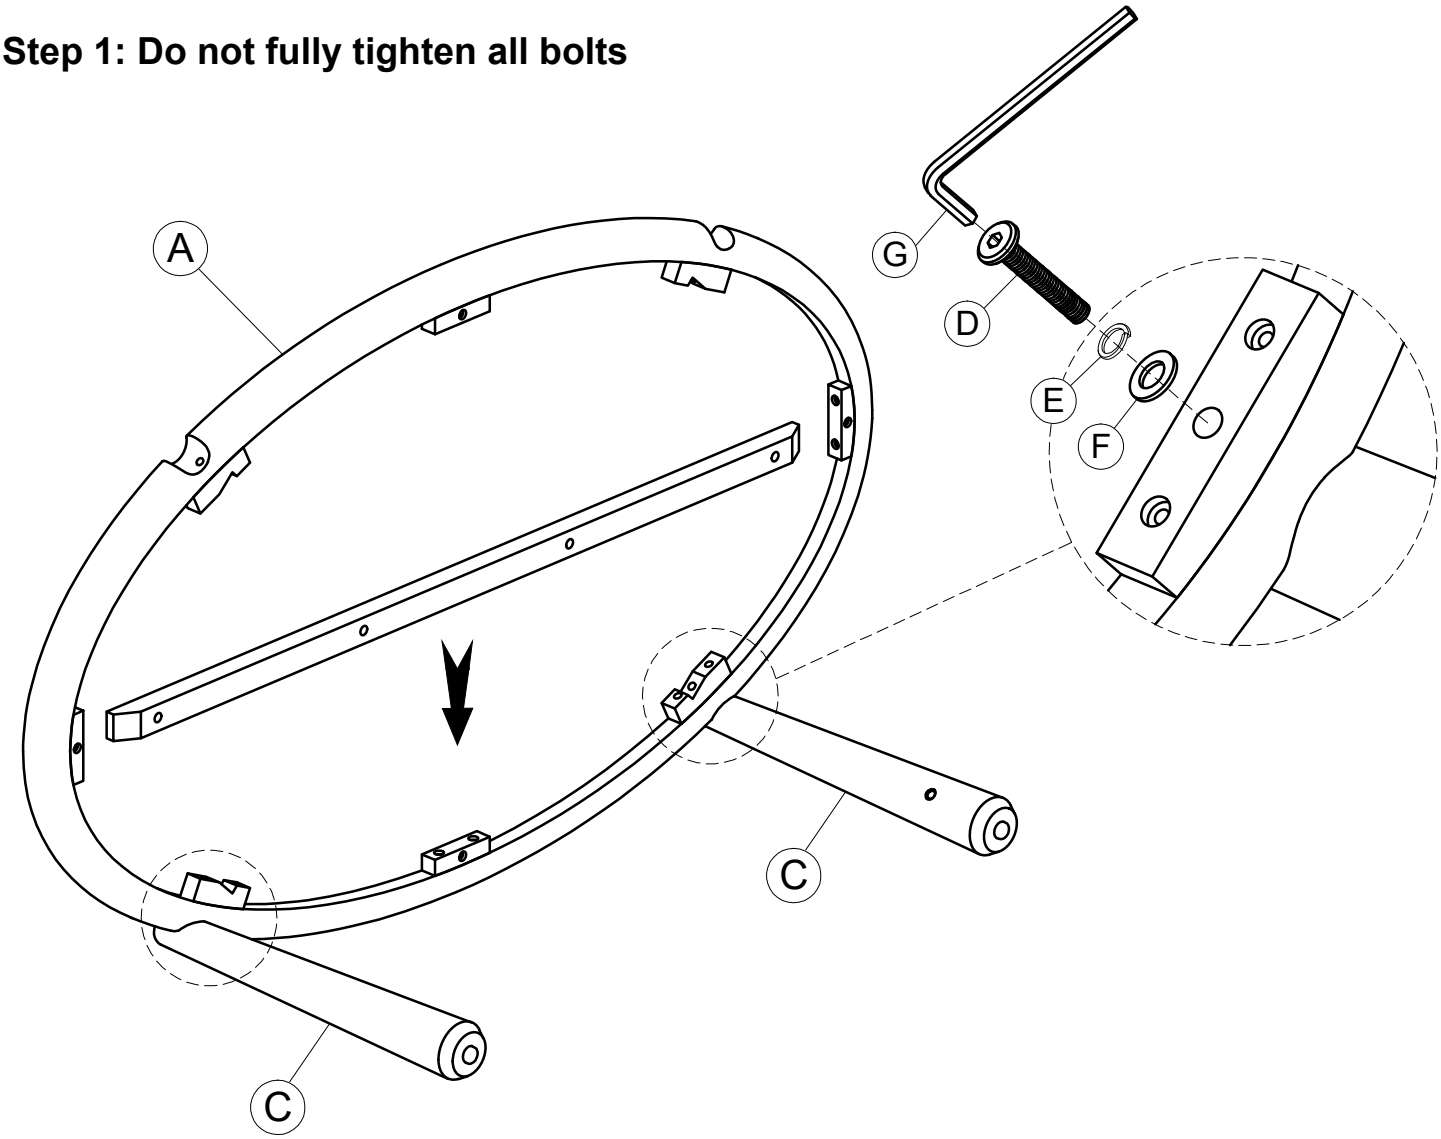

Step 2: Do not fully tighten all bolts

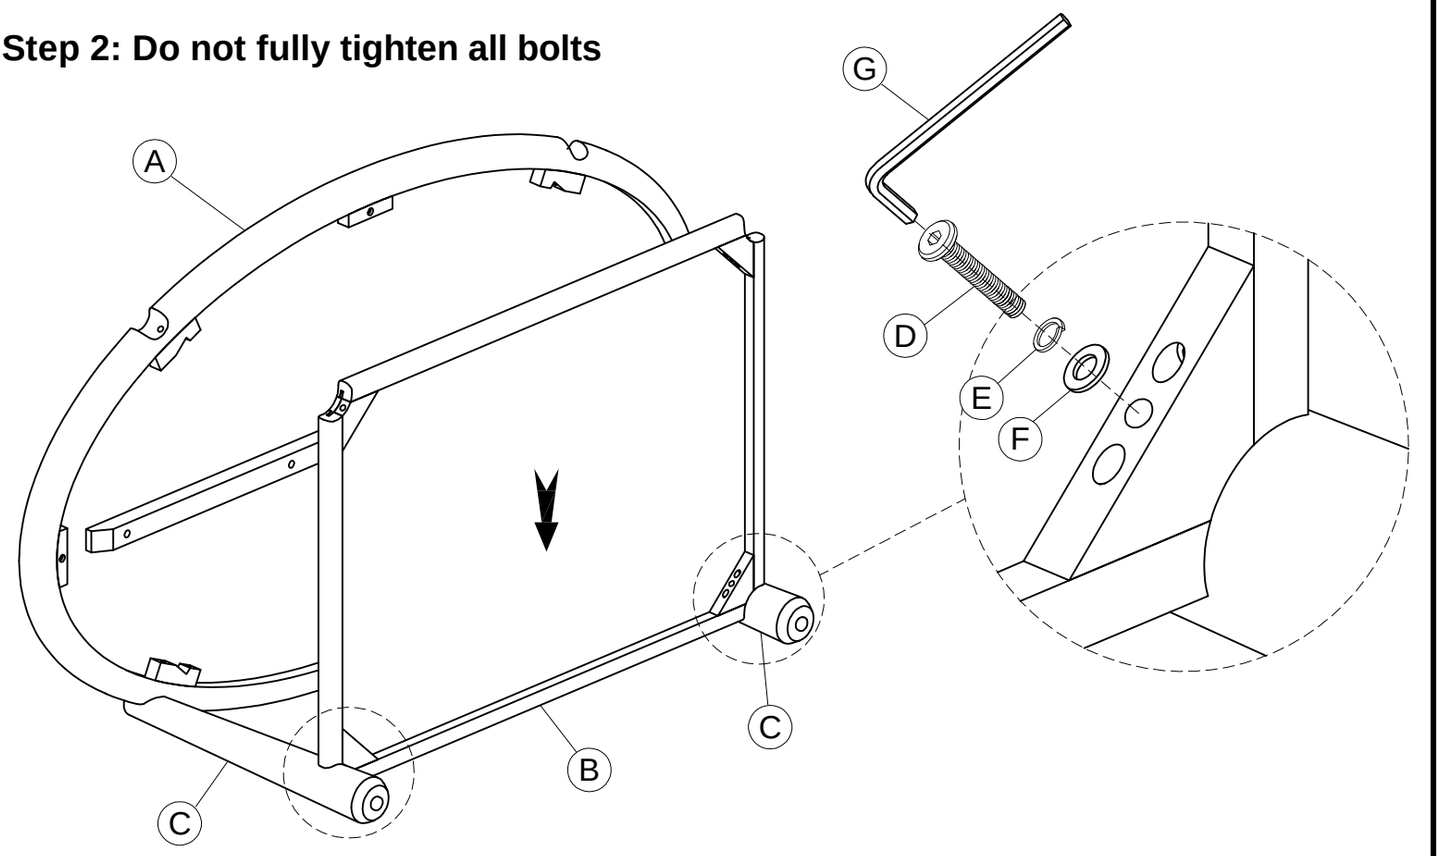

Step 3: Using the Allen Key to tighten all bolts

