

TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture


 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.

TOV

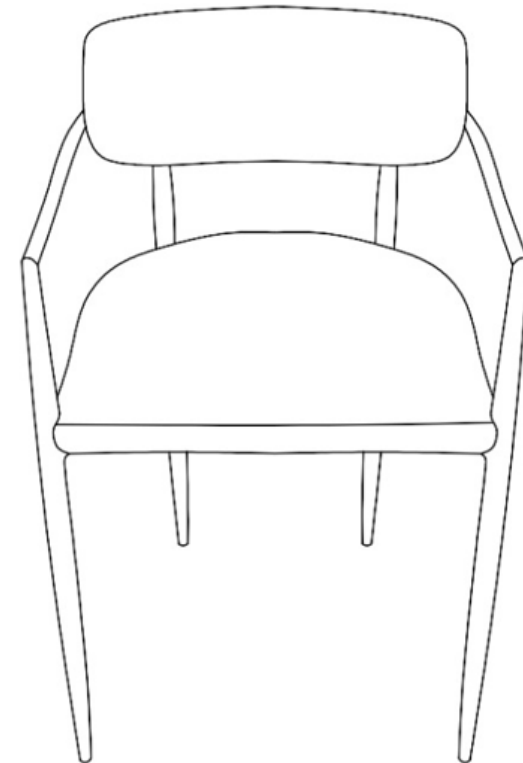


**Forte Forged
Iron Upholstered
Dining Chair**

DON'T BE BORING

Hardware and Components



..... **A** Back rest x 1 Pcs

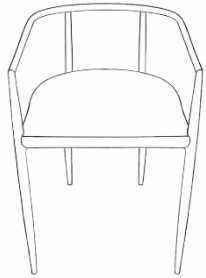

..... **B** Chair x 1 Pcs



..... **C** Allen Bolt x 2 Pcs



..... **D** Allen-Key x 1 Pcs

Step 1


Open box of hardware.

This hardware box will be a smaller box inside of the main box. Look for the red streamer.



Step 2

1. Remove the chair (B) from the box and unwrap the protective sheet.
2. Take out the backrest (A) placed on top of the chair (B).
3. Remove all the hardware from the packet.
4. Place the chair (B) on the floor.
5. Align the backrest with the back of the chair and secure it by tightening both Allen key bolts (C) using the Allen key (D).
6. The chair is now ready to use.

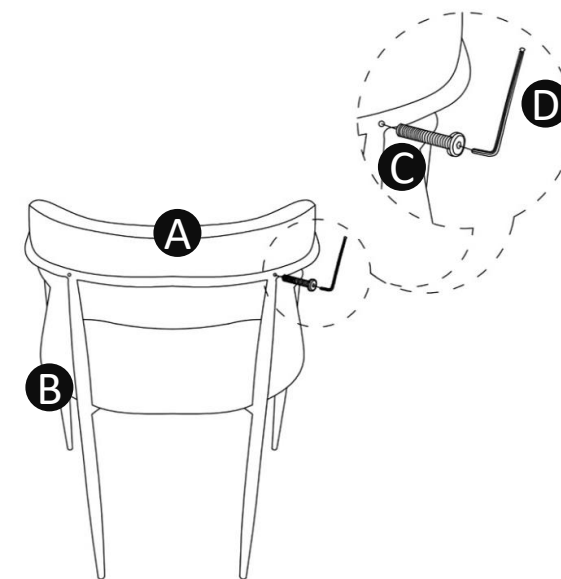

Stuck?

Contact our team @ 516-888-3355

Scan for product care!

