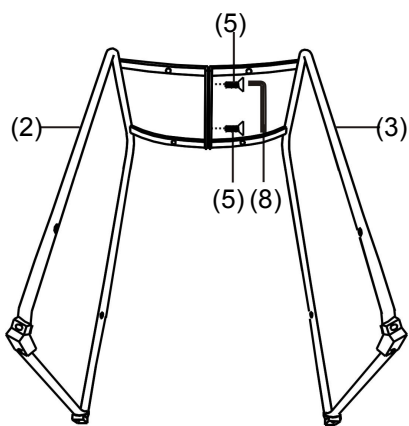


ASSEMBLY INSTRUCTIONS

Item #: BSH900BSE/BSH400BSE

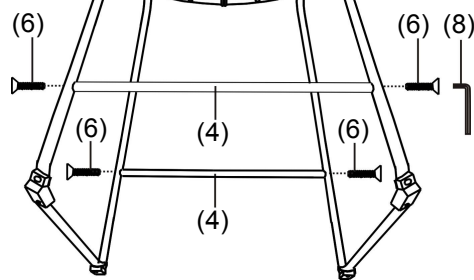
THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.BE SURE TO CHECK ALL PACKING MATERIALS
CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT.

Step 1




Use M5 allen key assemble two crews
combine the two part of metal frame

Step 2



Use M5 allen key to assemble the frot and
back foot rest

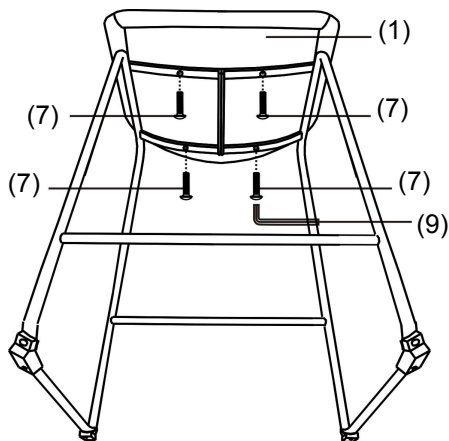Step 3







Use M6 allen key to assemble the seat on
the metal frame

Step 4



Congratulations on your assemble success

PARTS LIST

(1)X1 	(6)X4  M6X35MM
(2)X1 	(7)X4  M6X22MM
(3)X1 	(8)X1  M5
(4)X2 	(9)X1  M6
(5)X2  M6X14MM	

MADE IN CHINA