SYNERGY 229 Twin Assembly

Includes:

- (1) Twin 20 Unit
- (2) S20 Side Panels
- (2) \$10 Doors
- (1) Double-Width Shelf




BEFORE YOU BEGIN:

- Unpack all parts and read instructions carefully before beginning.
- Shelf pegs and door hinges must slide into the channels of the post in the correct order. They cannot be removed individually without disassembling the whole unit.

Connect Posts to Bottom Shelf

A. Square Post

Square the post to the bottom shelf.

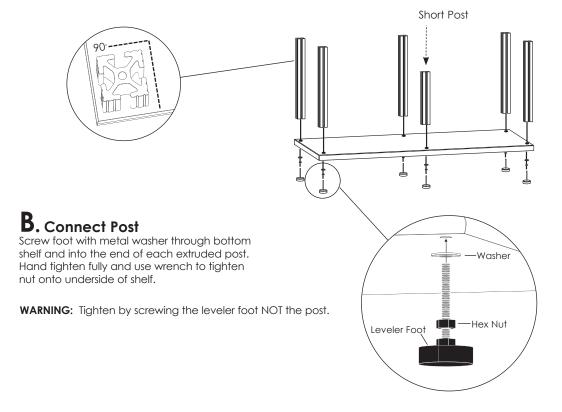





Limited Warranty

Five full years Salamander Designs Ltd will repair or replace, at our option, any product defective in materials or craftsmanship. Salamander Designs Ltd. will not be responsible for any damage to or destruction of other equipment consequential to our equipment failure. Defective product must be given Return Authorization and is to be returned to the factory prepaid, in the original carton and packing material. Any damage incurred in a shipment not in original packaging shall be the responsibility of the owner. Warranty repairs will be returned prepaid, via UPS within the continental U.S.A. only.


2 Installing Hardware

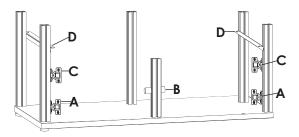


A. Bottom Door Hinges Slide the bottom door hinge plates through the front post channels.

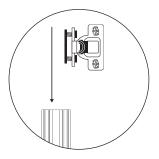


C. Top Door Hinges
Slide the top door hinge plates
through the front post channels,
aligning with bottom door hinges.

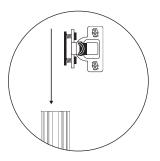

B. Door Stops
Insert one left and one right door stop down center post.

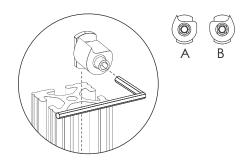


D. Heavy Duty Bracket
Install heavy duty brackets down outer
posts to support the double-width shelf.
Place rubber shelf tabs through bracket.

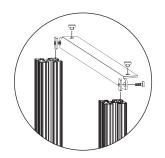


3 Attach Rear Panels

A. Insert Hardware

Combine the 1" threaded studs with flat nuts. Slide 2 sets of hardware down the two outside posts and 4 sets down the center post. Allow studs to remain loose at bottom of post.

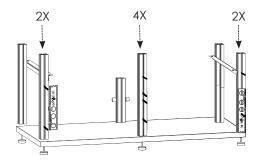

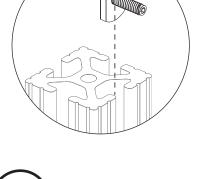


TIP

To ease installation of rear panels, gently place the unit face down on the floor to improve aligning of panels.


B. Position & Secure Studs

Align the Spacer Tool at the top of each post, then position top studs through the small "Rear Panel" hole. Repeat this step with the bottom studs aligning the Tool along the bottom of post to set spacing for cable passage. Use the hex key to secure the top and bottom studs to the posts.

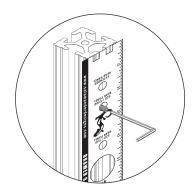


C. Place Rear Panels

Secure each panel in place with thumb nuts.

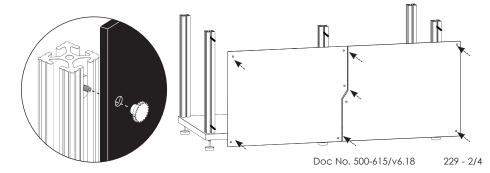

4 Placing Shelves

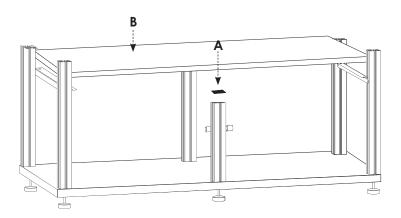

A. Rubber Pads

Place rubber pad on top of center post.


B. Double-Width Shelf

Place double-width shelf on brackets.

5 Sides and Top Assembly

A. Insert Side Panels


Carefully slide side panels down outside posts. Be sure the posts are square to the bottom shelf to prevent any damage to side panels.

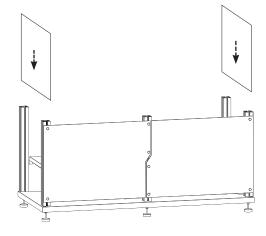

B. Secure Top

Secure top with the 5 connector bolts.

Place the plastic plugs in the front center hole.

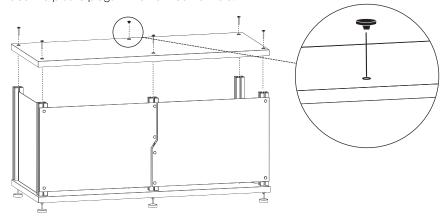



229 -3/4

Attach Doors

A. Attach Hinges to Door Frames


Insert the hinges into the corresponding holes on the doors. Turn the screws 1/4 turn to the right to lock hinges in place. NOTE: Do not over tighten or the hinge will break.

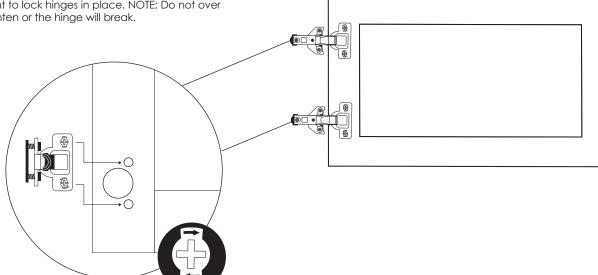

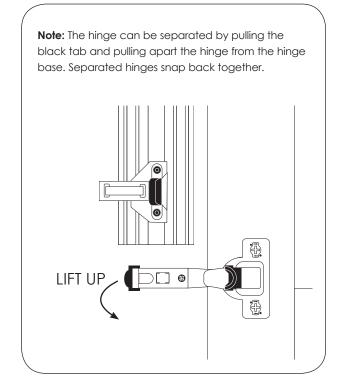


B. Adjust Clearance

Doors should be 1/8" above the bottom shelf before fully tightening hinges to post. Use the wrench thickness as a guide for the bottom gap. Secure hinges in place with hex key.

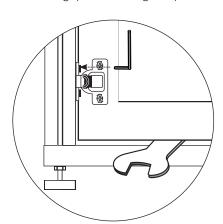


C. Rubber Stops

Attach the rubber stops to the inside of the door frame where it hits the shelf pegs.

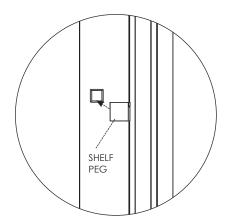

D. Door Pull

Screw the Door Pull into place.

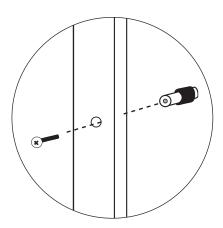

229 -4/4