







Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of the Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (10) M8*50 Bolts
- B (10) M8 Spring Washers
- C (14) M8 Flat Washers
- D (1) Ø5 Allen Wrench
- E (4) M8 Nuts
- F (1) Ø5 Open End Wrench

PARTS LIST

- G (1) Headboard Panel
- H (2) Headboard Legs

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	10		B	10	
C	14		D	1	
E	4		F	1	

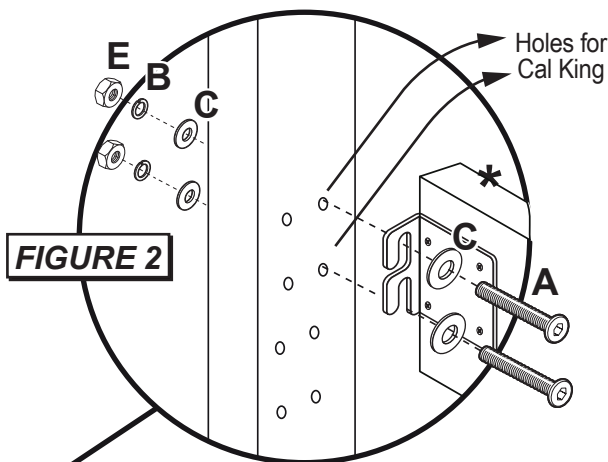
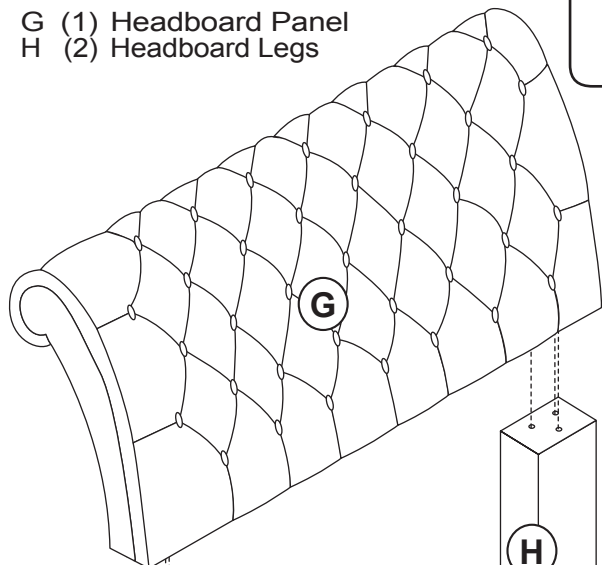


FIGURE 2

STEP 1 - Figure 1

Begin assembly by attaching the Headboard (G) to the Headboard Legs (H) using 3 Allen Bolts (A), 3 Spring Washers (B) & 3 Flat Washers (C) from behind for each leg.



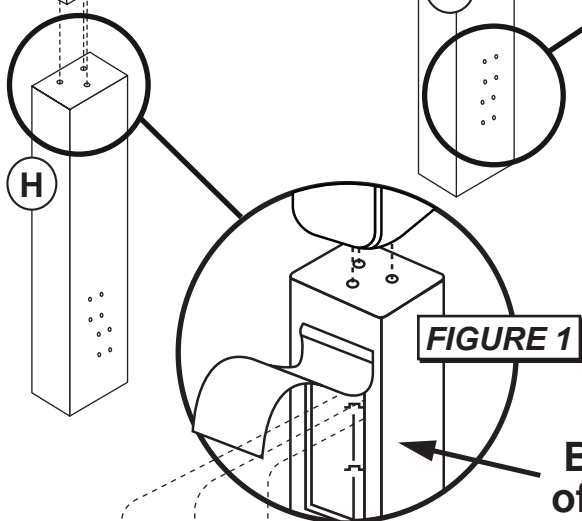


FIGURE 1

Back of Leg

The Side Rails () are not included. Sold Separately*

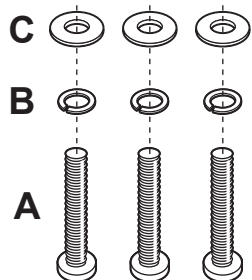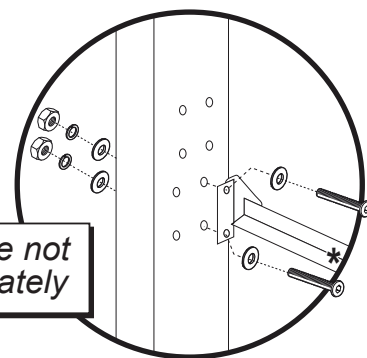

STEP 2 - Figure 2

Attach the Side Rails (sold separately) to the Headboard Legs (H) using 2 Allen Bolts (A) and 2 Flat Washers (C) on the outside and 2 Hex Nuts (E), 2 Spring Washers (B) and 2 Flat Washers (C) on the inside. Tighten all bolts with Allen Wrench (D) and all nuts with Open Wrench (F) both provided.