


## **ASSEMBLY INSTRUCTIONS**



## (Box 1) BOX OF HEADBOARD

| No | ITEM                             | Qty   |
|----|----------------------------------|-------|
| A  | Headboard                        | 1 pc  |
| В  | Headboard Left & Right  Nail Leg | 2 pcs |

## (Box 2) BOX OF FOOTBOARD

| No | ITEM               | Qty  |
|----|--------------------|------|
| С  | Footboard Nail Leg | 1 pc |

(Box 3) BOX OF SIDE RAIL/SLAT/SLAT

| SUPPO | RT/CONCEALED PANEL            |           |
|-------|-------------------------------|-----------|
| No    | ITEM                          | Qty       |
| D     | Side Rail                     | 2 pcs     |
| Е     | Slat                          | 3 pcs     |
| F     | Slat Support  30 x 30 x 225mm | 10<br>pcs |
| G     | Concealed Panel               | 6 pcs     |
| Н     | Bed Slat with marking         | 2 pcs     |


(Box 1) HARDWARE LIST

| No | ITEM                               | Qty   |
|----|------------------------------------|-------|
| 1  | JCBC M6 x 35mm                     | 8 pcs |
| 2  | SPRING WASHER 1/4" Rbw             | 8 pcs |
| 3  | Flat Washer 1/4"ID x 19mmOD<br>Blk | 8 pcs |
| 4  | ALLEN KEY m4x65mm Blk              | 1 pc  |
| 4a | Adaptor                            | 1pc   |
| æ  | 2)                                 |       |


(Box 3)
HARDWARE LIST

| HARDWARE LIST |                                     |       |
|---------------|-------------------------------------|-------|
| No            | ITEM                                | Qty   |
| 5             | JCBC M6 x 50mm                      | 10    |
| 3             | 9)                                  | pcs   |
|               | ALLEN KEY m4x65mm Blk               | 1     |
| 6             |                                     | 1 pc  |
|               | JCBB Bolt M8 x 70mm                 | 4     |
| 7             |                                     | 4 pcs |
| _             | Flat Washer 5/16"ID x<br>22mmOD Blk | 0     |
| 8             | 22mmOD BIK                          | 8 pcs |
|               | Wing- Nut M8                        |       |
| 9             |                                     | 4 pcs |
|               | ALLEN KEY m5x65mm Blk               | _     |
| 10            |                                     | 1 pc  |
| 11            | CSK M4 x 32mm                       | 10    |
|               | <del></del>                         | pcs   |
| 12            | Pan Head Screw M3.5 x 20MM          | 30    |
|               |                                     | pcs   |

STEP 1: Attach Head Board Leg (B) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

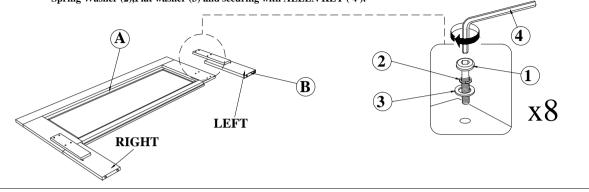

STEP 2: Loosen the JCBB Bolt from Headboard (A) and Footboard (C) using ALLEN KEY (10). Attach the Side Rail (D) to Headboard (A) and Footboard (C) by pushing the bracket down to fit it. Tighten the JCBB Bolt with ALLEN KEY (10). Connect the LED terminal socket which is place on left & right of side rail (D) and Footboard (C) as shown. CAUTION: Do not connect the LED terminal socket that place nearby heaboard leg on this STEP.

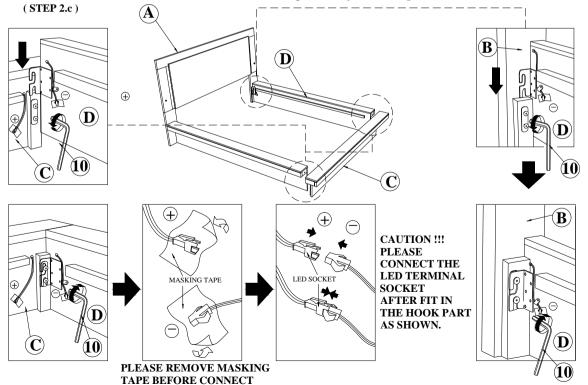

## ASSEMBLY INSTRUCTIONS

