

Parts List (included in BV2001Q)

1-1/4" Sharp End Screws	10 pcs
Slats	5 pcs
Slat Support Legs	5 pcs

Parts List (included in BV2001K/CK)

1-1/4" Sharp End Screws	10 pcs
Slats	5 pcs
Slat Support Legs	10 pcs

Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

Please keep all hardware parts out of the reach of children.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

1. Pick up one side rail and insert the hook into the post slot of the footboard.


2. Repeat step 1 to attach the other side rail.

3. Follow steps 1 & 2 to attach the headboard.


4. Attach slat support legs to slat as indicated in diagram, with metal insert neck facing up.

5. Lay 5 slats across bed as indicated in diagram. Align the pre-drilled holes of the wooden slats with the pre-drilled holes of the bed side rail. Secure by using 1-1/4" sharp end screws.


BV2001Q

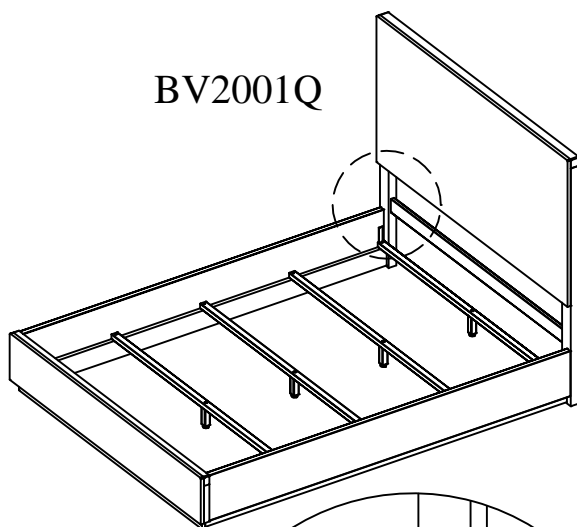

BV2001K

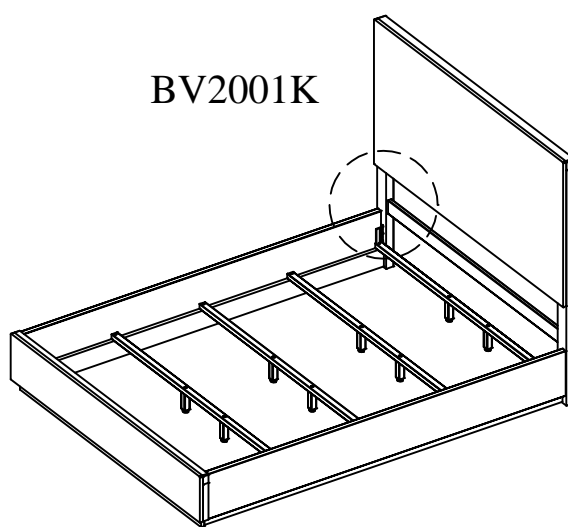

BV2001CK

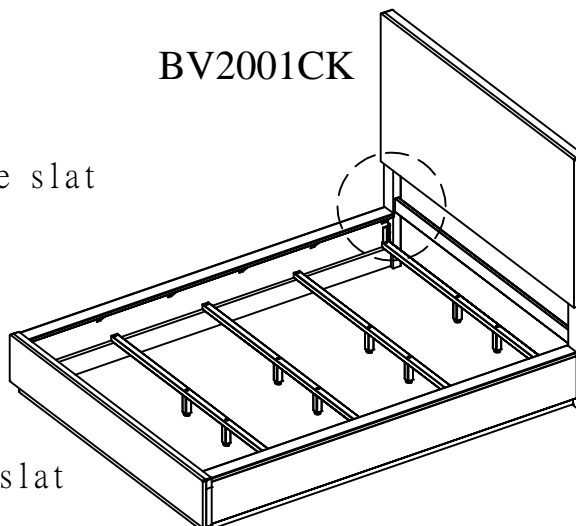

Insert on the outside slot.

