

# ASSEMBLY INSTRUCTION

---


## **PLEASE READ BEFORE ASSEMBLING!**

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 4806TV

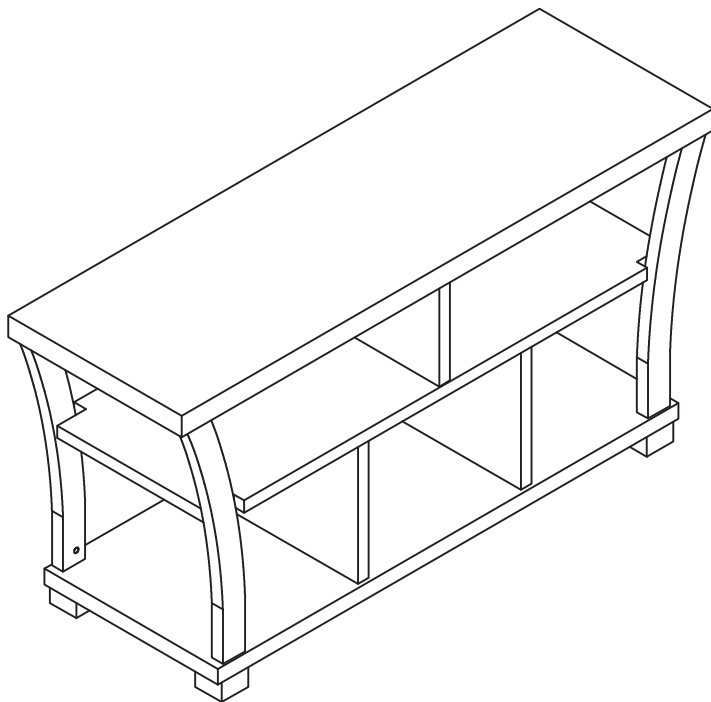

# PARTS IDENTIFICATION



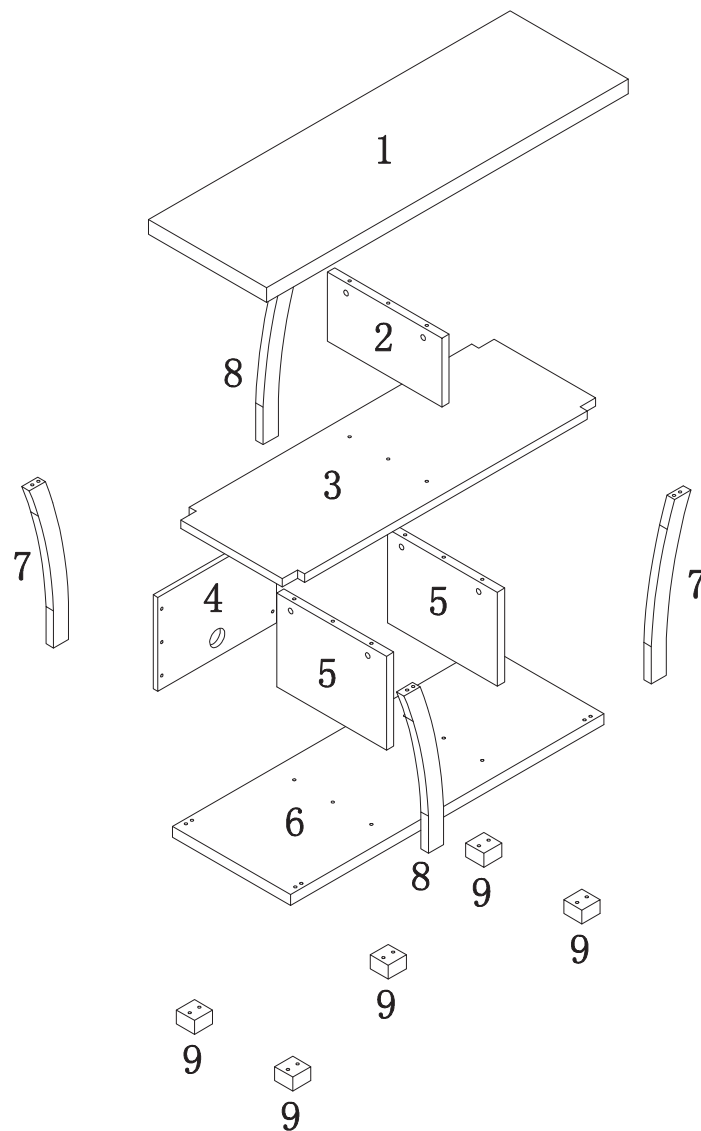



















ITEM#: 4806TV



- |     |      |
|-----|------|
| (1) | 1pc  |
| (2) | 1pc  |
| (3) | 1pc  |
| (4) | 1pc  |
| (5) | 2pcs |
| (6) | 1pc  |
| (7) | 2pcs |
| (8) | 2pcs |
| (9) | 5pcs |



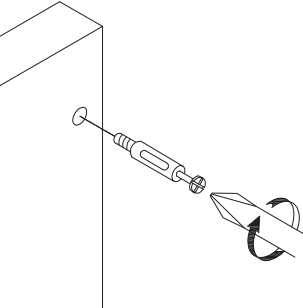
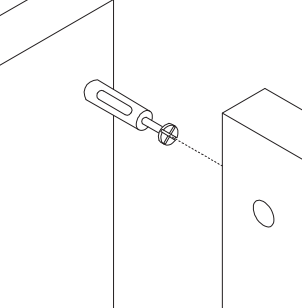
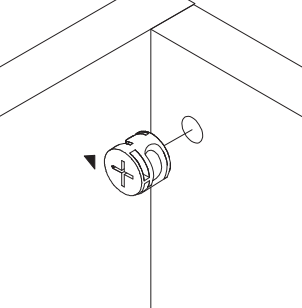
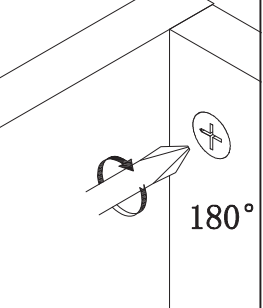
# HARDWARE IDENTIFICATION


ITEM#: 4806TV

A		L29mm	6pcs
B		□15mm	6pcs
C		□8x25mm	16pcs
D		M7 x 38mm	4pcs
E		M7 x 48mm	2pcs
F		M7 x 58mm	14pcs
G		□8 x 16 x 2mm	20pcs
H		□6 x 16 x 2mm	4pcs
I		M6 x 55	4pcs
J		□6x15	4pcs
K		M4mm	1pc
L		M8x80	4pcs
M		□35	4pcs
N		M13	1pcs
O		□45mm RC	4pcs
P		□20mm RC	6pcs
Q		197×5×1	1pc
R		Φ4×25	1pc
S		Φ5×40	1pc
T		Φ8×40	1pc
U		12×12×1	2pcs
V		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

# ASSEMBLY INSTRUCTION


ITEM#: 4806TV

HOW TO	1	2	3	4
 Cam Bolt  Cam Lock				
	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

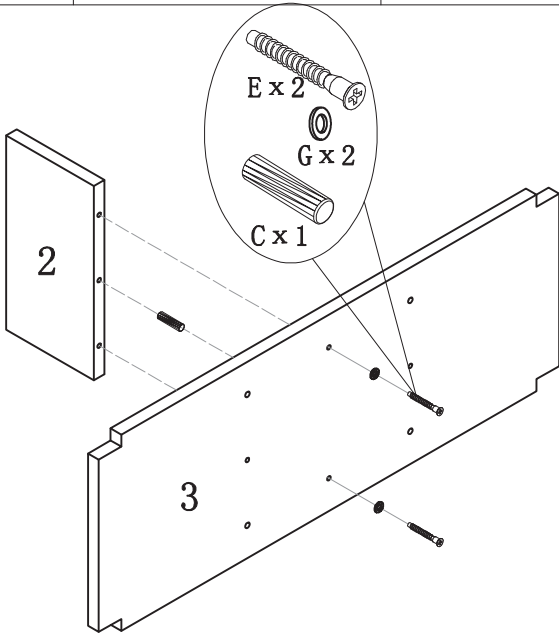


STEP1

STEP2

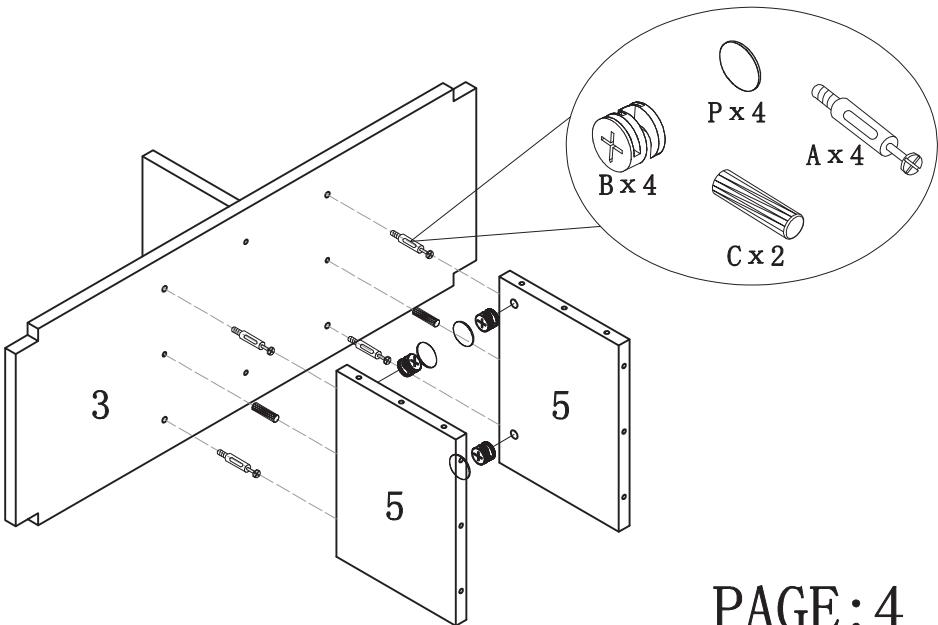


# ASSEMBLY INSTRUCTION

ITEM#: 4806TV

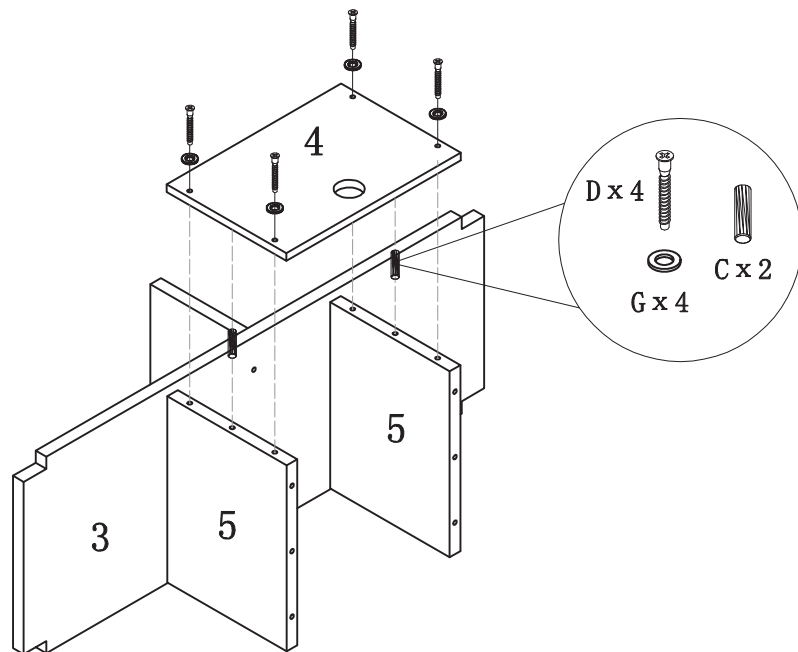


STEP3

STEP4

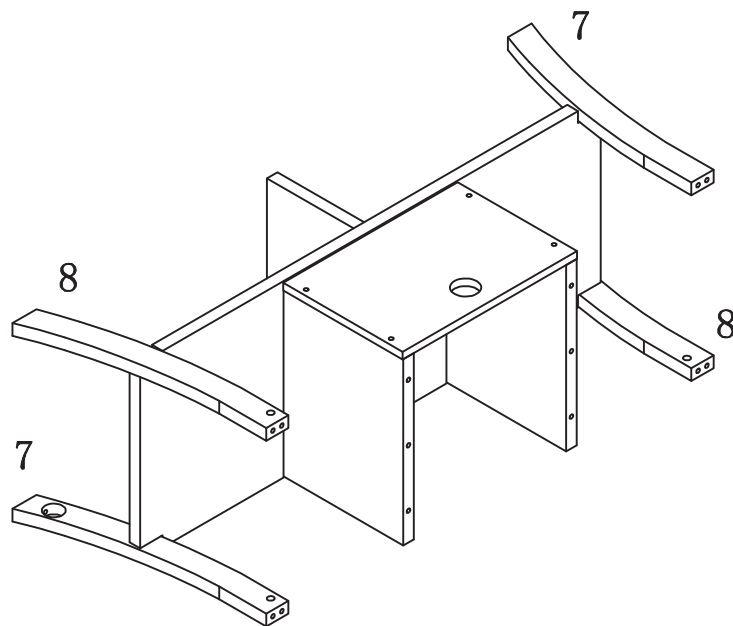


# ASSEMBLY INSTRUCTION

ITEM#: 4806TV

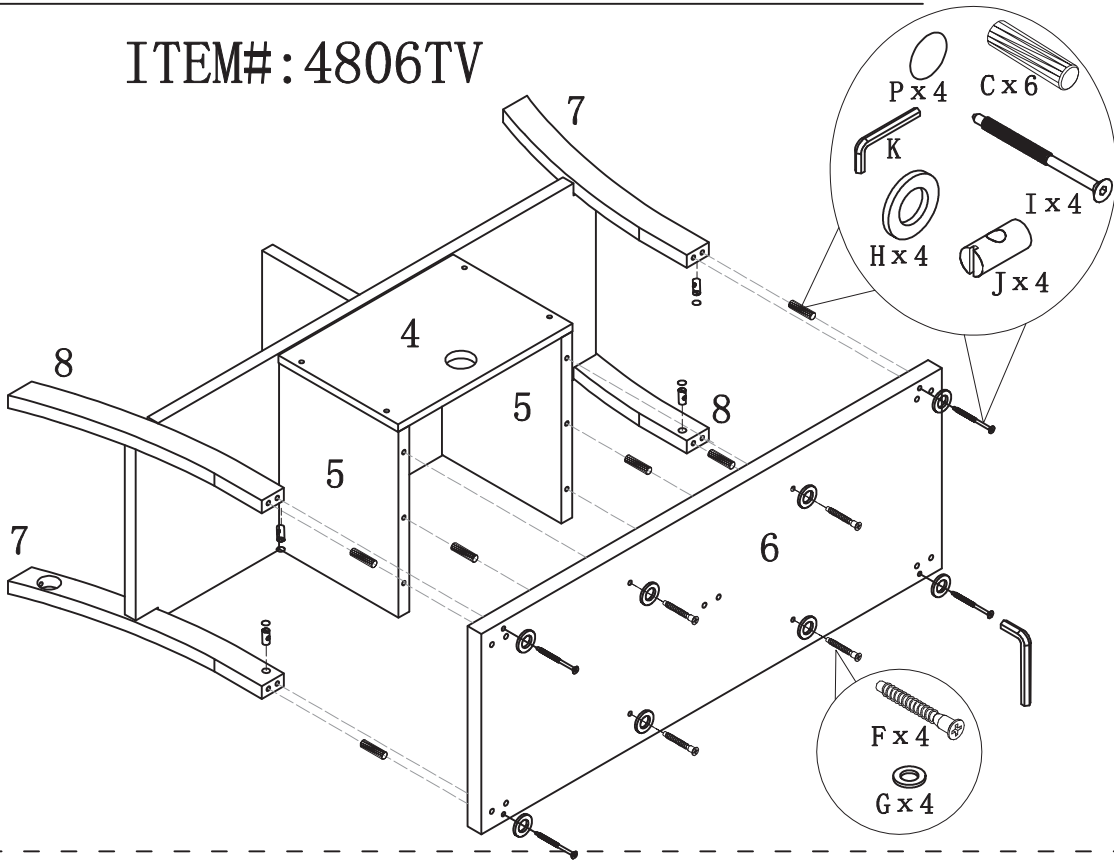


STEP5

STEP6

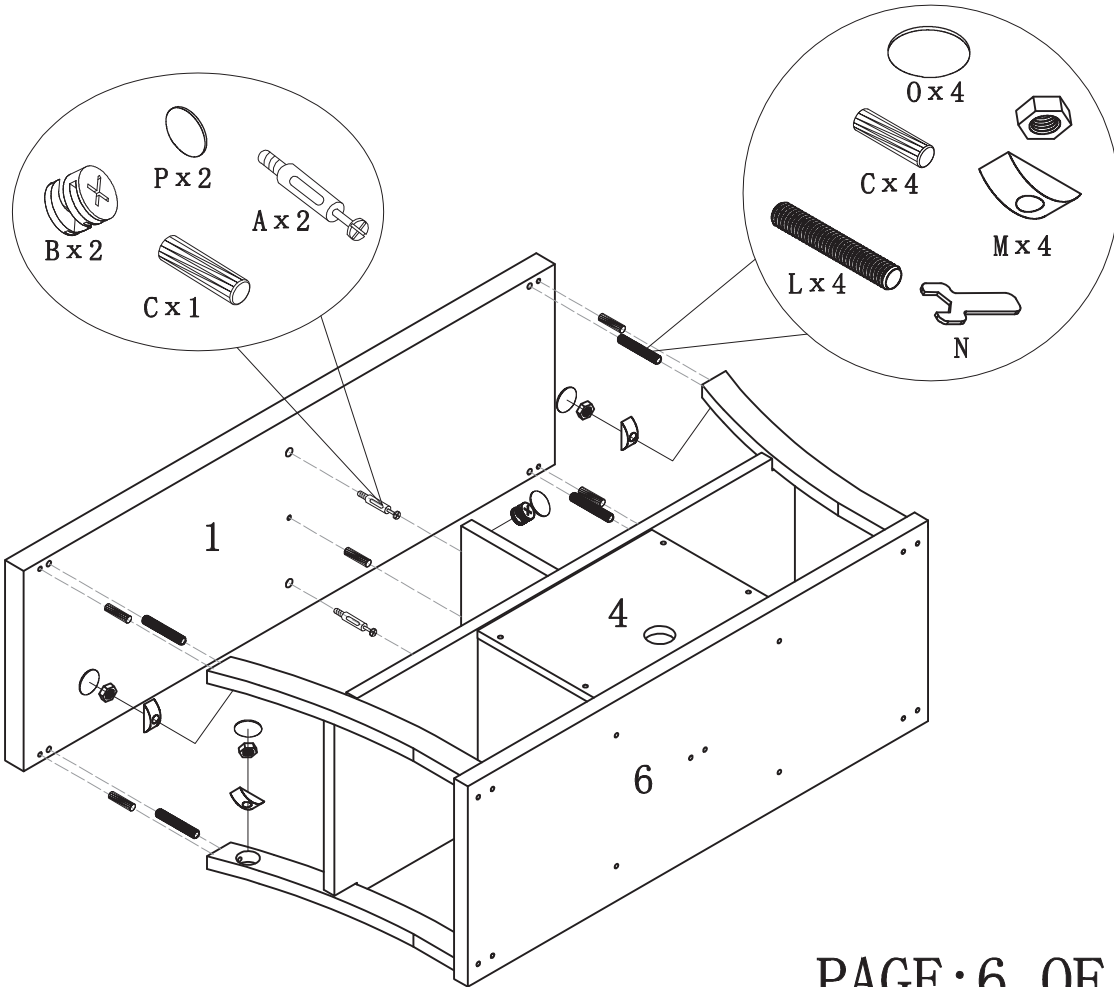


# ASSEMBLY INSTRUCTION

ITEM#: 4806TV

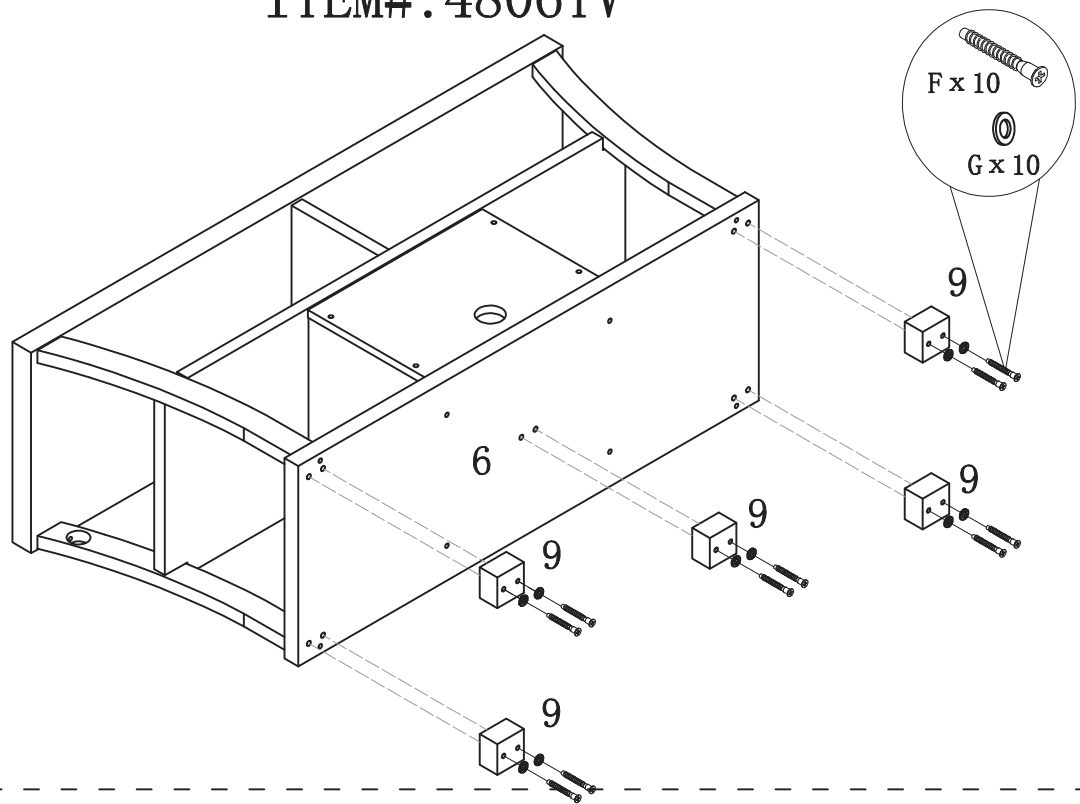


STEP7

STEP8

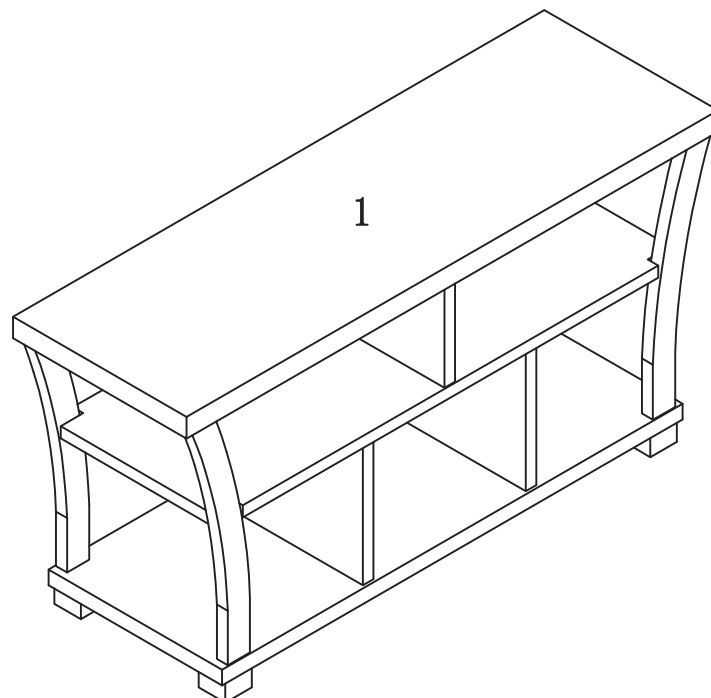


# ANTI-TIPPING STRAP INSTRUCTION


## HARDWARE (INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS



DRYWALL SCREW  $\phi 5 \times 40$  X 1PC




STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

## TOOLS NEEDED ( NOT INCLUDED) :

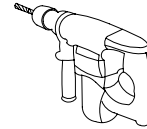


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1

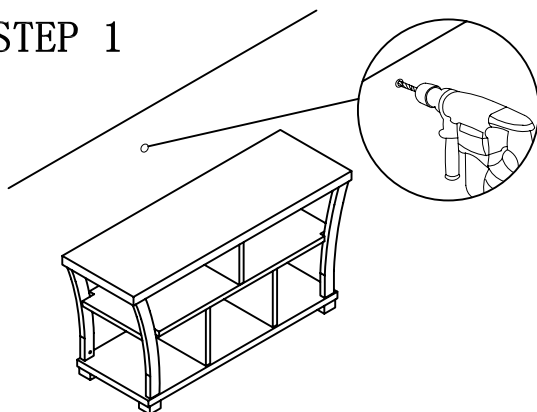


To drill a hole (about 1") on the wall.

### STEP 2

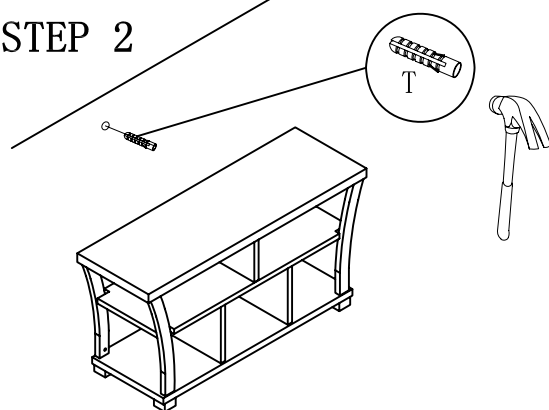


To tap drywall anchor into the hole.

### STEP 3

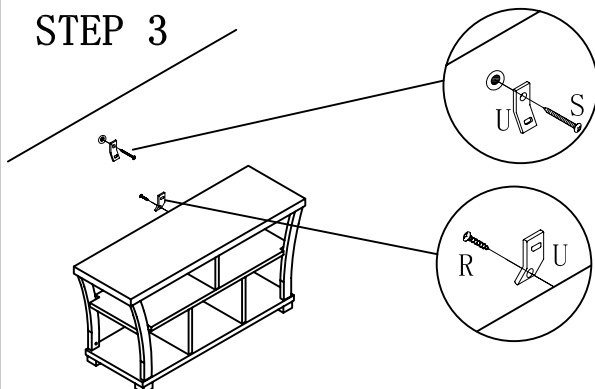

To insert the screw into each bracket and hang one on drywall anchor.

### STEP 4

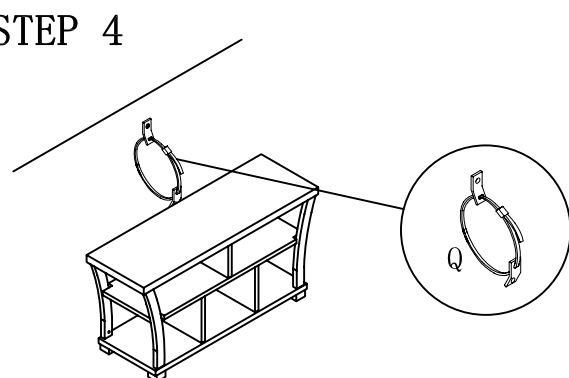

To tie the strap through bracket and pull it lightly till it steady.