

5735S

SIDE CHAIR / CHAISE DROITE

Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have **all** parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.




It is recommended to install protective pads under **all** legs and support to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

Merci d'avoir acheté ce produit. Veuillez lire et suivre les instructions ci-dessous. Vérifiez avant le montage que vous avez toutes les pièces et fixations. Les pièces qui semblent manquer se trouvent souvent dans les matériaux d'emballage. Si vous n'avez pas toutes les pièces de la liste, demandez à votre détaillant et nous les enverrons immédiatement.




Il est recommandé de placer des coussins protecteurs sous tous les pieds et toutes les bases des meubles pour éviter d'endommager ou d'égratigner les planchers en bois ou autres surface dures, et pour limiter l'empreinte et empêcher la décoloration quand les meubles reposent sur la moquette.

PART LIST / LISTE DE PIÈCES				HARDWARE LIST / LISTE DE QUINCAILLERIE			
A		Chair Back / Dossier De Chaise	1	1		Jcbc Screw / Boulon M6 x 50MM	10
B		Cushion Seat / Siège Coussiné	1	2		Jcbc Screw (Black) / Boulon M6 x 25MM	2
C		Front Leg (FL&FR) / Pied Avant (Gauche/Droit)	2	3		Spring Washer / Rondelle 1/4" D'aarêt	10
D		Rear Leg (BL&BR) / Pied Arrière (Gauche/Droit)	2	4		Flat Washer / Rondelle Plate 1/4"	10
				5		Allen Key With / Clé Allen Ball Shape M4	1



* HARDWARE ARE PACKED IN 5735S FOR ASSEMBLY

STEP 1 Étape 1

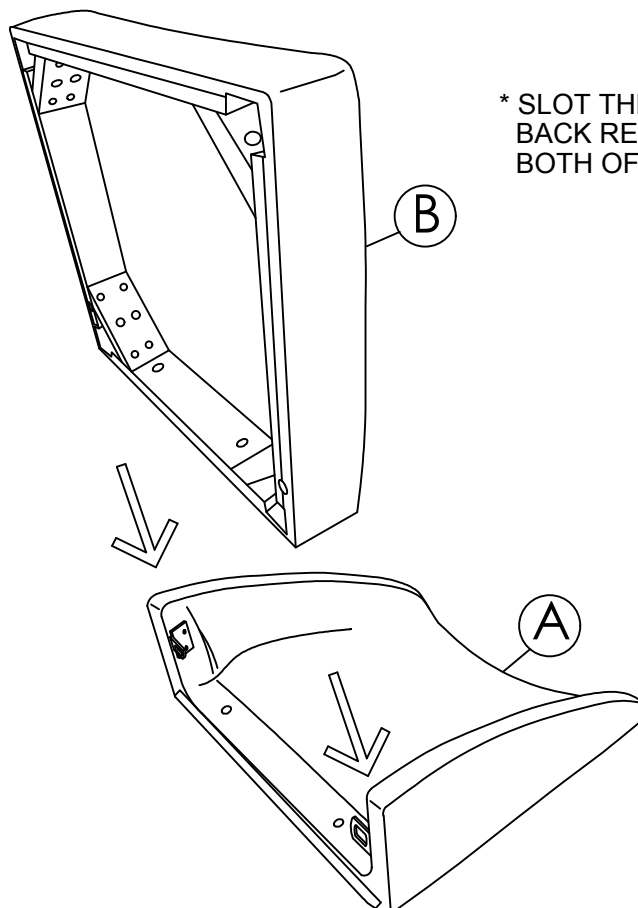


* SLOT THE SEAT FRAME INTO THE BACK REST STAY CLOSE WITH THE BOTH OF FIN.

STEP 2 Étape 2

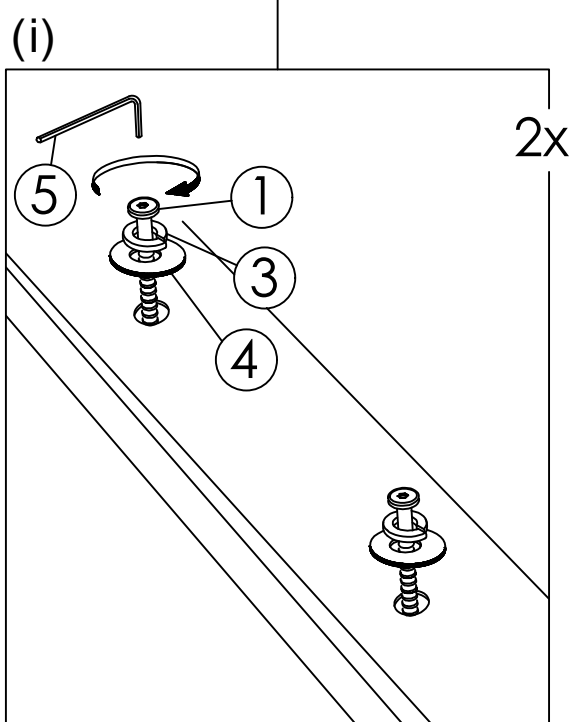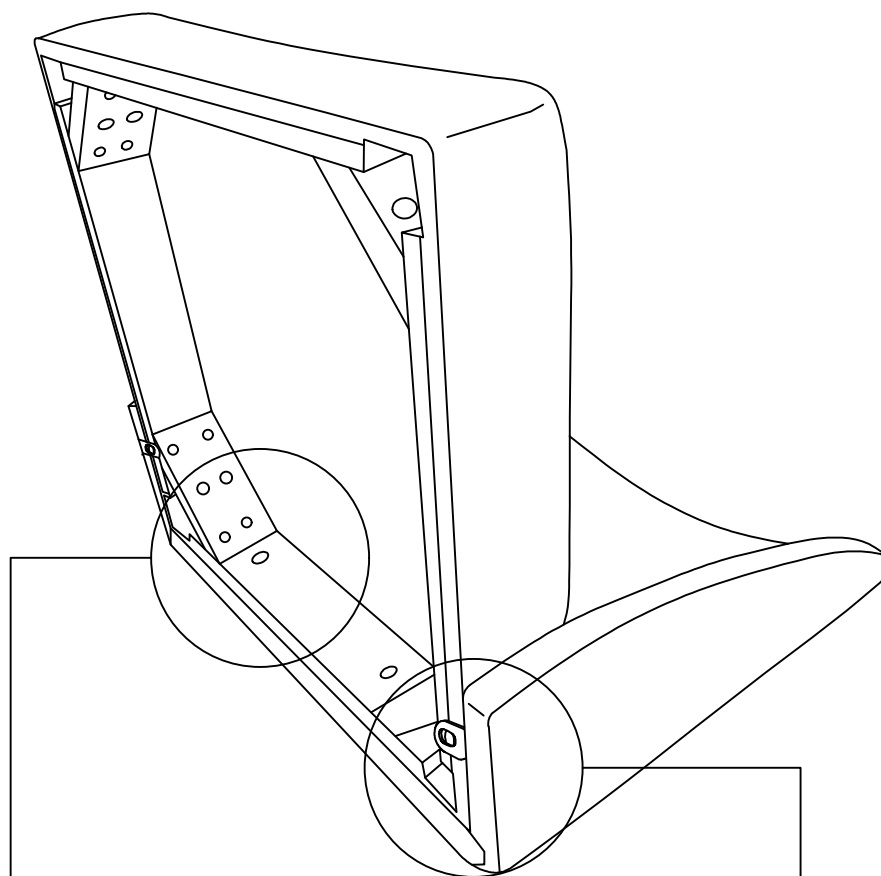

* PLUG IN THE SCREW INTO SEAT FRAME. DO NOT FULLY TIGHTEN SCREWS AT THIS MOMENT.

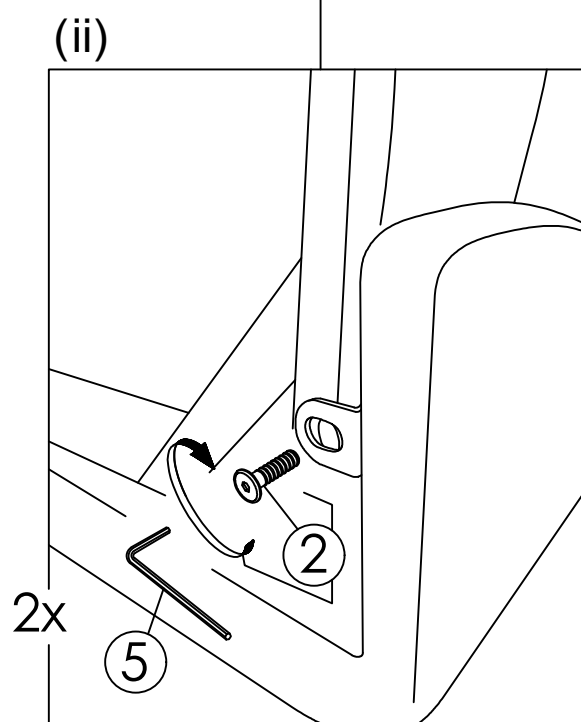


* PLUG IN THE SCREW INTO METAL PLATE. DO NOT FULLY TIGHTEN SCREWS AT THIS MOMENT.

STEP 3



Étape 3

* TIGHTEN ALL SCREW AND FLIP THE CHAIR REST AS SHOWN TO PREPARE FOR ASSEMBLE CHAIR LEG.


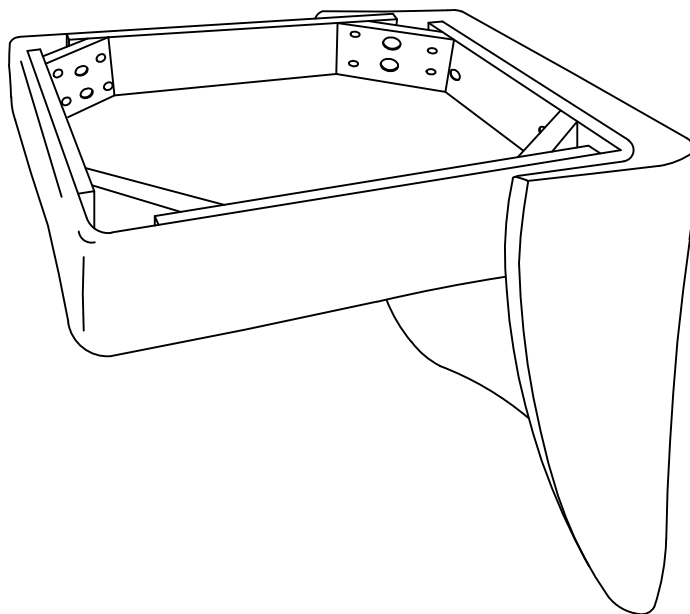


STEP 4

Étape 4

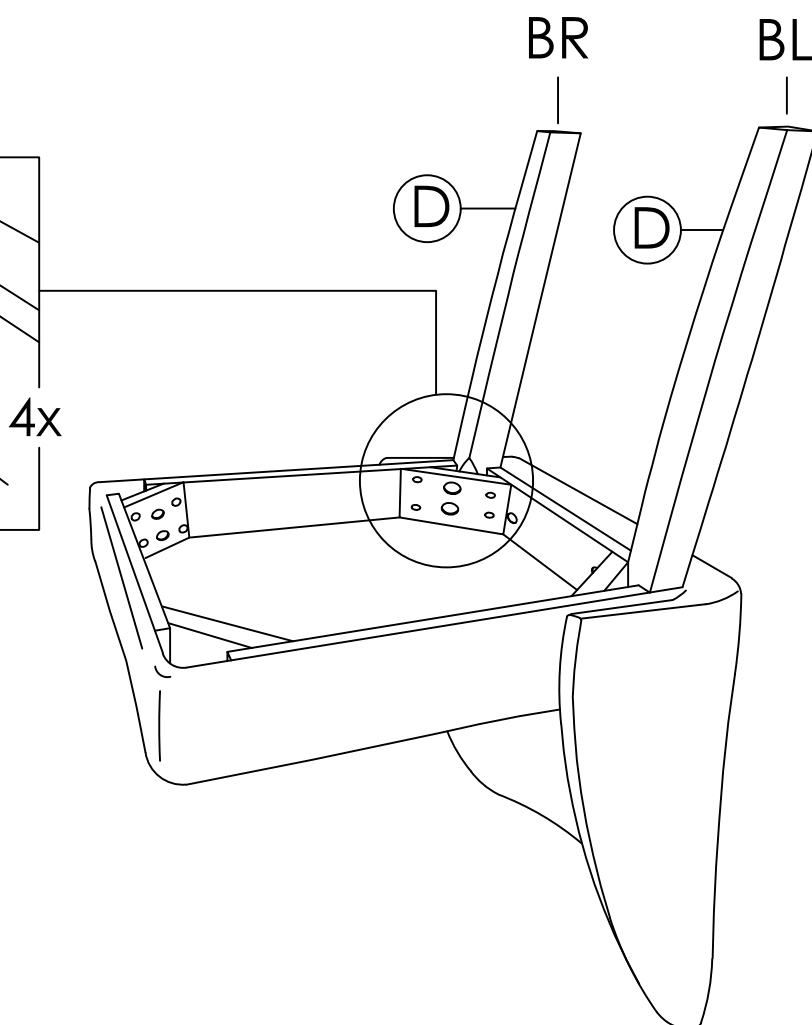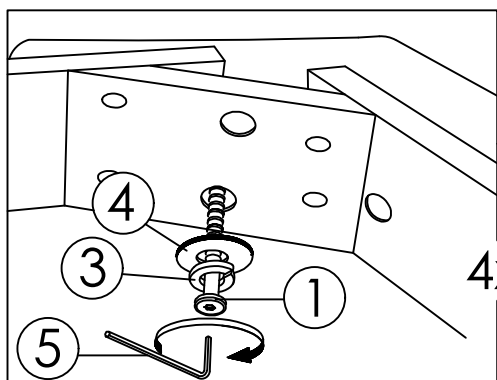

STEP 5
Étape 5

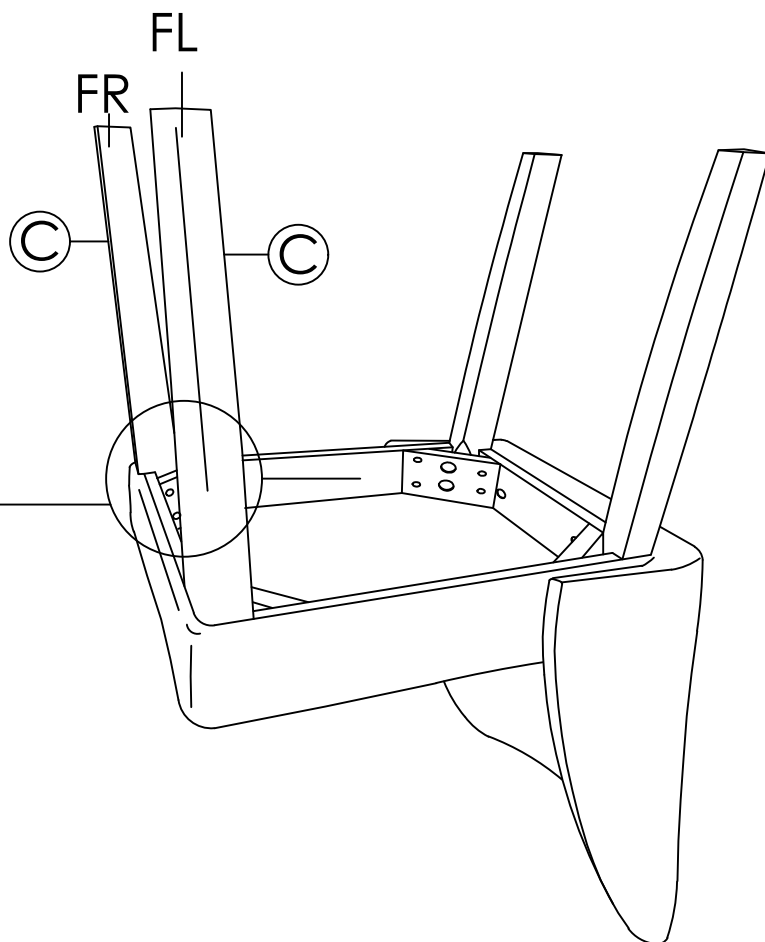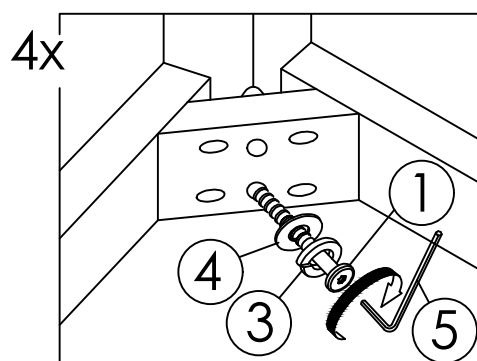

STEP 6
Étape 6

