


email: info@riverside-furniture.com

Talford Natural Bedroom Assembly Instructions


Page 1 of 5

Made in Viet Nam


5/0 Queen Upholstered Bed

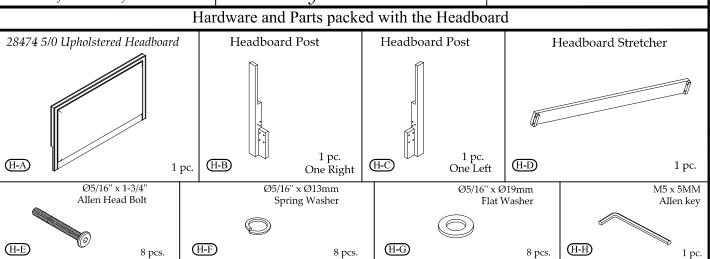

Hardware and Parts packed with the Footboard

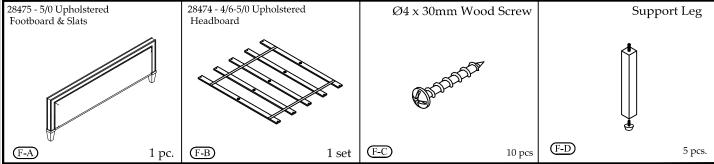

Hardware and Parts packed with the Bed Rails

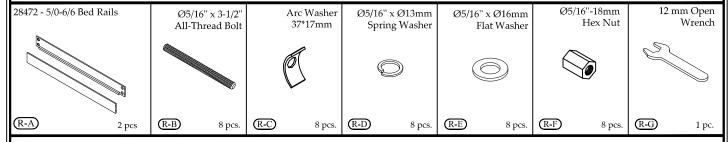

5/0 Queen Upholstered Bed

28474 - 5/0 Upholstered Headboard

28475 - 5/0 Upholstered Footboard & Slats

28472 - 5/0-6/6 Bed Rails


Riverside


email: info@riverside-furniture.com

Talford Natural Bedroom Assembly Instructions Page 2 of 5

Made in Viet Nam

5/0 Queen Upholstered Bed

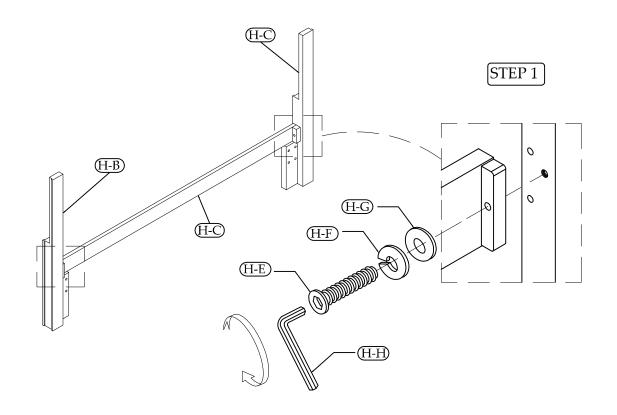

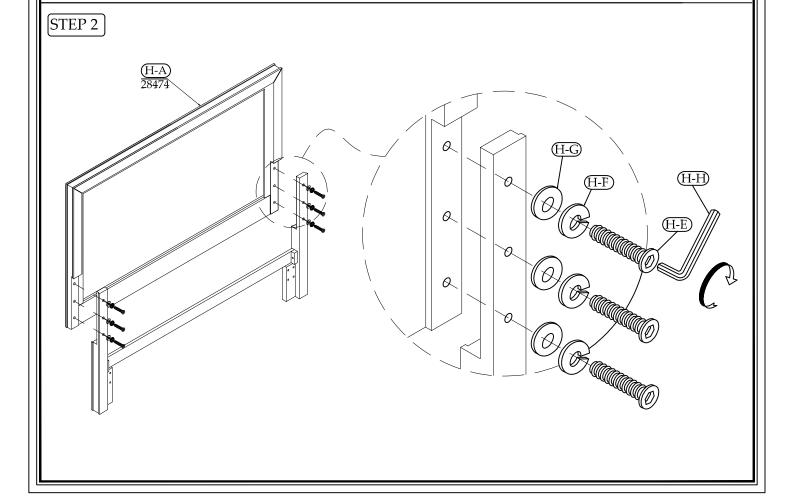


Riverside


email: info@riverside-furniture.com

Talford Natural Bedroom Assembly Instructions Page 3 of 5
Made in Viet Nam

5/0 Queen Upholstered Bed

STEP 3

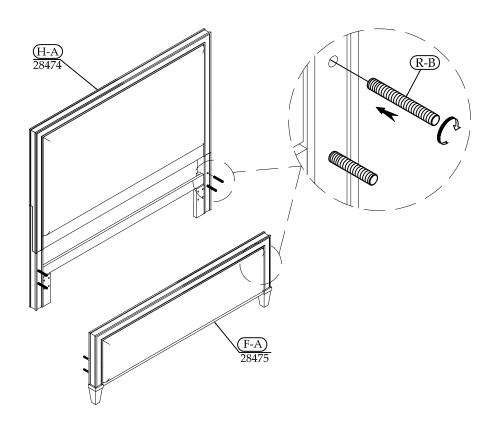

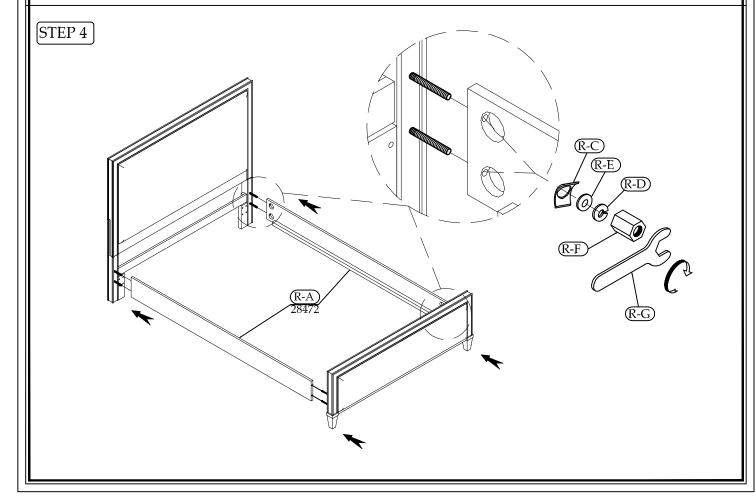


Riverside


email: info@riverside-furniture.com

Talford Natural Bedroom Assembly Instructions Page 4 of 5
Made in Viet Nam

5/0 Queen Upholstered Bed

STEP 5

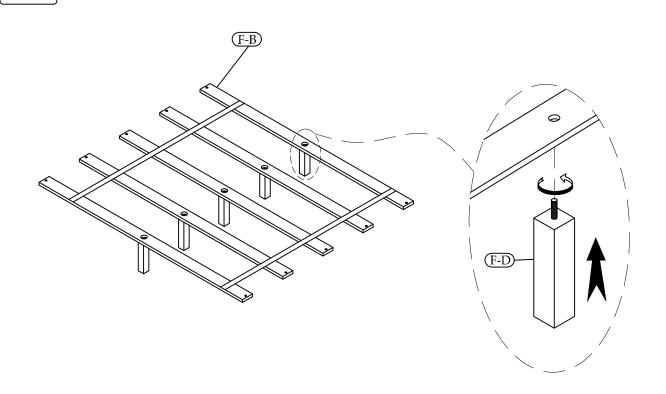

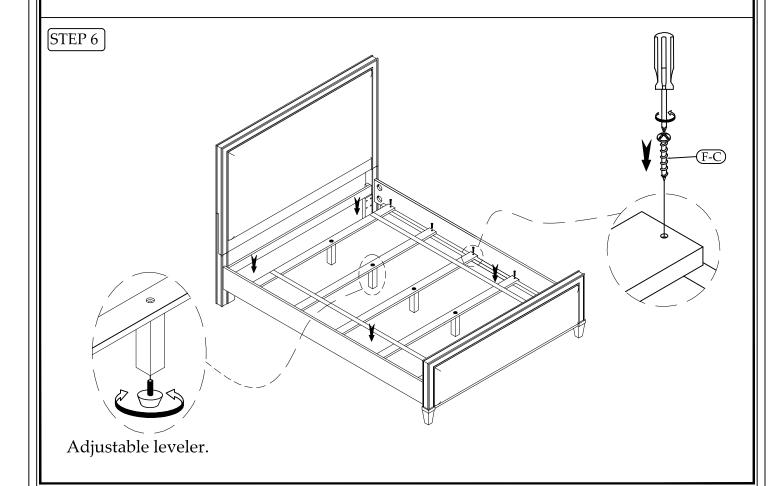




email: info@riverside-furniture.com

Talford Natural Bedroom Assembly Instructions Page 5 of 5 Made in Viet Nam

5/0 Queen Upholstered Bed

5/0 Queen Upholstered Bed 28474 - 5/0 Upholstered Headboard

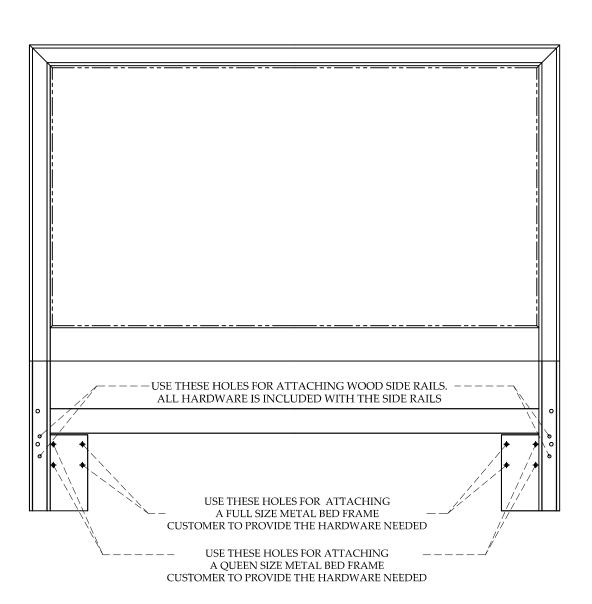

5/0 Bed

THE HEADBOARD MAY BE USED ALONE WITH A QUEEN OR FULL SIZE METAL BED FRAME.