



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215911Q (B1&B2)
Queen Bed

ITEM: 215911Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD
PANEL



1PC

B FOOTBOARD



1PC

C RIGHT
HEADBOARD LEG



1PC

D LEFT
HEADBOARD
LEG



1PC

E BED SLAT



4PCS

F BED SLAT
SUPPORT WITH
LEVELER



4PCS

B2 (BOX 2)

G BED RAIL




2PCS

HB 215911Q(B1)
FROM BOX 1
HEADBOARD
COMPLETE



1PC

B 215911Q(B1)
FROM BOX 1
FOOTBOARD



1PC

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 215911Q (B1)

1 BOLT
(M6 x 30mm - BLK)



6PCS

2 LOCK WASHER
(1/4" - BLK)



6PCS

3 FLAT WASHER
(1/4"ID x 13mm - BLK)



6PCS

4 SMALL ALLEN
WRENCH
(M4 x 60mm - BLK)



1PC

5 BIG ALLEN
WRENCH
(M5 x 65mm - BLK)



1PC

6 FLAT HEAD
SCREW
(M4 x 32mm - RBW)



8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 215911Q (B1&B2)



ASSEMBLY INSTRUCTIONS


STEP 1

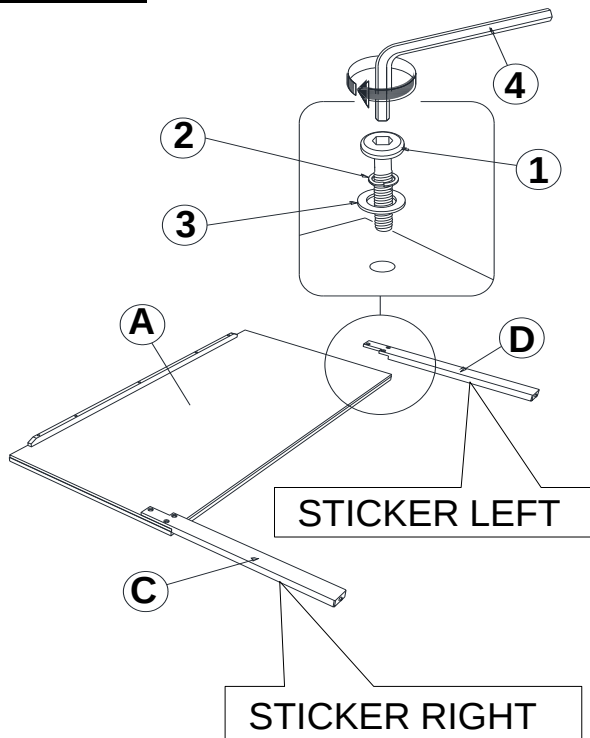


****BACK VIEW****

Note : Please take note of the marking sticker (L & R) on the headboard legs.

STEP 2

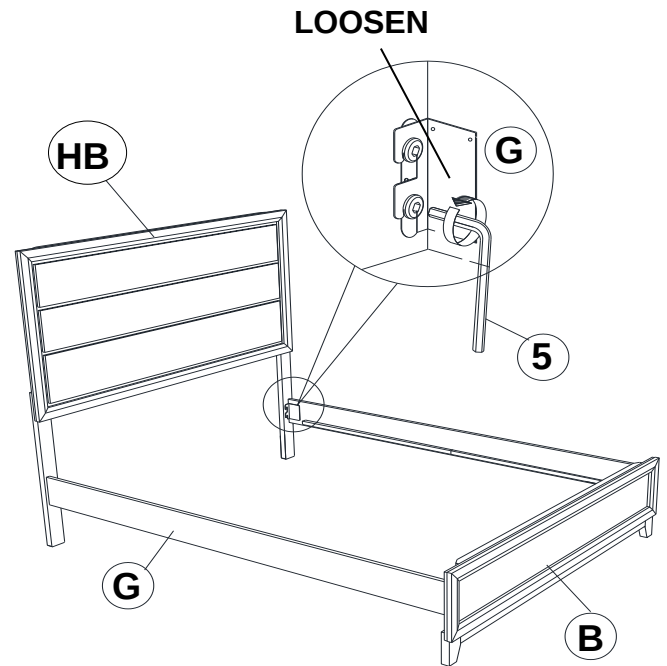

STEP 3

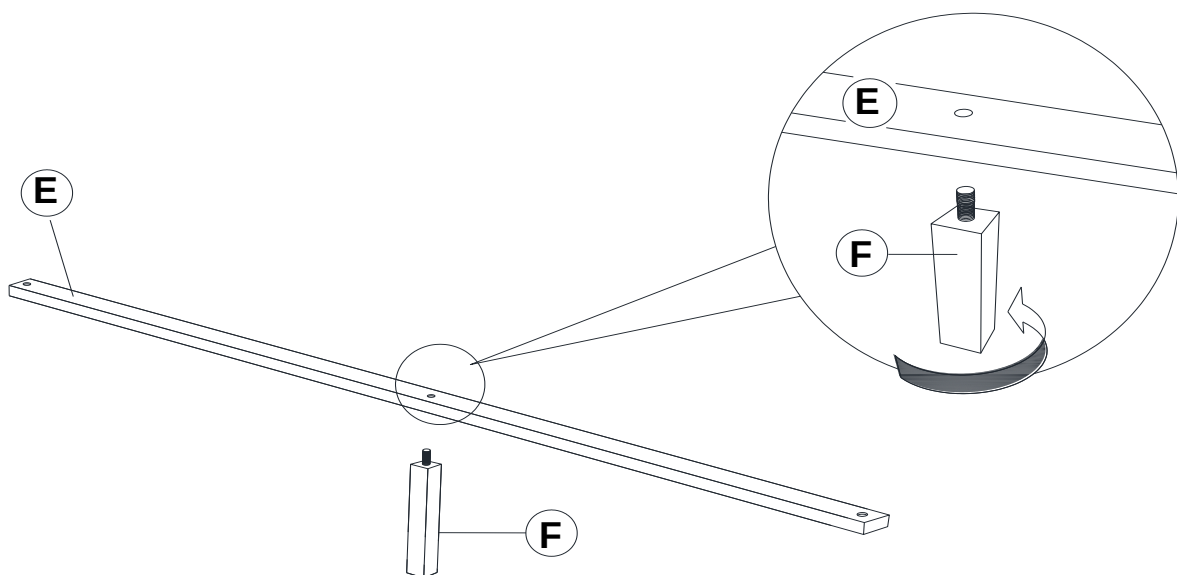


ITEM: 215911Q (B1&B2)




ASSEMBLY INSTRUCTIONS

STEP 4

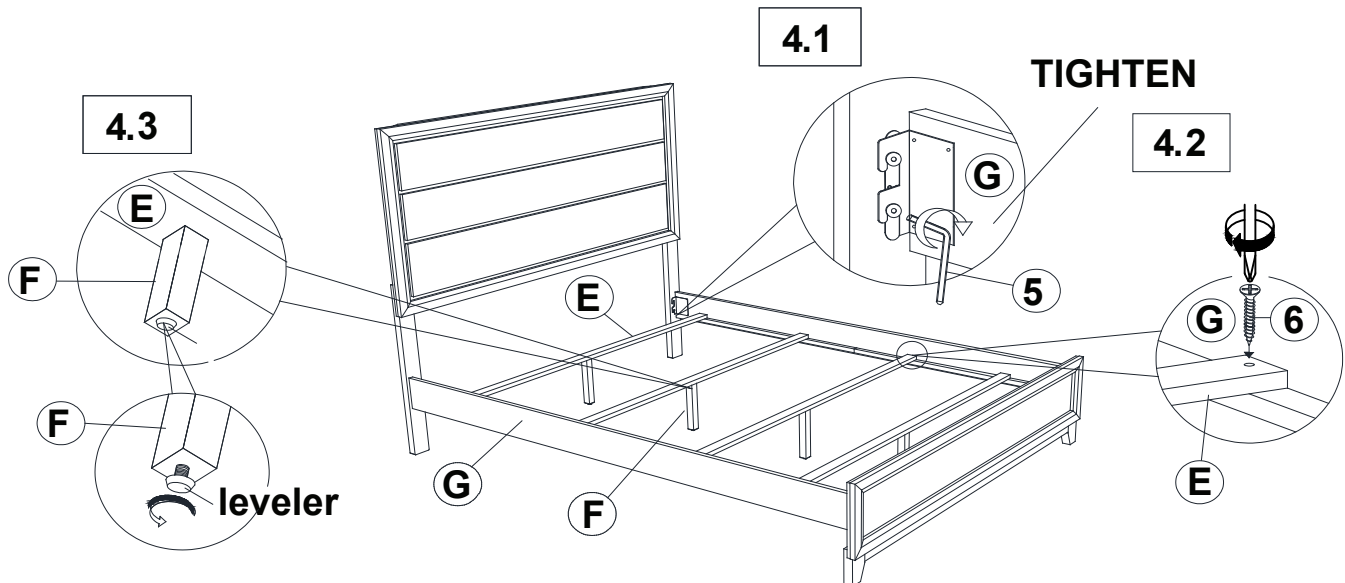


NOTE:

1. Push the side rail inward until the slats are flush and resting on the side rail support then fasten each slat to the side rail support using the provided screw.
2. The side rail warpage is a temporary condition, it will straighten out once the bed is fully assembled.

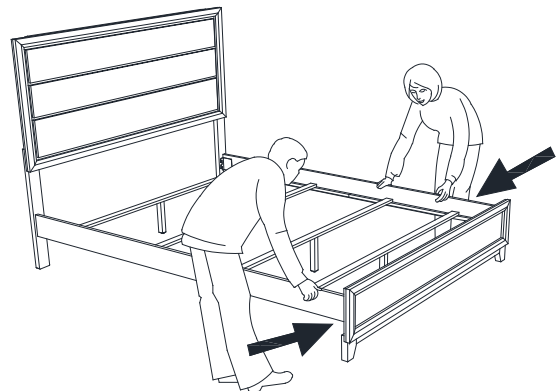


STEP 5 COMPLETE

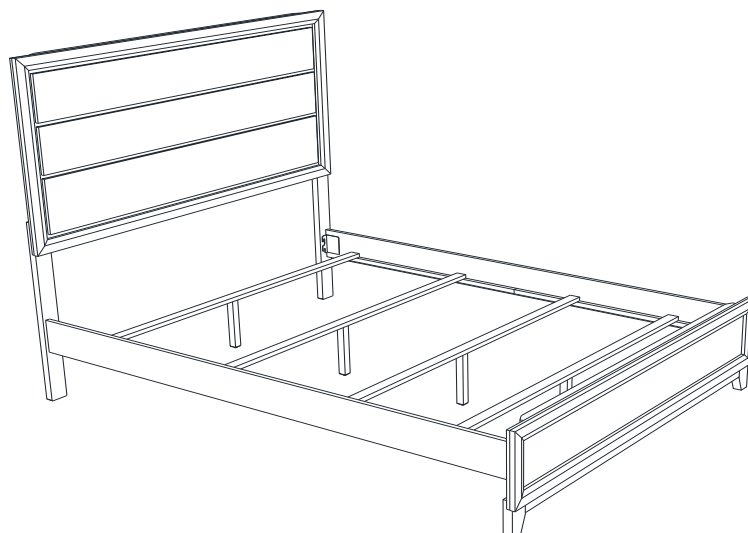

ITEM: **215911Q (B1&B2)**



Inner Size : 60.75"W X 81.00"D

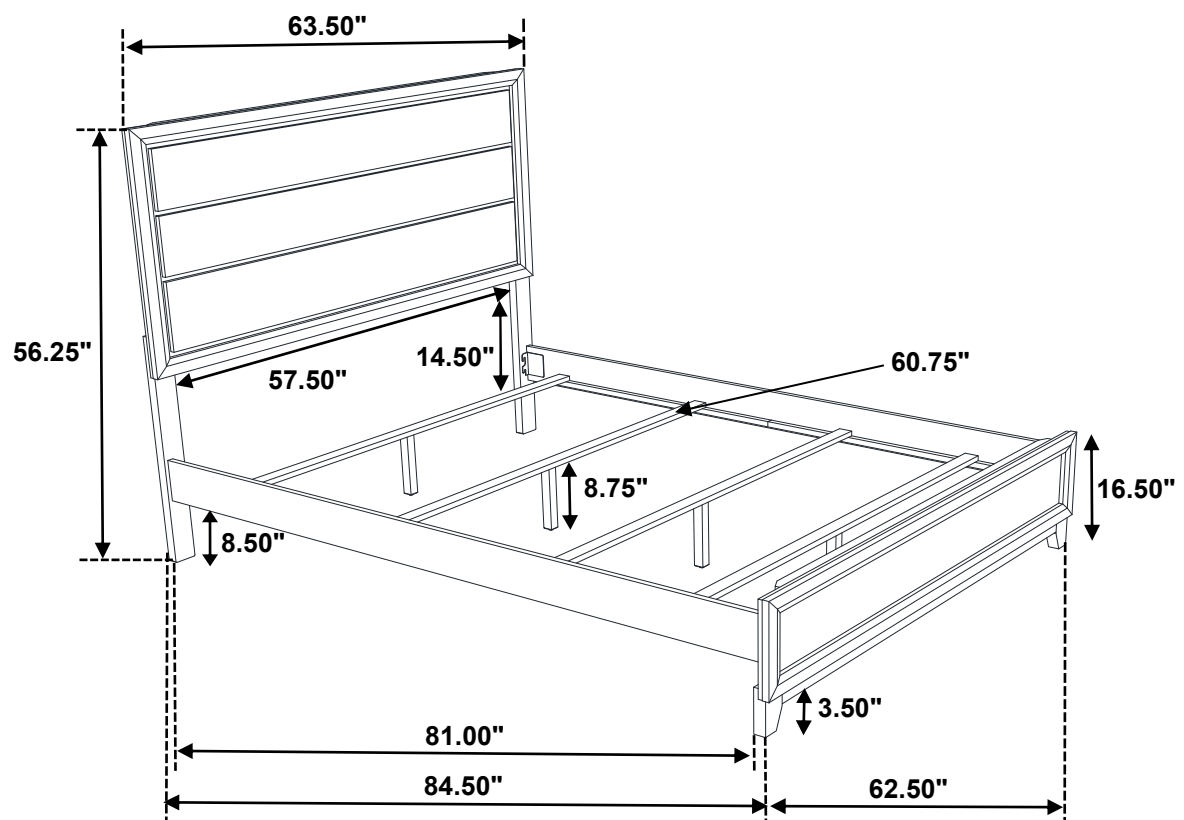

Note : Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

215912
Nightstand

ITEM: **215912**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

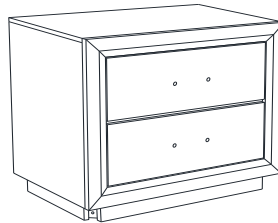

1PC

B LEG



4PCS

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 50mm - BLK)



4PCS

2 LOCK WASHER
(1/4" - BLK)



4PCS

3 FLAT WASHER
(1/4"ID x 19mm - BLK)



4PCS

4 ALLEN WRENCH
(M4 x 60mm - BLK)



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **215912**

ASSEMBLY INSTRUCTIONS


STEP 1

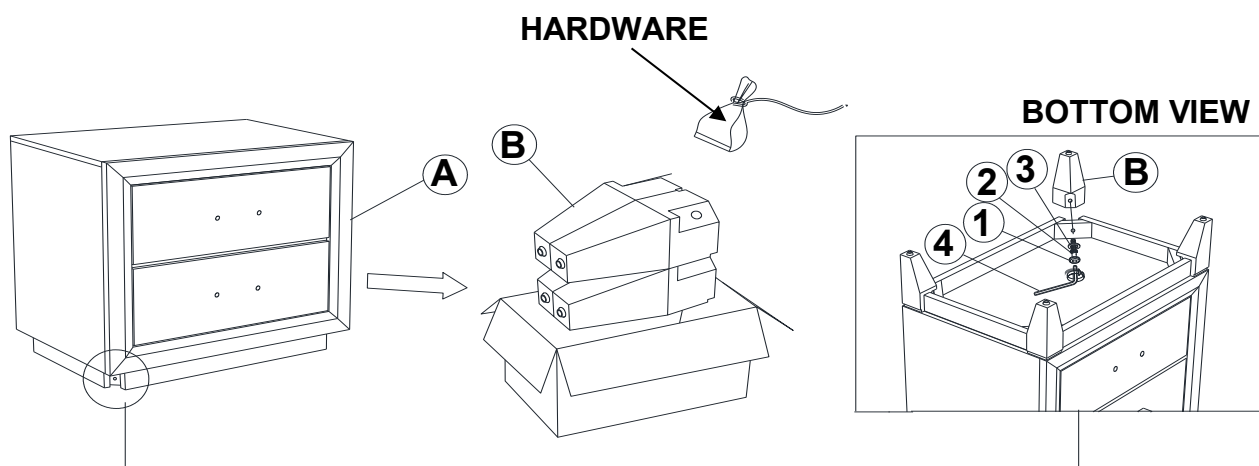

STEP 2

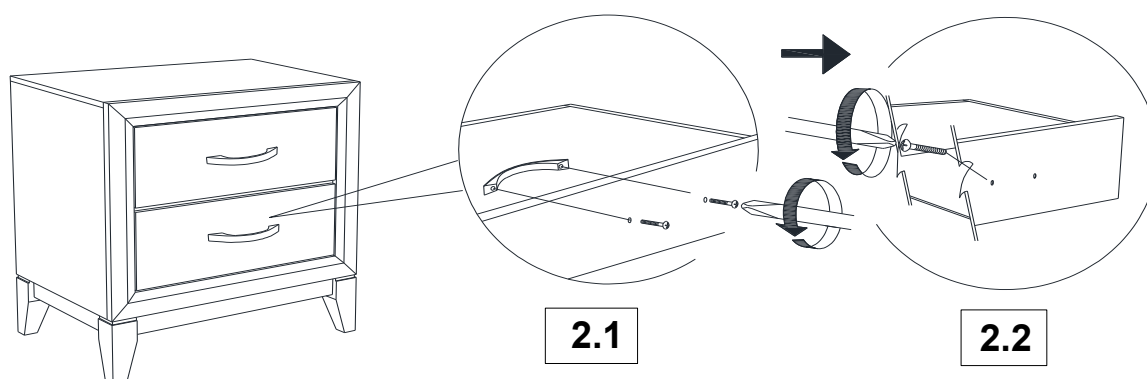


STEP 3 COMPLETE

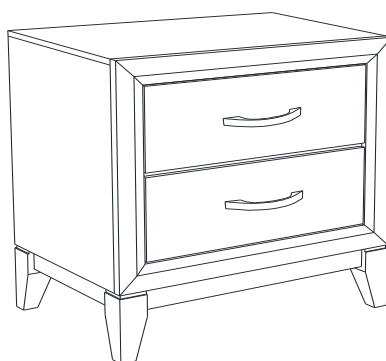

ITEM: **215912**



Inner Size of Drawer : 17.00"W x 12.50"D x 4.00"H x 0.25"T

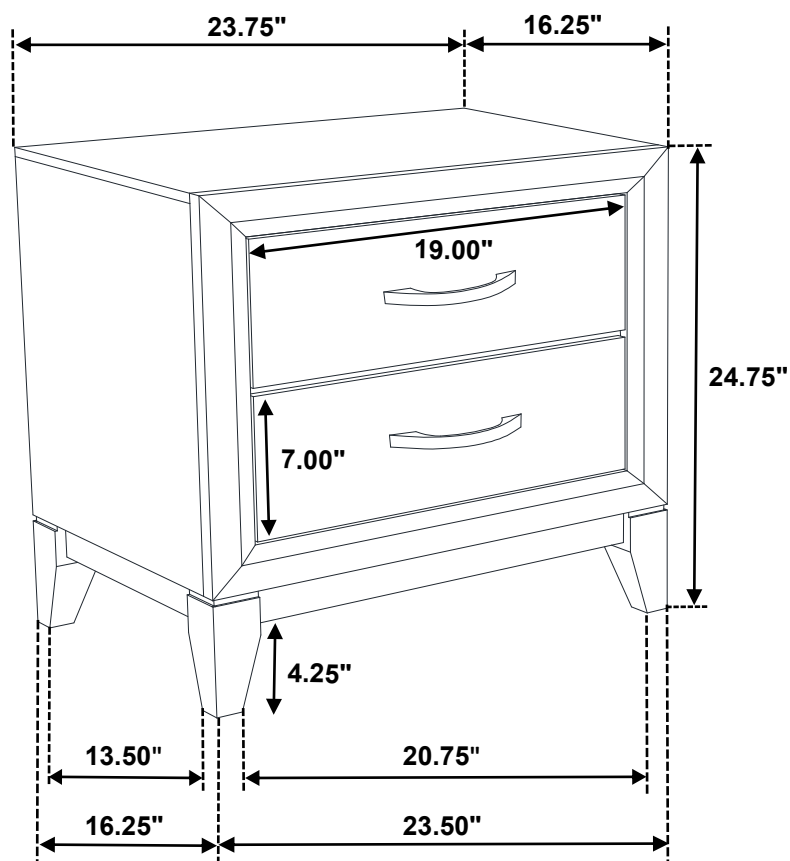

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

215913
Dresser

ITEM: **215913**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER

1PC

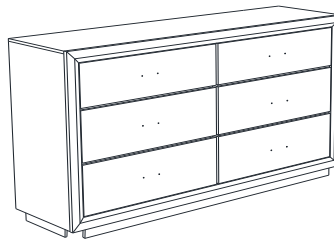

B LEG

4PCS



C CENTER SUPPORT LEG
WITH LEVELER


1PC



HARDWARE IDENTIFICATION

1 BOLT
(M6 x 50mm - BLK)

4PCS



2 LOCK WASHER
(1/4" - BLK)

4PCS




3 FLAT WASHER
(1/4"ID x 19mm - BLK)

4PCS



4 ALLEN WRENCH
(M4 x 60mm - BLK)

1PC




NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **215913**

ASSEMBLY INSTRUCTIONS

STEP 1

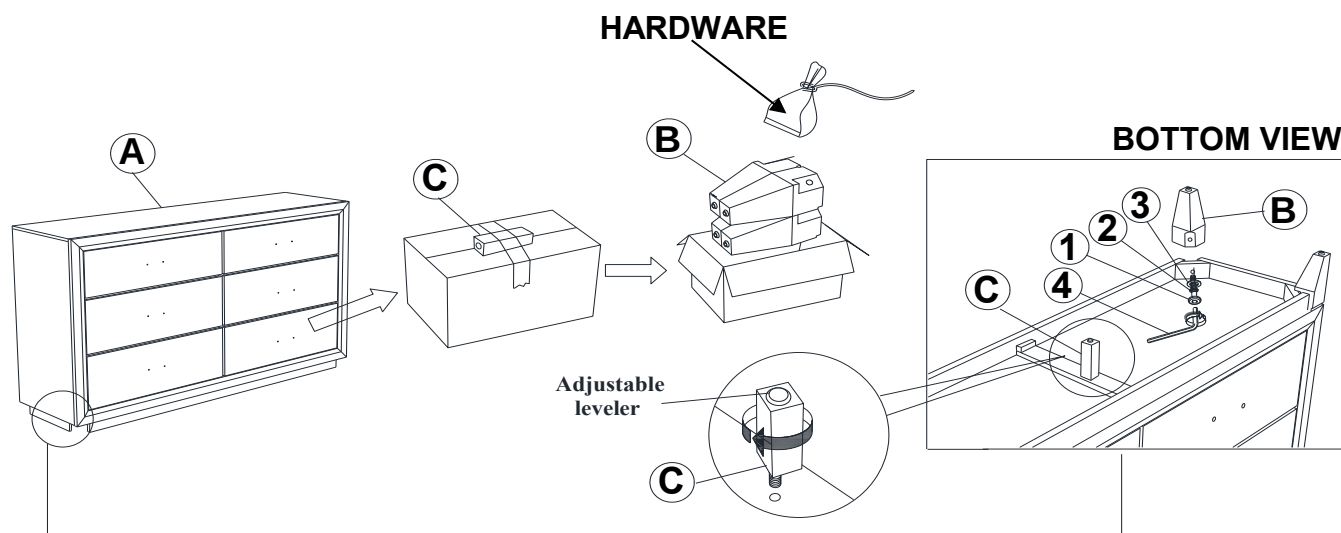

STEP 2

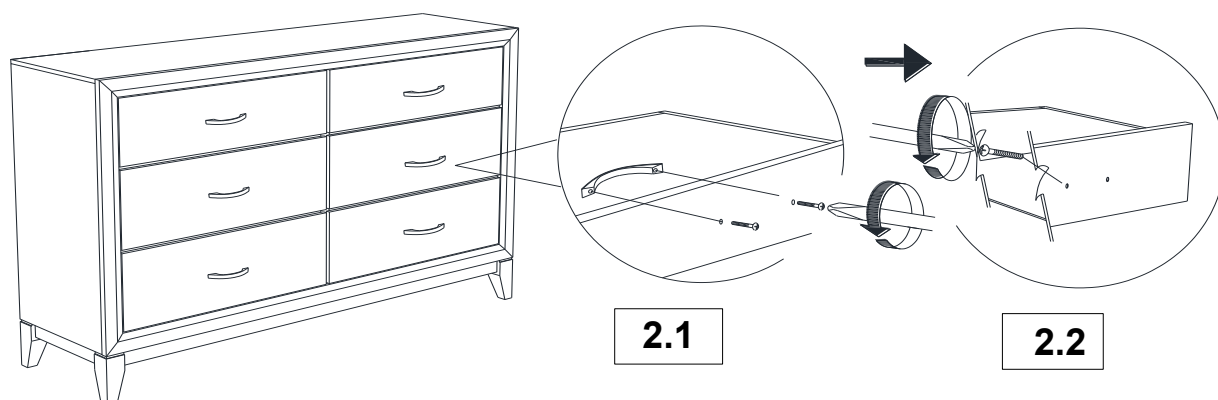


STEP 3 **COMPLETE**



ITEM: **215913**



Inner Size of Drawer : 23.25"W x 12.50"D x 5.00"H x 0.25"H

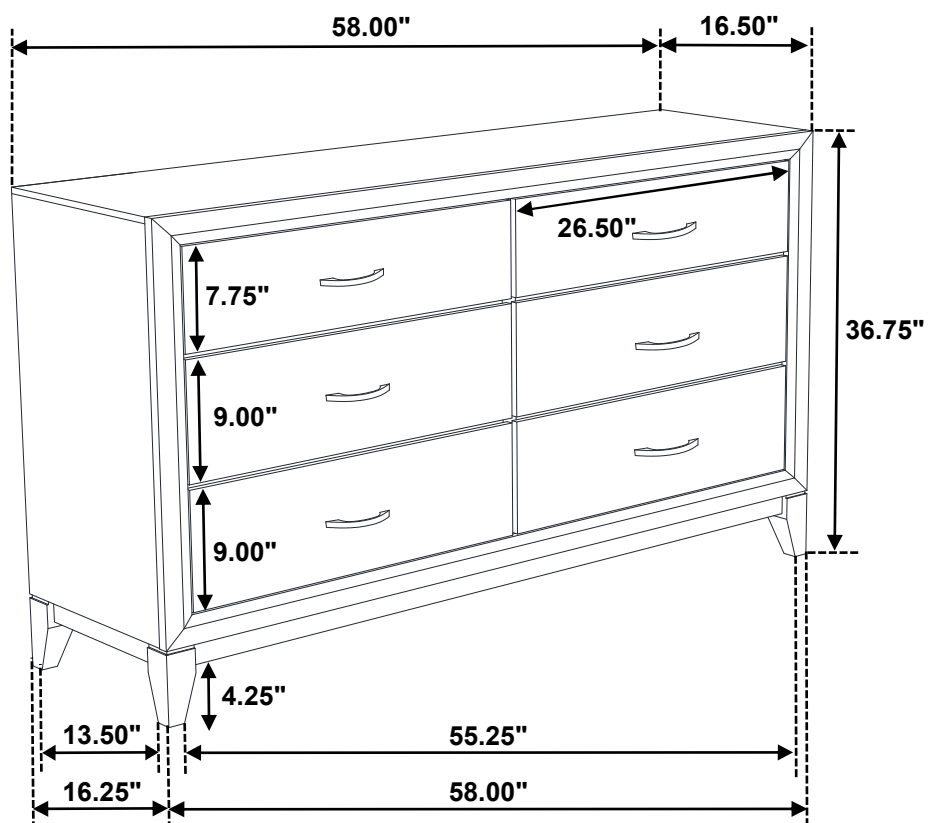

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

215914
Mirror

ITEM: **215914**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A MIRROR

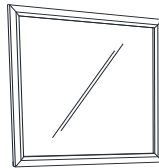


1PC

**B DRESSER FROM
BOX ITEM #215913**

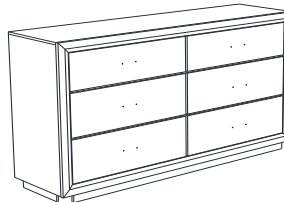

1PC

**C MIRROR SUPPORT
(PACK WITH MIRROR)**



2PCS

HARDWARE IDENTIFICATION

**1 FLAT HEAD SCREW
(M4 x 32mm - RBW)**



12PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **215914**

ASSEMBLY INSTRUCTIONS

STEP 1

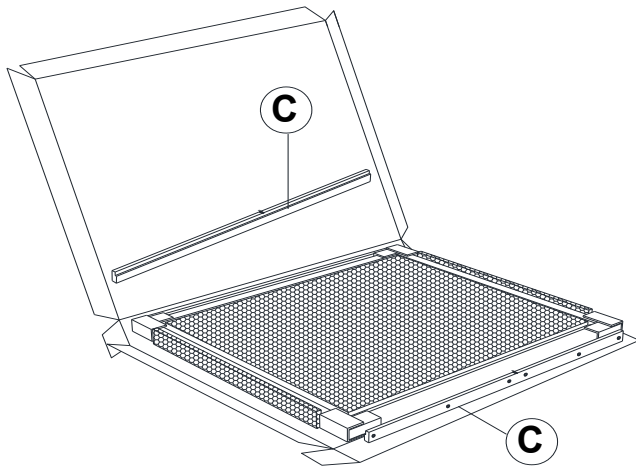


STEP 2

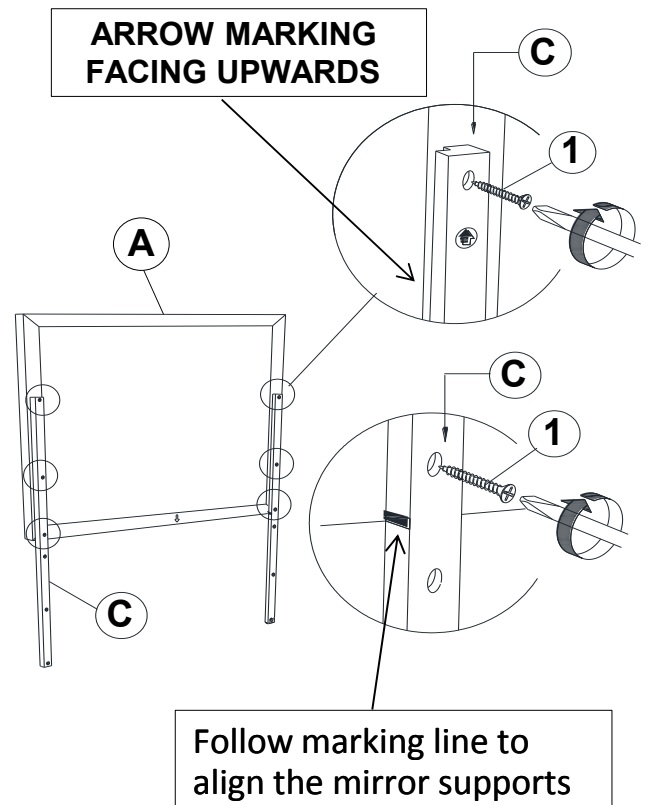


****BACK VIEW****

STEP 3

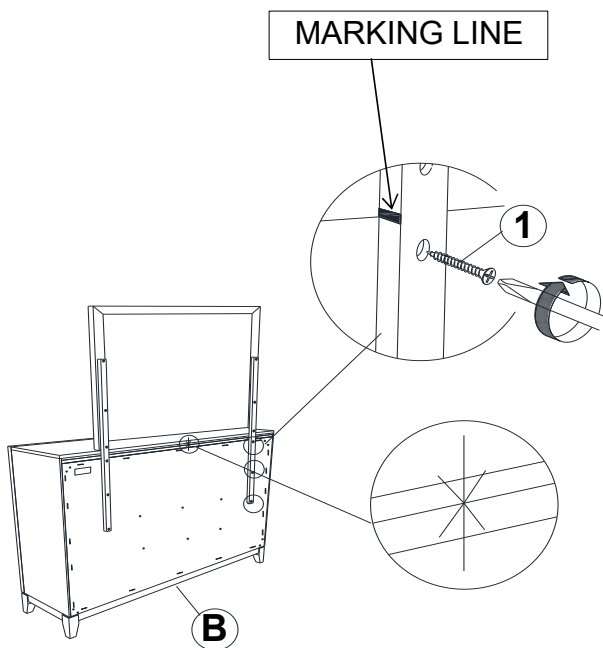


REMARK:
ARROW MARKING MUST BE ALIGNED

STEP 4 **COMPLETE**

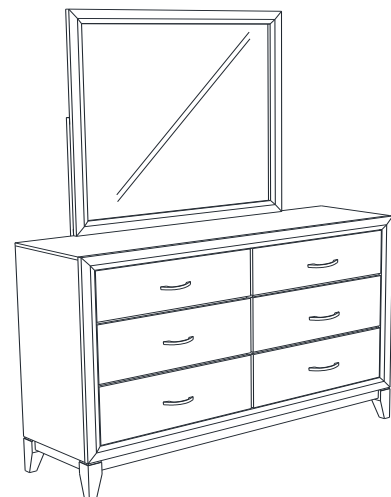

ITEM: **215914**

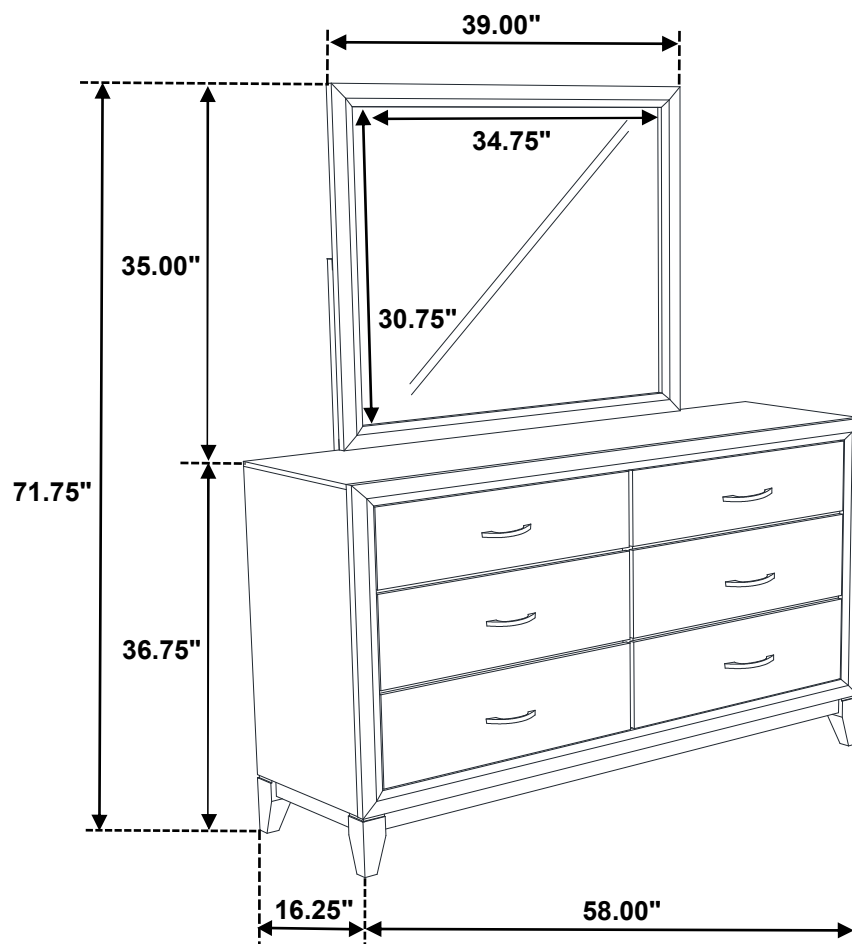

Note : Dimension tolerance $\pm$ 5%

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

215915
Chest

ITEM: **215915**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A

CHEST

1PC



B

LEG

4PCS



HARDWARE IDENTIFICATION

1

BOLT
(M6 x 50mm - BLK)



4PCS

2

LOCK WASHER
(1/4" - BLK)



4PCS

3


FLAT WASHER
(1/4"ID x 19mm - BLK)



4PCS

4

ALLEN WRENCH
(M4 x 60mm - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **215915**


ASSEMBLY INSTRUCTIONS



STEP 1

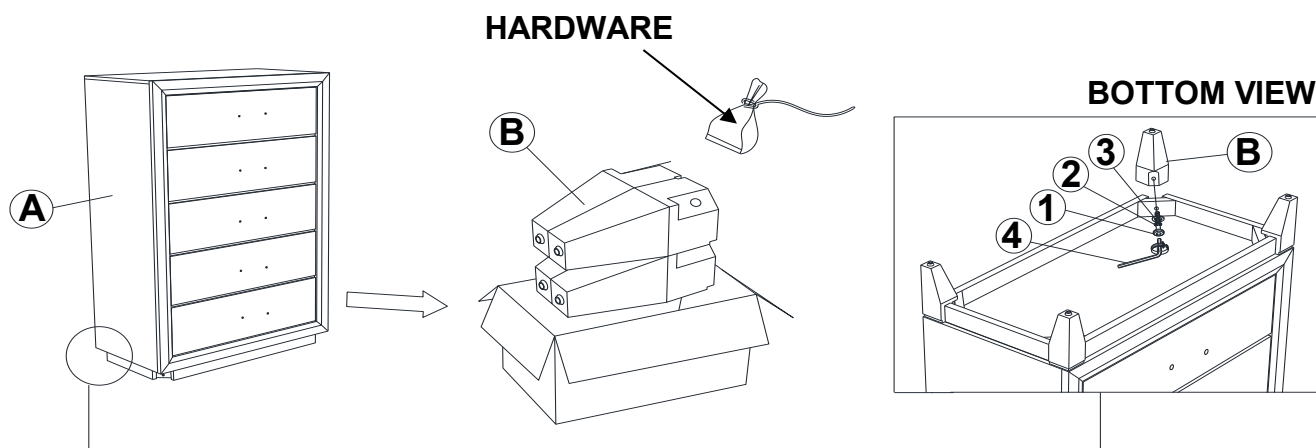

STEP 2

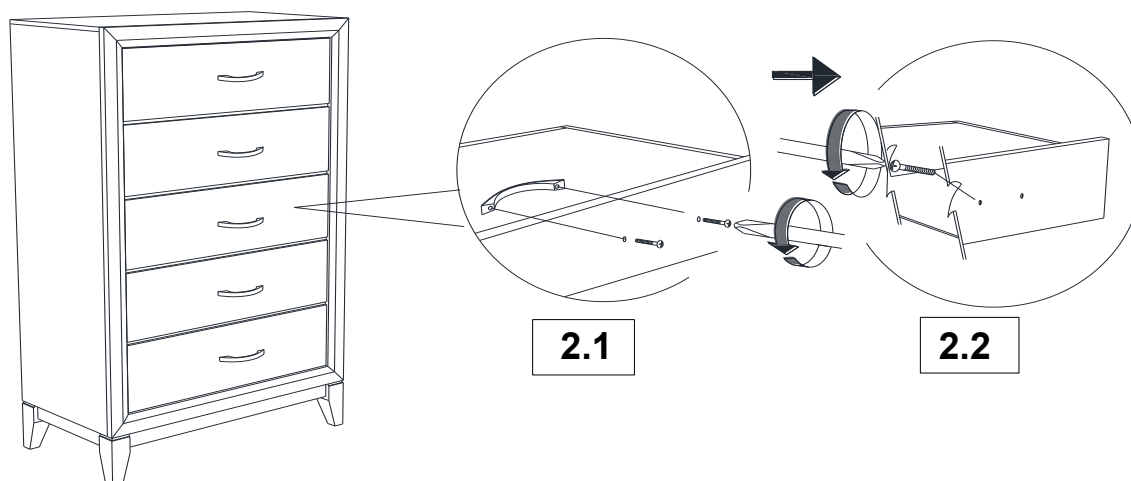


STEP 3 **COMPLETE**



ITEM: **215915**



Inner Size of Drawer : 25.00"W x 12.50"D x 5.00"H x 0.25"T

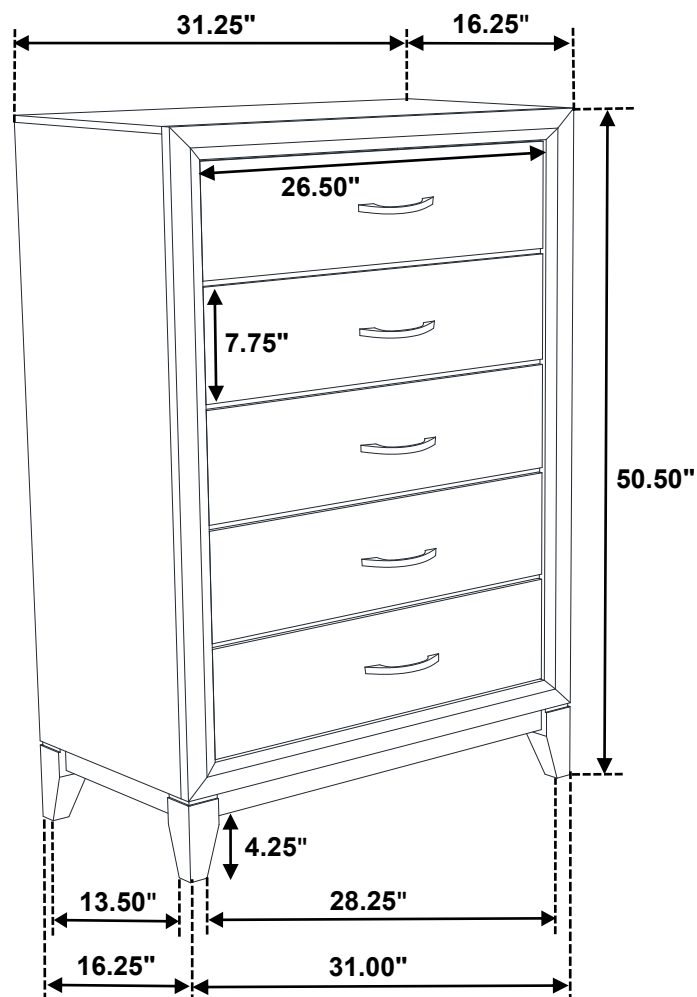

Note : Dimension tolerance $\pm 5\%$