

ASSEMBLY INSTRUCTION


MADE IN VIETNAM

U7250-04-03 RECLINER-GREY

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


Before you start assembly: Please read all instructions carefully before beginning the assembly process. It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

CAUTION: For your safety, this product requires two people to lift.

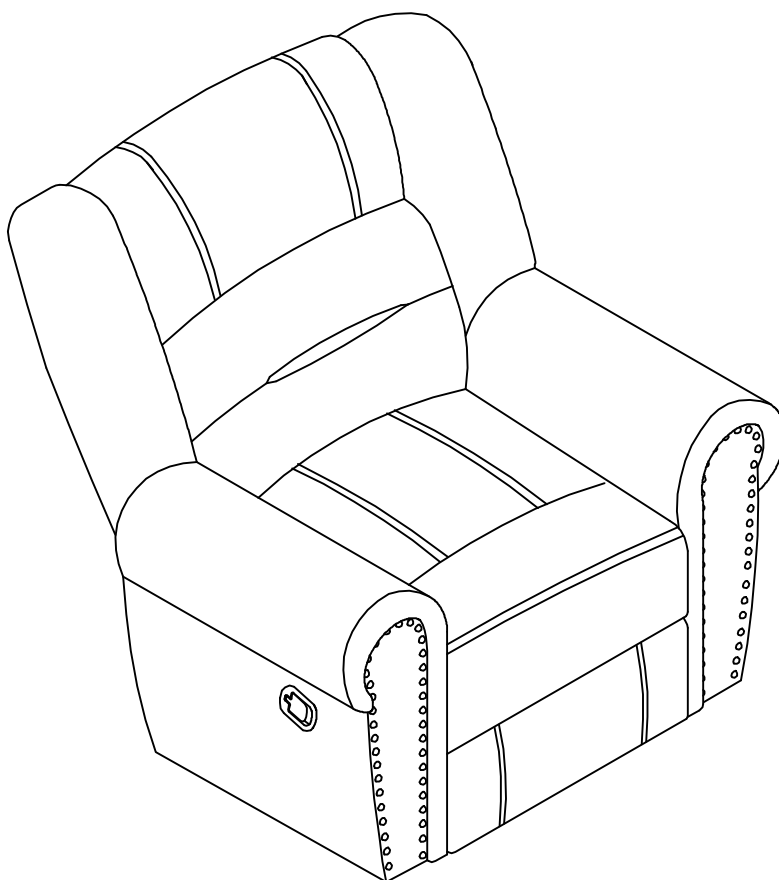


10 MINUTES

APPROXIMATE ASSEMBLE TIME

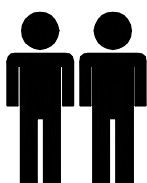


2 PERSON




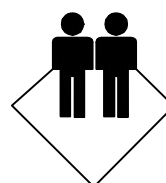


REQUIRED ASSEMBLY SPACE

ITEM NO. : U7250-04-03 RECLINER-GREY


PART LIST

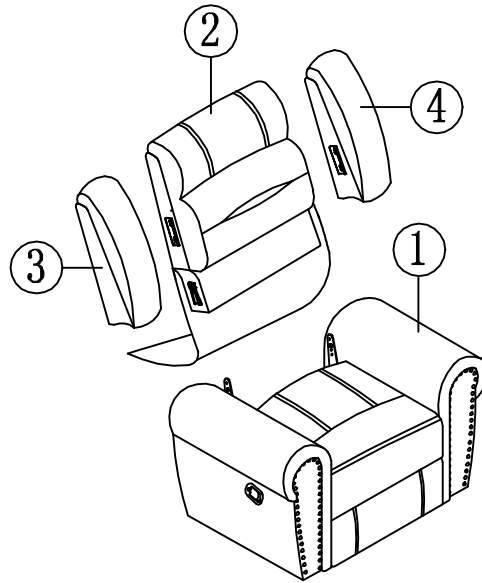

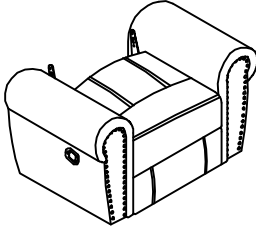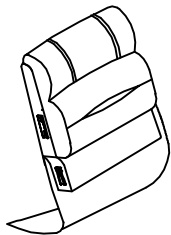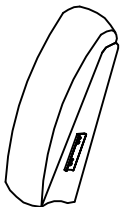
NO.		PART LIST	Q.TY
(1)		Seat Body	1
(2)		Backrest	1
(3)		Left Wing	1
(4)		Right Wing	1

ITEM NO. : U7250-04-03 RECLINER-GREY

STEP 1

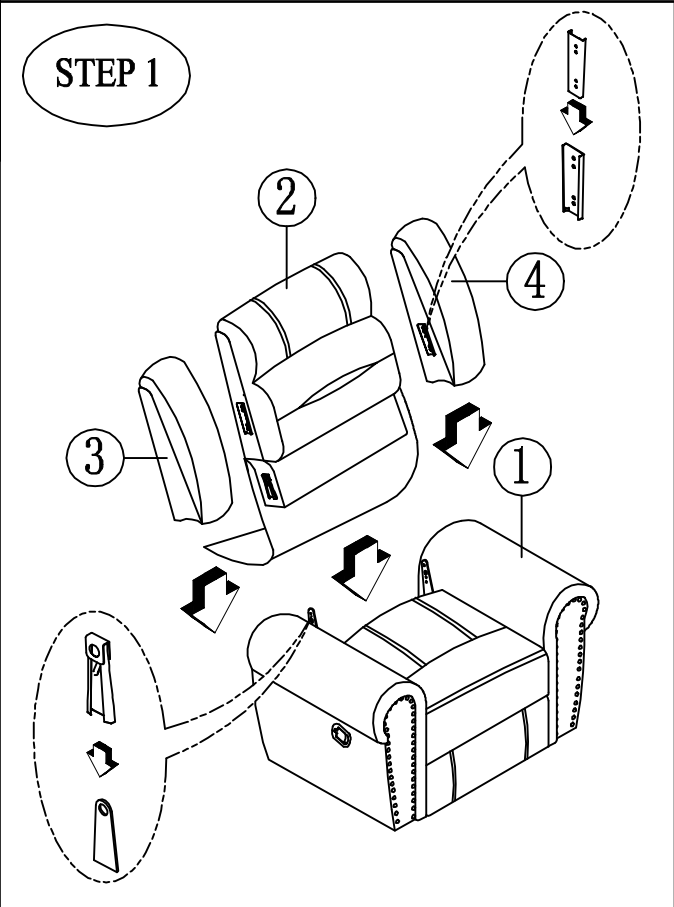

STEP 2

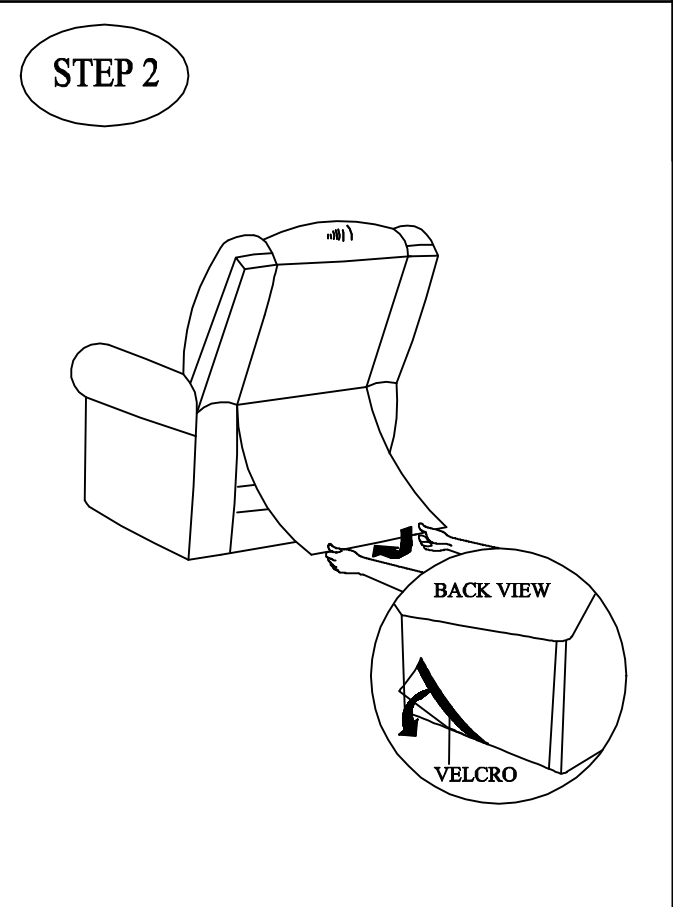

STEP 3

