








ASSEMBLY INSTRUCTION

Model : BECKETT-QB-HB/SR/FB









Description : Queen Bed


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

PART LIST:

| No. | Description | Diagram | Quantity |
|-----|---------------------|---|----------|
| A | Headboard Panel |  | 1 |
| B | Headboard Leg (L/R) |  | 2 |
| C | Cross Bar |  | 1 |
| D | Footboard |  | 1 |
| E | Slats |  | 4 |
| F | Support Leg |  | 4 |
| G | Siderail |  | 2 |

HARDWARE LIST:

| Headboard | No. | Description | Diagram | Size | Quantity |
|-----------|-----|---------------|---|-------------|----------|
| | H | Bolt |  | Ø1/4"x38mm | 2 |
| | I | Bolt |  | Ø5/16"x40mm | 6 |
| | J | Allen Key |  | M4 | 1 |
| Siderails | K | Threaded rods |  | Ø5/16"x90mm | 8 |
| | L | Half moon nut |  | Ø5/16" | 8 |
| | M | Hex Nut |  | Ø5/16" | 8 |
| | N | Wrench |  | 12mm | 1 |
| | O | Screw |  | Ø4x30mm | 8 |

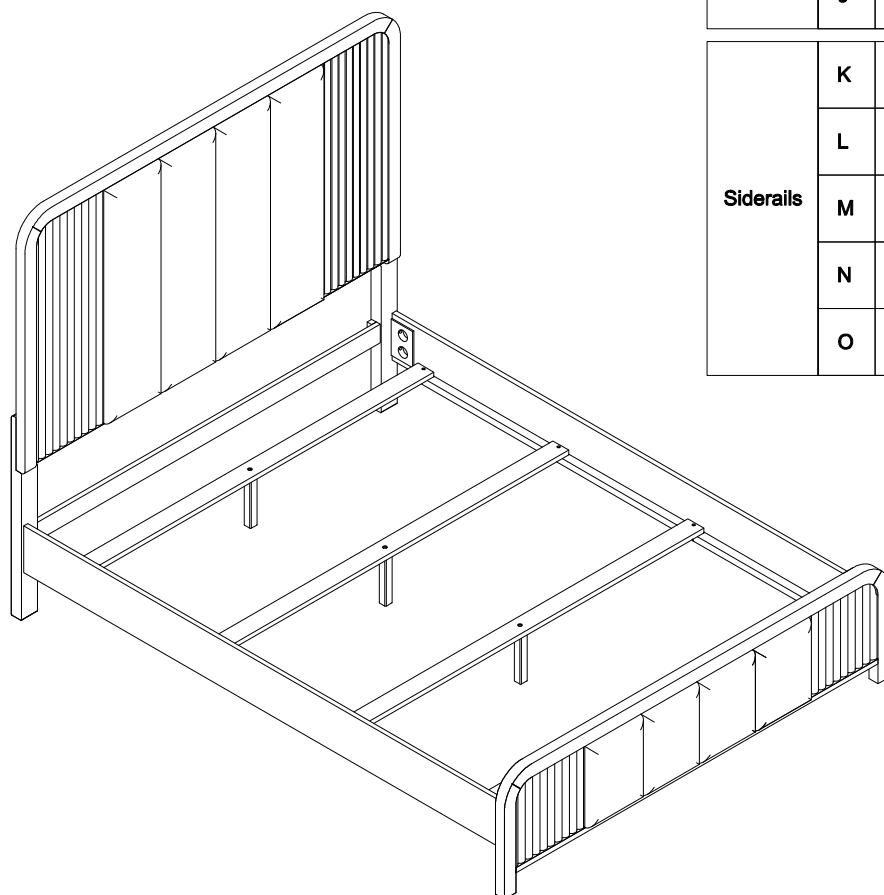


ASSEMBLY INSTRUCTION

Model : BECKETT-QB-HB/SR/FB

Description : Queen Bed


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 1:

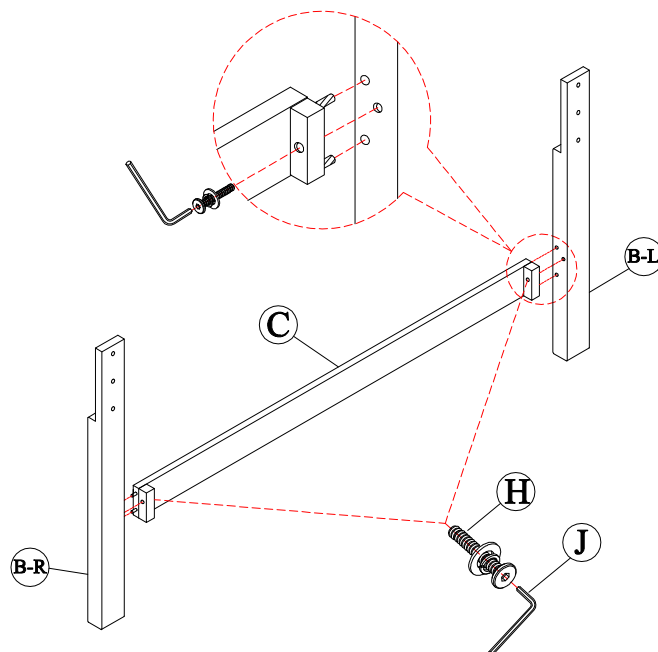

Attach Cross Bar (C) to Headboard Leg (L&R) (B) by using Bolt (H) and tighten with Allen Key (J).

Step 2:

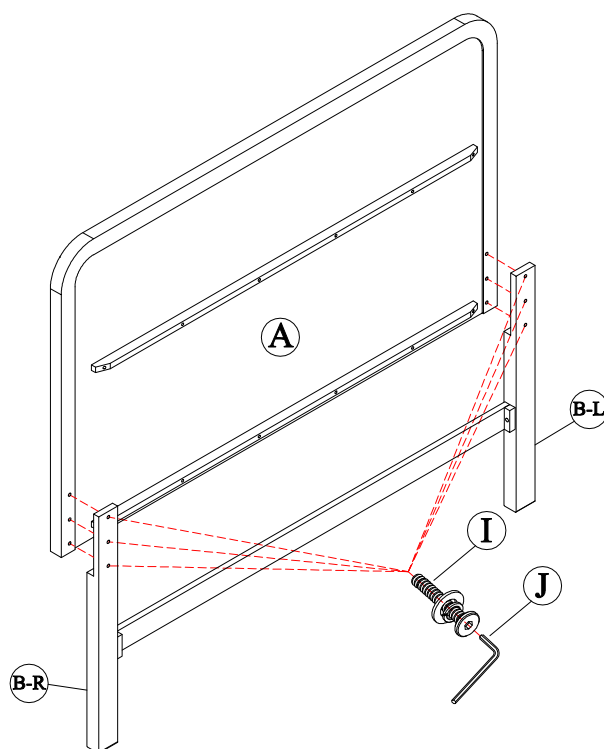

Attach Headboard Leg (L&R) (B) to Headboard (A) by using Bolt (I) and tighten with Allen Key (J).


ASSEMBLY INSTRUCTION

Model : BECKETT-QB-HB/SR/FB

Description : Queen Bed

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.


Step 3:

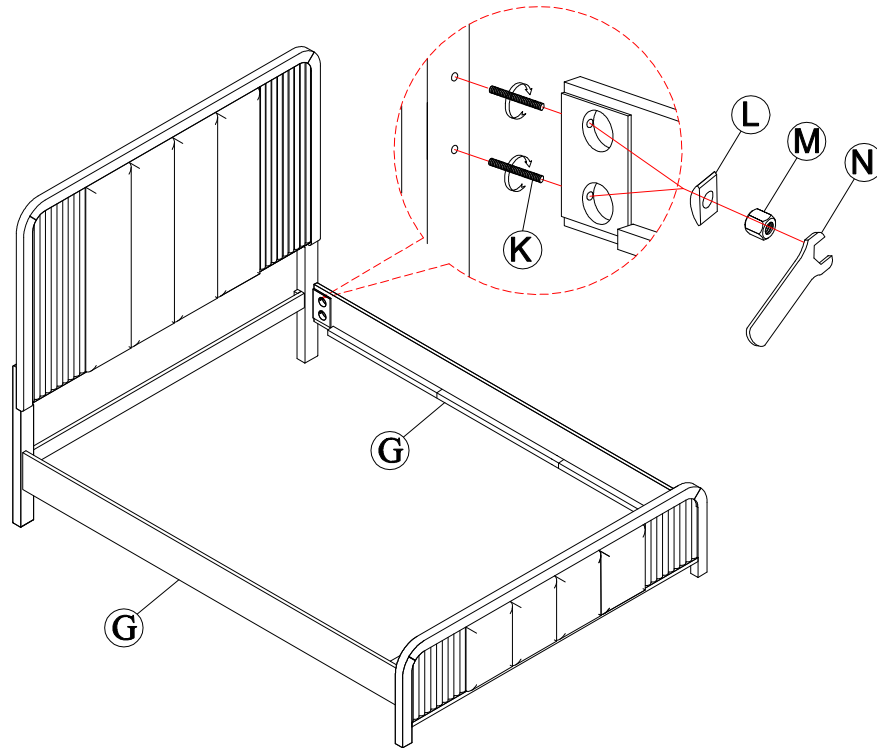

Attach Threaded Rods (K) to the Headboard and Footboard (D), then align side rail (G) to the threaded rods (K). Secure by using nuts (M) with Half moon nut (L).

Step 4:

IMPORTANT
Make sure the SCREW NUT on wood slat (E) is FACING UP when assembling the support legs (F)

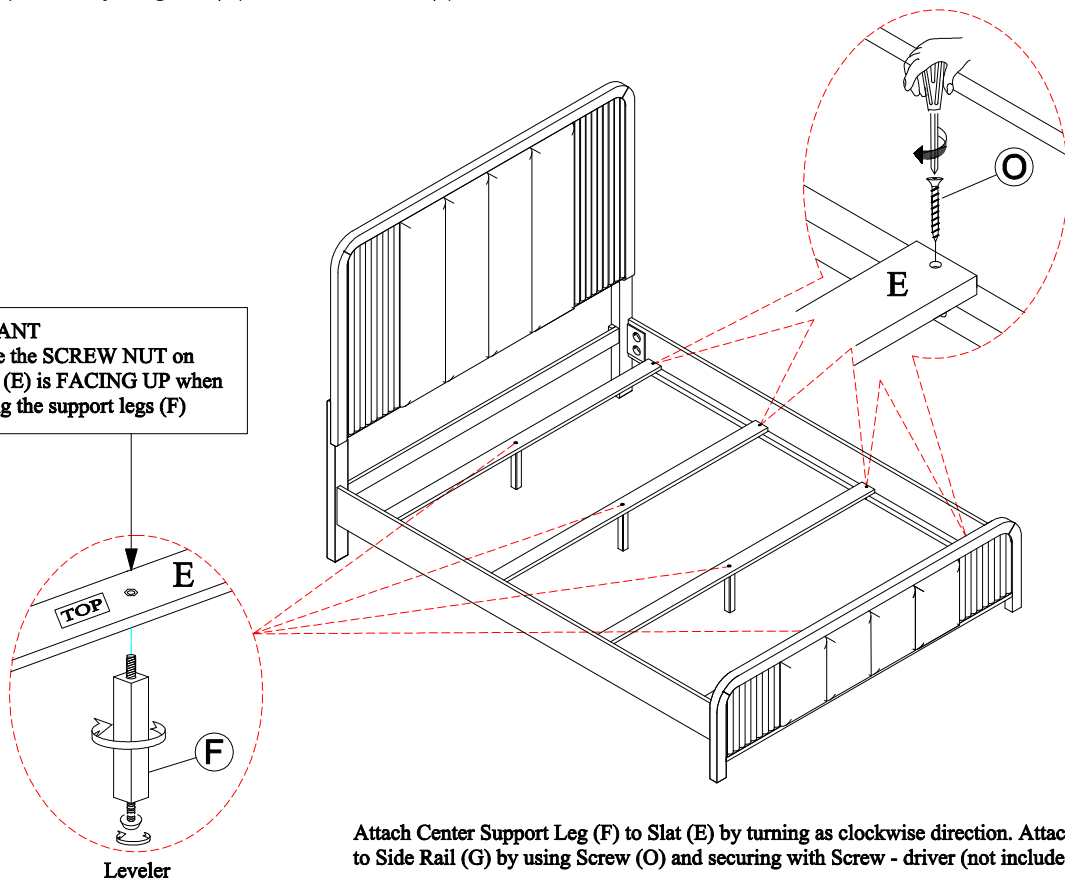

Attach Center Support Leg (F) to Slat (E) by turning as clockwise direction. Attach Slat (E) to Side Rail (G) by using Screw (O) and securing with Screw - driver (not included).