

leggett & platt®

fashion bed™

5950 West 51st Street – Chicago, IL 60638


Parts List For Sycamore bed

**BED CARTON**


- (7) HEADBOARD PANEL**
- (8) FOOTBOARD PANEL**

**HARDWARE BAG FOR BED  
ATTACHMENT TO FRAME**


- (1) 6MM X 55MM FLAT ALLEN HEAD SCREW-8**
- (2) 6MM HEX NUT-8**
- (3) 6.5MM FLAT STEEL WASHER-8**
- (4) ALLEN WRENCH-1**
- (5) LEG EXTENSION-2**
- (6) FINIAL-4**
- (9) OPEN WRENCH-1**

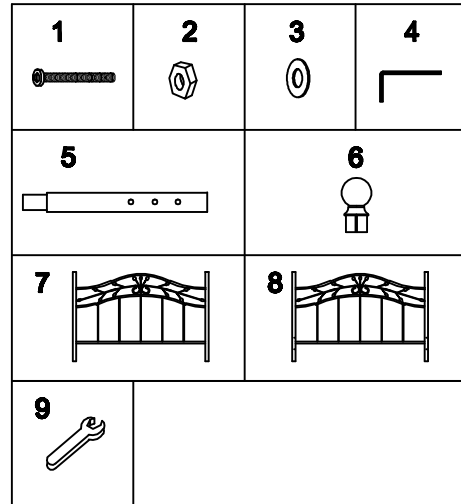


**PRODUCT FULLY ASSEMBLED**

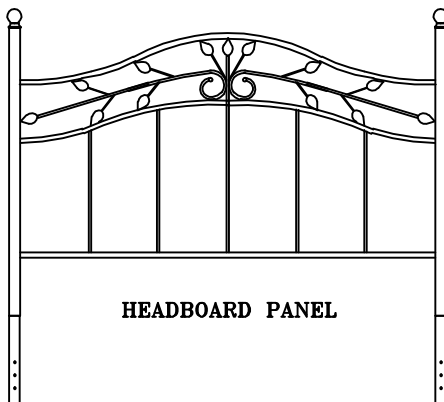

**HEADBOARD PANEL**

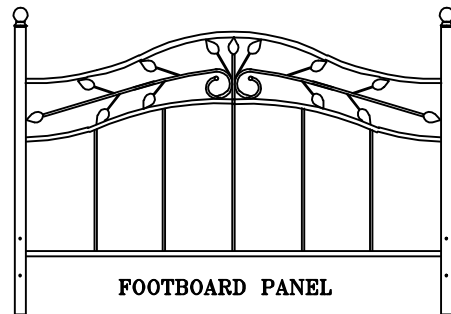


**FOOTBOARD PANEL**

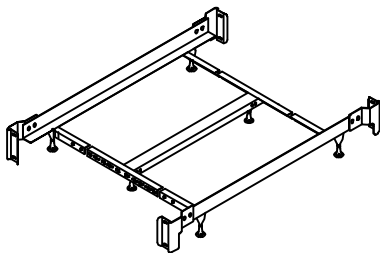

**QUEEN - KING BED FRAME FULLY ASSEMBLED**

**NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON  
FOR FRAME ASSEMBLY**

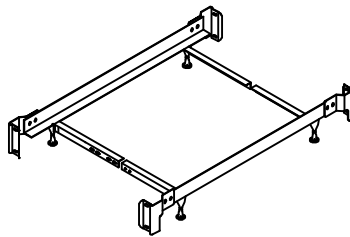

**TWIN - FULL BED FRAME FULLY ASSEMBLED**

**NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON  
FOR FRAME ASSEMBLY**

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS PRODUCT. CALL OUR HELP DESK AT 1-800-324-3415, BETWEEN 8:30 AM & 4:30 PM CENTRAL TIME MONDAY THRU FRIDAY. PLEASE HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.) OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.

# Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

FIGURE 1

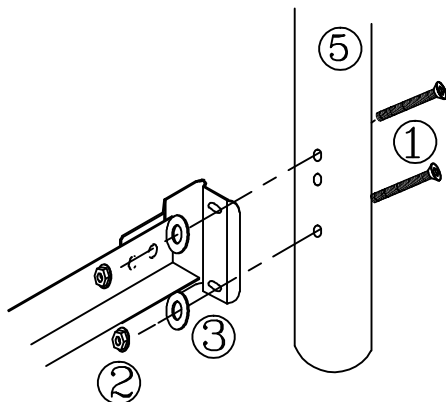
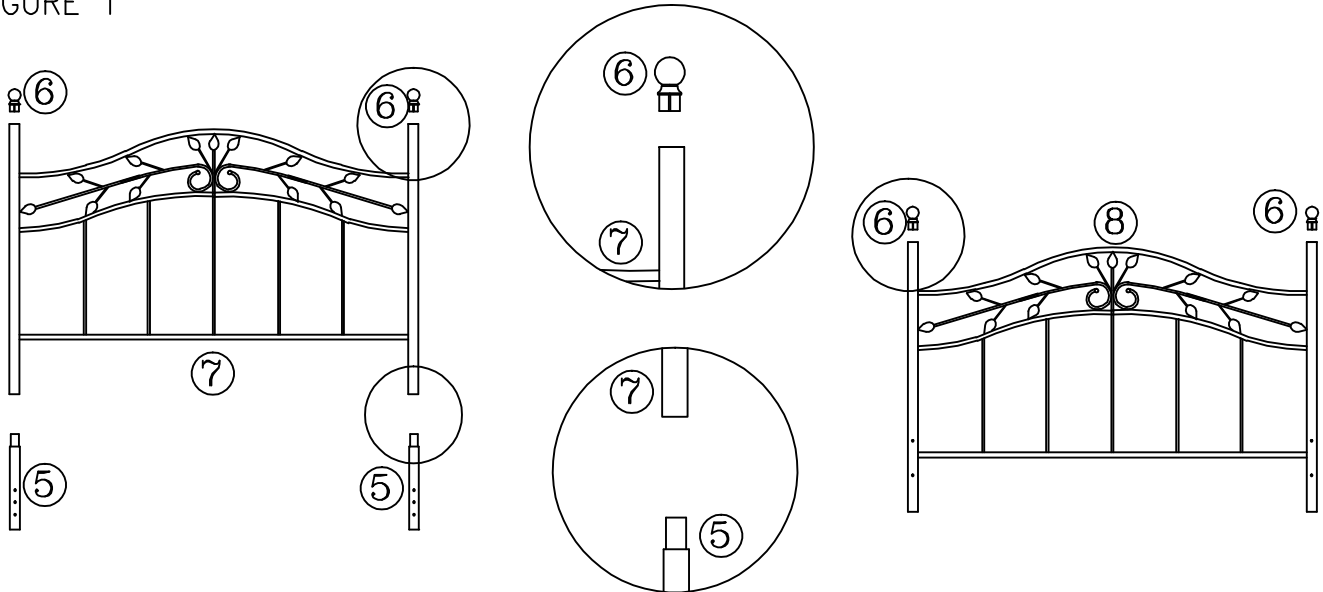


FIGURE 2

## Step 1

- Align top reduction of extension legs (5) with bottom of headboard posts. (See Figure 1) Make sure the 3 holes on extension legs are perpendicular to headboard panel.
- Now carefully insert extension legs (5) into bottom of headboard (7) posts.
- Push in finials (6) on top of headboard (7) and footboard (8) posts. (See Figure 1)

## Step 2

- Place headboard and frame in desired location in room.
- Place 2 screws (1) through holes located in leg (5). (See Figure 2)
- Align bed frame bracket over screws.
- Place a flat washer (3) first, and a nut (2) on each screw. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench (4) and open wrench (9).

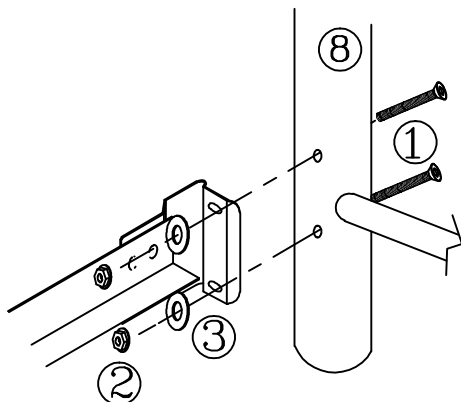


FIGURE 3

## Step 3

- Position footboard panel (8) and align holes in the post with holes in the frame bracket. (See figure 3)
- Place 2 screws (1) through holes located in footboard (8) post.
- Align bed frame bracket over screws.
- Place a flat washer (3) first, and a nut (2) on each screw. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench (4) and open wrench (9).