FURNITURE info@riverside-furniture.com email:

Dining Room Assembly Instructions

4 pcs.

4mm Allen Key

Warning:

Chair Back

1 pc.

 (\mathbf{G})

Allen Head Bolt

Ø5/16 x 1-1/2"

 (\mathbf{A})

 (\mathbf{F})

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

1 pc.

9 pcs.

(H)

Spring Washer

- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.



Ι


2 pcs.

Flat Washer

5/16" x 19 x 2mm

Made in Viet Nam

Page 1 of 1

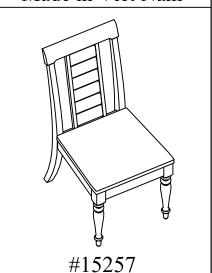

Wood Seat Side Chair 2in

Note:

1. Do not fully tighten bolts until the chair is completely assembled.

4 pcs.

2. Set the chair upright on a flat surface to level the chair and then tighten all bolts with the allen key.

