



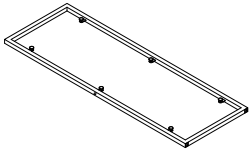
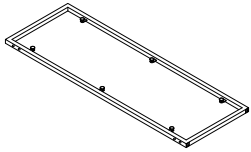
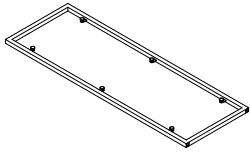
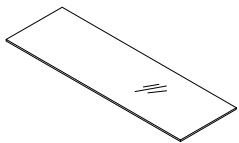
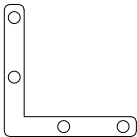
CROSLEY

FURNITURE


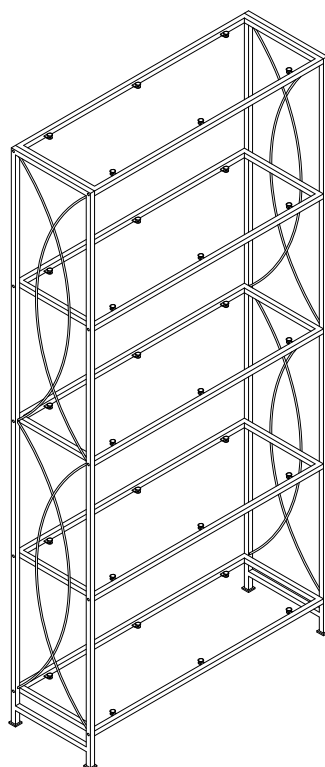



Etagere CF1410



PART LIST

A 	B 	C 	D 	E 
Side Panel 2 PCS	Top Frame 1 PC	Frame 2 PCS	Shelf Frame 2 PCS	Shelf Glass 5 PCS
F 				
L-Bracket 4 PCS				


HARDWARE LIST

#1 	#2 	#3 	#4 	#5 
1/4" x 1-1/2"L Bolt 20 PCS (Extra 1)	1/4" x 1/2"L Short Bolt 16 PCS (Extra 1)	Allen Wrench 1 PC	Safety Strap Kit 1 SET	Suction Cup Extra 2 PCS

Step 1. Attach top frame (part B), frames (part C) and shelf frames (part D) to side panel (part A) using bolts (part #1) and allen wrench (part #3).

Note: The predrilled holes on top frame (part B), frames (part C) and side panel (part A) should be facing the same side.


Note: Please do not fully tighten bolts at this time.

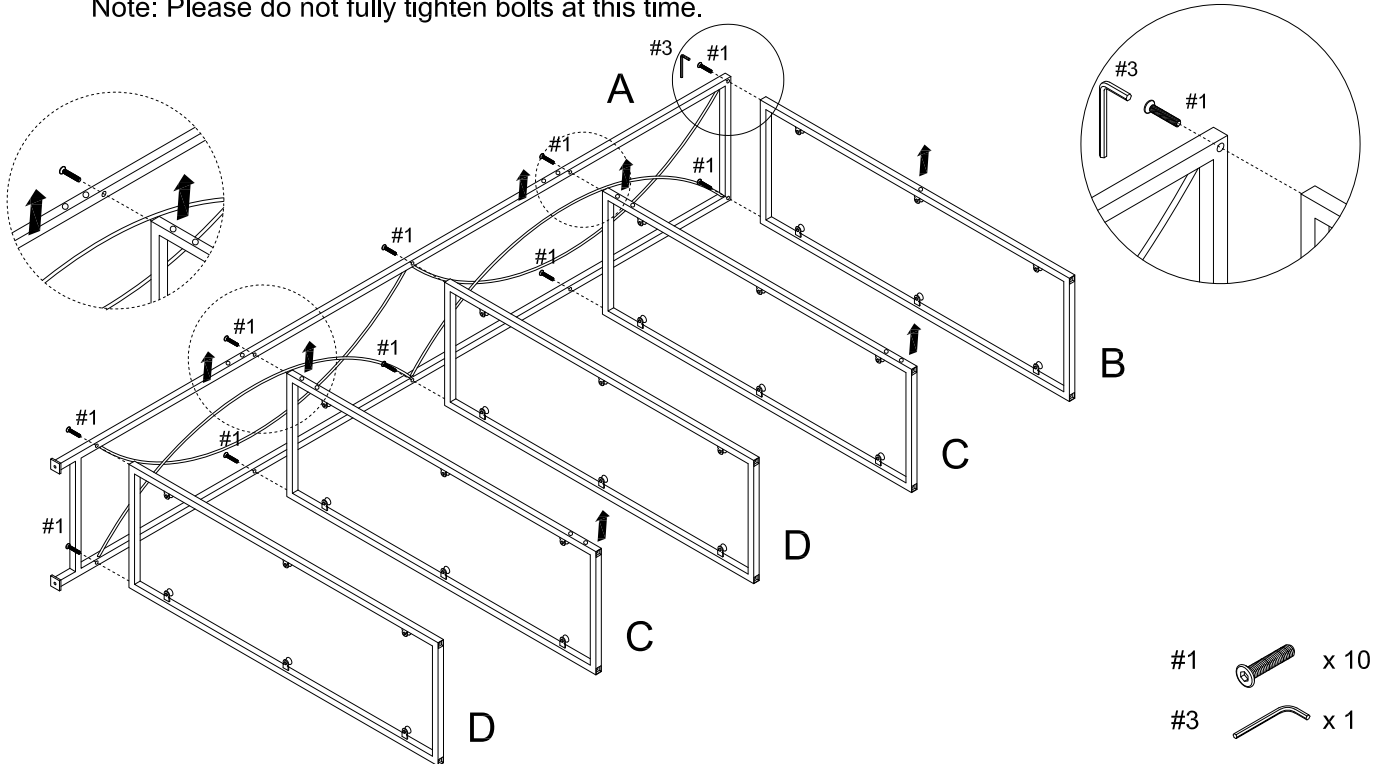

Step 2. Attach side panel (part A) to assemble unit (parts B, C & D) using bolts (part #1) and allen wrench (part #3)


Note: The predrilled holes on side panel (part A) should be facing the same side.

Note: Please fully tighten bolts at this time.

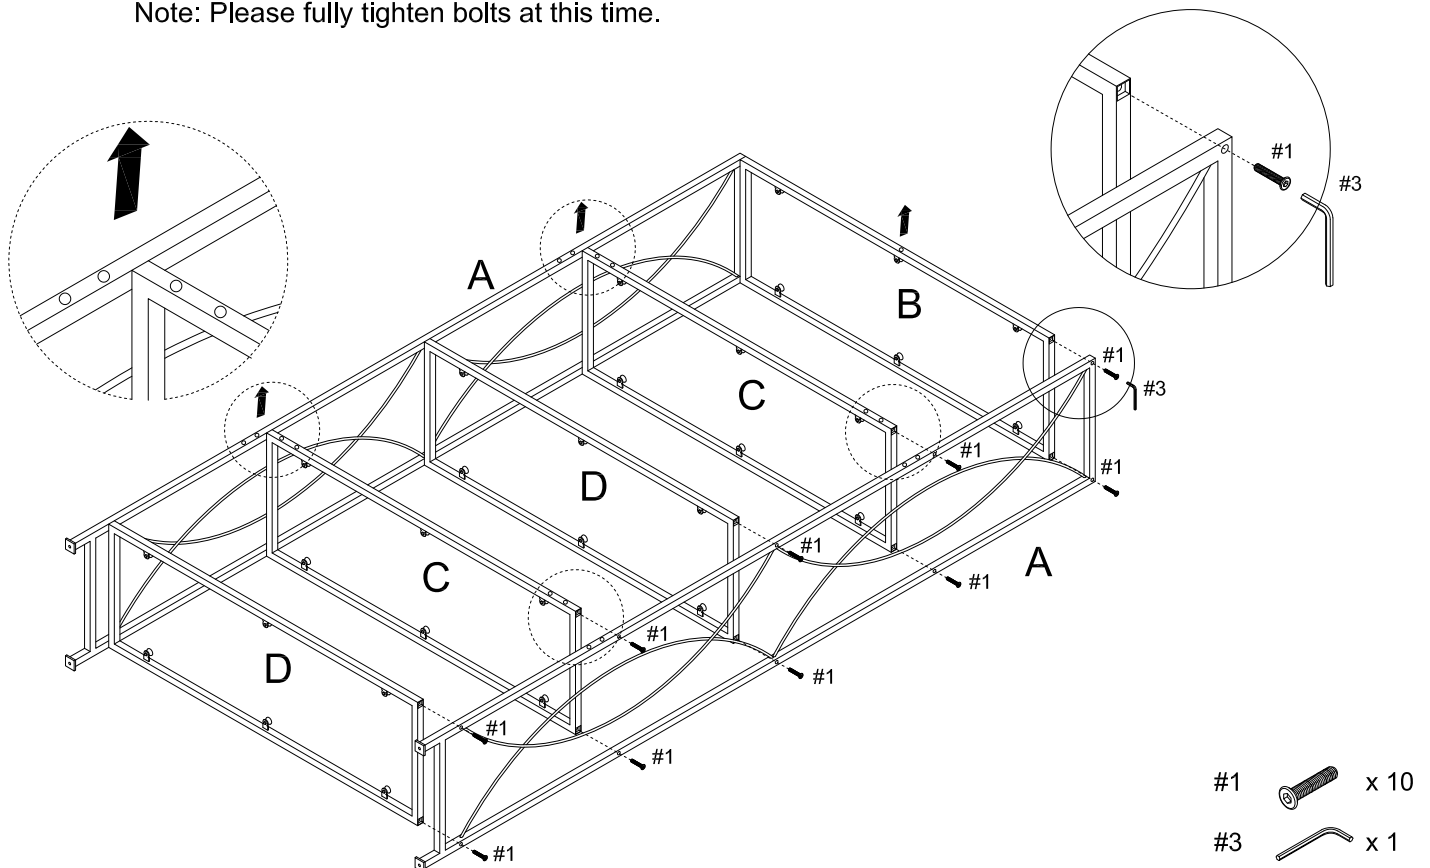

Step 3. Carefully turn unit upright. Attach L brackets (part F) to assembled unit (parts A & C) using short bolts (part #2) and allen wrench (part #3).

Note: Please fully tighten all bolts at this time.

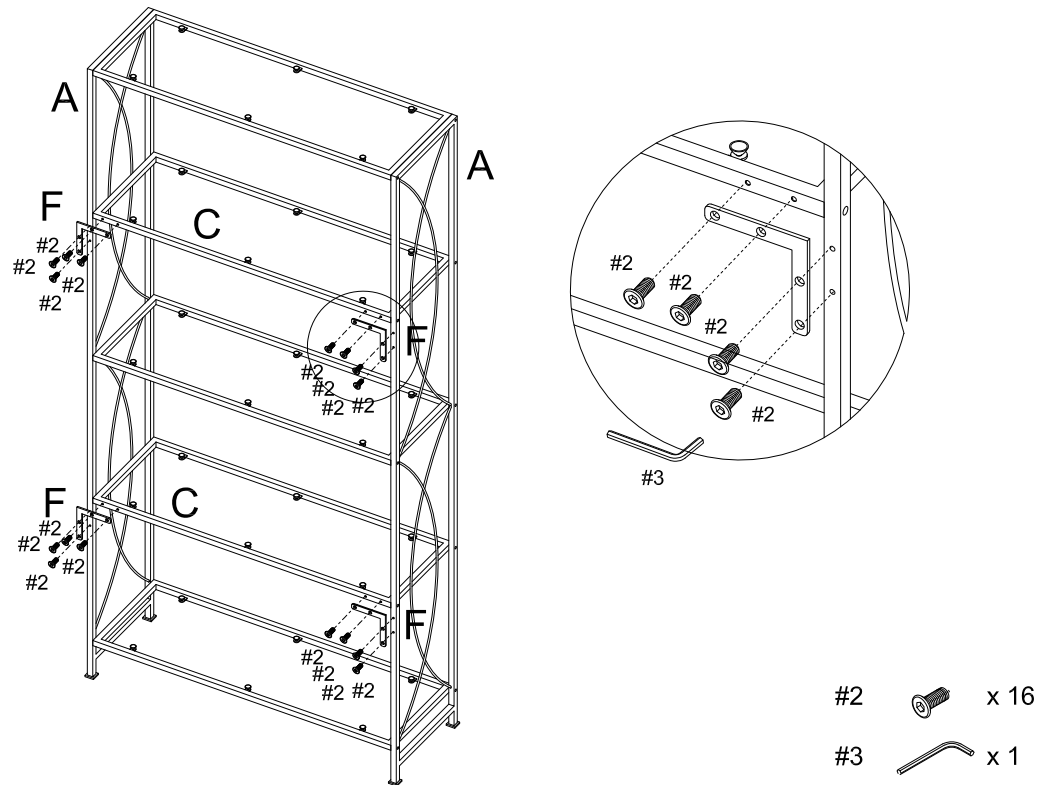








Step 4. Insert shelf glass (part E) to frames (parts B, C & D).

Note: Safety strap kit (part #4) must be installed to prevent tipping, damage and/ or injury.

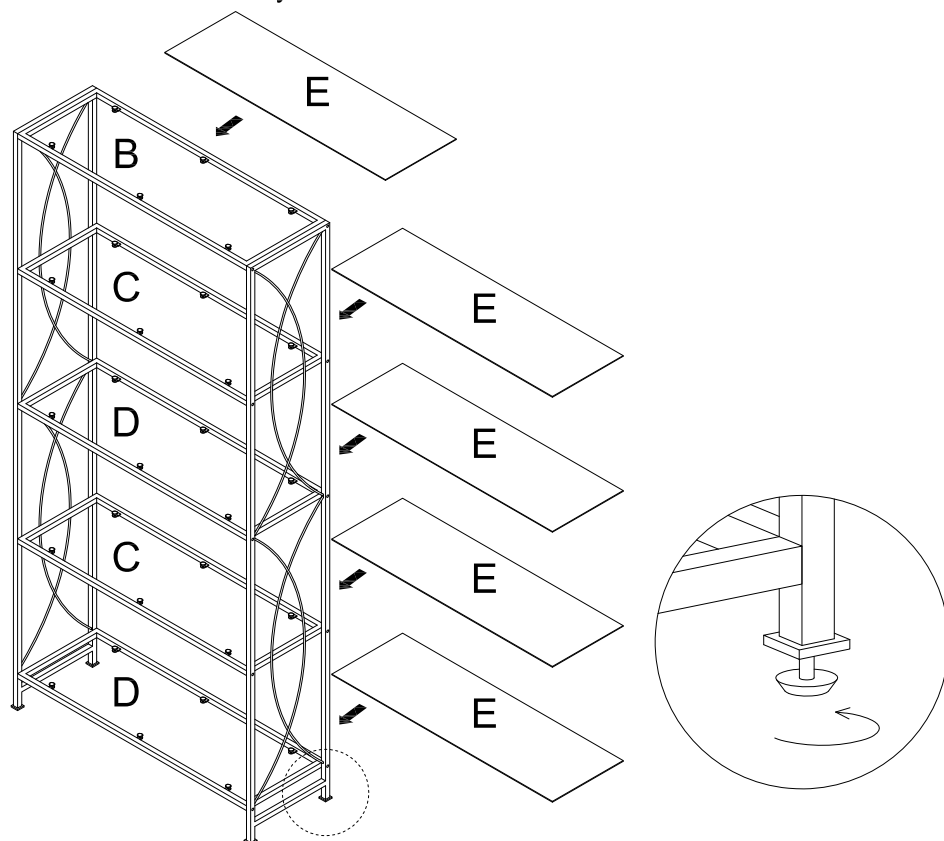Note: It is important to adjust levelers once fully assembled and upright.

Extend adjustable levelers until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



#4	A	B	C	D	E
			 D8 x 1-1/2"	 D10 x 1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Hook 2 PCS	Screw 1 PC	Bolt 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Important: Safety strap kit (part #4) must be installed to prevent tipping, damage and / or injury.

1) Insert bolt (D) through hook (B) and attach to predrilled hole in top frame (part B) using a philips head screwdriver.

2) Drill 11/32" hole in the wall where this unit will be secured. The drilled hole will be at the same height as the hole in top frame (part B) where hook (B) was attached. Tap wall anchor (A) into the drilled hole.

3) Insert screw (C) through hook (B) into the wall anchor (A) using a philips head screwdriver.

4) Insert safety wall strap (E) through both hooks (B) and tighten to secure.

Note: This item is not intended for clothing storage use.

