Riverside FURNITURE

email: info@riverside-furniture.com

Calhoun Bedroom Assembly Instructions

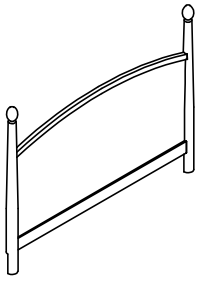

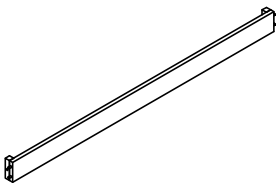
Made in Viet Nam


5/0 Queen Panel Bed

Warning:




- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.

Hardware and Parts packed with the Headboard



Queen Panel Headboard - 61773	Headboard Post (Left)	Headboard Post (Right)	Headboard Stretcher
			
H-A 1 pc.	H-B 1 pc.	H-C 1 pc.	H-D 1 pc.

Allen Head Bolt Ø5/16" - 18 x 1-9/16"	Spring Washer Ø5/16"	Flat Washer Ø5/16" x Ø19mm	Allen Head Bolt Ø1/4" - 20 x 2"	Spring Washer Ø1/4"	Flat Washer Ø1/4" x Ø16mm	Allen key 4mm
						
H-E 6 pcs.	H-F 6 pcs.	H-G 6 pcs.	H-H 2 pcs.	H-I 2 pcs.	H-J 2 pcs.	H-K 1 pc.

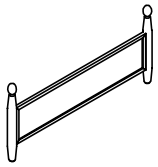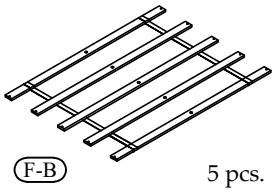
Hardware and Parts packed with the Footboard

Queen Panel Footboard - 61771	Wood Slats (61-7/16" long)	Support leg (9-7/16"x 1 -1/4" x 1-1/4")	Wood Screw Ø4 x 30 (mm)	Screw Driver (not included)
				
F-A 1 pc.	F-B 5 pcs.	F-C 5 pcs.	F-D 10 pcs.	

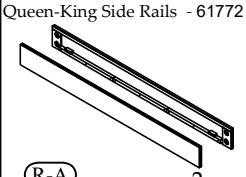Hardware and Parts packed with the Bed Rails

Queen-King Side Rails - 61772	Curved Washer Ø5/16"	Spring Washer Ø5/16"	Hex Nut Ø5/16" x 17mm	All-Thread Bolt Ø5/16" - 18 x 3-1/8"	Open Wrench 12 mm
					
R-A 2 pcs.	R-B 8 pcs.	R-C 8 pcs.	R-D 8 pcs.	R-E 8 pcs.	R-F 1 pc.

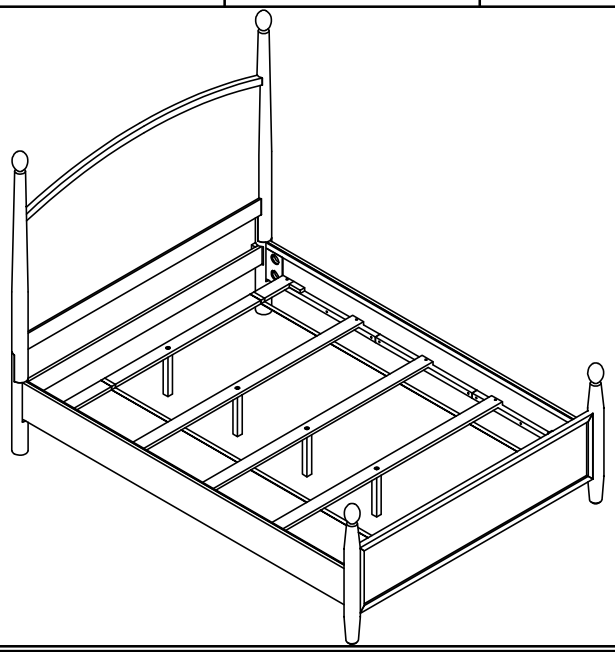Queen Panel Bed
61773 -- Queen Panel Headboard
61771 -- Queen Panel Footboard
61772 -- Queen-King Side Rails



Riverside FURNITURE
email: info@riverside-furniture.com

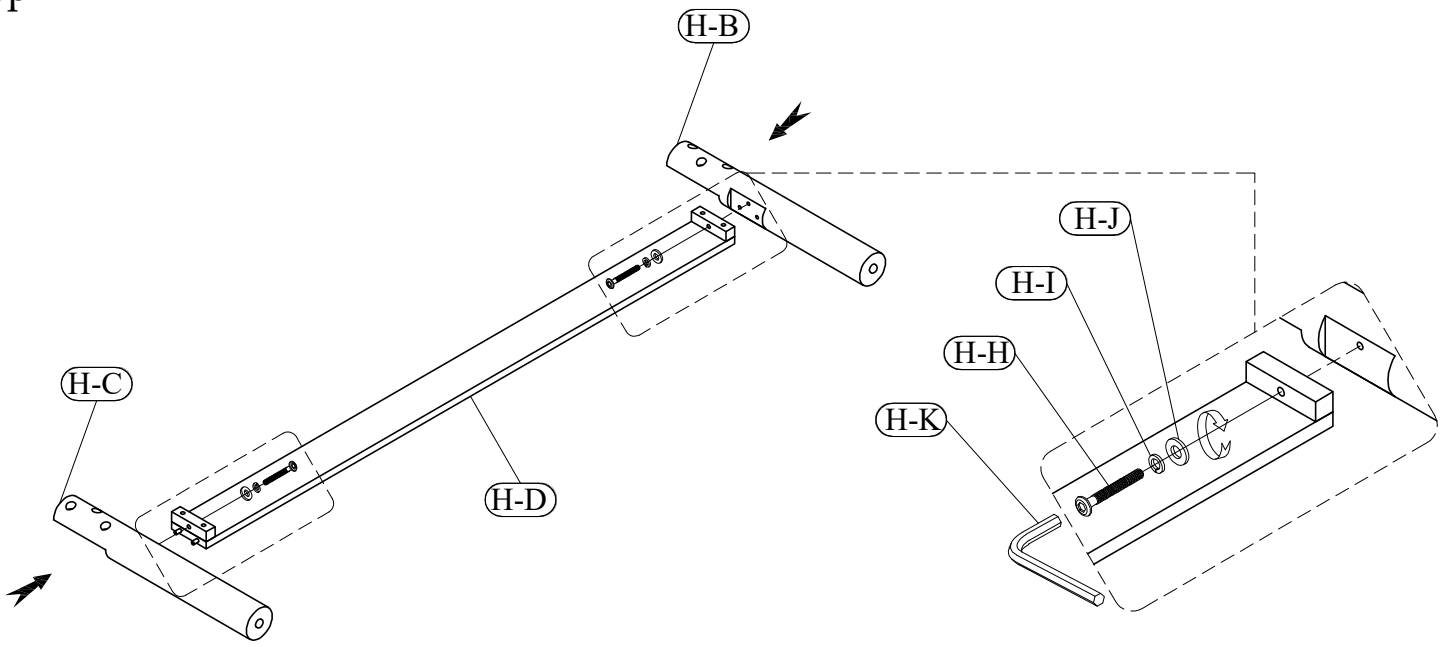
Calhoun Bedroom Assembly Instructions

Made in Viet Nam


5/0 Queen Panel Bed

Queen Panel Bed
61773 -- Queen Panel Headboard

Step 1



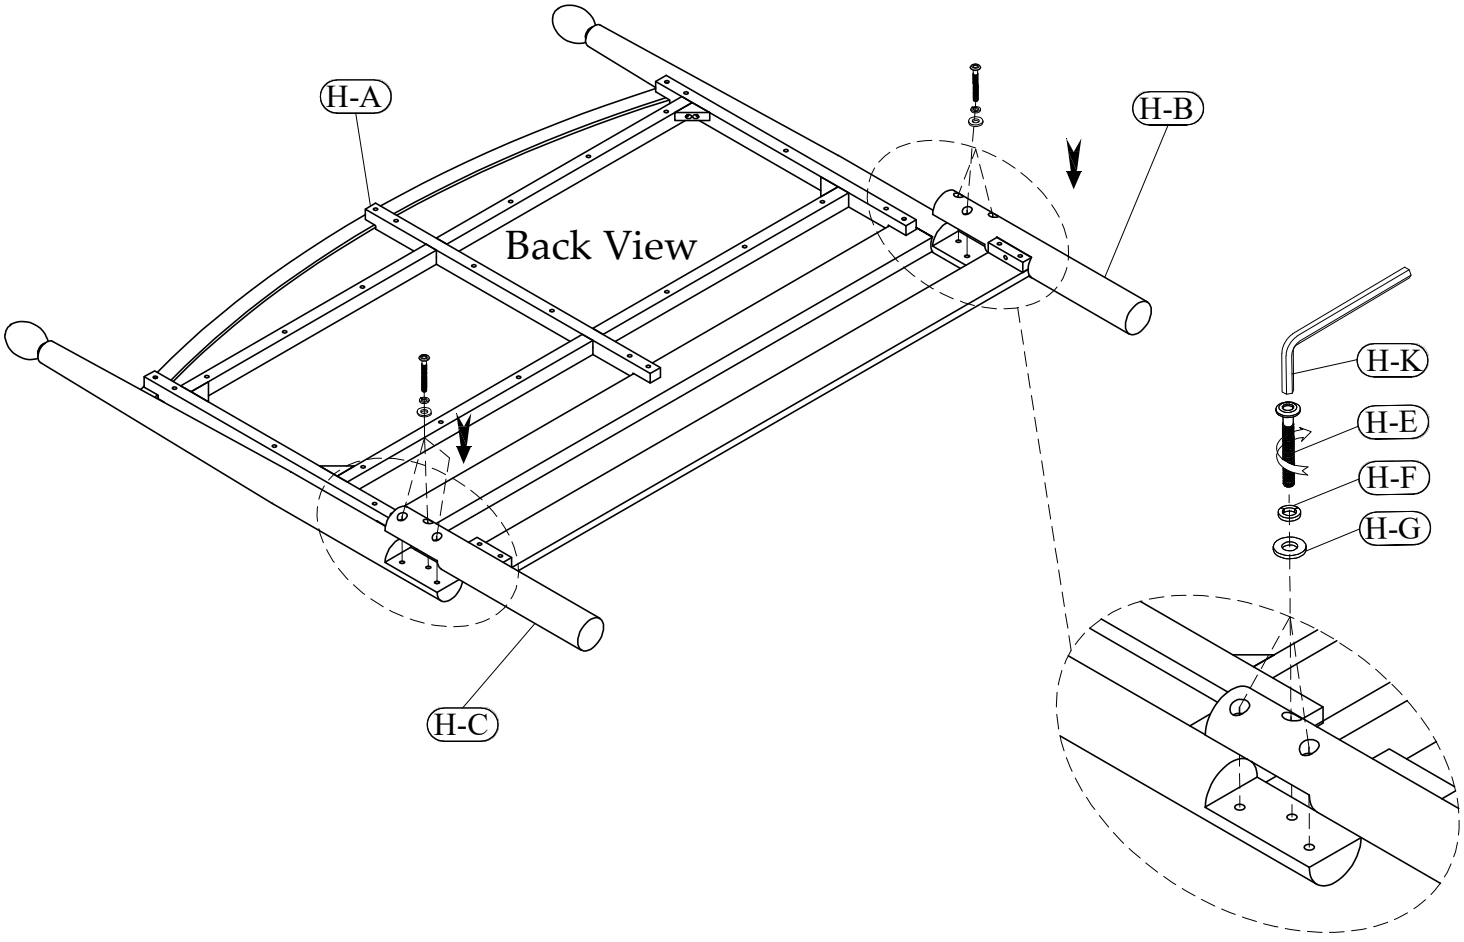Step 2



Riverside FURNITURE
email: info@riverside-furniture.com

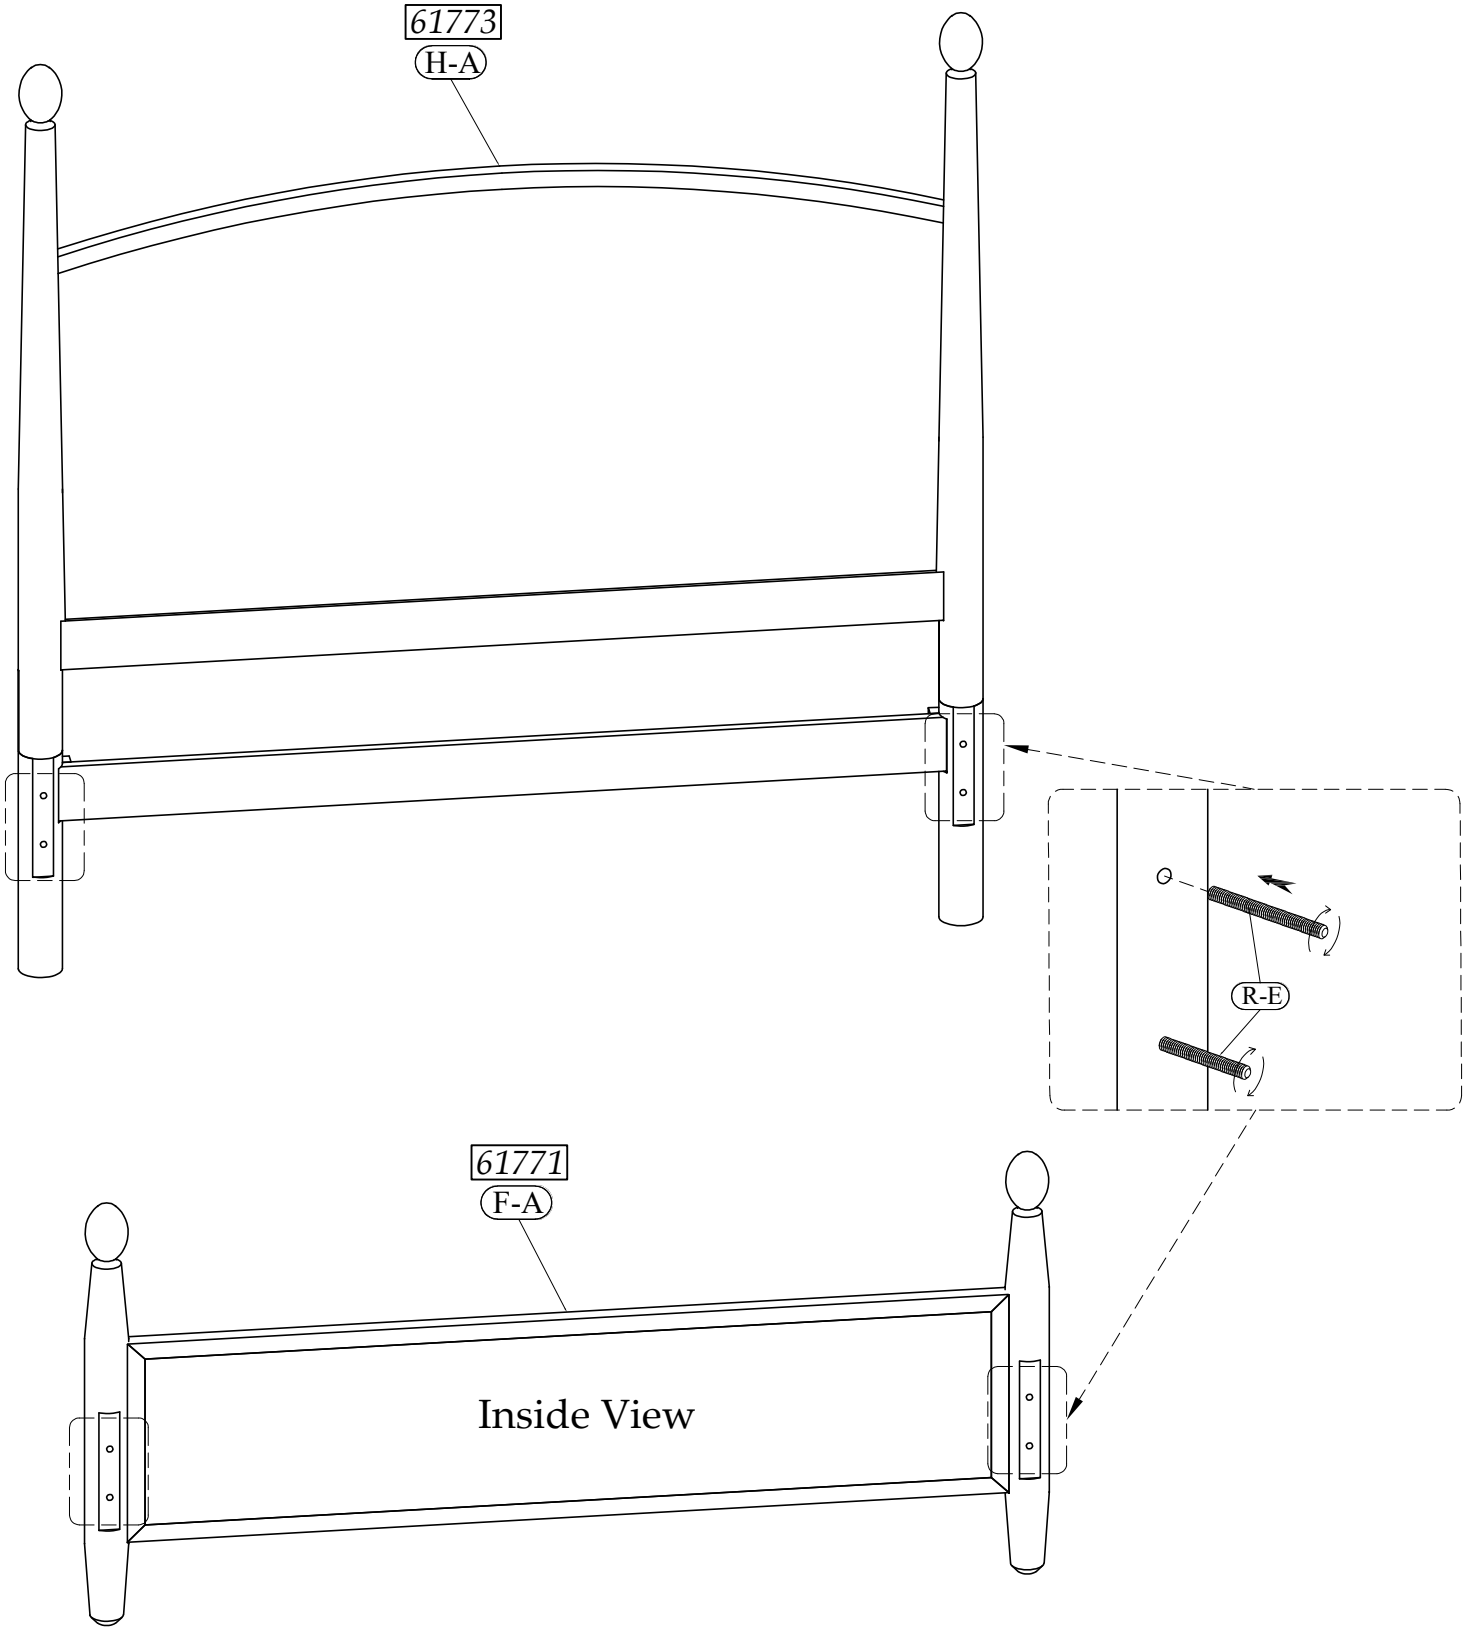
Calhoun Bedroom Assembly Instructions

Made in Viet Nam

5/0 Queen Panel Bed

Queen Panel Bed
61773 -- Queen Panel Headboard
61771 -- Queen Panel Footboard

Step 3



Riverside FURNITURE

email: info@riverside-furniture.com

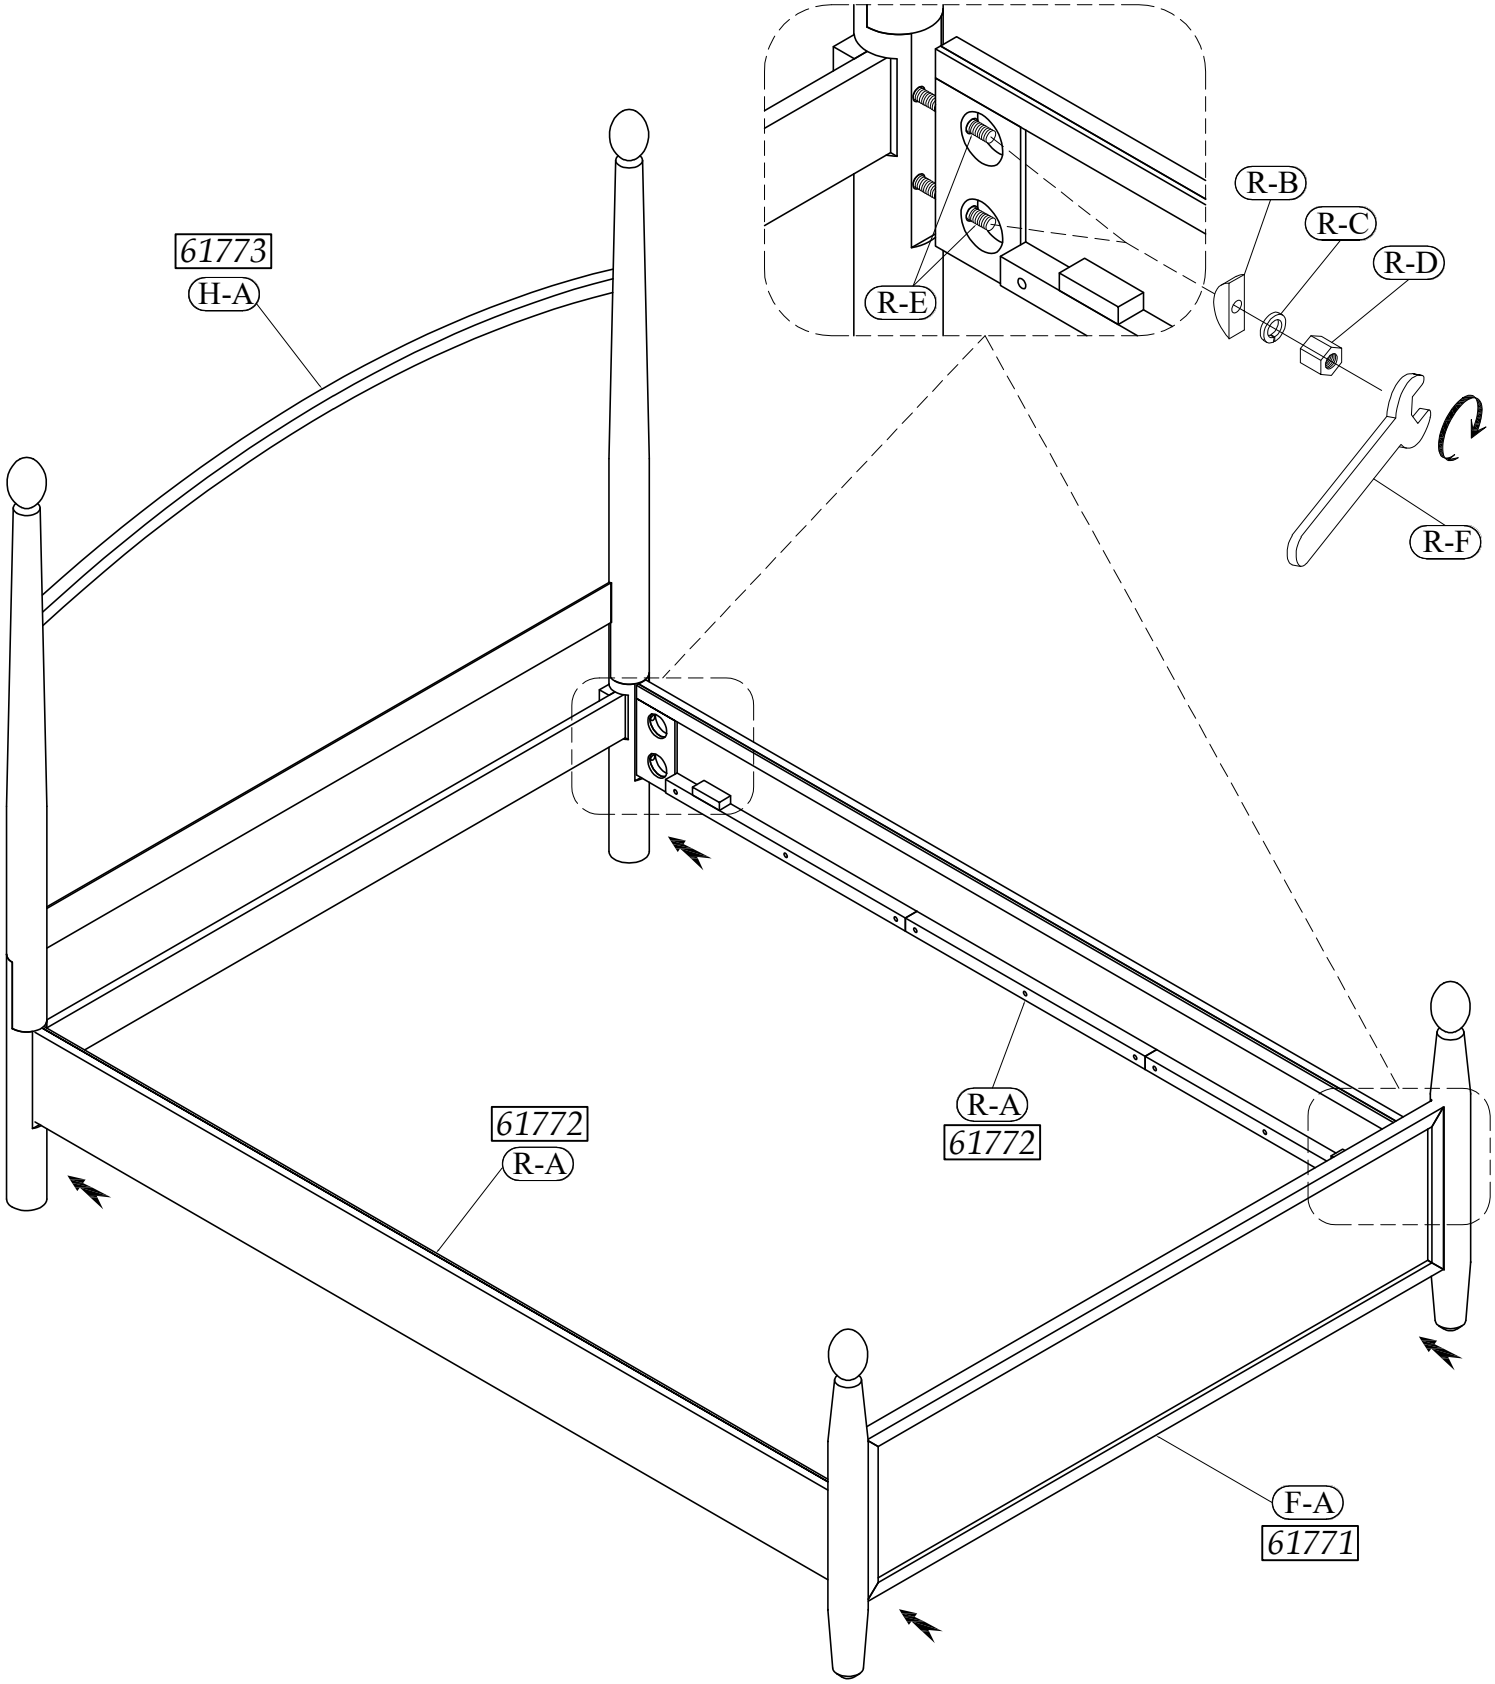
Calhoun Bedroom Assembly Instructions

Made in Viet Nam

5/0 Queen Panel Bed

Queen Panel Bed
61773 -- Queen Panel Headboard
61771 -- Queen Panel Footboard
61772 -- Queen-King Side Rails

Step 4



Riverside FURNITURE

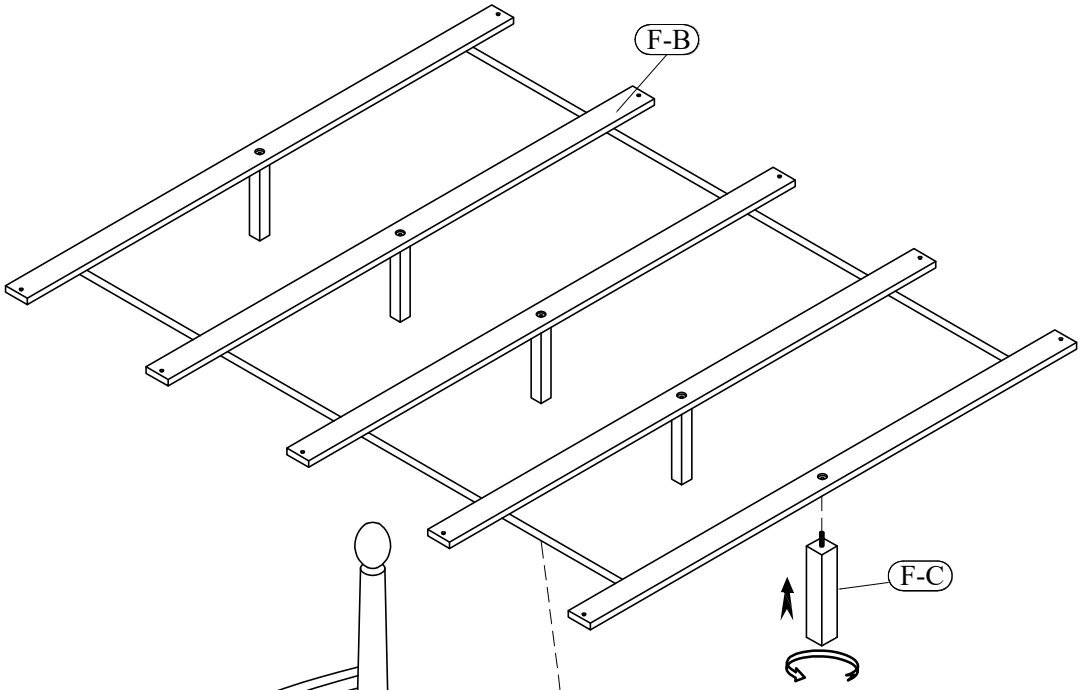
email: info@riverside-furniture.com

Calhoun Bedroom Assembly Instructions

Made in Viet Nam

5/0 Queen Panel Bed

Step 5



Step 6

