



ITEM NO: I07-412-1      Queen Panel HB  
I07-400-1      Queen Sleigh HB  
I07-402-1      Queen Rails  
I07-403-1      Queen Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.


**WARNING!** Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

### OPTION 1: Queen LP Panel Bed

I07-412-1

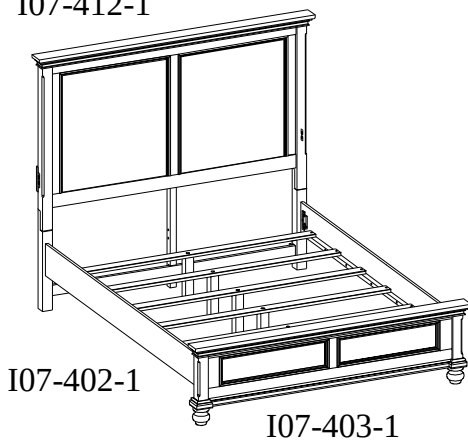


TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

### OPTION 2: Queen LP Sleigh Bed

I07-400-1

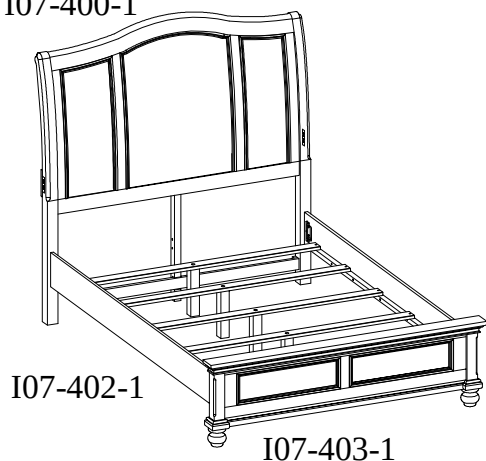

FOR INDOOR USE ONLY



|                    |                      |
|--------------------|----------------------|
| ITEM NO: I07-412-1 | Queen Panel HB       |
| I07-400-1          | Queen Sleigh HB      |
| I07-402-1          | Queen Rails          |
| I07-403-1          | Queen Low Profile FB |

### HARDWARE LIST: I07-412-1

| No. | Description             | Sketch                                                                            | Quantity |
|-----|-------------------------|-----------------------------------------------------------------------------------|----------|
| A   | Bolt Ø5/16"*2"          |  | 6 PCS    |
| B   | Bolt Ø5/16"*1-9/16"     |  | 3 PCS    |
| C   | Bolt Ø5/16"*1-3/8"      |  | 4 PCS    |
| D   | Lock Washer Ø5/16"      |  | 13 PCS   |
| E   | Flat Washer Ø5/16"*3/4" |  | 13 PCS   |
| F   | Allen Wrench 5mm        |  | 1 PC     |

### HARDWARE LIST: I07-402-1

| No. | Description                | Sketch                                                                              | Quantity |
|-----|----------------------------|-------------------------------------------------------------------------------------|----------|
| G   | Wood Screw M4*1-3/16"      |    | 12 PCS   |
| H   | Hanger Bolt Ø5/16"*3-1/16" |    | 8 PCS    |
| I   | Lock Washer Ø5/16"         |    | 8 PCS    |
| J   | Flat washer Ø5/16"*5/8"    |    | 8 PCS    |
| K   | Hex Nut Ø5/16"             |   | 8 PCS    |
| L   | Hex Wrench 90*25*2mm       |  | 1 PC     |

### HARDWARE LIST: I07-400-1

| No. | Description              | Sketch                                                                              | Quantity |
|-----|--------------------------|-------------------------------------------------------------------------------------|----------|
| M   | Wood Dowel Ø3/8"*1-9/16" |  | 8 PCS    |
| N   | Bolt Ø5/16"*1-9/16"      |  | 9 PCS    |
| O   | Bolt Ø5/16"*1-3/8"       |  | 4 PCS    |
| P   | Lock Washer Ø5/16"       |  | 13 PCS   |
| Q   | Flat Washer Ø5/16"*3/4"  |  | 13 PCS   |
| R   | Allen Wrench 5mm         |  | 1 PC     |

### COMPONENTS LIST: I07-412-1

| No. | Description        | Sketch                                                                              | Quantity |
|-----|--------------------|-------------------------------------------------------------------------------------|----------|
| 1   | Headboard (HB)     |  | 1 PC     |
| 2   | Left Leg           |  | 1 PC     |
| 3   | Right Leg          |  | 1 PC     |
| 4   | Wood Stretcher     |  | 1 PC     |
| 5   | Center Support Leg |  | 1 PC     |

### COMPONENTS LIST: I07-402-1

| No. | Description | Sketch                                                                              | Quantity |
|-----|-------------|-------------------------------------------------------------------------------------|----------|
| 1   | Bed rails   |  | 2 PCS    |
| 2   | Slats       |  | 6 PCS    |

### COMPONENTS LIST: I07-403-1

| No. | Description             | Sketch                                                                                | Quantity |
|-----|-------------------------|---------------------------------------------------------------------------------------|----------|
| 1   | Footboard (FB)          |   | 1 PC     |
| 2   | Support leg (for slats) |  | 6 PCS    |
| 3   | Bun foot                |  | 2 PCS    |

### COMPONENTS LIST: I07-400-1



| No. | Description        | Sketch                                                                                | Quantity |
|-----|--------------------|---------------------------------------------------------------------------------------|----------|
| 1   | Headboard (HB)     |  | 1 PC     |
| 2   | Left Leg           |  | 1 PC     |
| 3   | Right Leg          |  | 1 PC     |
| 4   | Wood Stretcher     |  | 1 PC     |
| 5   | Center Support Leg |  | 1 PC     |

FOR INDOOR USE ONLY

|                    |                      |
|--------------------|----------------------|
| ITEM NO: I07-412-1 | Queen Panel HB       |
| I07-400-1          | Queen Sleigh HB      |
| I07-402-1          | Queen Rails          |
| I07-403-1          | Queen Low Profile FB |



**OPTION 1: Queen LP Panel Bed**

**STEP 1:** Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

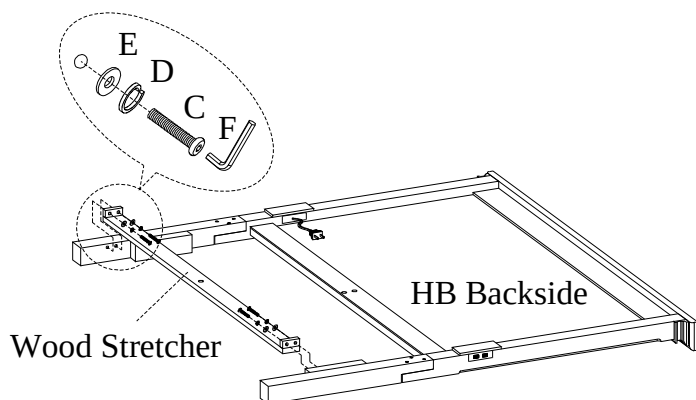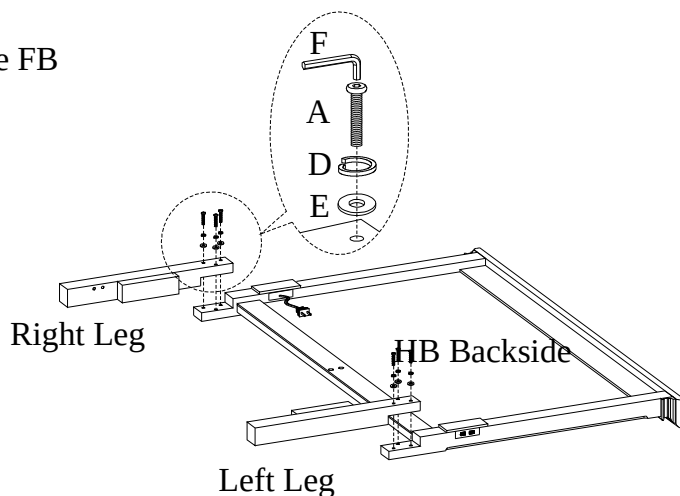


**STEP 2:** Attach the wood stretcher to the legs by using 4 bolts(C), lock washers(D) and flat washers(E).

**STEP 3:** Attach the center support leg to headboard and wood stretcher by using 3 bolts(B), lock washers(D) and flat washers(E).

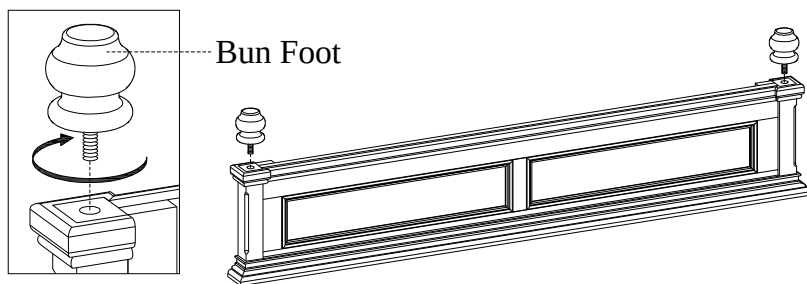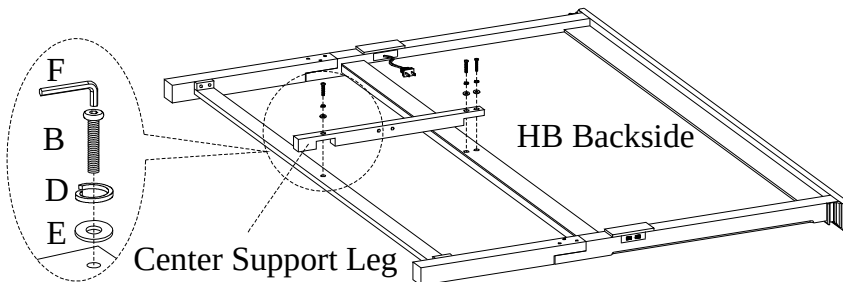


**STEP 4:** Put footboard upside down on a padded, clean surface. Attach bun feet to footboard. Turn footboard right side up.

**STEP 5:** The side rails may be used on either side. Arrange the side rails so the slat bearers are in LOWER POSITION prior to attachment in STEP 6.

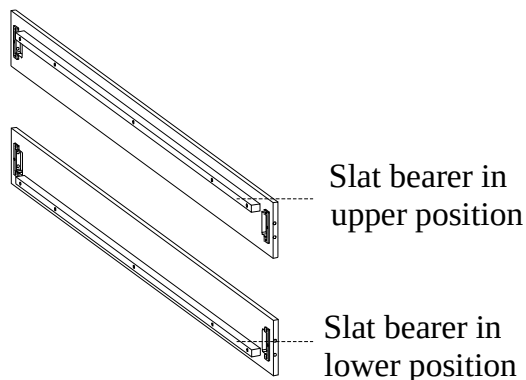


ITEM NO: I07-412-1      Queen Panel HB  
 I07-400-1      Queen Sleigh HB  
 I07-402-1      Queen Rails  
 I07-403-1      Queen Low Profile FB

**STEP 6:** Screw the bolts(H) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washers(J), lock washers(I) and nuts(K). Then use a hex wrench(L) to tighten all the nuts.

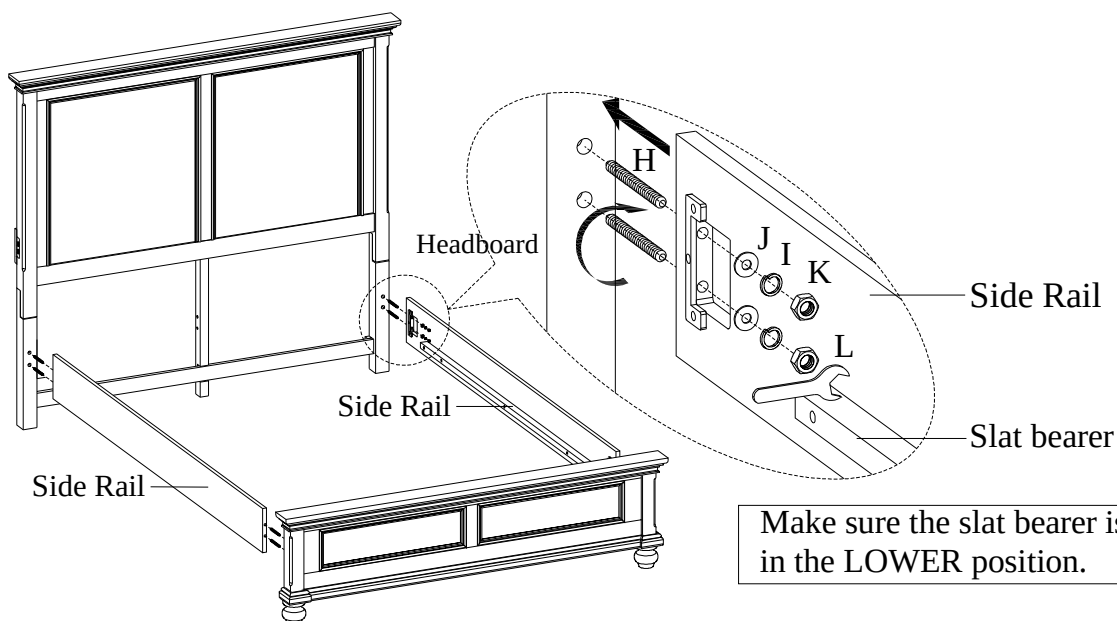

**STEP 7:** Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.


**STEP 8:** Arrange the slats on the slat bearer equally and attach to the slat bearer with wood screws(G).

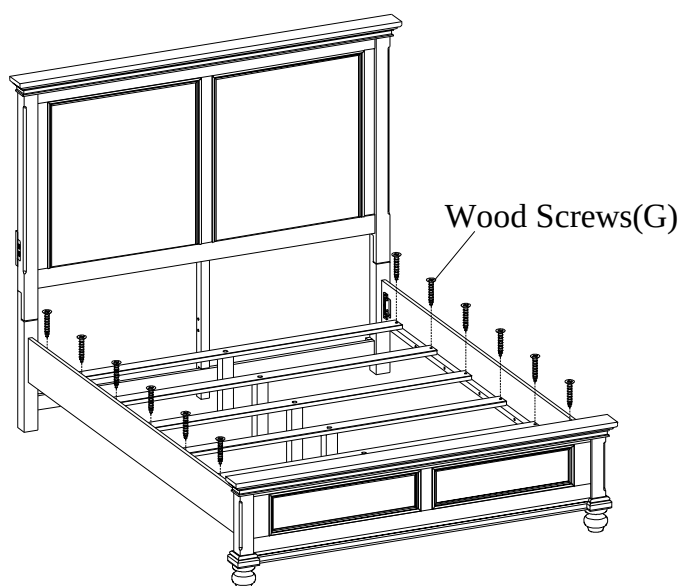


|                    |                      |
|--------------------|----------------------|
| ITEM NO: I07-412-1 | Queen Panel HB       |
| I07-400-1          | Queen Sleigh HB      |
| I07-402-1          | Queen Rails          |
| I07-403-1          | Queen Low Profile FB |

### OPTION 2: Queen LP Sleigh Bed


**STEP 1:** Put the headboard face down on a soft surface. Insert 8 wood dowels(M) into headboard, Then attach the left leg and right leg to headboard by using 6 bolts(N), lock washers(P) and flat washers(Q).

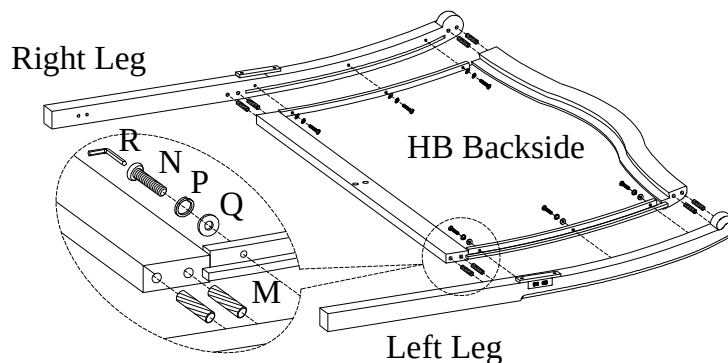

**STEP 2:** Attach the wood stretcher to the legs by using 4 bolts(O), lock washers(P) and flat washers(Q).

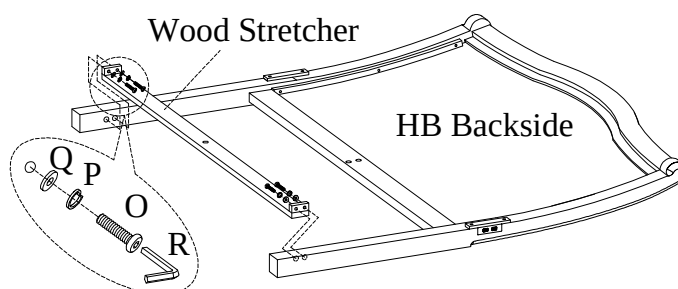

**STEP 3:** Attach the center support leg to headboard and wood stretcher by using 3 bolts(N), lock washers(P) and flat washers(Q). Completely tighten all bolts.


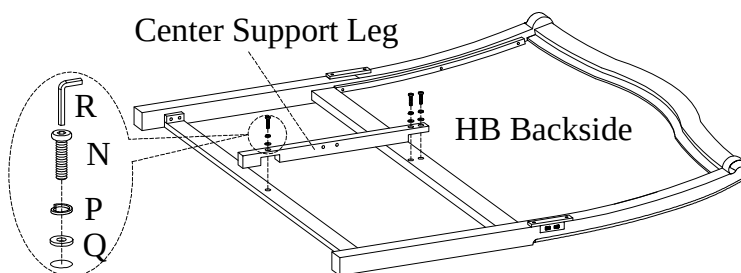


**STEP 4 to STEP 8 are same as OPTION 1**



|                    |                      |
|--------------------|----------------------|
| ITEM NO: I07-412-1 | Queen Panel HB       |
| I07-400-1          | Queen Sleigh HB      |
| I07-402-1          | Queen Rails          |
| I07-403-1          | Queen Low Profile FB |

### FUNCTIONALITY INSTRUCTION

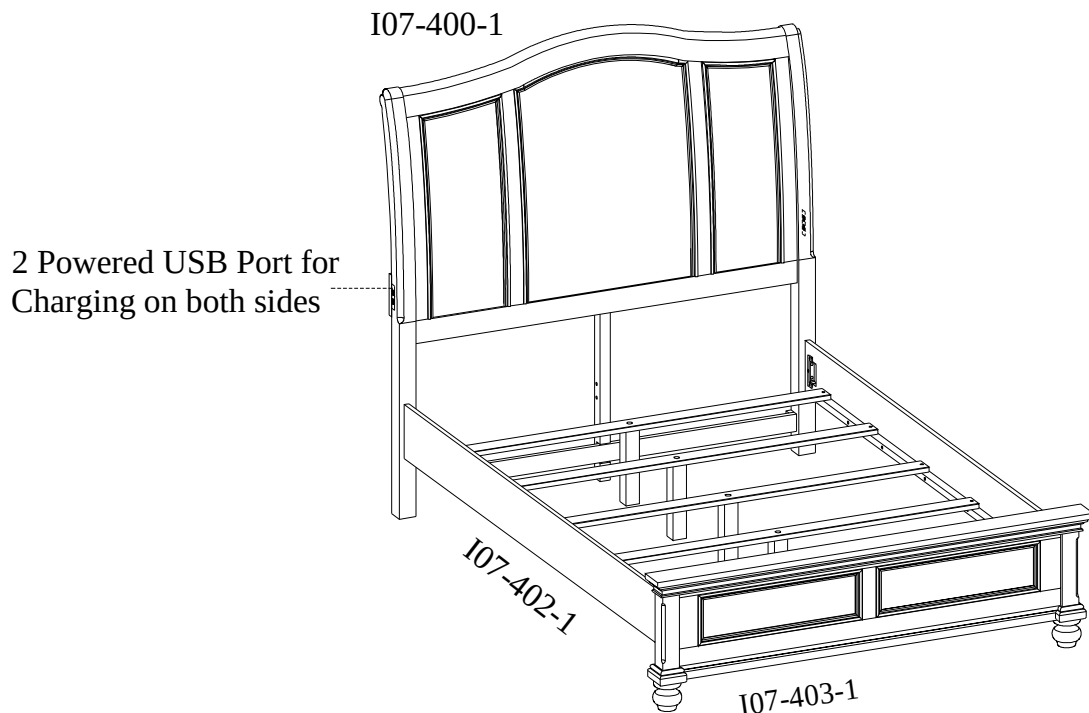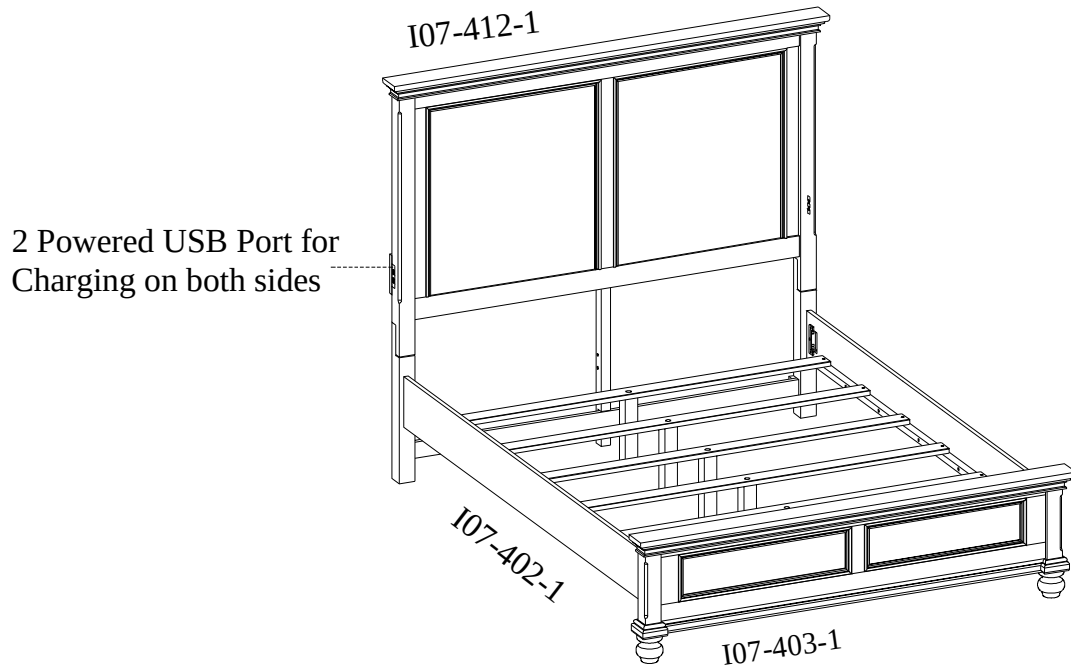



ITEM NO: I07-412-1      Queen Panel HB  
I07-400-1      Queen Sleigh HB  
I07-402-1      Queen Rails  
I07-403D-1      Queen Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.


**WARNING!** Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

### OPTION 1: Queen Storage Panel Bed

I07-412-1

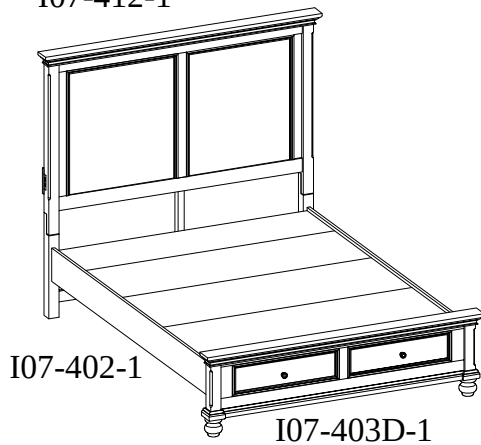


TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

### OPTION 2: Queen Storage Sleigh Bed

I07-400-1

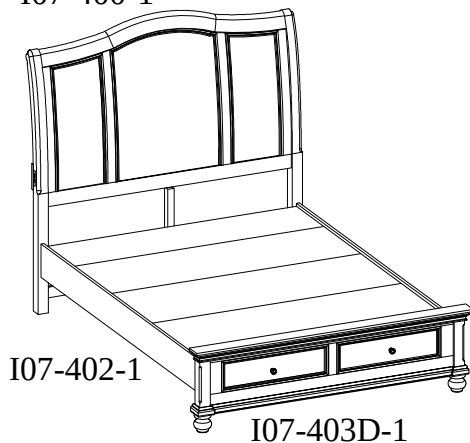

FOR INDOOR USE ONLY



ITEM NO: I07-412-1      Queen Panel HB  
I07-400-1      Queen Sleigh HB  
I07-402-1      Queen Rails  
I07-403D-1      Queen Storage FB

### HARDWARE LIST: I07-412-1

| No. | Description              | Sketch                                                                            | Quantity |
|-----|--------------------------|-----------------------------------------------------------------------------------|----------|
| A   | Bolt Ø5/16"*2"           |  | 6 PCS    |
| B   | Bolt Ø5/16"*1-9/16"      |  | 3 PCS    |
| C   | Bolt Ø5/16"*1-3/8"       |  | 4 PCS    |
| D   | Lock Washer Ø5/16"       |  | 13 PCS   |
| E   | Flat Washer Ø5/16" *3/4" |  | 13 PCS   |
| F   | Allen Wrench 5mm         |  | 1 PC     |

### HARDWARE LIST: I07-402-1

| No. | Description                | Sketch                                                                              | Quantity |
|-----|----------------------------|-------------------------------------------------------------------------------------|----------|
| G   | Wood Screw M4*1-3/16"      |    | 12 PCS   |
| H   | Hanger Bolt Ø5/16"*3-1/16" |    | 8 PCS    |
| I   | Lock Washer Ø5/16"         |   | 8 PCS    |
| J   | Flat washer Ø5/16"*5/8"    |  | 8 PCS    |
| K   | Hex Nut Ø5/16"             |  | 8 PCS    |
| L   | Hex Wrench 90*25*2mm       |  | 1 PC     |



### HARDWARE LIST: I07-403D-1

| No. | Description             | Sketch                                                                              | Quantity |
|-----|-------------------------|-------------------------------------------------------------------------------------|----------|
| M   | Wood Screw M4*1         |  | 8 PCS    |
| N   | Bolt Ø5/16"*1-3/16"     |  | 8 PCS    |
| O   | Lock Washer Ø5/16"      |  | 8 PCS    |
| P   | Flat washer Ø5/16"*3/4" |  | 8 PCS    |
| Q   | Allen Wrench 5mm        |  | 1 PC     |

### HARDWARE LIST: I07-400-1

| No. | Description              | Sketch                                                                              | Quantity |
|-----|--------------------------|-------------------------------------------------------------------------------------|----------|
| R   | Wood Dowel Ø3/8"*1-9/16" |  | 8 PCS    |
| S   | Bolt Ø5/16"*1-9/16"      |  | 9 PCS    |
| T   | Bolt Ø5/16"*1-3/8"       |  | 4 PCS    |
| U   | Lock Washer Ø5/16"       |  | 13 PCS   |
| V   | Flat Washer Ø5/16" *3/4" |  | 13 PCS   |
| W   | Allen Wrench 5mm         |  | 1 PC     |


### COMPONENTS LIST: I07-412-1

| No. | Description        | Sketch                                                                              | Quantity |
|-----|--------------------|-------------------------------------------------------------------------------------|----------|
| 1   | Headboard (HB)     |  | 1 PC     |
| 2   | Left Leg           |  | 1 PC     |
| 3   | Right Leg          |  | 1 PC     |
| 4   | Wood Stretcher     |  | 1 PC     |
| 5   | Center Support Leg |  | 1 PC     |


### COMPONENTS LIST: I07-402-1

| No. | Description | Sketch                                                                              | Quantity |
|-----|-------------|-------------------------------------------------------------------------------------|----------|
| 1   | Bed rails   |  | 2 PCS    |
| 2   | Slats       |  | 6 PCS    |

### COMPONENTS LIST: I07-403D-1

| No. | Description                   | Sketch                                                                                | Quantity |
|-----|-------------------------------|---------------------------------------------------------------------------------------|----------|
| 1   | Footboard (FB)                |  | 1 PC     |
| 2   | Support Leg (for center rail) |  | 2 PCS    |
| 3   | Support Leg (for pedestal)    |  | 3 PCS    |
| 4   | Decking                       |  | 4 PCS    |
| 5   | Center rail (Short)           |  | 1 PCS    |
| 6   | Bun foot                      |  | 2 PCS    |

### COMPONENTS LIST: I07-400-1

| No. | Description        | Sketch                                                                                | Quantity |
|-----|--------------------|---------------------------------------------------------------------------------------|----------|
| 1   | Headboard (HB)     |  | 1 PC     |
| 2   | Left Leg           |  | 1 PC     |
| 3   | Right Leg          |  | 1 PC     |
| 4   | Wood Stretcher     |  | 1 PC     |
| 5   | Center Support Leg |  | 1 PC     |



FOR INDOOR USE ONLY



ITEM NO: I07-412-1     Queen Panel HB  
I07-400-1     Queen Sleigh HB  
I07-402-1     Queen Rails  
I07-403D-1     Queen Storage FB


### OPTION 1: King/Cal King Storage Panel Bed

**STEP 1:** Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

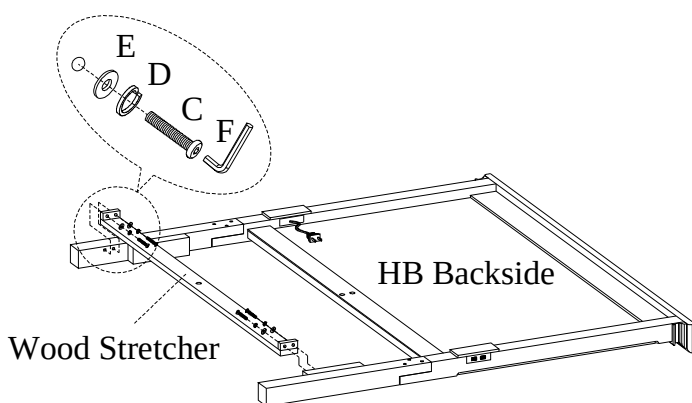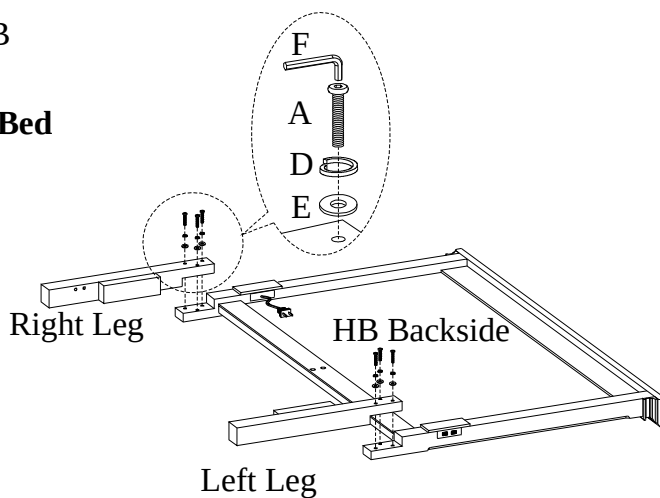


**STEP 2:** Attach the wood stretcher to the legs by using 4 bolts(C), lock washers(D) and flat washers(E).



**STEP 3:** Attach the center support leg to headboard and wood stretcher by using 3 bolts(B), lock washers(D) and flat washers(E).

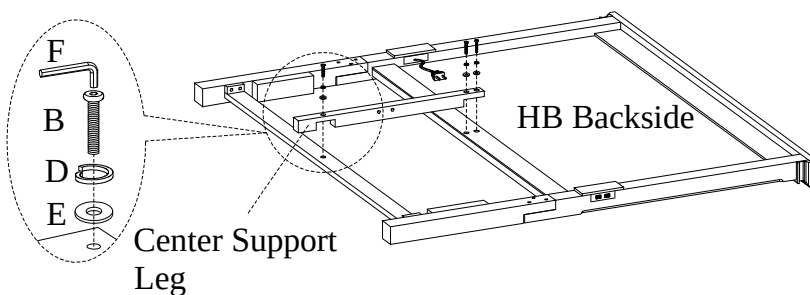

**STEP 4:** Put footboard upside down on a padded, clean surface. Attach support legs (for pedestal) and bun feet to footboard. Turn footboard right side up.

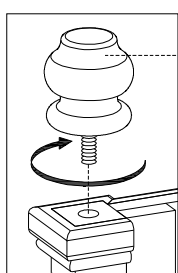

Bun Foot

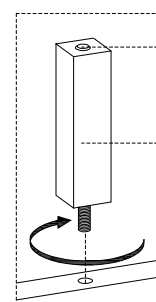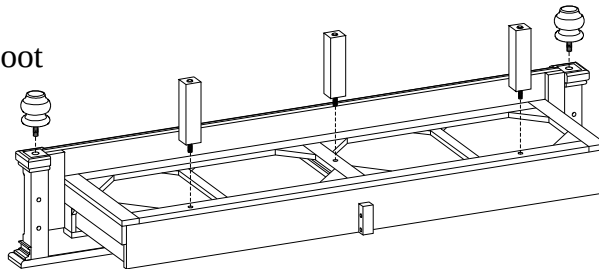


Leveler

Support Leg


## ASSEMBLY INSTRUCTIONS

|                    |                  |
|--------------------|------------------|
| ITEM NO: I07-412-1 | Queen Panel HB   |
| I07-400-1          | Queen Sleigh HB  |
| I07-402-1          | Queen Rails      |
| I07-403D-1         | Queen Storage FB |


**STEP 5:** The side rails may be used on either side. Arrange the side rails so the slat bearers are in UPPER POSITION prior to attachment in STEP 6.

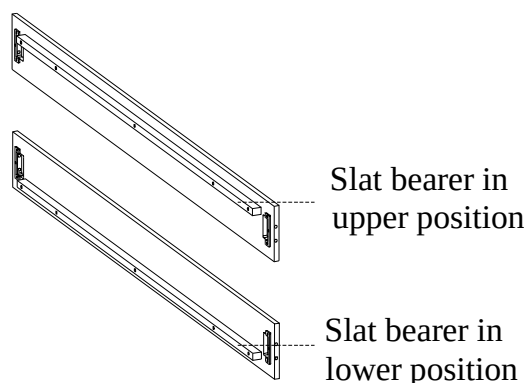

STEP 6: Screw the bolts(H) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washers(J), lock washers(I) and nuts(K).Then use a hex wrench(L) to tighten all the nuts.


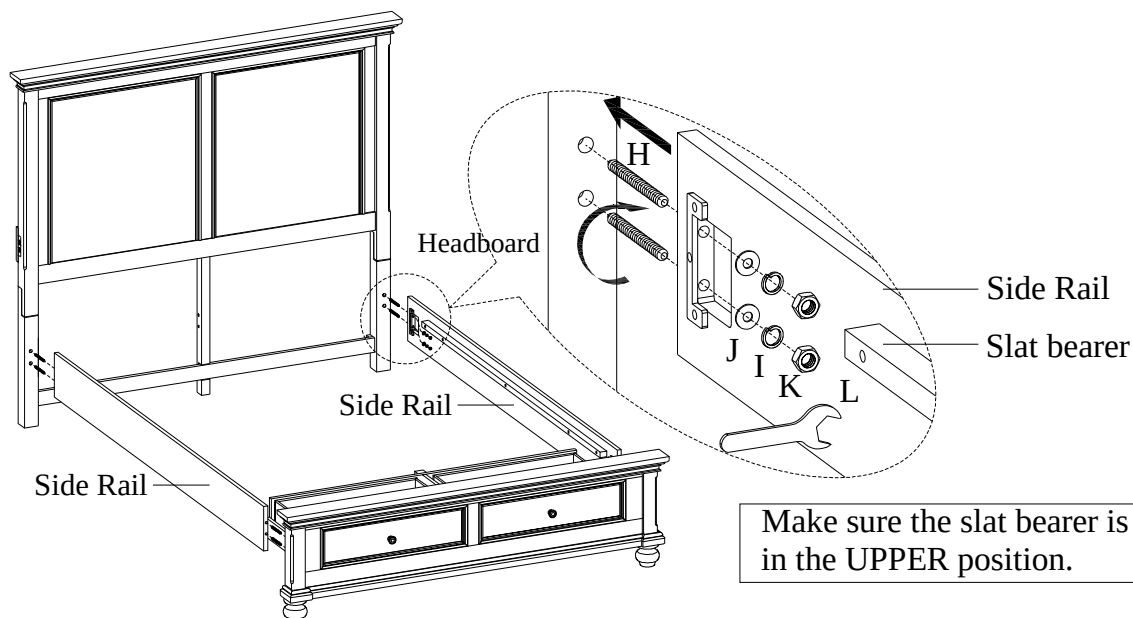


**STEP 7:** Attach center rail to the footboard and center support leg of headboard using 4 bolts(N), lock washers(O) and flat washers(P).

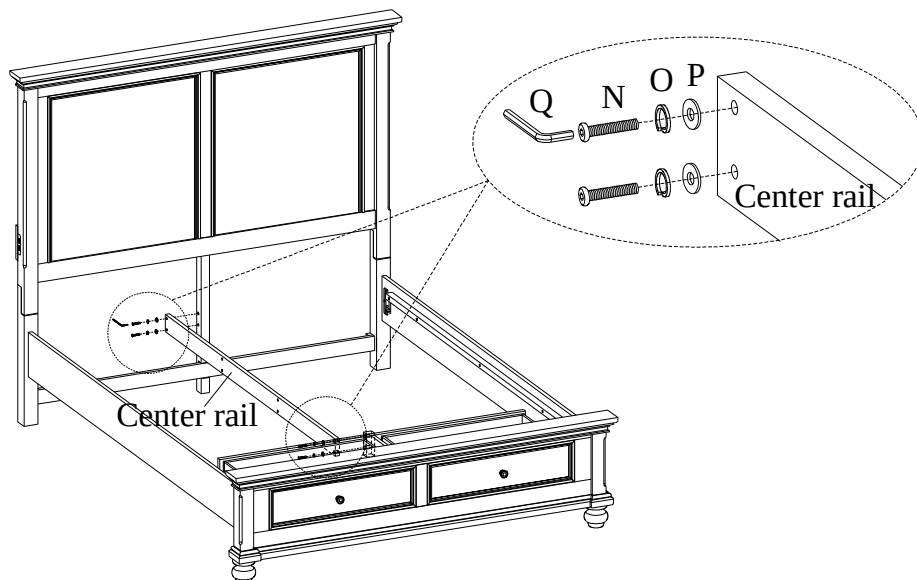


ITEM NO: I07-412-1      Queen Panel HB  
 I07-400-1      Queen Sleigh HB  
 I07-402-1      Queen Rails  
 I07-403D-1      Queen Storage FB

**STEP 8:** Attach 2 support legs (for center rail) to the center rail using 4 bolts(N), lock washers(O) and flat washers(P). Use the Allen Wrench (Q) to tighten all of the bolts.

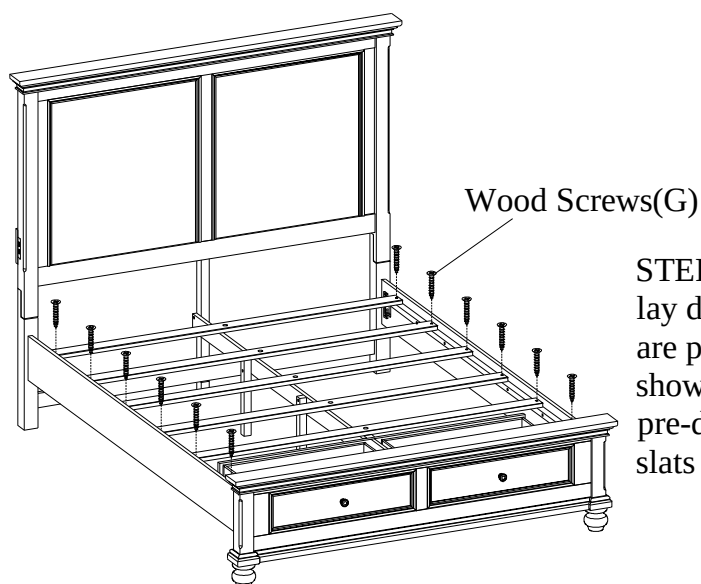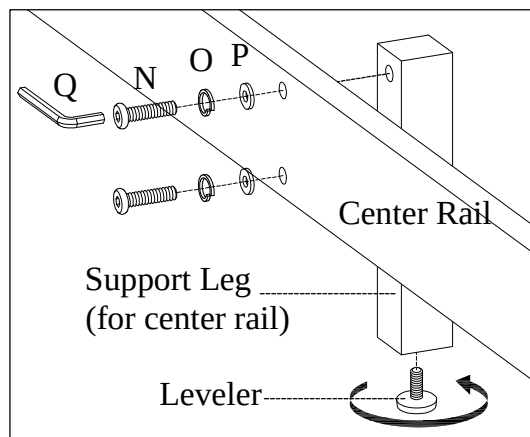

**STEP 9:** Arrange slats on the slat bearers and then lay decking on top of the slats. Make sure the slats are positioned along the seams of the decking as shown in the detail in STEP 9 under the pre-drilled hole. Remove the decking and attach slats to the slat bearers with wood screws(G).

**STEP 10:** Put the decking over the slats, secure decking to the slats with wood screws(M) through the pre-drilled holes in the decking as shown below.

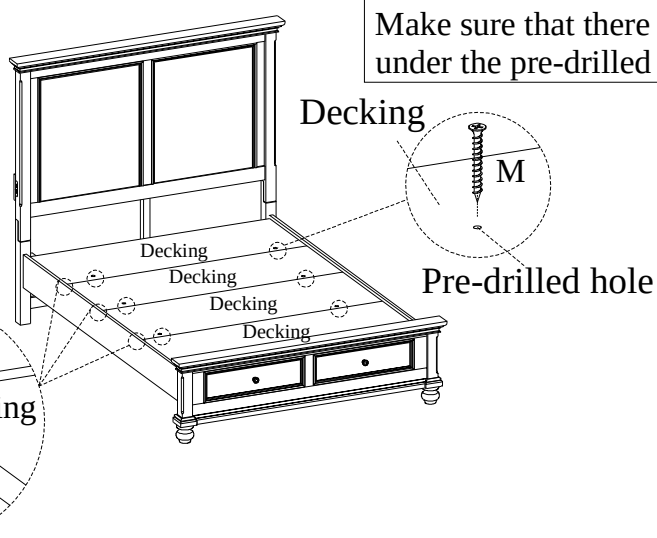

Make sure that there is a slat under the pre-drilled hole.


The slat should support both pieces of decking.




ITEM NO: I07-412-1     Queen Panel HB  
I07-400-1     Queen Sleigh HB  
I07-402-1     Queen Rails  
I07-403D-1     Queen Storage FB

### OPTION 2: Queen Storage Sleigh Bed


**STEP 1:** Put the headboard face down on a soft surface. Insert 8 wood dowels (R) into headboard. Then attach the left leg and right leg to headboard by using 6 bolts(S), lock washers(U) and flat washers(V).

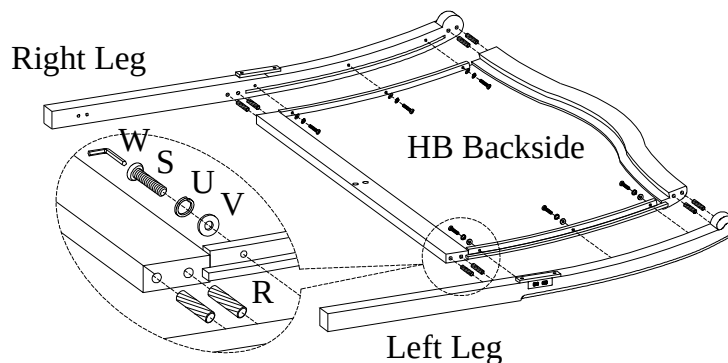

**STEP 2:** Attach the wood stretcher to the legs by using 4 bolts(T), lock washers(U) and flat washers(V).

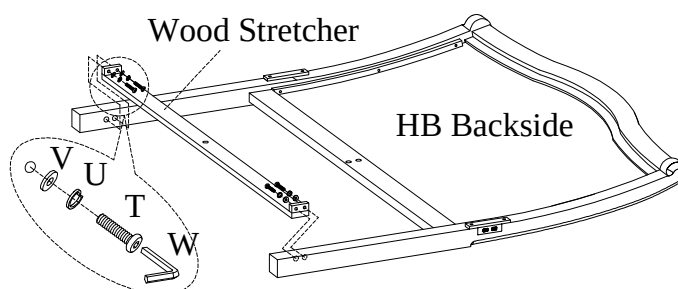

**STEP 3:** Attach the center support leg to headboard and wood stretcher by using 3 bolts(S), lock washers(U) and flat washers(V). Completely tighten all bolts.

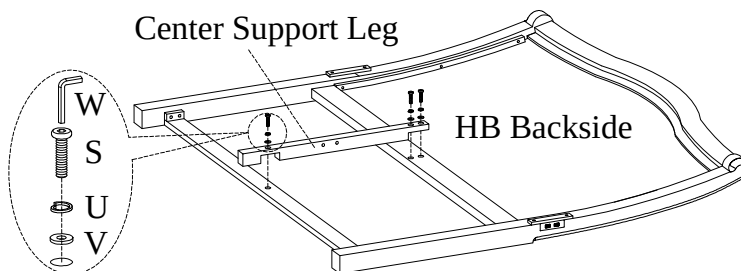

**STEP 4 to STEP 10 are same as OPTION 1**



ITEM NO: I07-412-1      Queen Panel HB  
I07-400-1      Queen Sleigh HB  
I07-402-1      Queen Rails  
I07-403D-1      Queen Storage FB

### FUNCTIONALITY INSTRUCTION

