



# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**225011Q (B1&B2)**  
**Queen Bed**

# ITEM: 225011Q (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.










ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A	HEADBOARD PANEL		1PC
B	FOOTBOARD PANEL		1PC
C	TOP PANEL		2PCS
D	LEG		4PCS
E	CROSSBAR		2PCS
F	ROLL SLAT (20PCS)		1SET
G	CENTER RAIL SUPPORT WITH LEVELER		3PCS

### B2 (BOX 2)

H	BED RAIL		2PCS
I	CENTER RAIL		1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 225011Q (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.














### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 225011Q (B1)

1	<b>SHORT BOLT</b> (M8 x 20mm - RBW)		8PCS
2	<b>MEDIUM BOLT</b> (M6 x 35mm - BLK)		8PCS
3	<b>LONG BOLT</b> (M6 x 60mm - BLK)		4PCS
4	<b>LOCK WASHER</b> (M6 - BLK)		12PCS
5	<b>SMALL FLAT WASHER</b> (M6 x 13mm - BLK)		12PCS
6	<b>BIG FLAT WASHER</b> (M8 x 18mm - RBW)		8PCS
7	<b>PAN HEAD SCREW</b> (M4 x 30mm - BLK)		76PCS
8	<b>BARREL NUT</b> (M6 x 13mm - SLV)		4PCS
9	<b>WOOD DOWEL</b> (M8 x 30mm - NAT)		4PCS
10	<b>SMALL ALLEN WRENCH</b> (M4 x 65mm - BLK)		1PC
11	<b>BIG ALLEN WRENCH</b> (M5 x 65mm - BLK)		1PC

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 225011Q (B1&B2)




## ASSEMBLY INSTRUCTIONS

### STEP 1

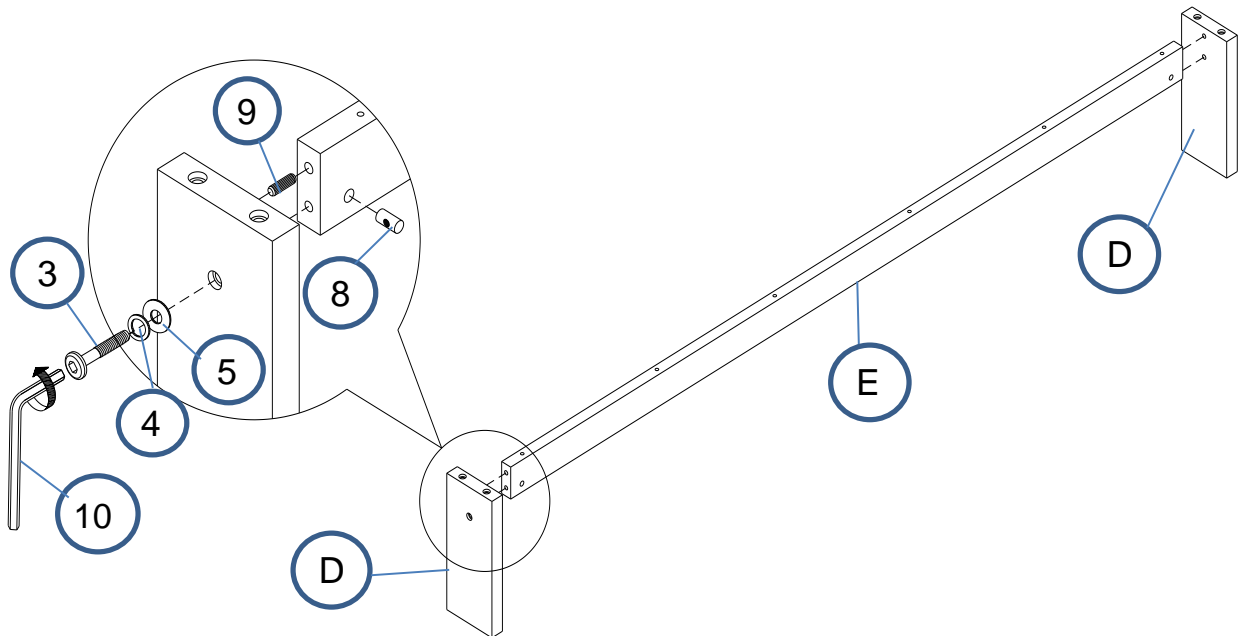

### STEP 2

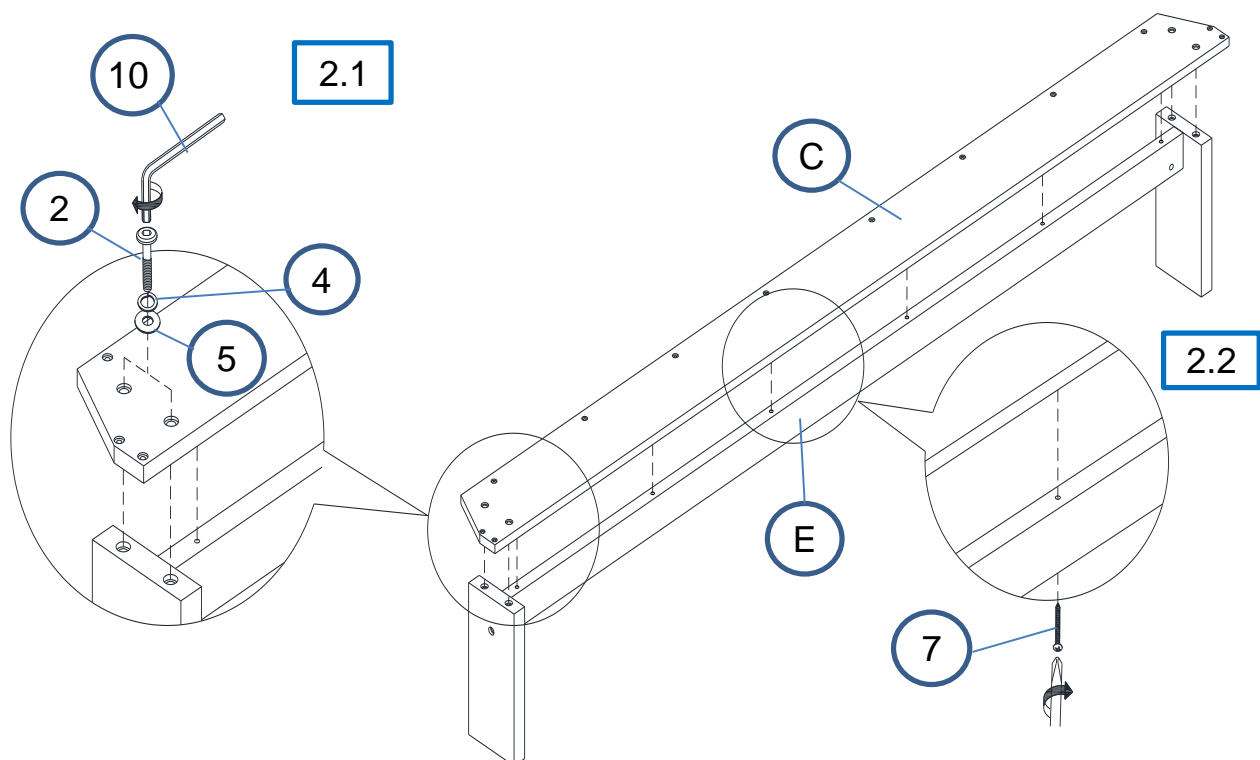


# ITEM: 225011Q (B1&B2)




## ASSEMBLY INSTRUCTIONS

### STEP 3

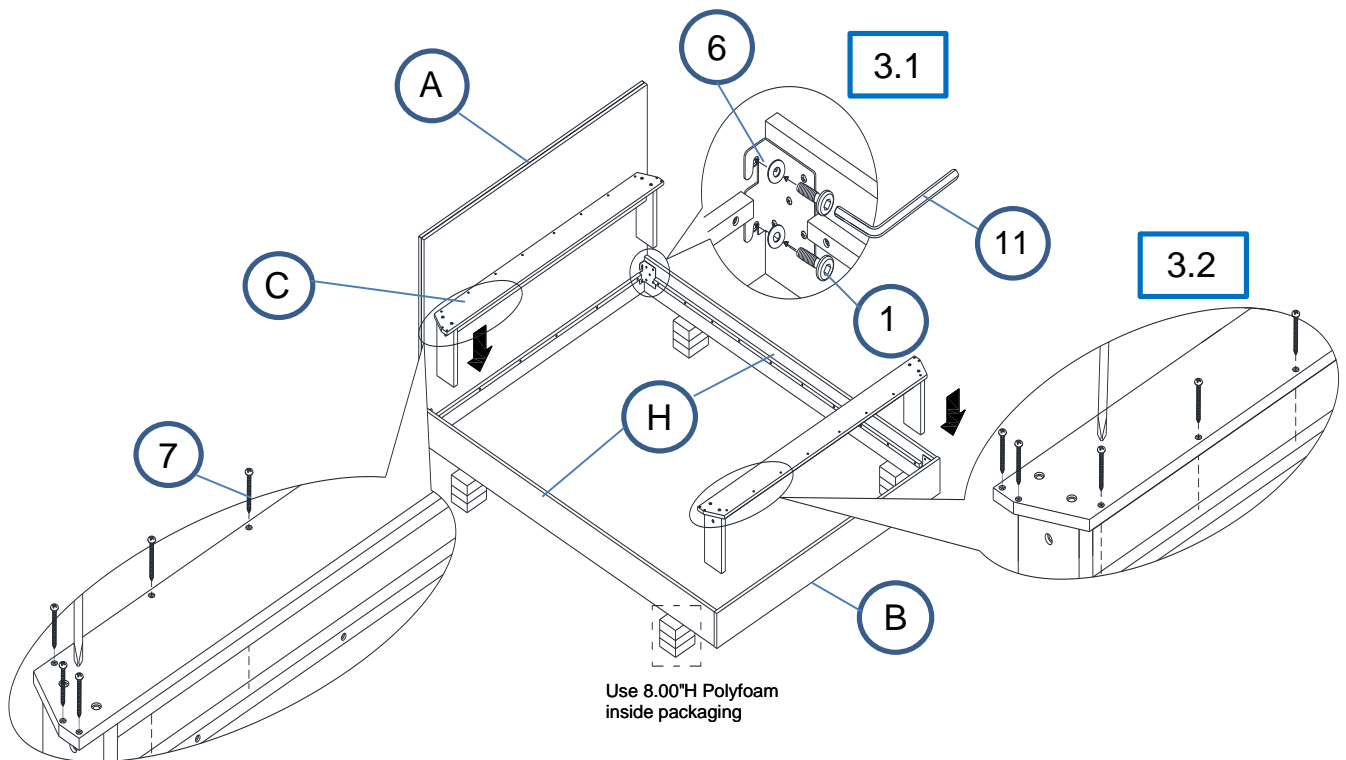

### STEP 4

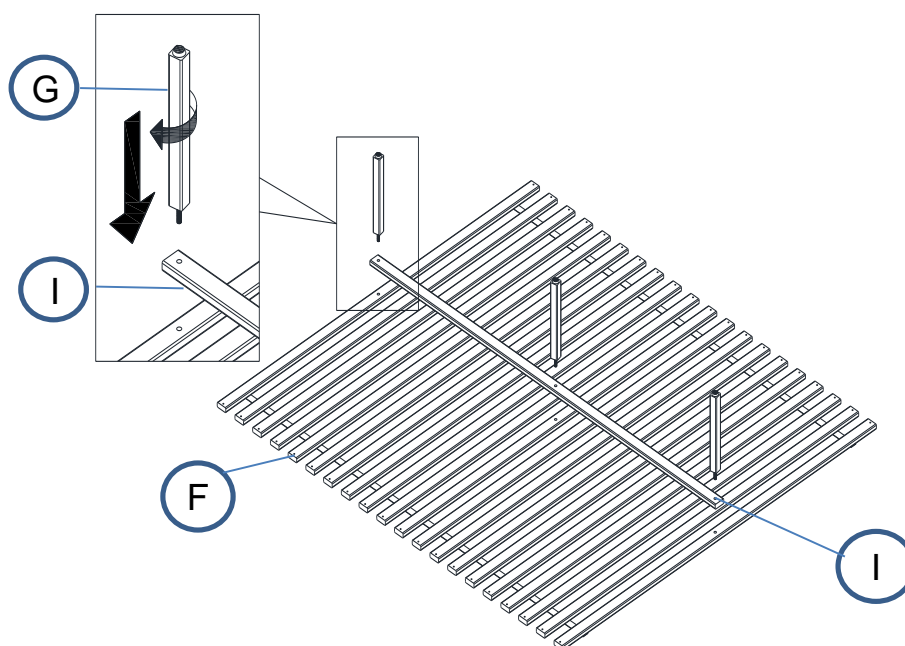


ITEM: **225011Q (B1&B2)**


## ASSEMBLY INSTRUCTIONS



### STEP 5

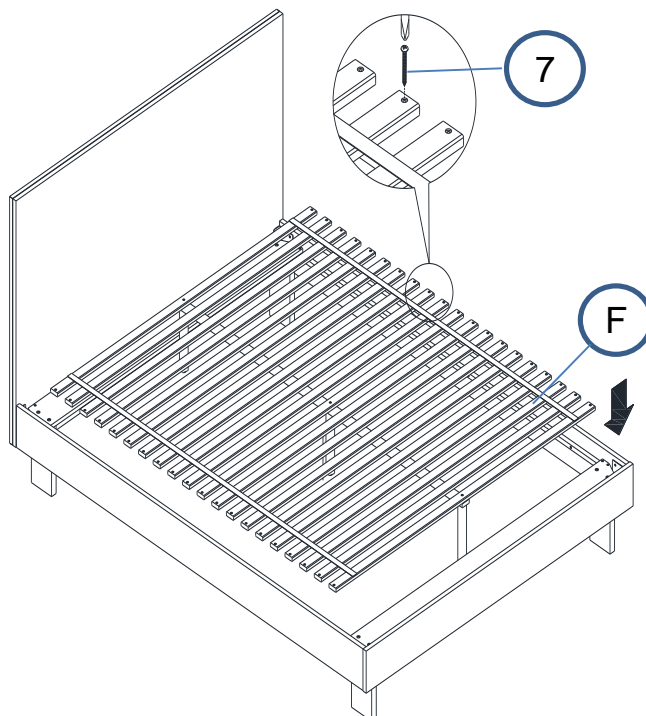


### STEP 6 COMPLETE

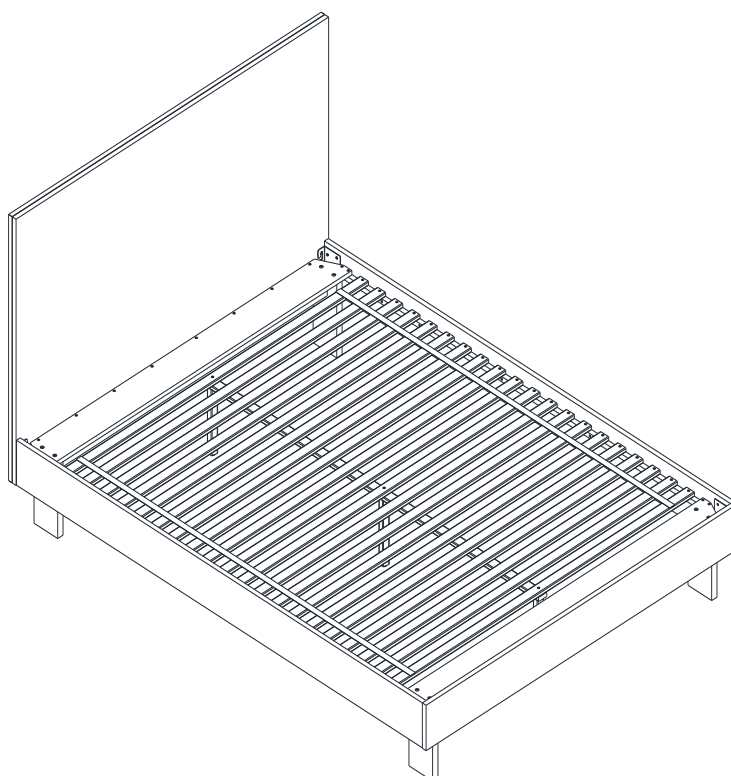

ITEM: **225011Q (B1&B2)**



Inner Size : 61.00"W x 81.00"D

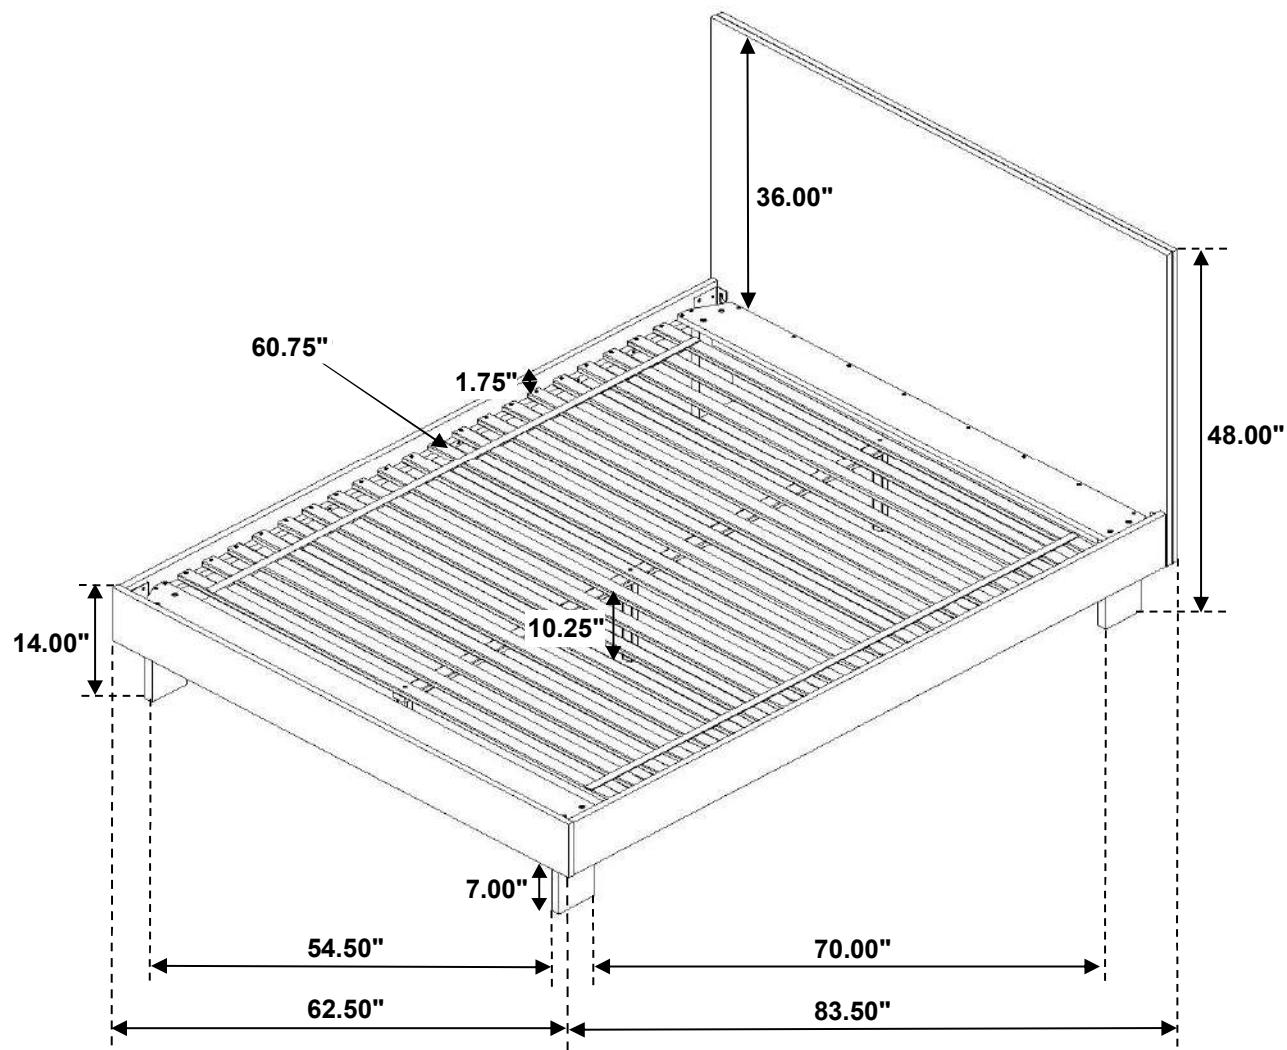

Note : Dimension tolerance  $\pm 5\%$