

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

109386
Vitrine Cabinet

ITEM: **109386**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A VITRINE CABINET

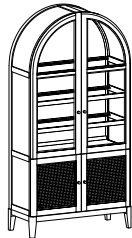

1PC

B GLASS SHELF



3PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **109386**

ASSEMBLY INSTRUCTIONS

STEP 1

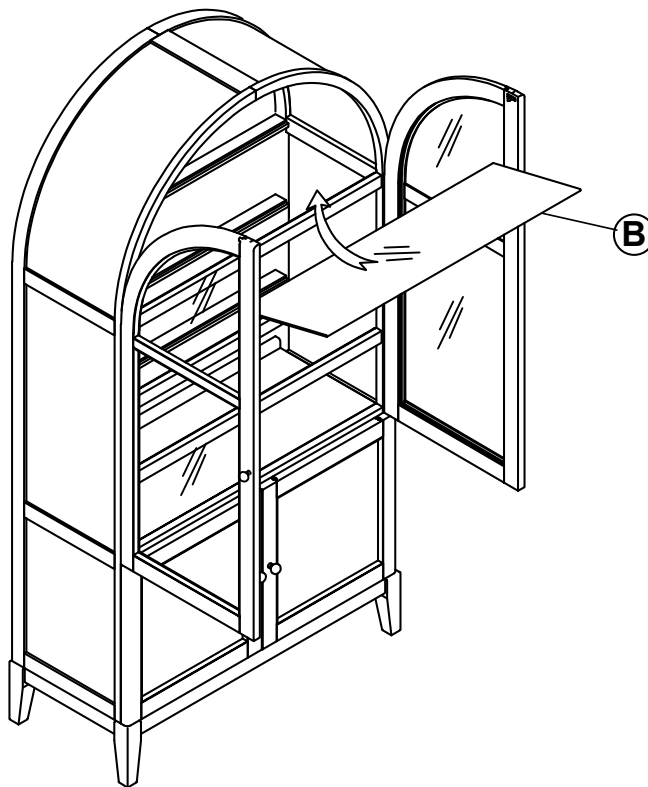


STEP 2

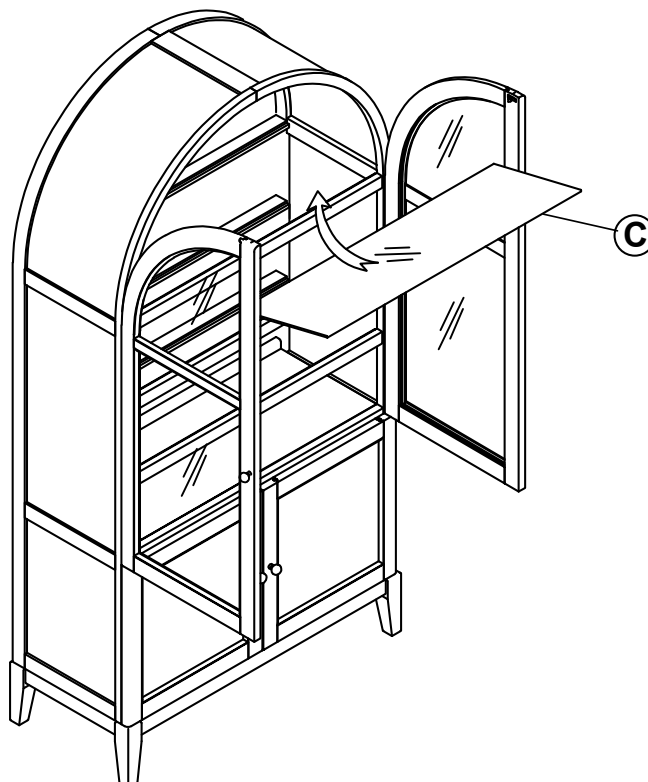


ITEM: **109386**

ASSEMBLY INSTRUCTIONS

STEP 3

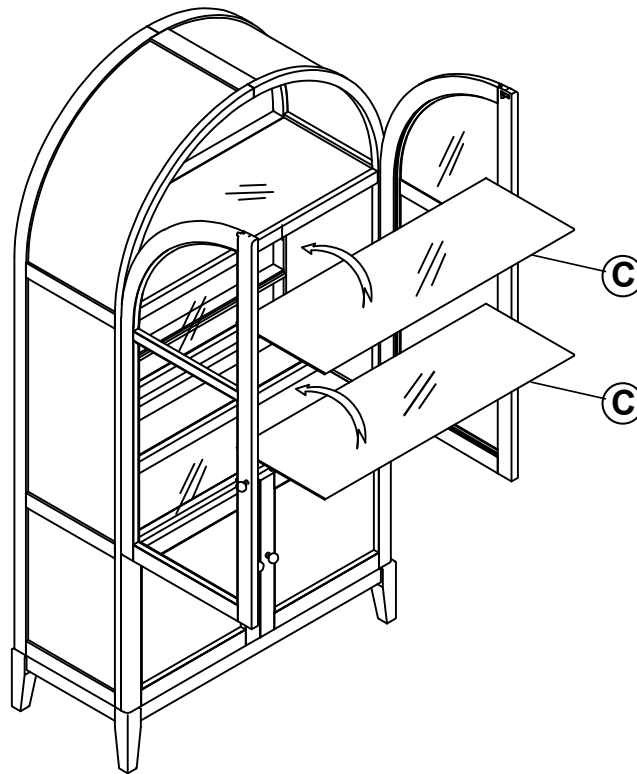

STEP 4 COMPLETE

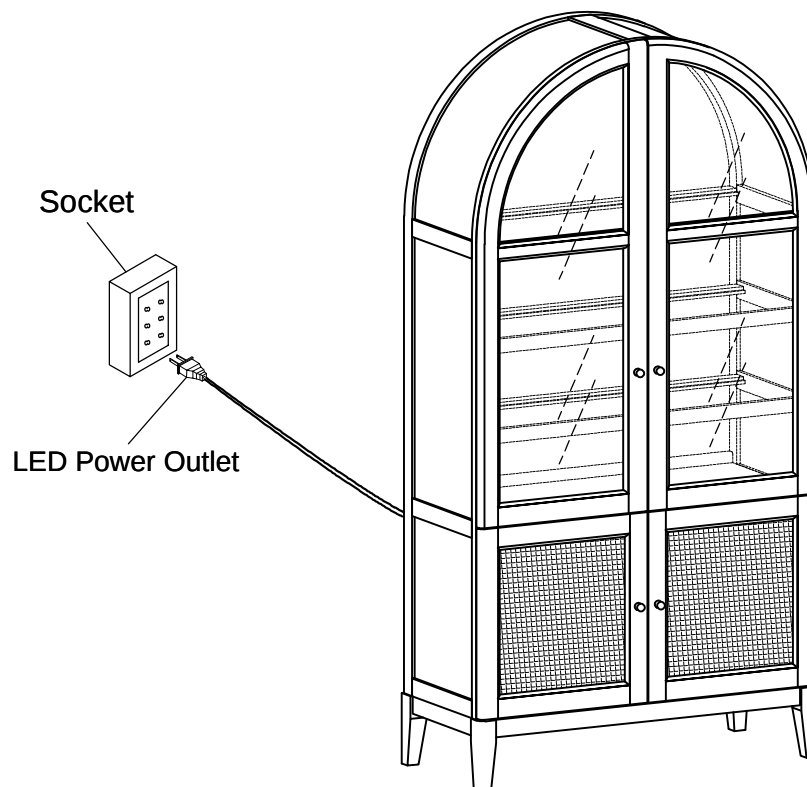

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

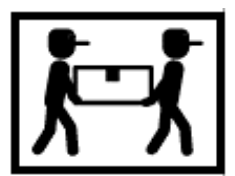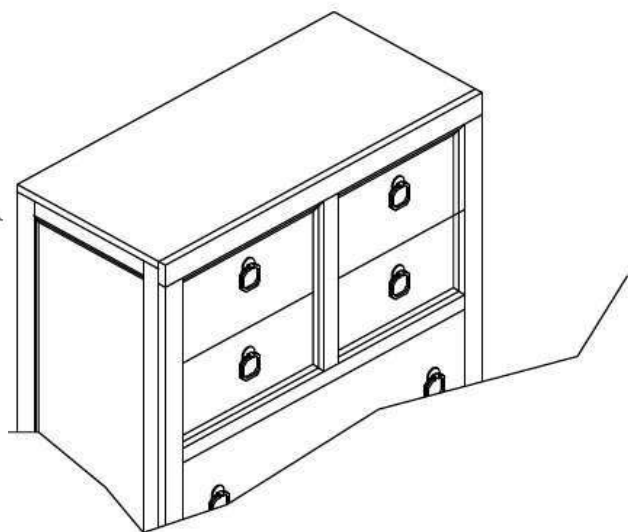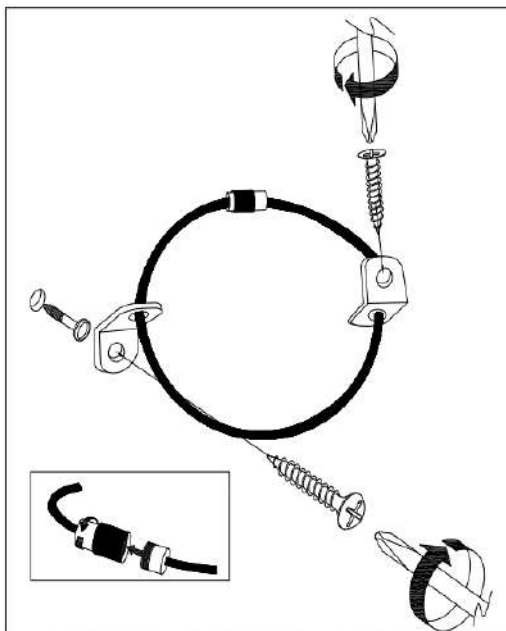

ITEM: **109386**

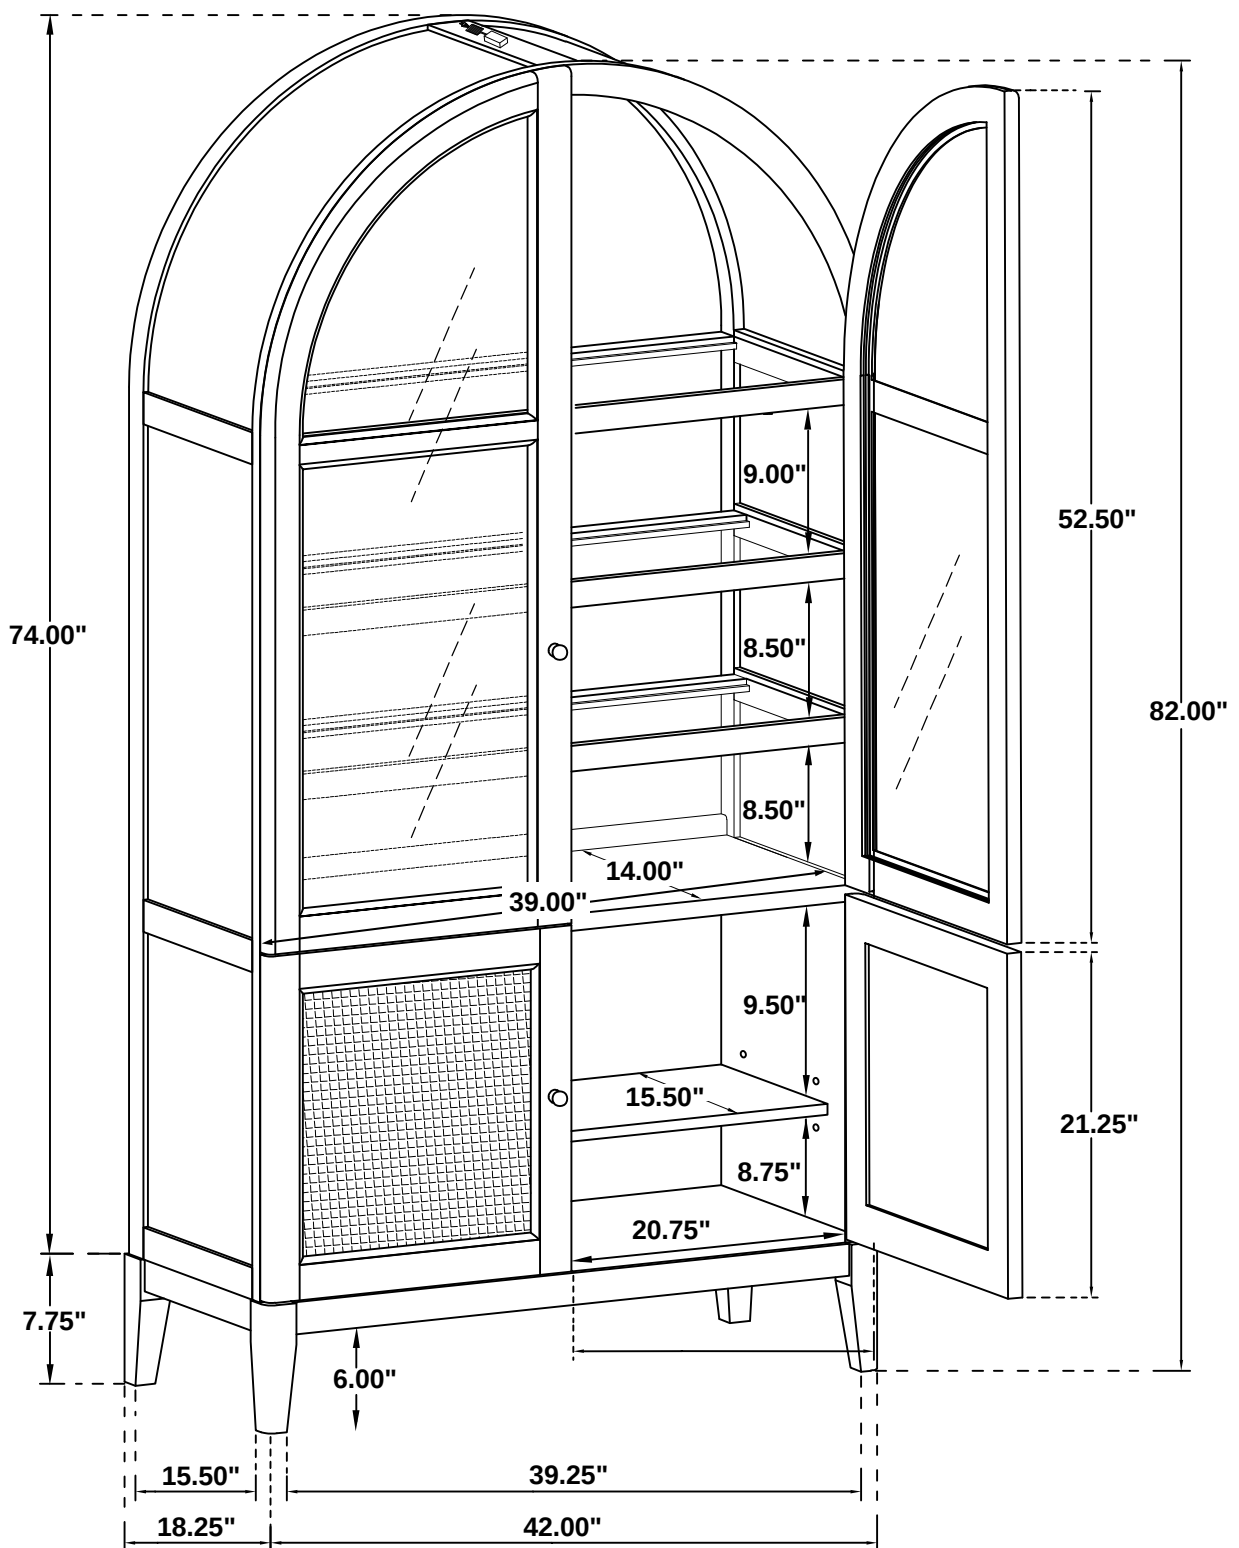

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

109388
Counter Height Table

ITEM: **109388**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

A	TOP		1PC	B	LEFT BASE		1PC
C	RIGHT BASE		1PC	D	SIDE FRAME		2PCS
E	SHELF		2PCS	F	BACK PANEL		1PC
G	FRONT FRAME		1PC				

HARDWARE IDENTIFICATION

1	BOLT (Ø5/16" x 38MM - RBW)		20PCS	3	FLAT WASHER (Ø5/16" - RBW)		20PCS
2	LOCK WASHER (Ø5/16" - RBW)		20PCS	4	ALLEN WRENCH (M4 x 60MM - RBW)		1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **109388**

ASSEMBLY INSTRUCTIONS

STEP 1

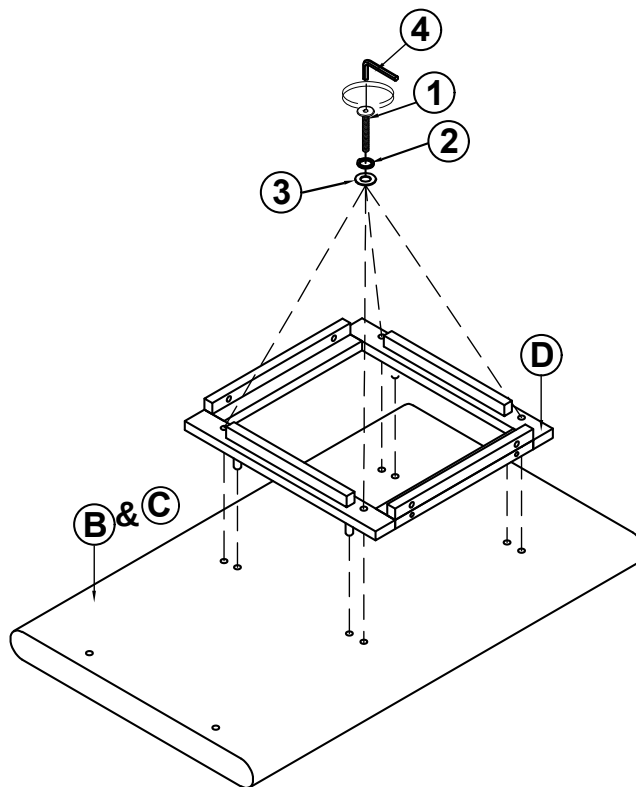

STEP 2

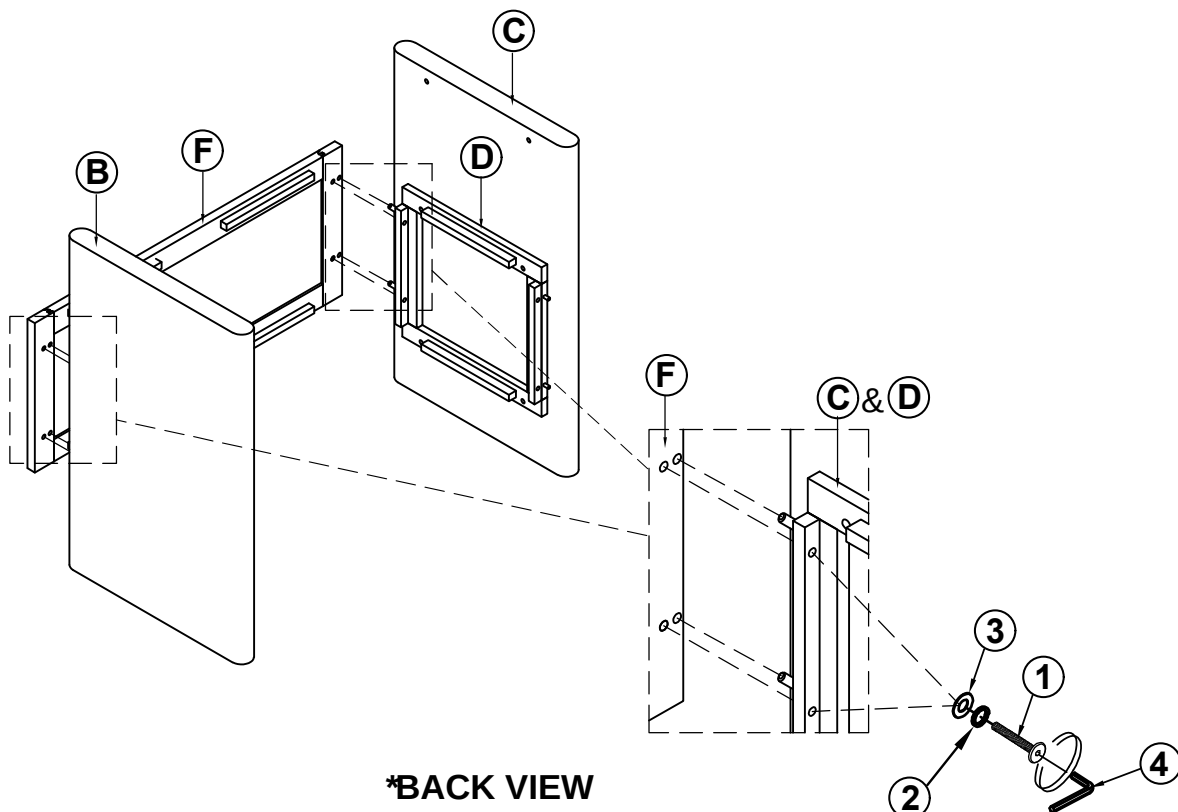


***BACK VIEW**


ITEM: **109388**

ASSEMBLY INSTRUCTIONS

STEP 3

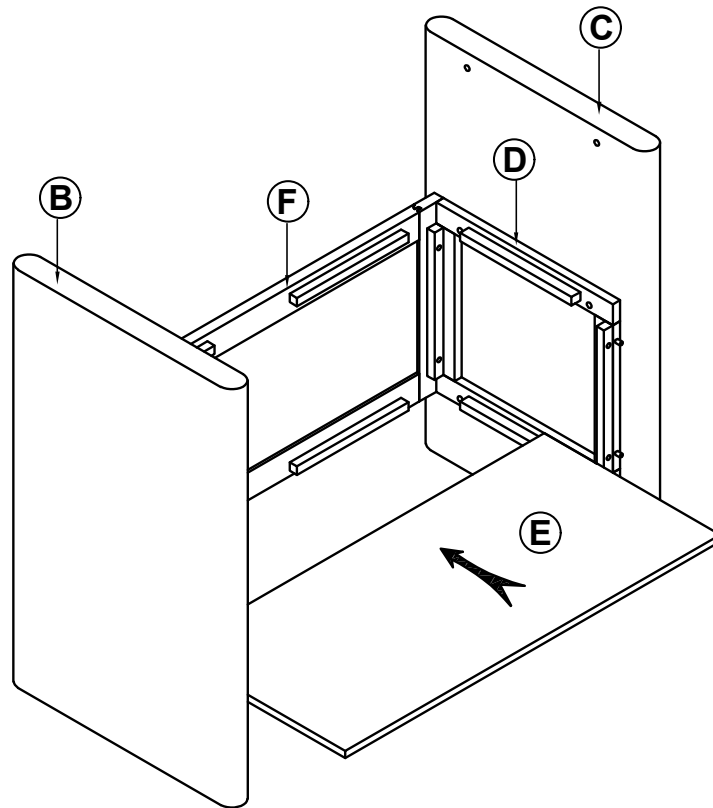


STEP 4

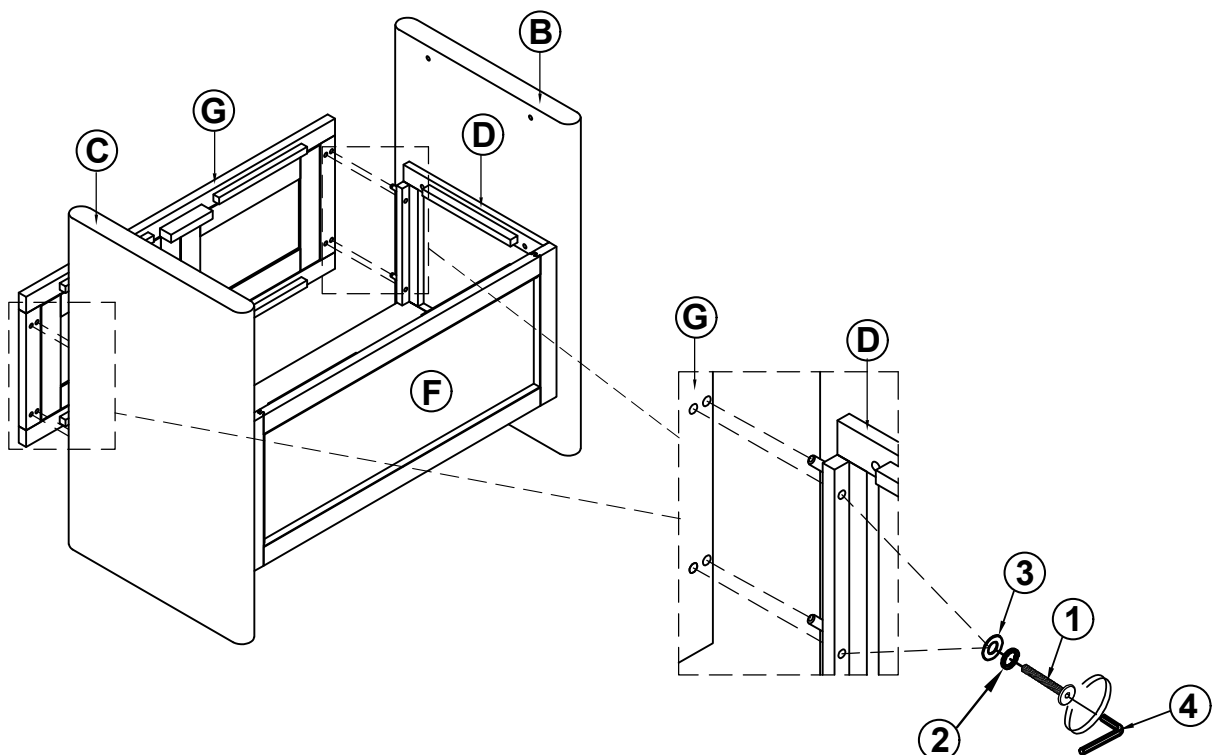


ITEM: **109388**

ASSEMBLY INSTRUCTIONS

STEP 5

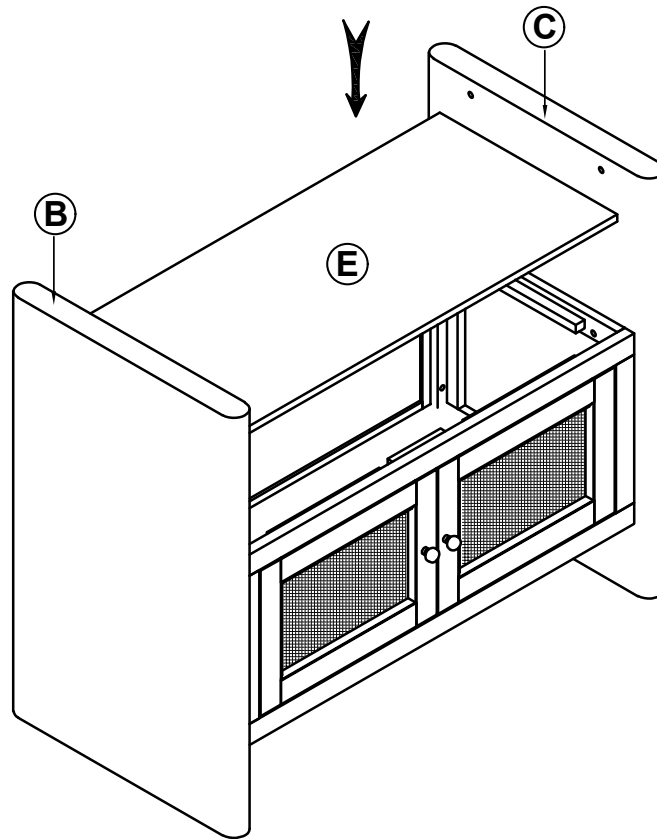

STEP 6


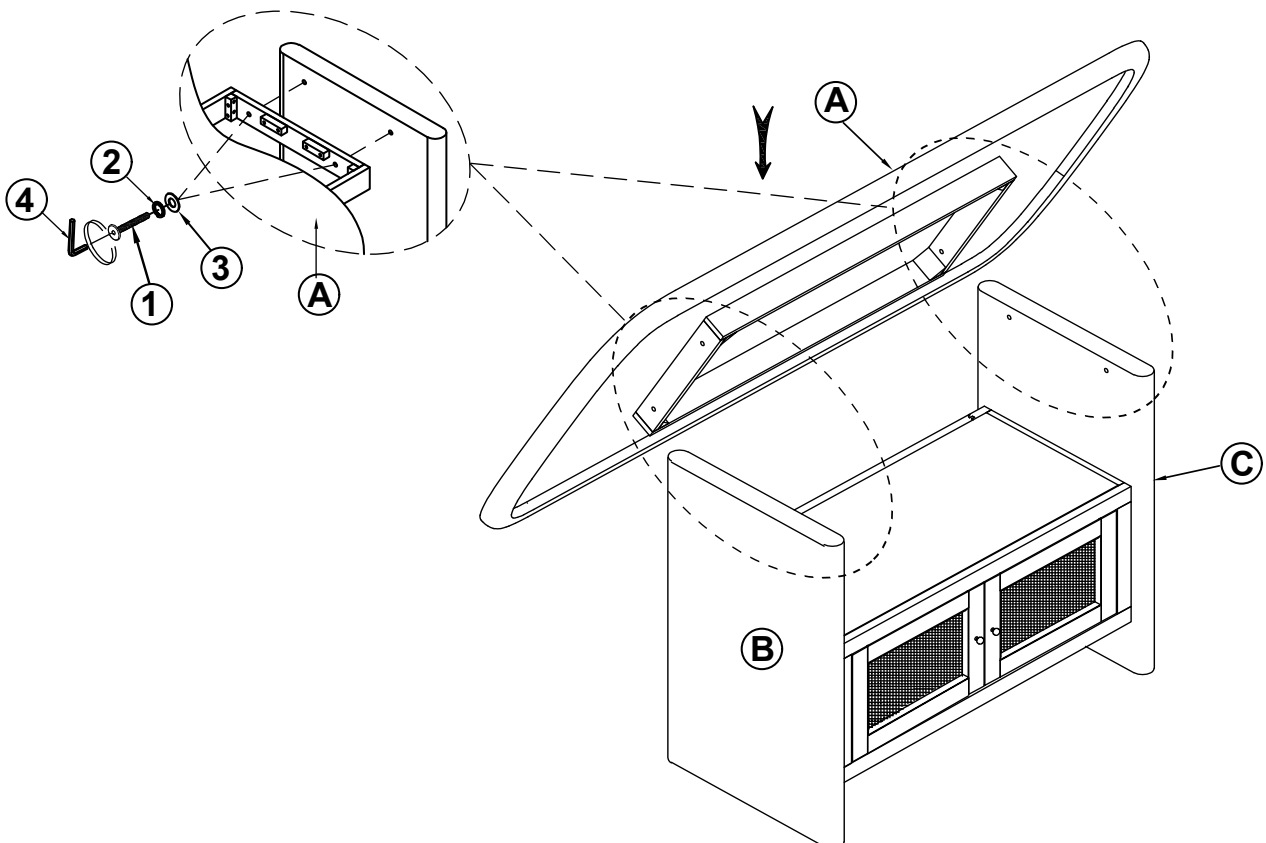


ITEM: **109388**


ASSEMBLY INSTRUCTIONS

STEP 7

COMPLETE

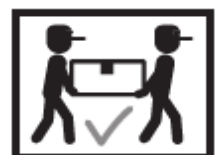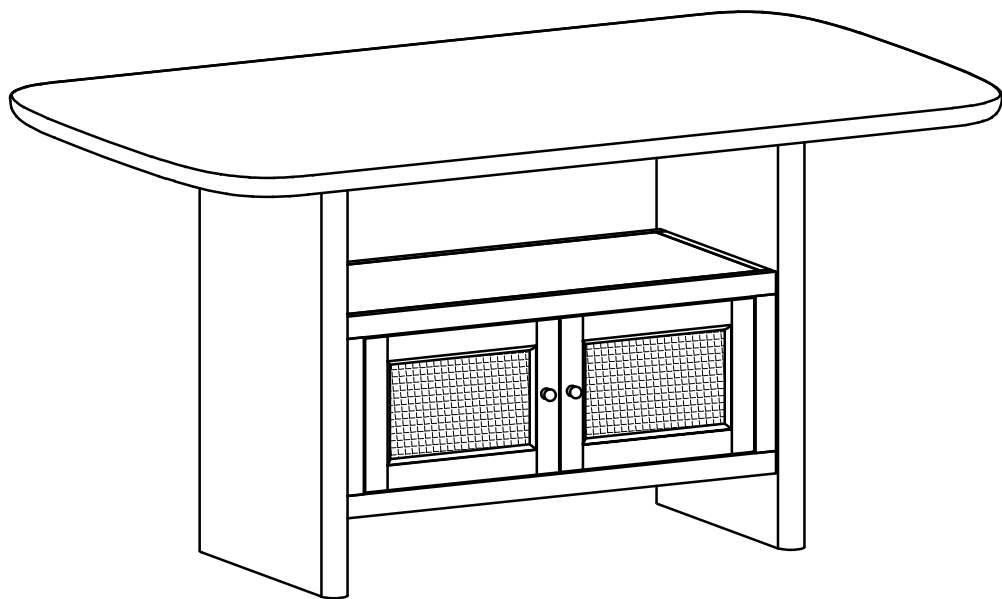

ITEM: **109388**

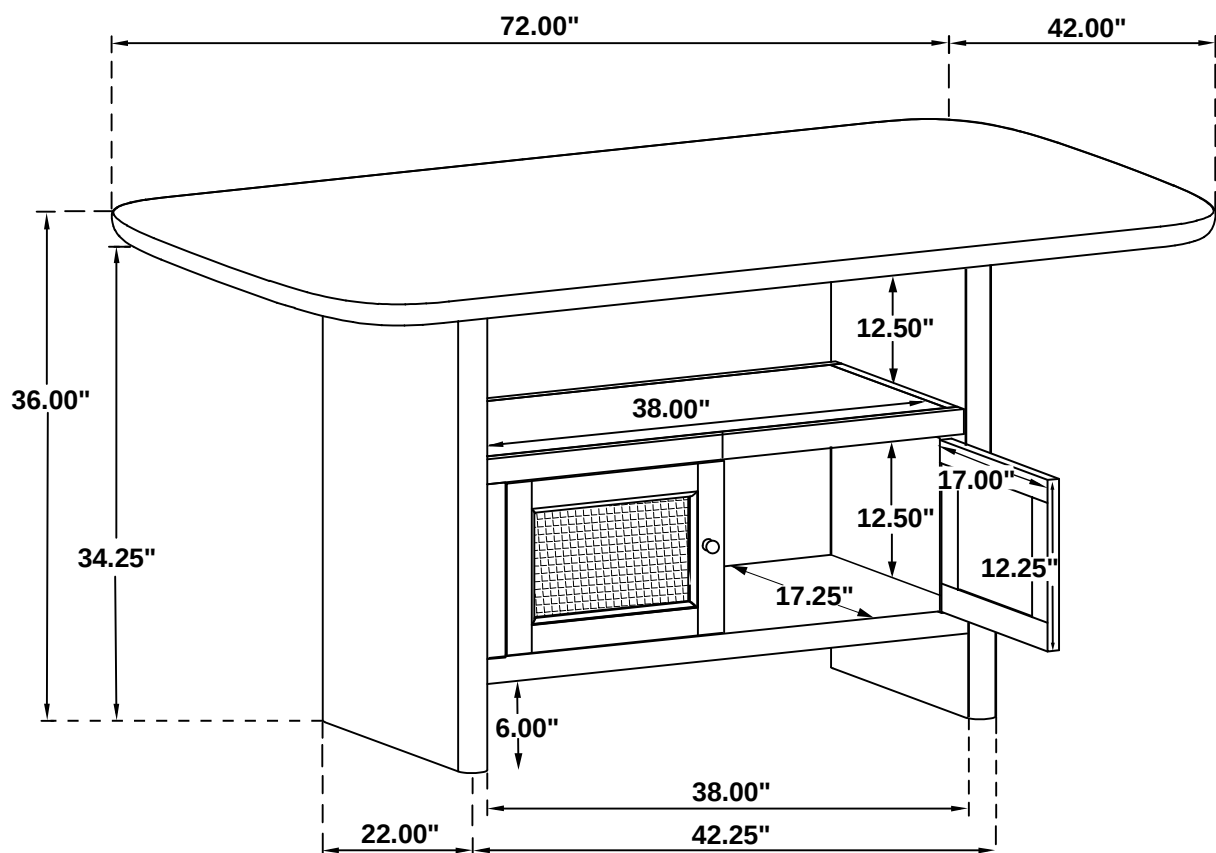

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

109389
Counter Height Stool

ITEM: **109389**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!






1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.







ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A	BACK FRAME		1PC	B	SEAT CUSHION WITH FRAME		1PC
C	LEFT FRONT LEG		1PC	D	RIGHT FRONT LEG		1PC
E	FRONT STRETCHER		1PC	F	LEFT SIDE STRETCHER		1PC
G	RIGHT SIDE STRETCHER		1PC				

HARDWARE IDENTIFICATION

1	LONG BOLT (Φ1/4" x 75mm - RBW)		4PCS	5	FLAT WASHER (Φ1/4" - RBW)		10PCS
2	MEDIUM BOLT (Φ1/4" x 60 mm - RBW)		4PCS	6	ALLEN WRENCH (M4x60MM - RBW)		1PC
3	SHORT BOLT (Φ1/4" x 45mm - RBW)		2PCS	7	PAN HEAD SCREW (Φ4 x 40MM - RBW)		6PCS
4	LOCK WASHER (Φ1/4" - RBW)		10PCS				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **109389**

ASSEMBLY INSTRUCTIONS

STEP 1

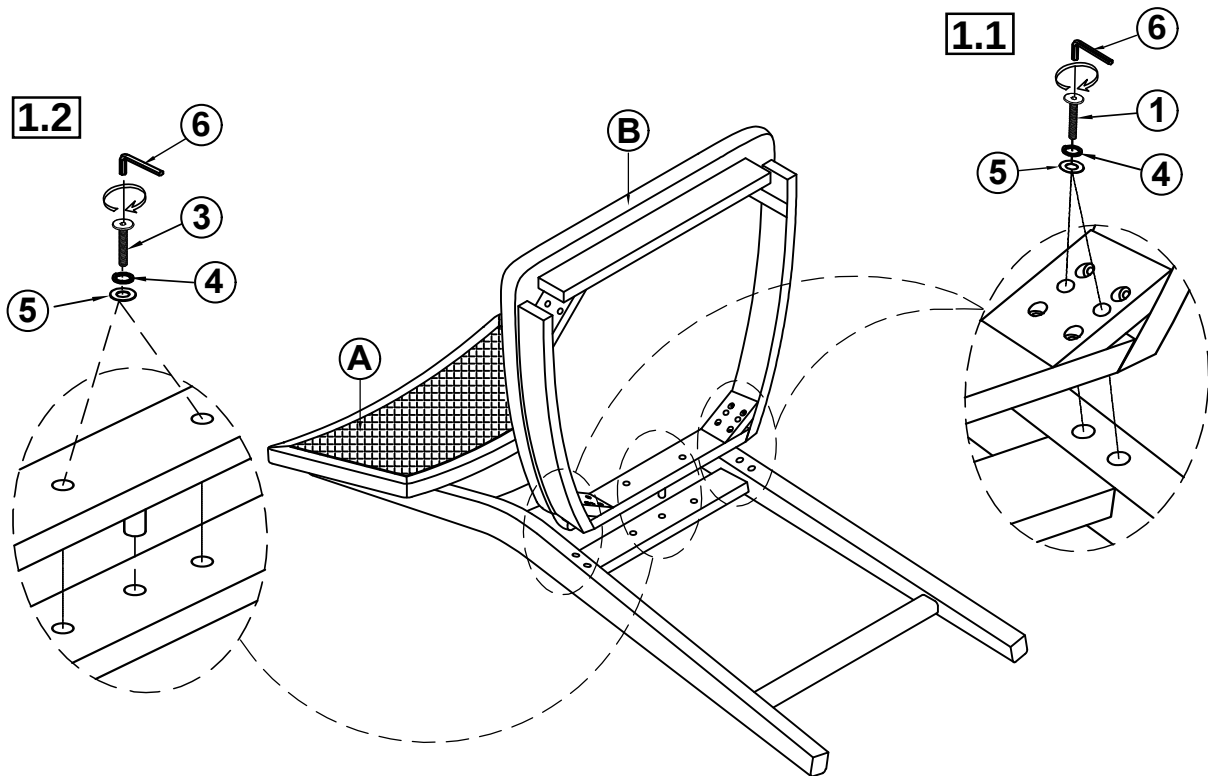


STEP 2

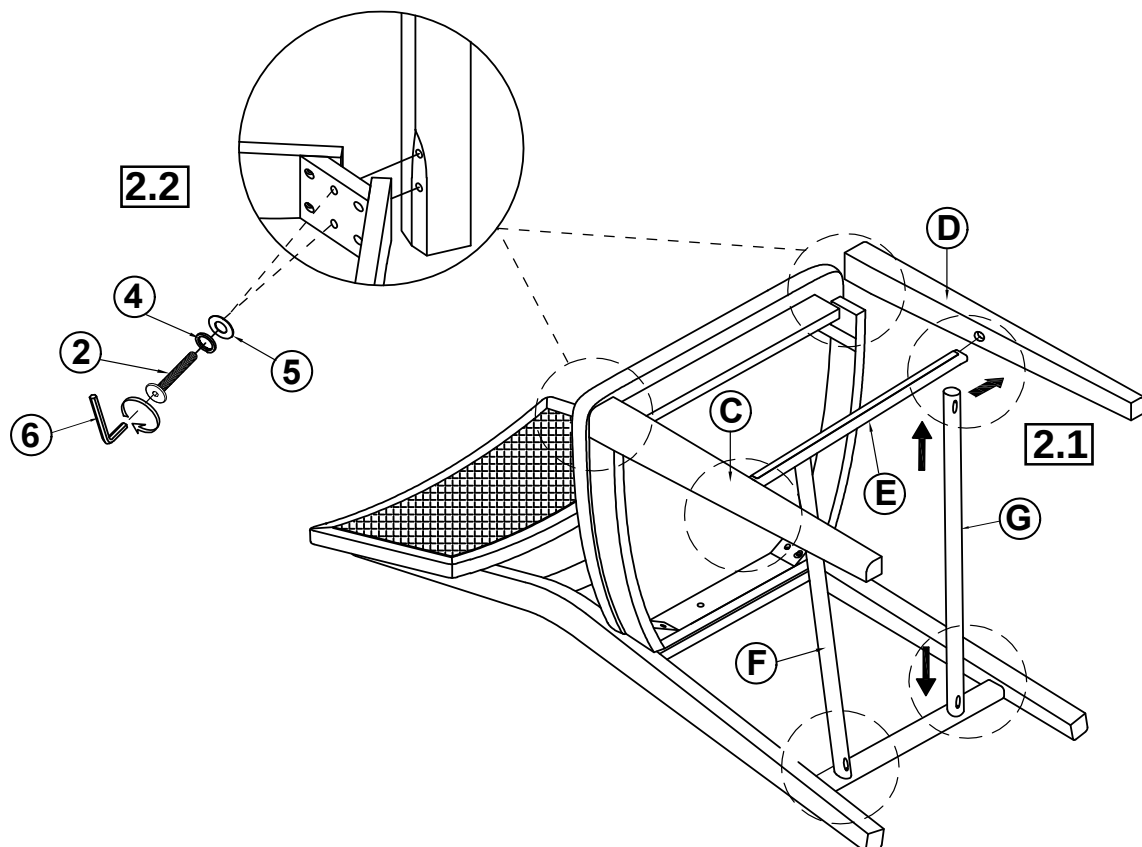


ITEM: **109389**

ASSEMBLY INSTRUCTIONS


STEP 3

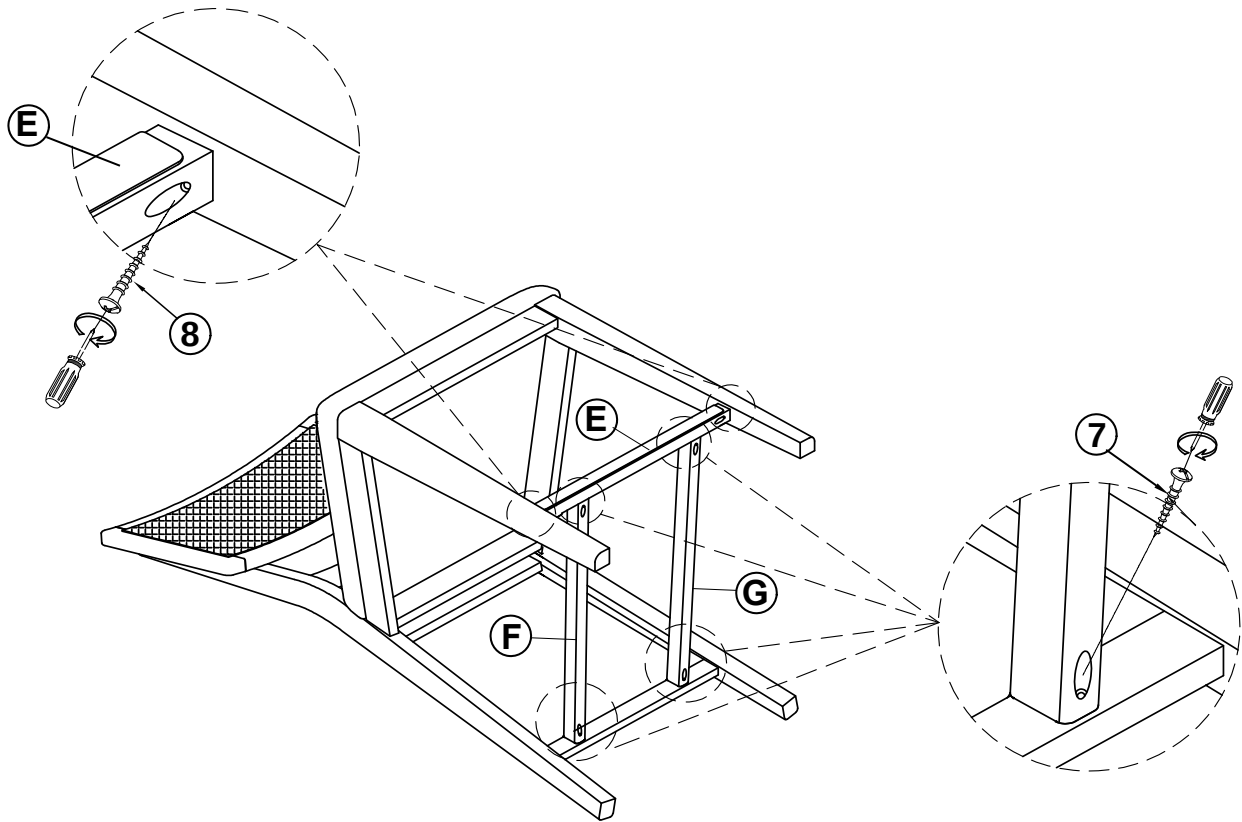

STEP 4 COMPLETE

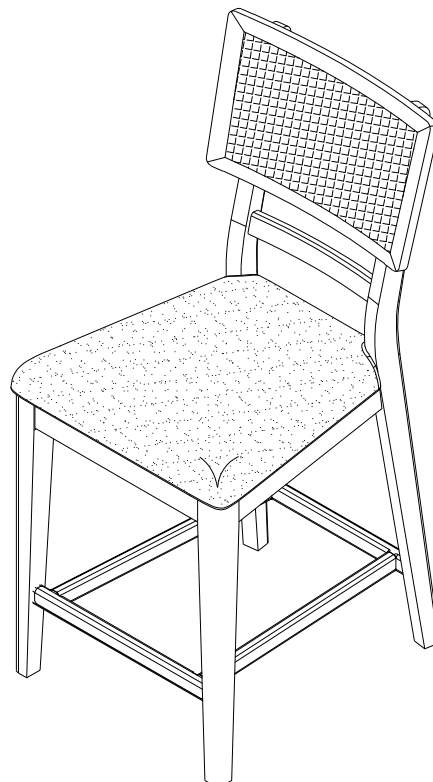

ITEM: **109389**

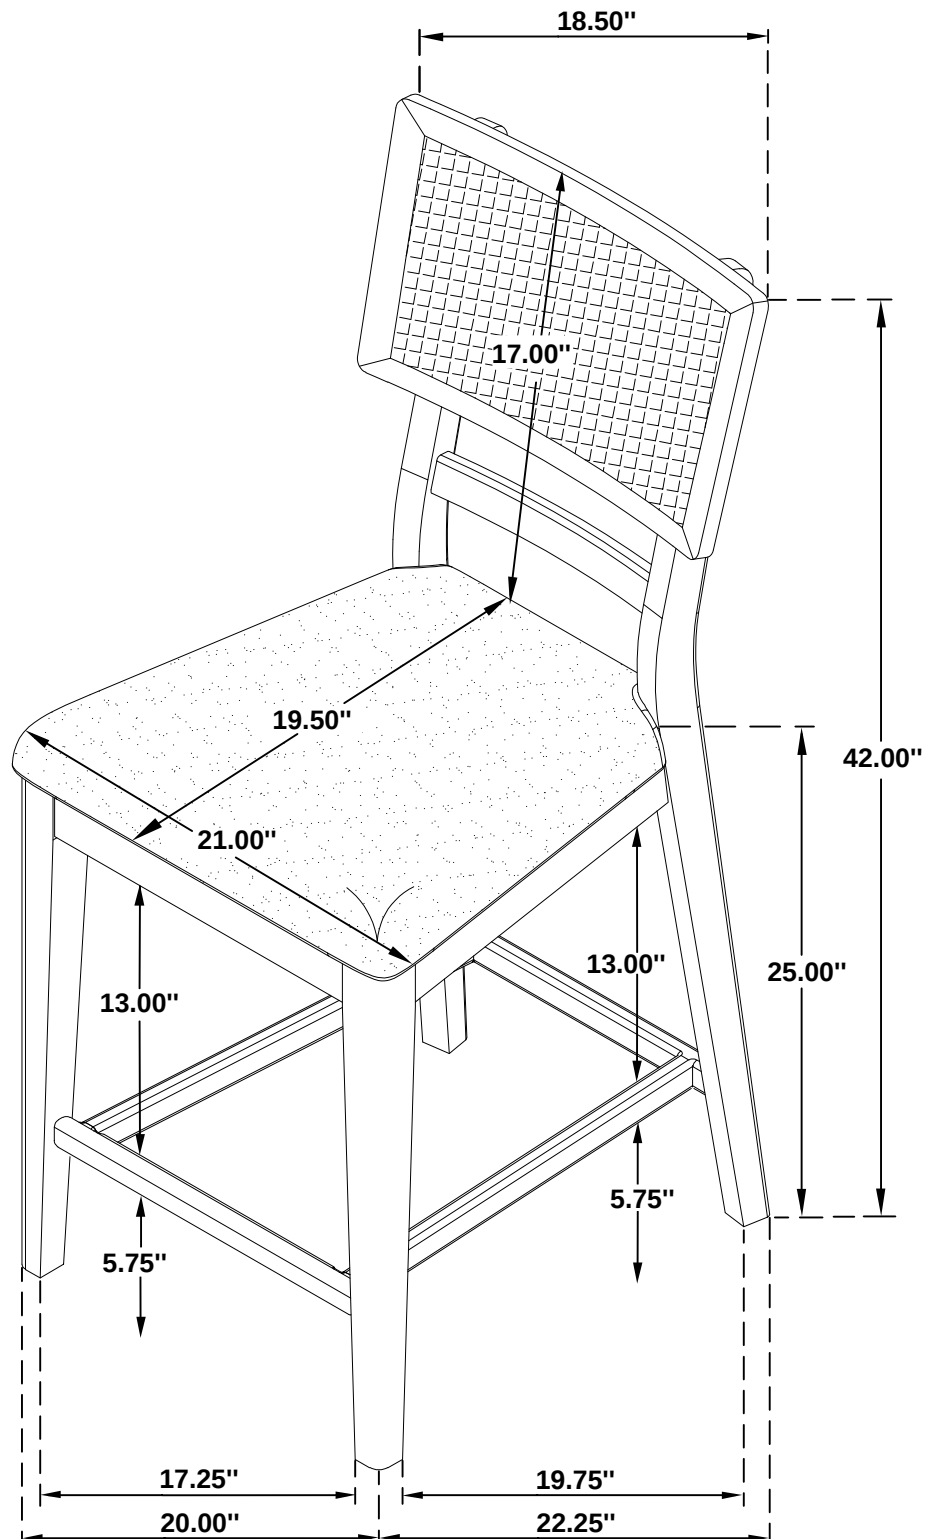

Note: Dimension tolerance $\pm 5\%$