

# ASSEMBLY INTRUCTION


B560-25-05  
B560-01-05

Thank you for purchasing this product.Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


Please read all instructions carefully before assembly process.It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy parts are not damaged during the process.

CAUTION : for your safety, this product require two people to lift.


## Step 1

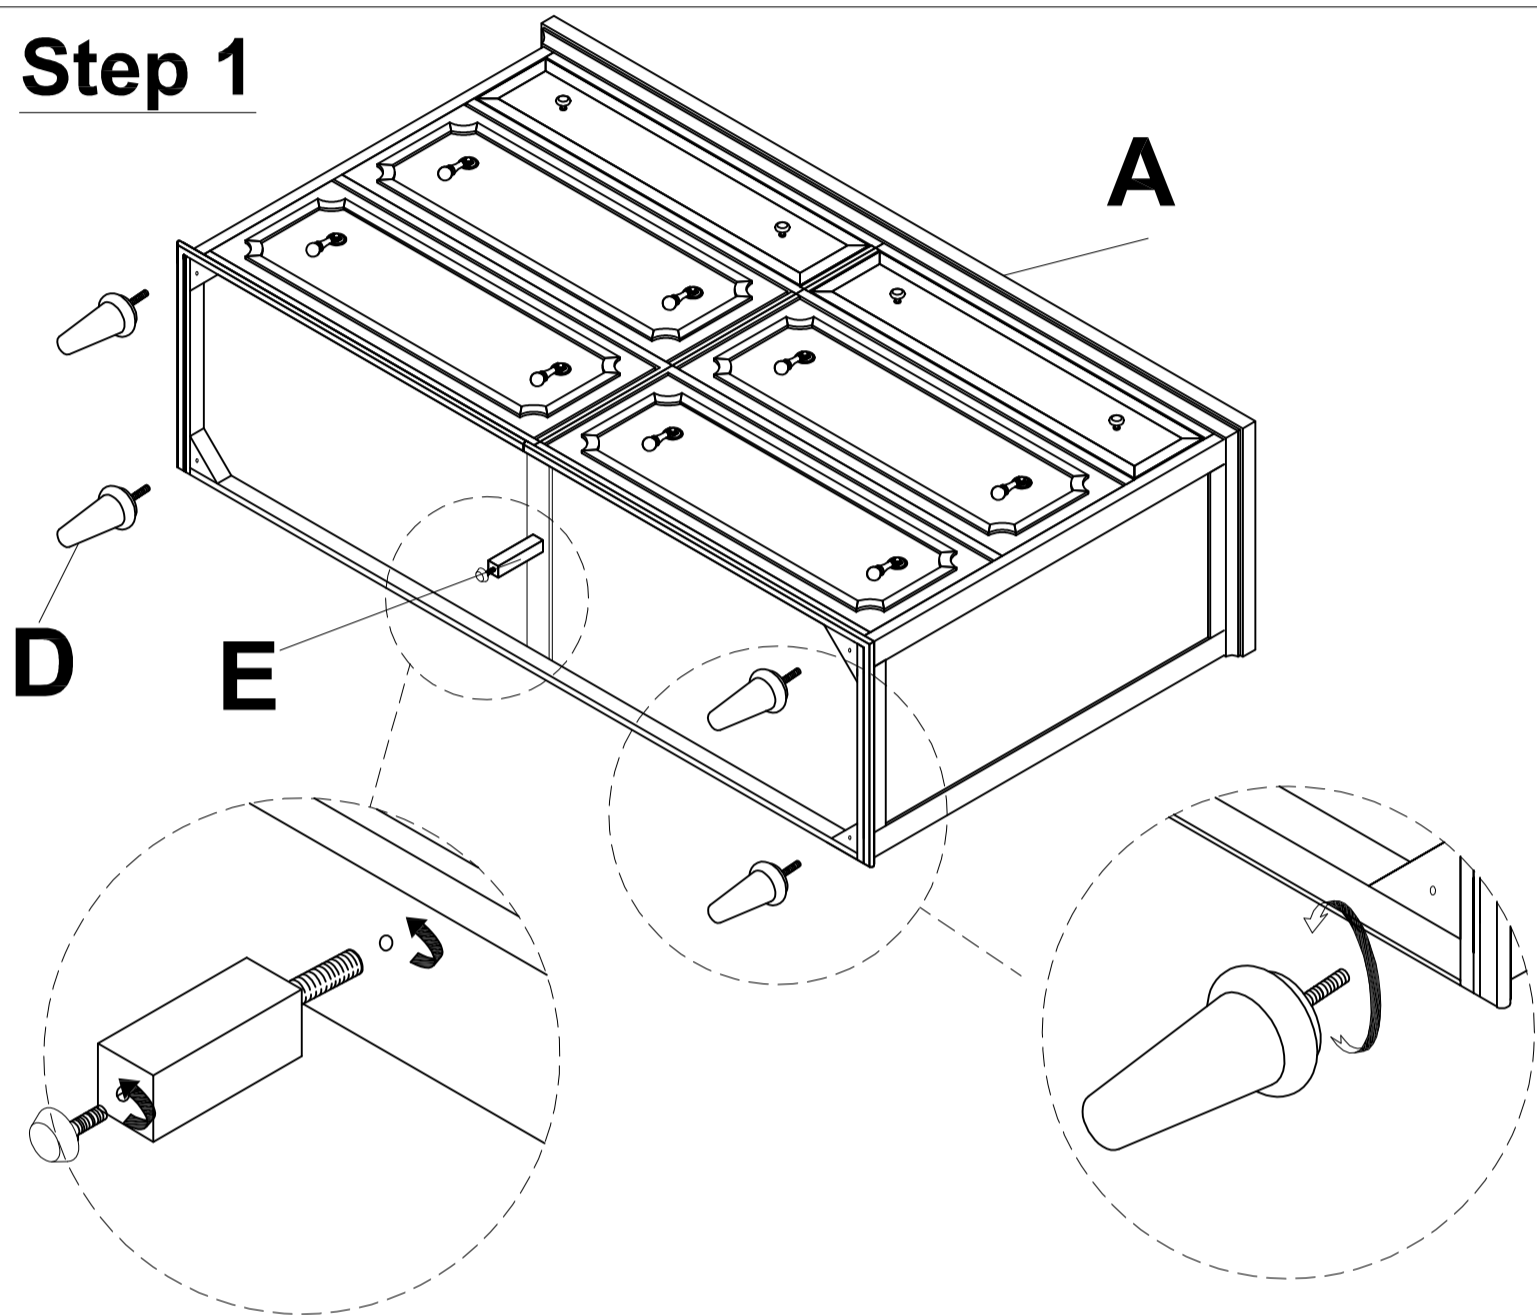



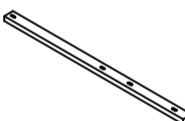


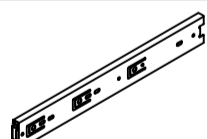


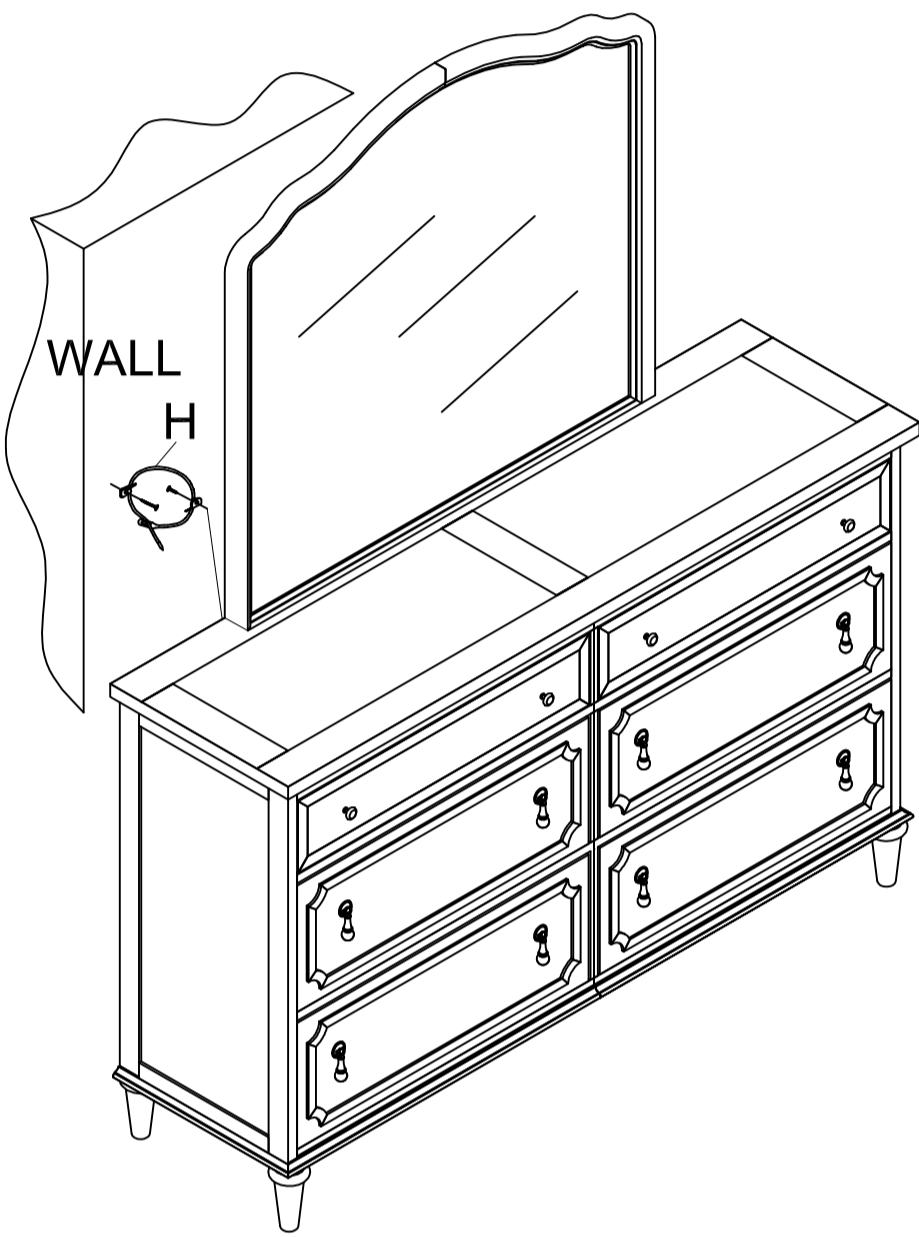


## Step 3

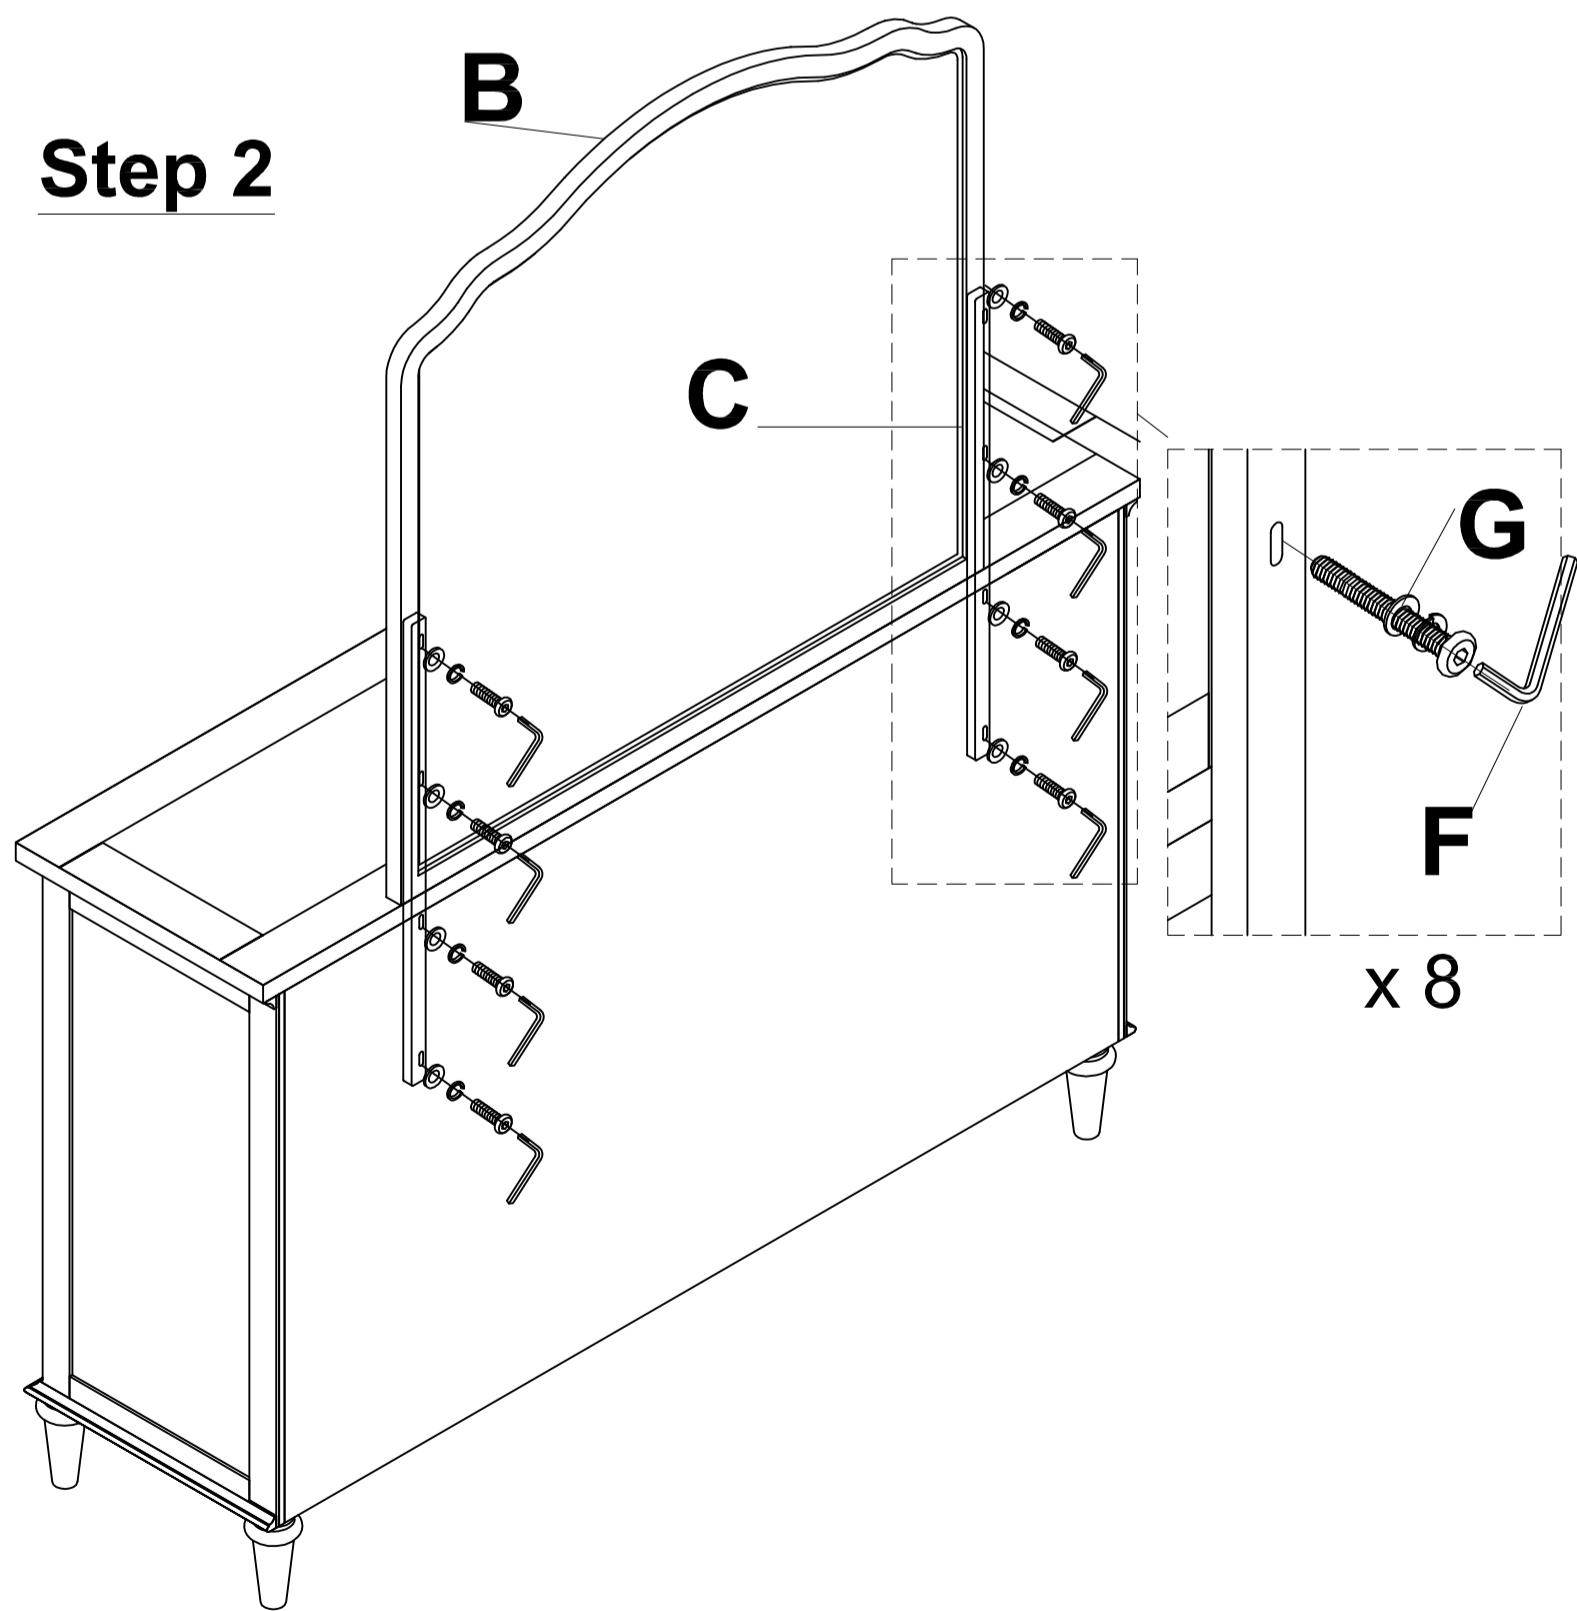

## Step 2

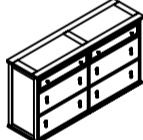

NOTE, WAIT TO TIGHTEN ALL COMPONENTS COMPLETELY UNTIL UNIT IS FULLY ASSEMBLED. THIS WILL ALLOW FOR EASIER ASSEMBLY.

PICTURE	DESCRIPTION	Q'TY
<b>A</b> 	<b>DRESSER</b> EHF # N/A	1pc
<b>B</b> 	<b>MIRROR</b> EHF # N/A	1pc
<b>C</b> 	<b>MIRROR BRACKET</b> EHF # PB560-25SPRTRAIL	2pcs
<b>D</b> 	<b>BUNFEET</b> EHF # PB560-WKBUNFEET	4pcs
<b>E</b> 	<b>SUPPORT LEG</b> EHF # PB560-01SPPRRTLEG	1pc
<b>F</b> 	<b>DRAWER GLIDES</b> EHF#PUNI-12 DRWRGLD	6pr
<b>G</b> 	<b>DRAWER KNOBS</b> EHF#PB560-KNOB	4pcs
<b>H</b> 	<b>DRAWER PULLS</b> EHF#PB560-HNDL	8pcs
<b>I</b> 	<b>ALLEN KEY</b> EHF # PB560-25HDWR	1pc
<b>J</b> 	<b>BOLT 5/16" X1 1/2"</b> EHF # PB560-25HDWR	8pcs
<b>K</b> 	<b>ANTI -TIPPING KIT</b> EHF # PUNI-TRESTRAINT	1pc