



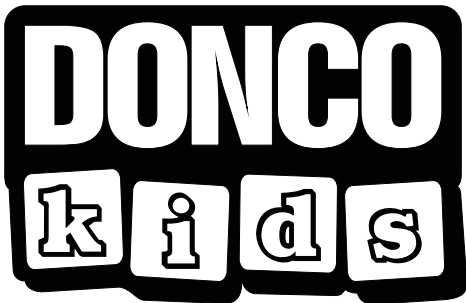

Fort Worth, Texas 76140

ASSEMBLY INSTRUCTIONS


3005 - Twin Junior Low Loft

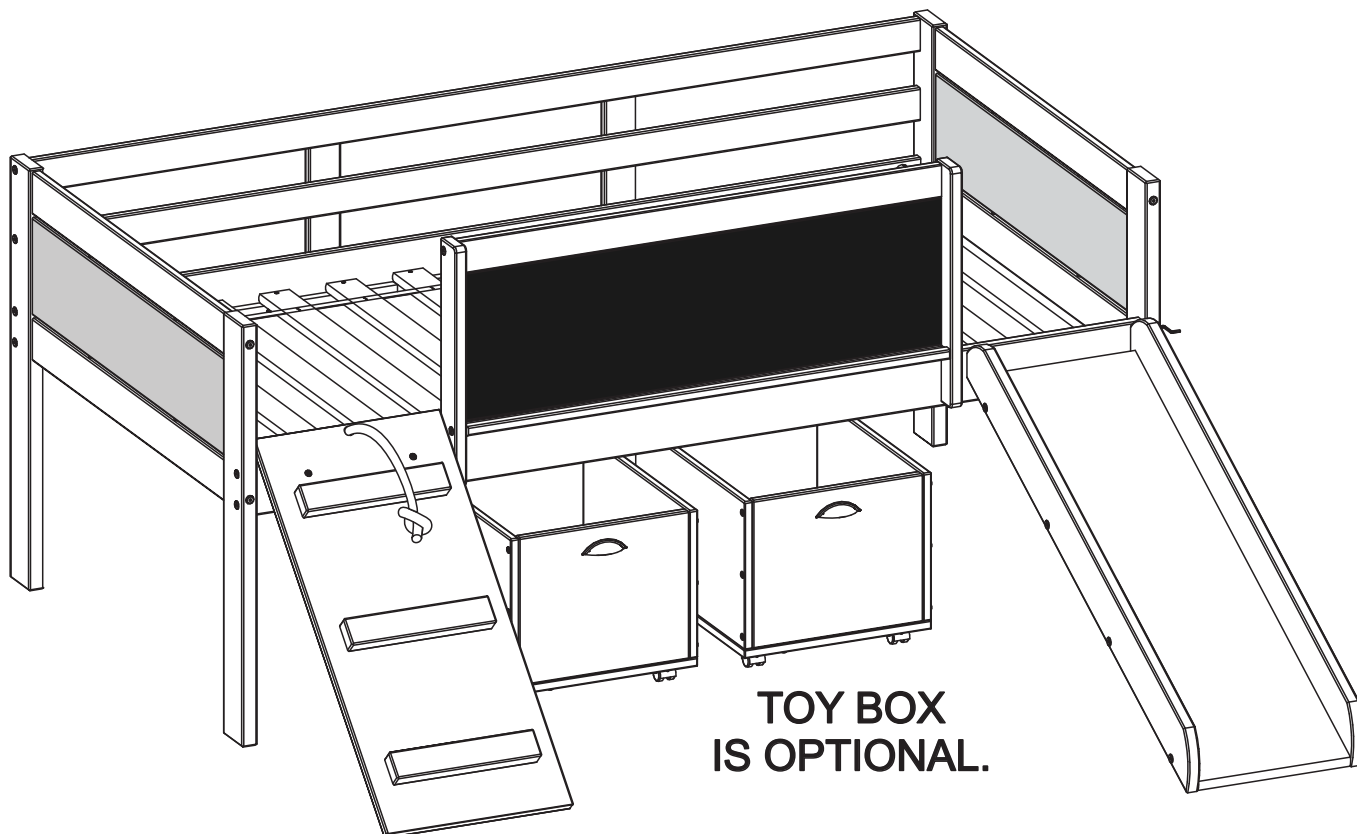



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

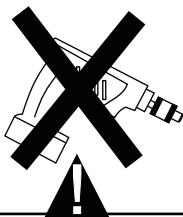


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

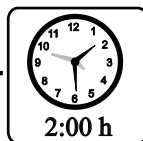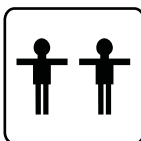

Tools Required



(Not included)



(Not included)

IMPORTANT:


PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part list: 3005 - Twin Junior Low Loft




PRODUCT:	TWIN JUNIOR LOW LOFT	DONCO TRADING CO.	WARNING
MODEL #:	3005	CALIFORNIA 65 COMPLIANT FOR	California Proposition 65
INFO CODE #:	0	FORMALDEHYDE PHASE 2	This product can expose you to
PO #:	0009	PO #:	chemicals, including formaldehyde,
INFO DATE:	OCTOBER/2015	RELEASED:	which is known to the
DISTRIBUTED BY:	DONCO TRADING CO.	FOR RESIDENTIAL USE ONLY.	State of California to cause cancer.
MADE IN:	PORT WORTH, TX 76140	NOT FOR COMMERCIAL USE.	For more information, go to
		MADE IN BRAZIL	www.P30Warnings.ca.gov/furniture

MANUFACTURER LABEL



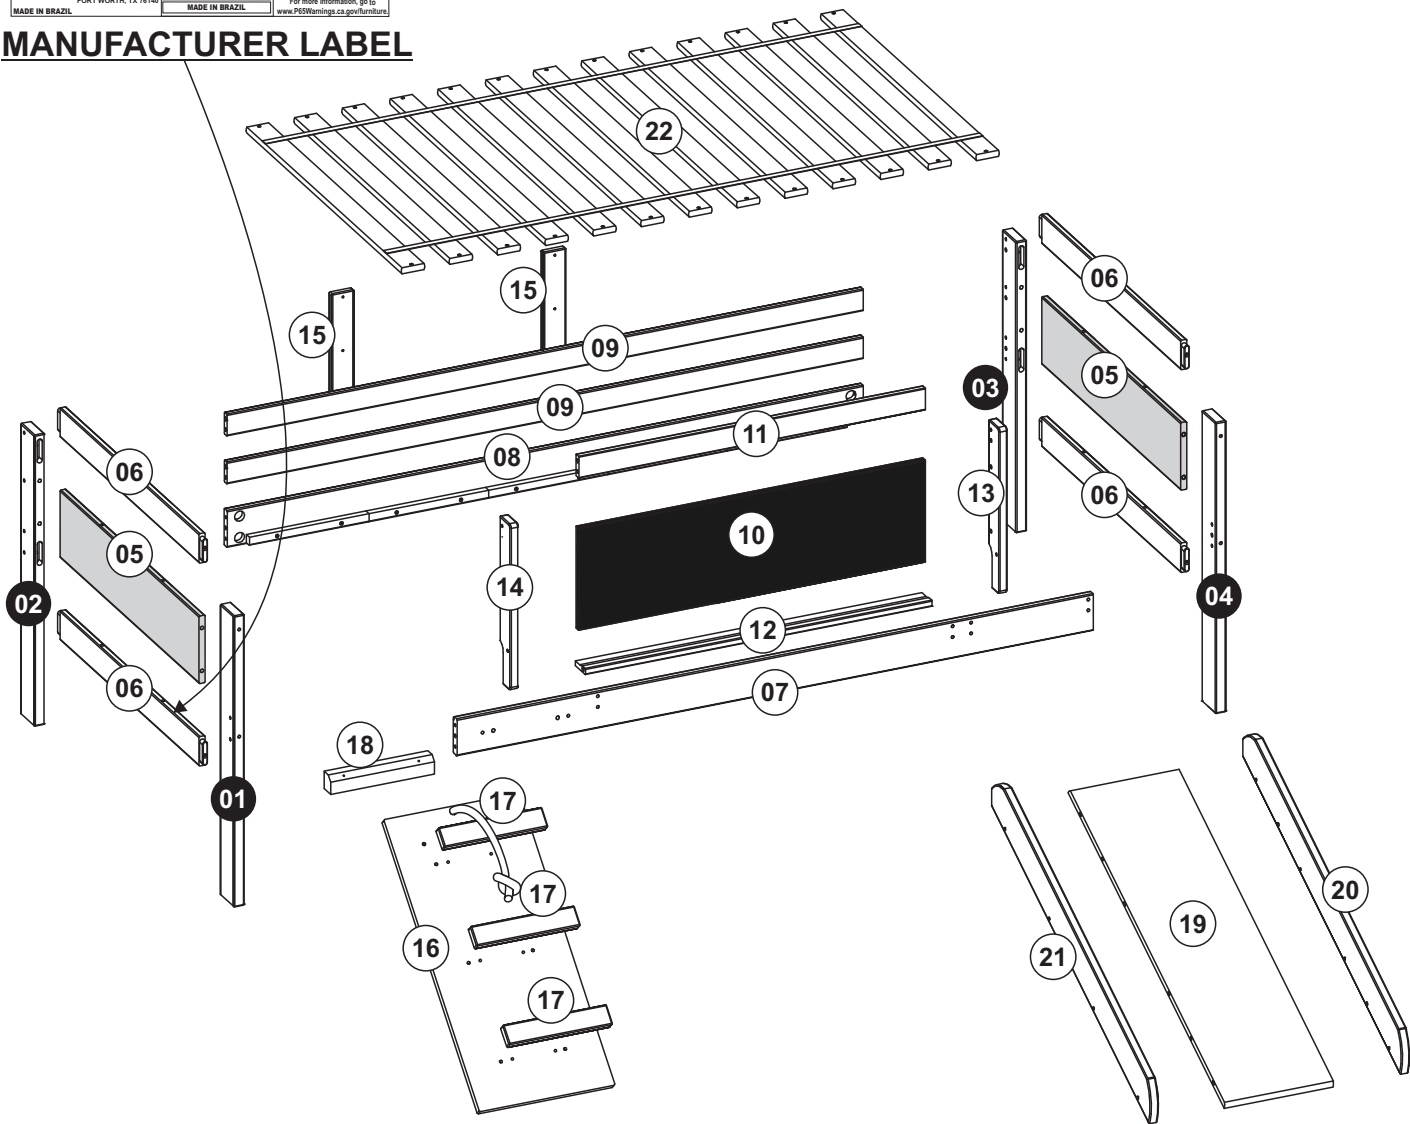


Identifying the Hardware-Identify the hardware using the illustrations below.


A	 Ø10x40mm	29	E	 Ø7x70mm (Ø17)	08	I	 Ø7x40mm (Ø13)	08
B	 Ø8x30mm	06	F	 Ø7x50mm (Ø17)	18	J	 Ø4x30mm	32
C	 White Connection	08	G	 1/4x70mm (Ø17)	08	K		08
D	 Ø7x110mm (Ø17)	08	H	 4mm	01			

01


A	 Ø10x40mm	22	B	 Ø8x30mm	06	C	 White Connection	08
----------	---	-----------	----------	--	-----------	----------	---	-----------

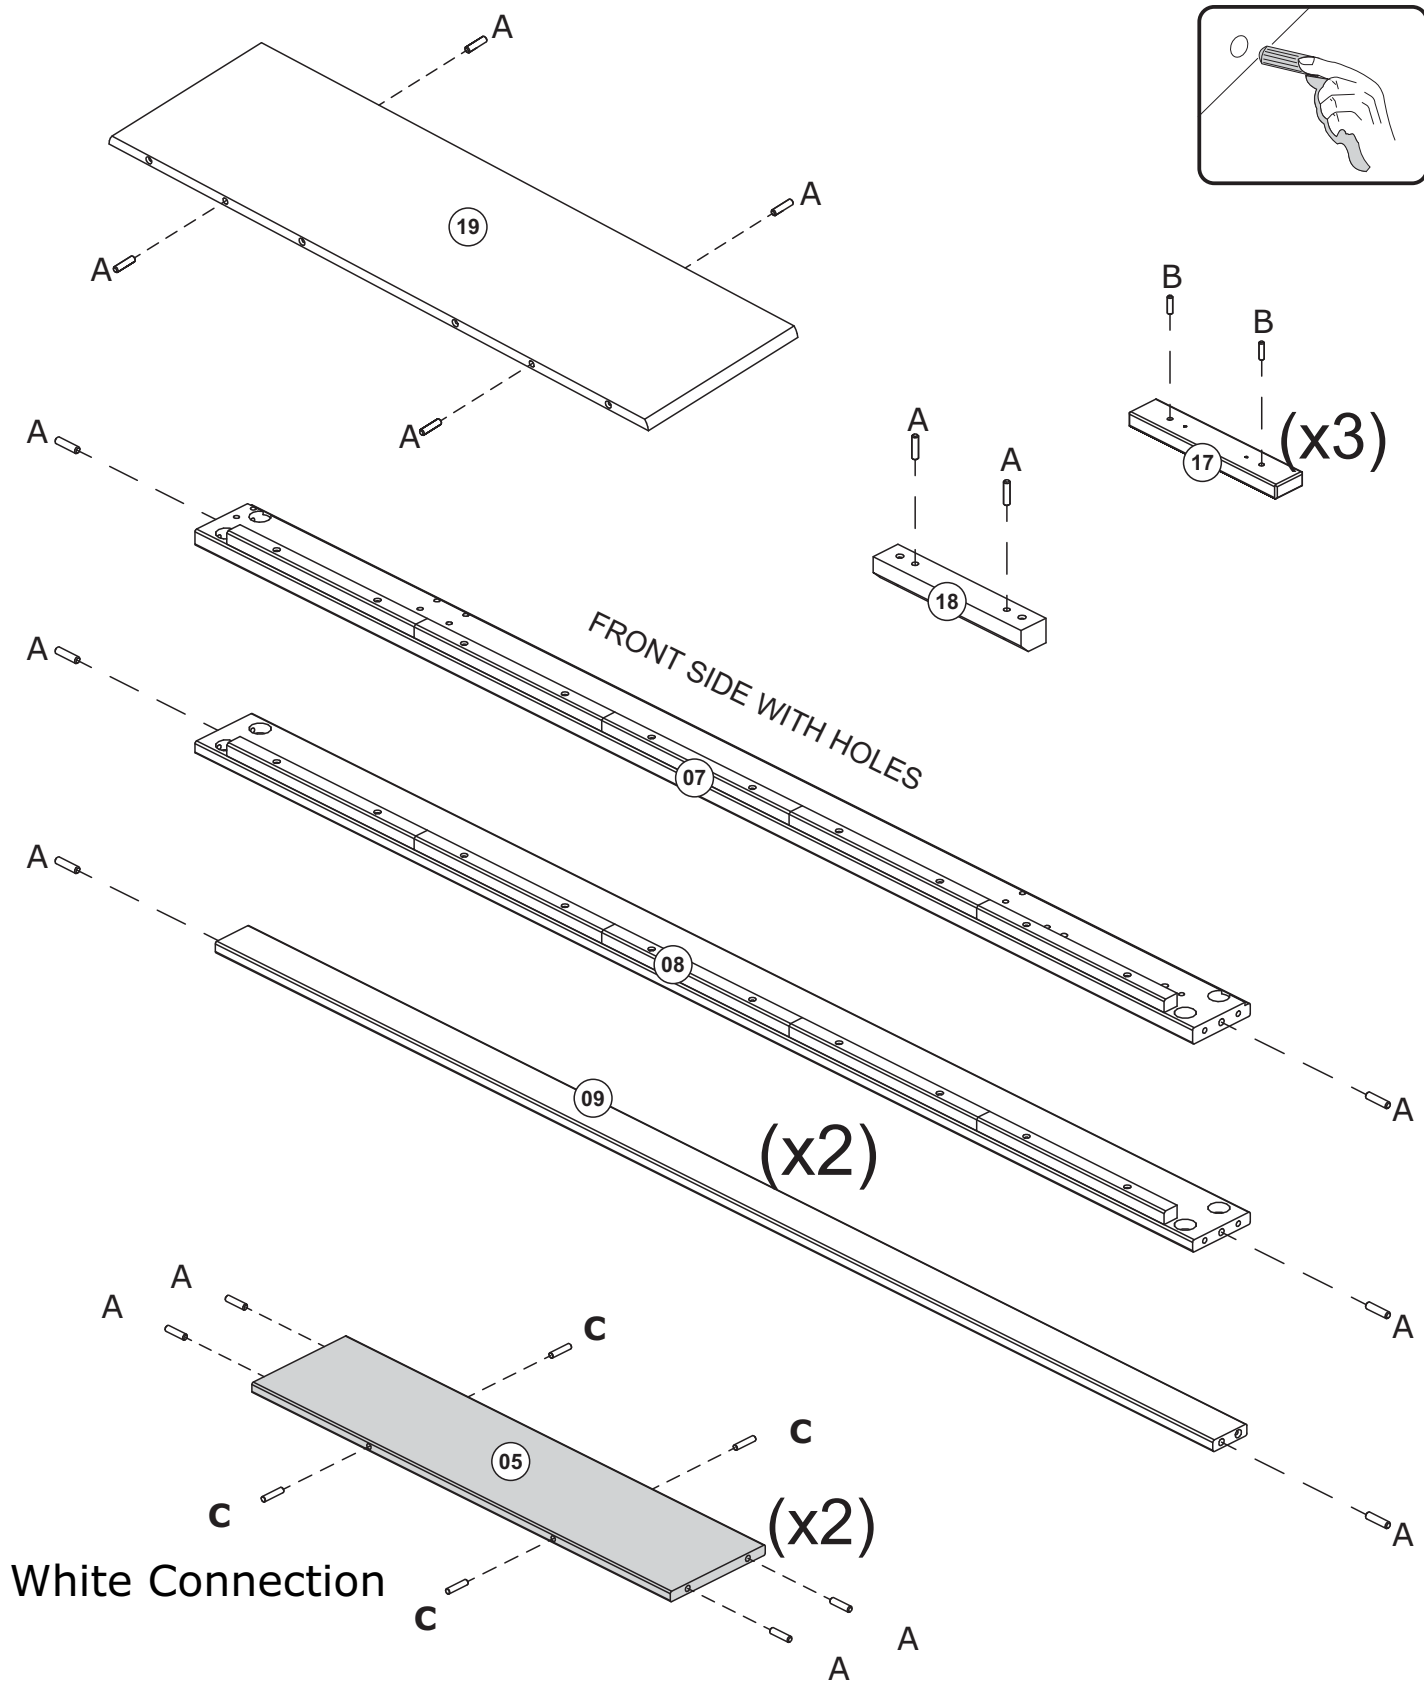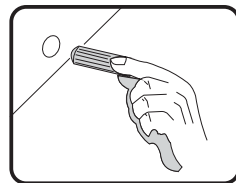




01

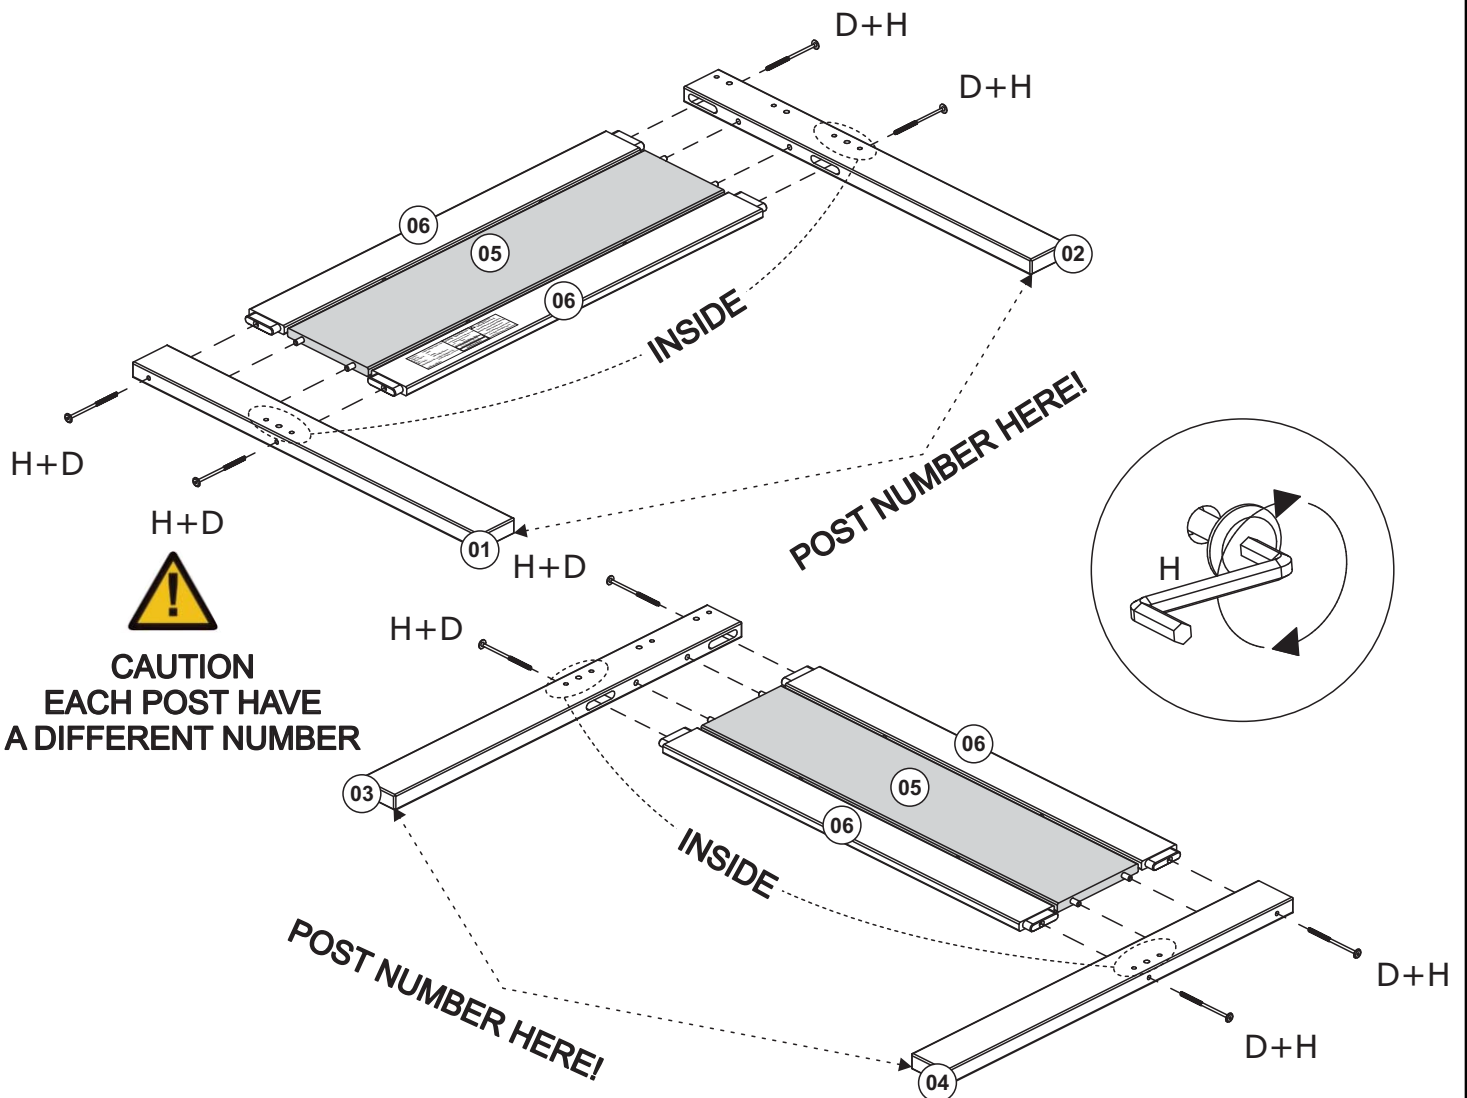

03

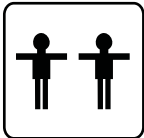


E	 Ø7x70mm	04	H	 4mm	01
G	 1/4x70mm	08	K		08

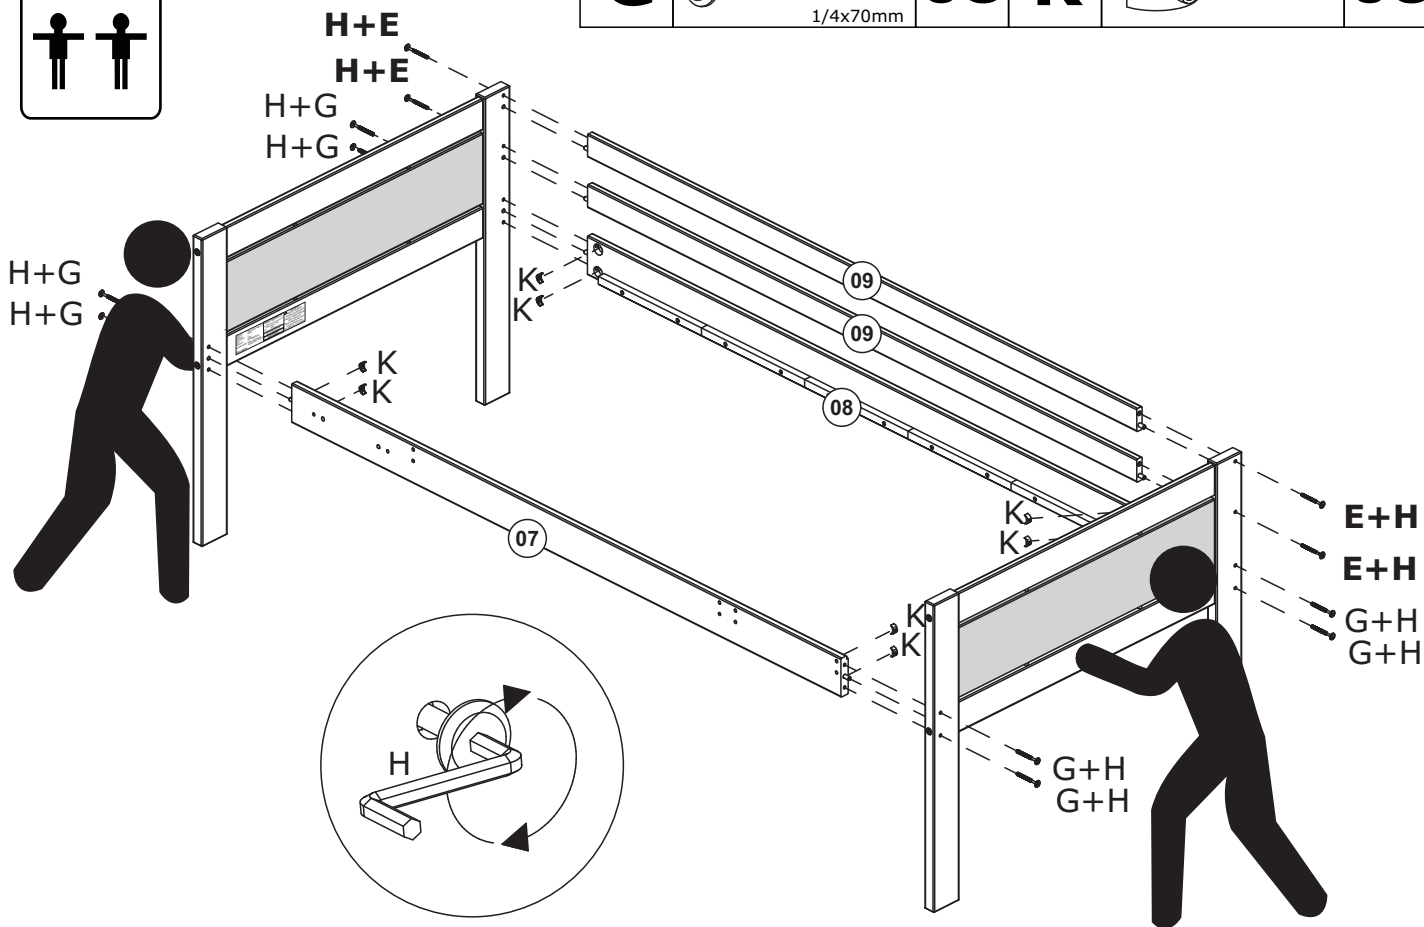


04

A	 Ø10x40mm	07	F	 Ø7x50mm	04	H	 4mm	01
----------	---	-----------	----------	--	-----------	----------	--	-----------


Step 1

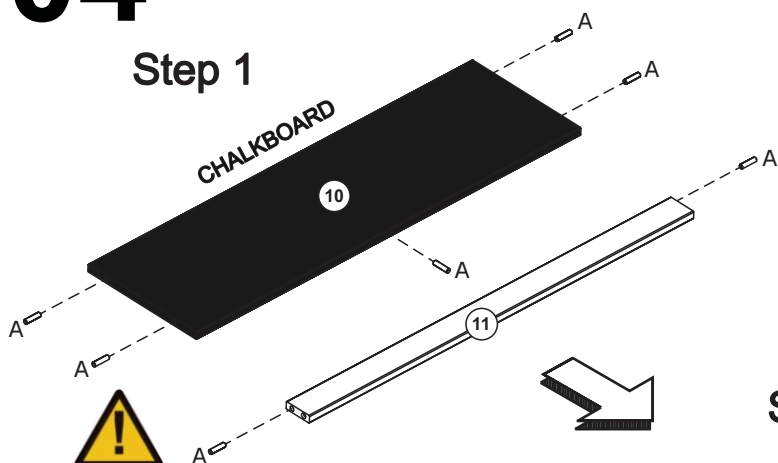


Attention Detail


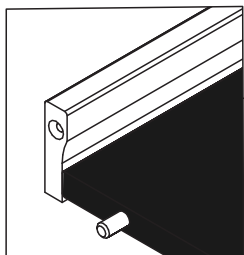



Step 2

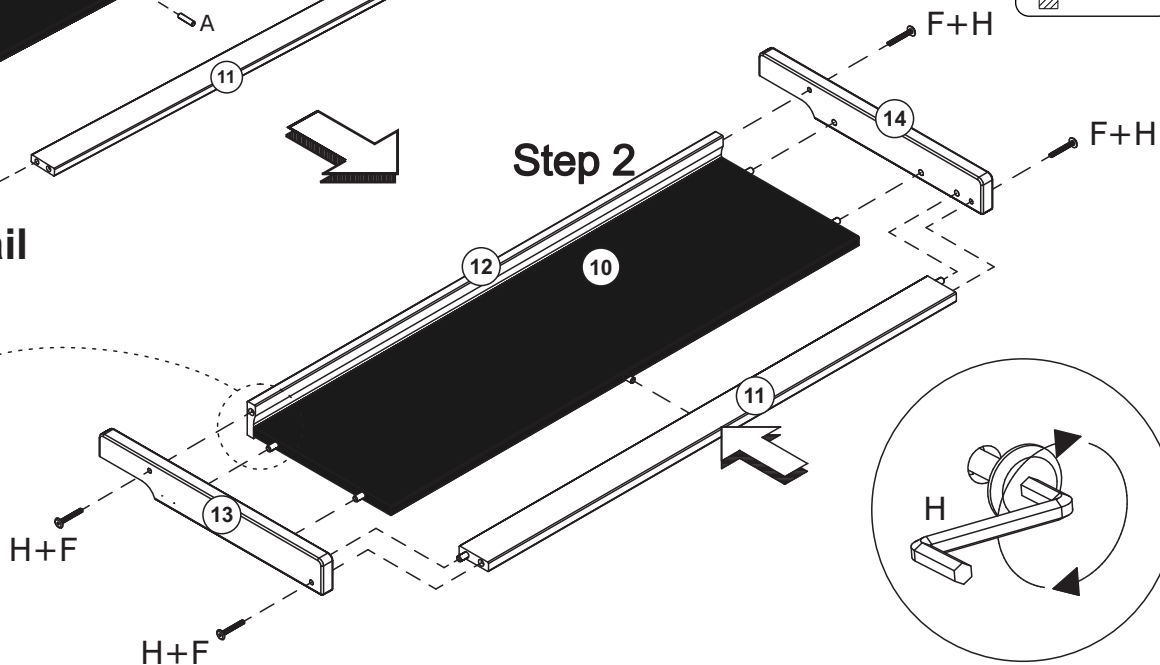

05

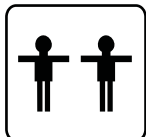




F	 Ø7x50mm	04	H	 4mm	01
----------	---	-----------	----------	---	-----------

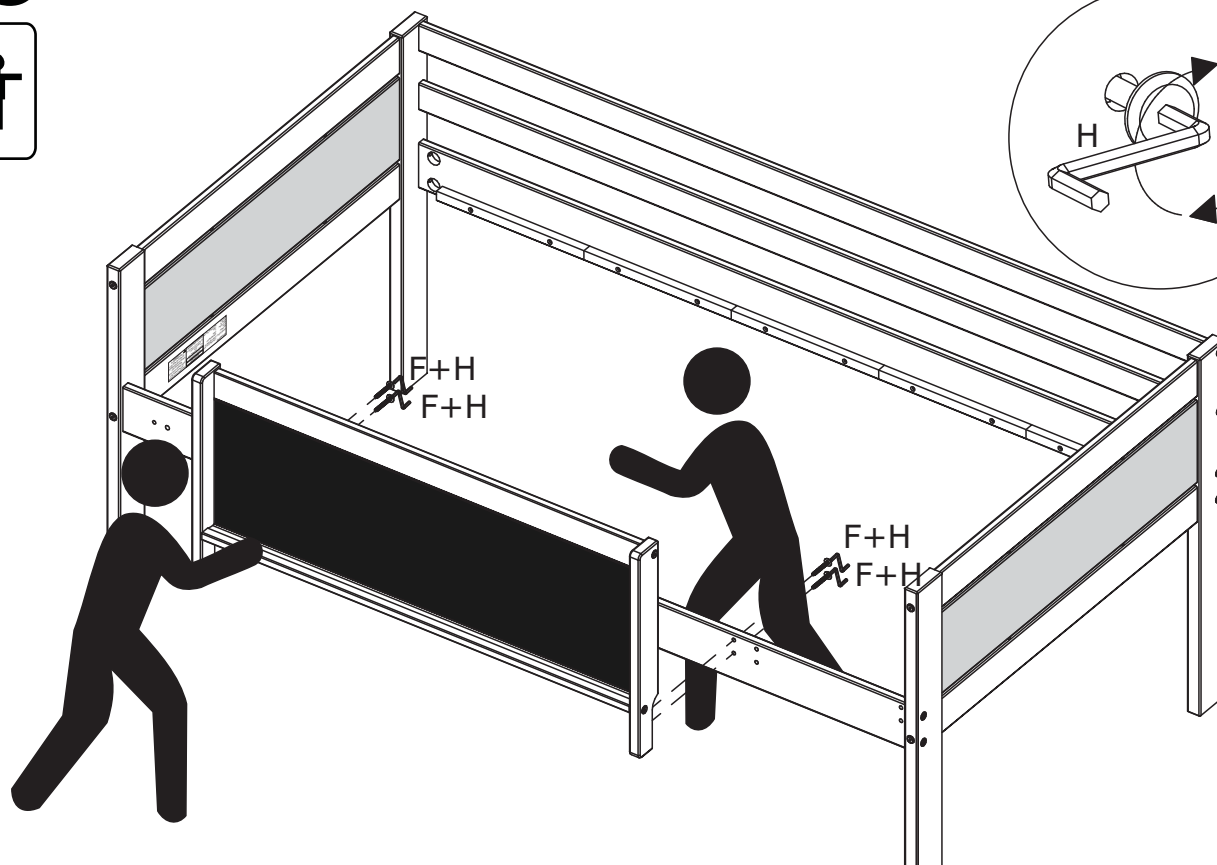


06

ACCESS

H	 4mm	01	I	 Ø7x40mm (Ø13)	08
----------	--	-----------	----------	--	-----------

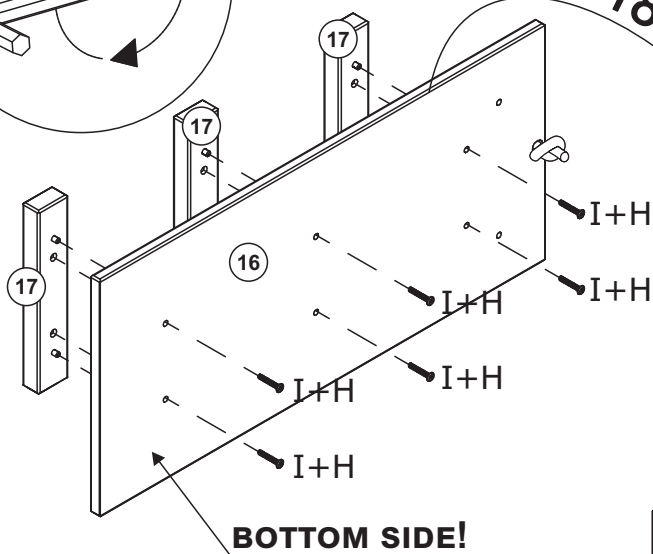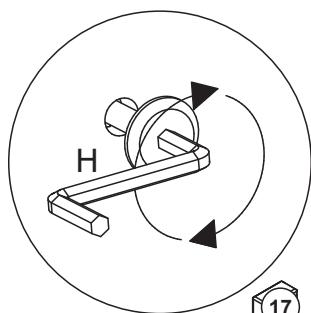


180°

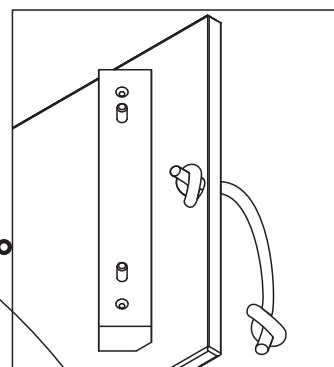



**Attention
Detail**

PRE HOLES

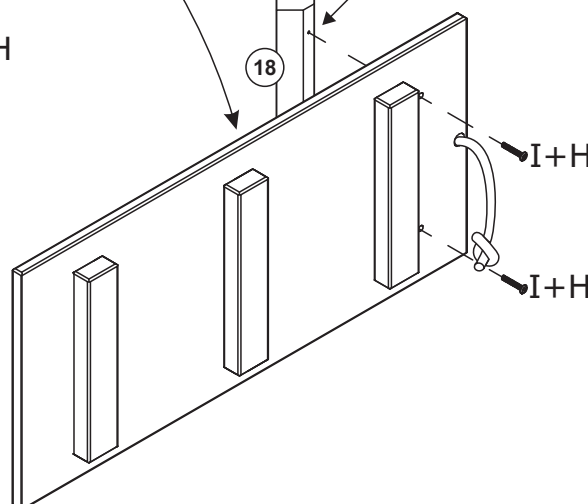

07


F



Ø7x50mm




02

H



4mm

01

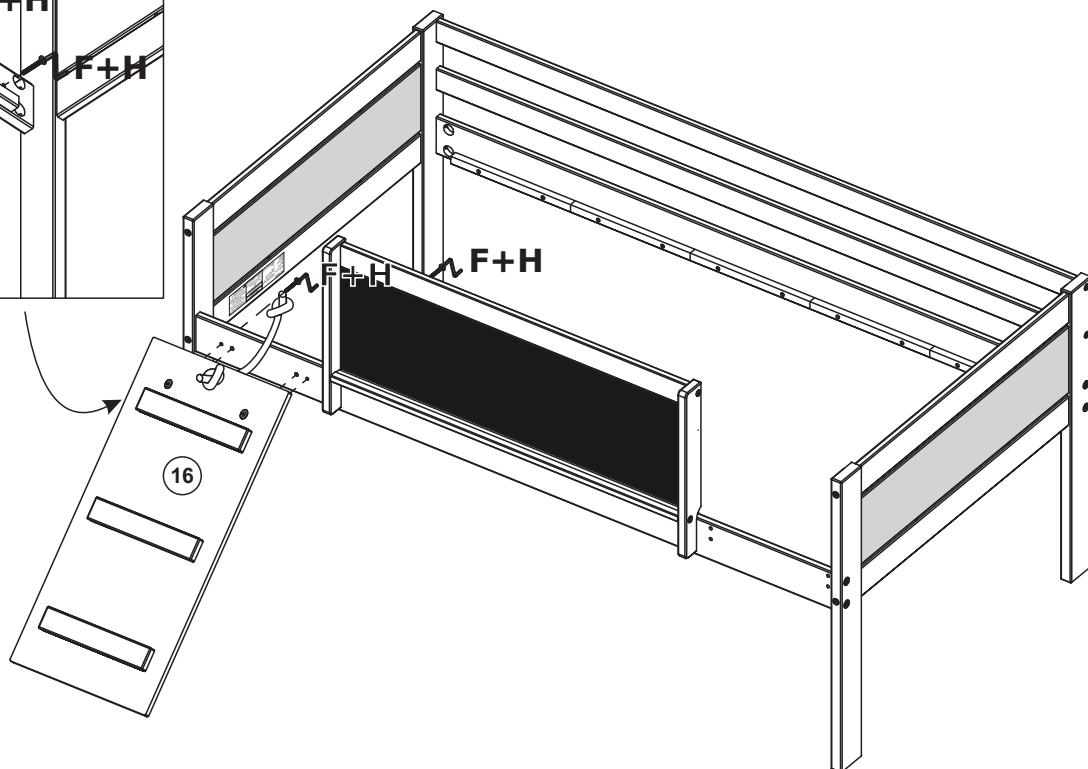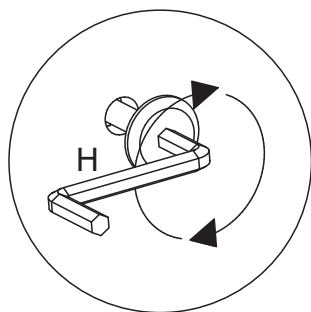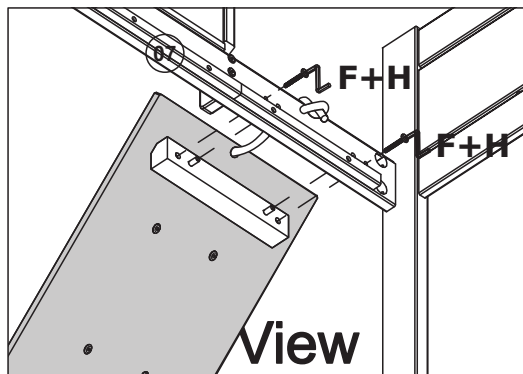

08

SLIDE


F



Ø7x50mm




08

H





4mm

01

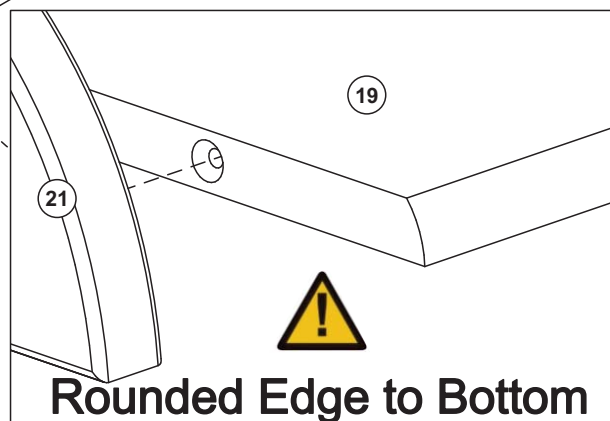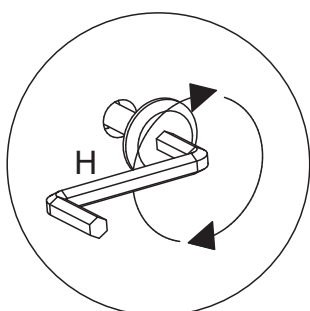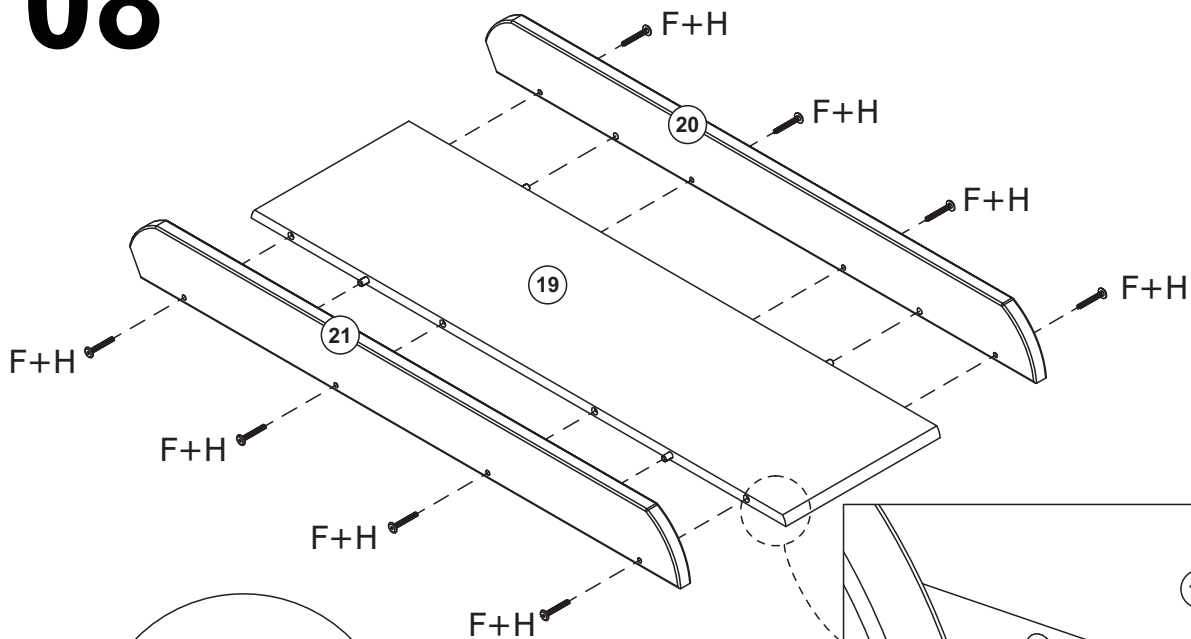


Rounded Edge to Bottom


09

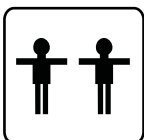
E


Ø7x70mm

04
H


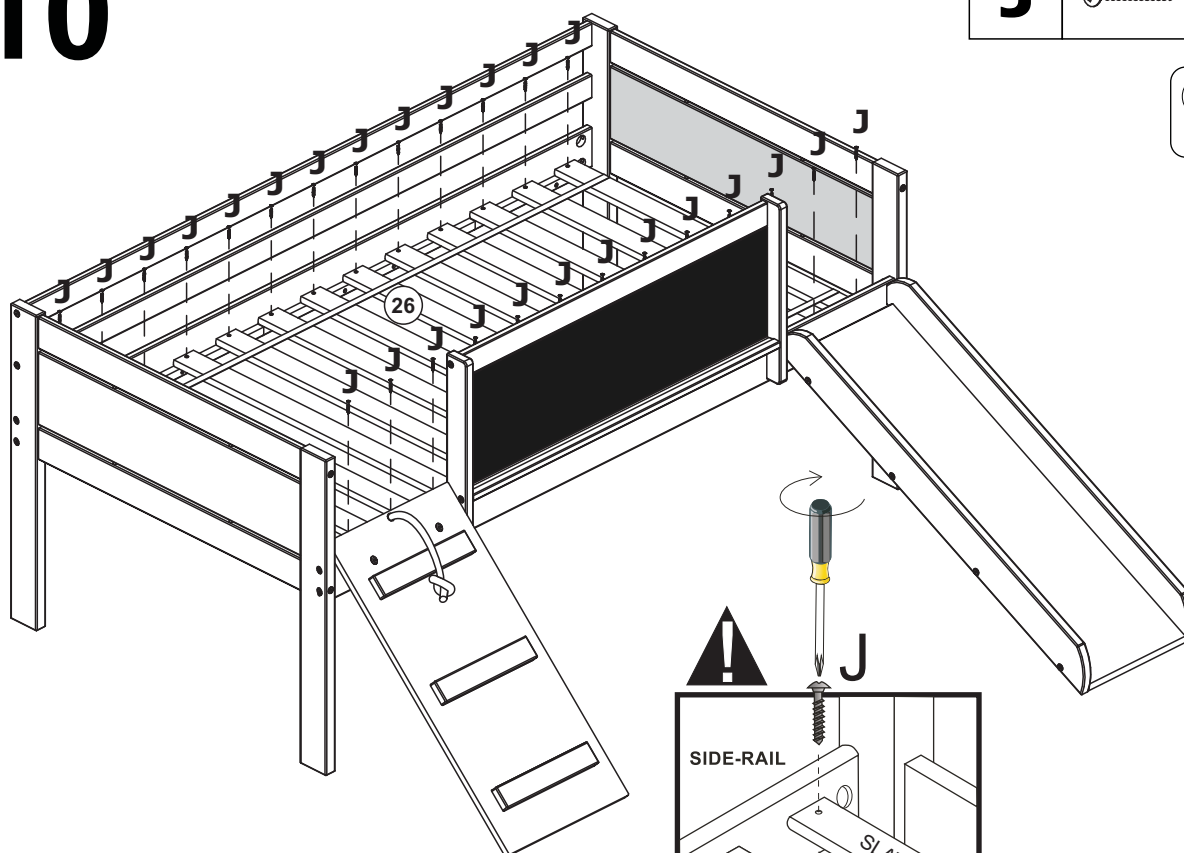

4mm

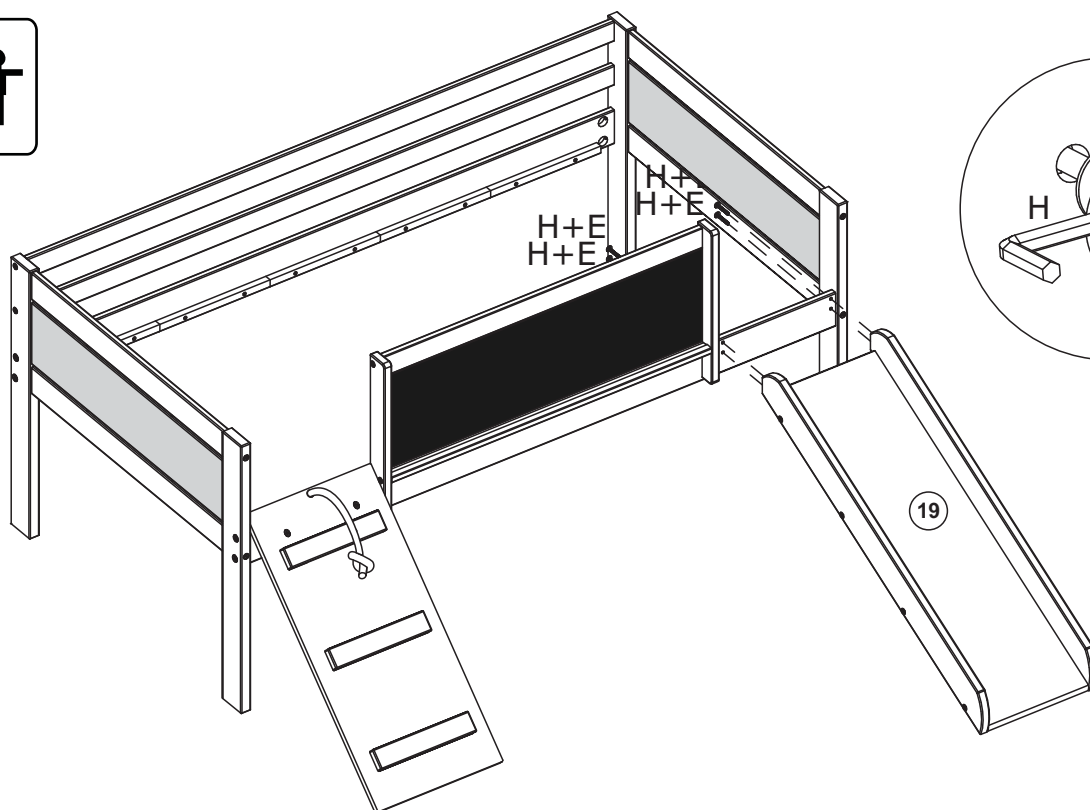01


10

J


Ø4x30mm

26


“INSTALL SLAT KIT WITH SPACER TAPE ON TOP(FACING UP)”



The first slats must be fixed at 3" from each headboard end.



11

J



Ø4x30mm

06

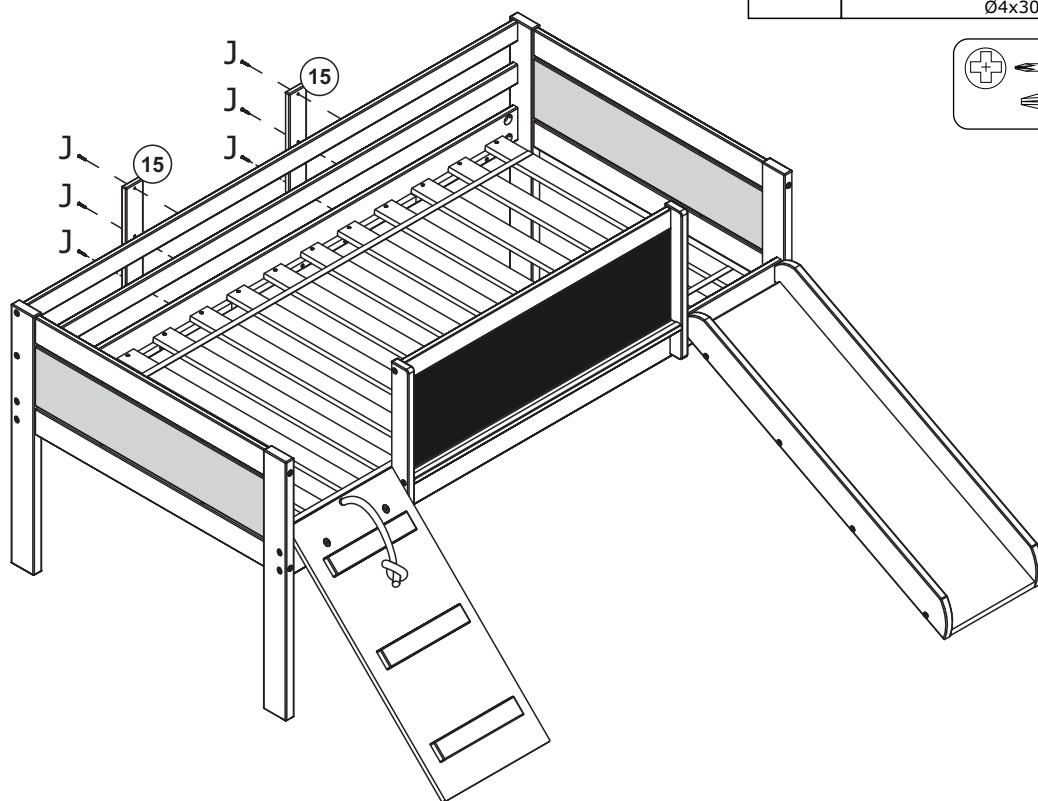

TOY BOX IS OPTIONAL

