


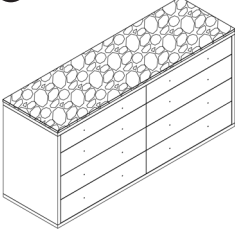




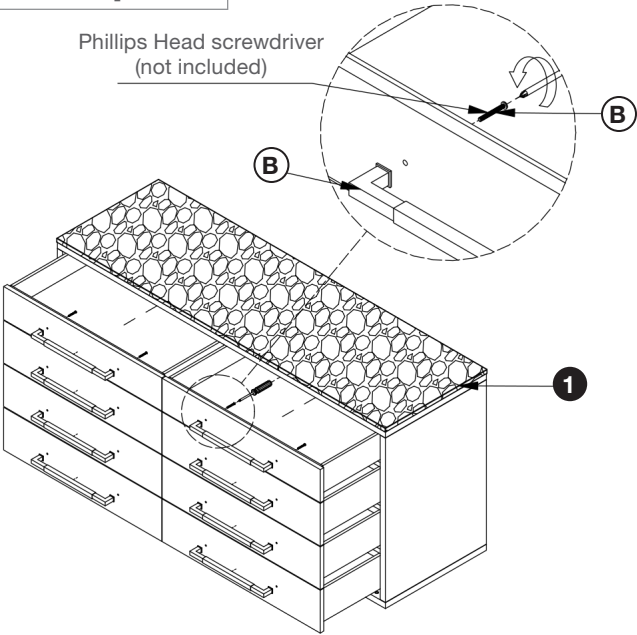
ASSEMBLY INSTRUCTIONS | CAMBRIA 8-DRW DOUBLE DRESSER

HARDWARE CHECKLIST		
A		Bolts M6x20 (12pcs)
B		Handle with screws M4x35 (8pcs)
C		Allen Key (1pc)


PARTS CHECKLIST	
 1pc	 4pcs
	 1pc



Step 1



Step 2

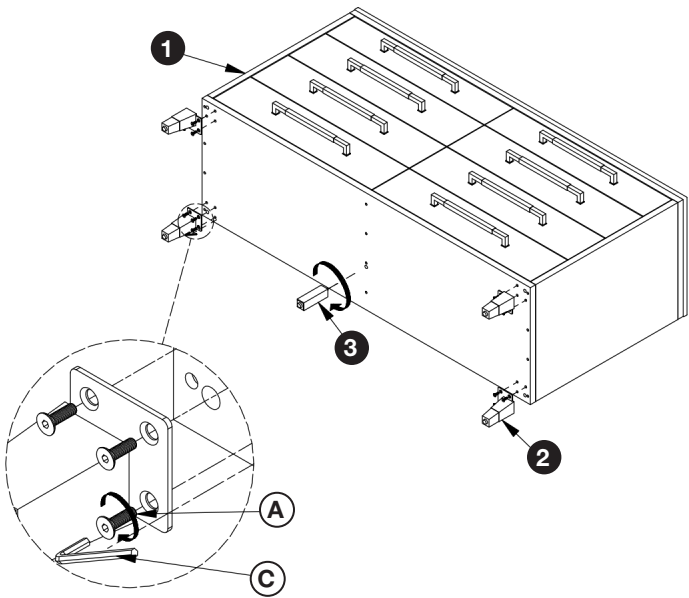

Finish

Adjust levelers as needed

