

## SIMPLE PLATFORM C-KING BED ASSEMBLY INSTRUCTIONS

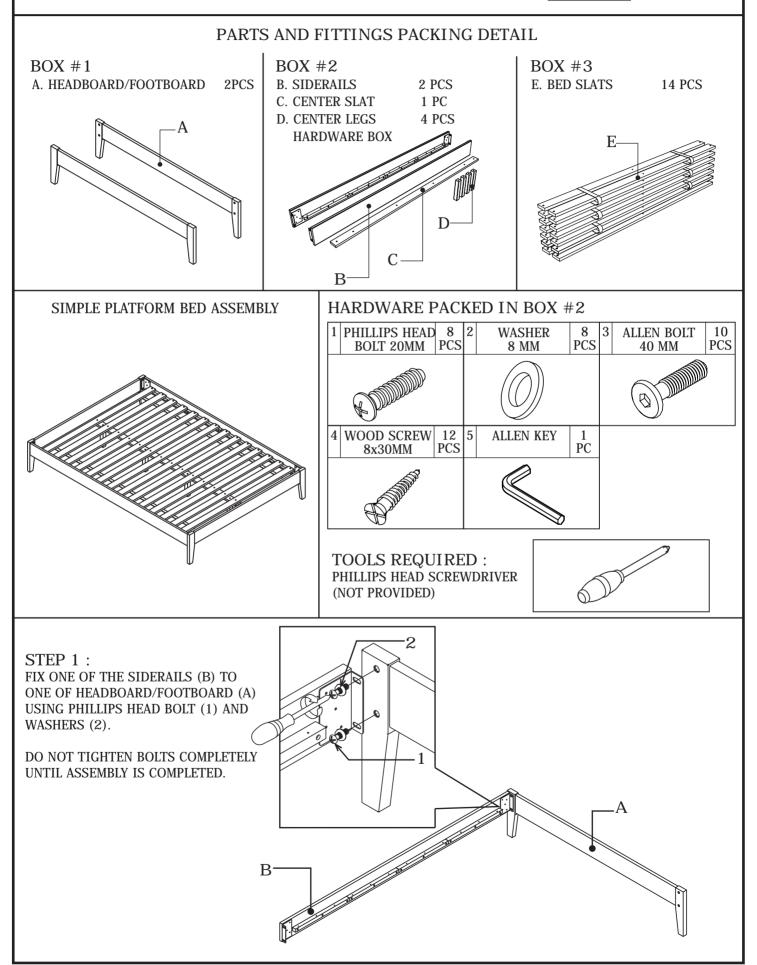

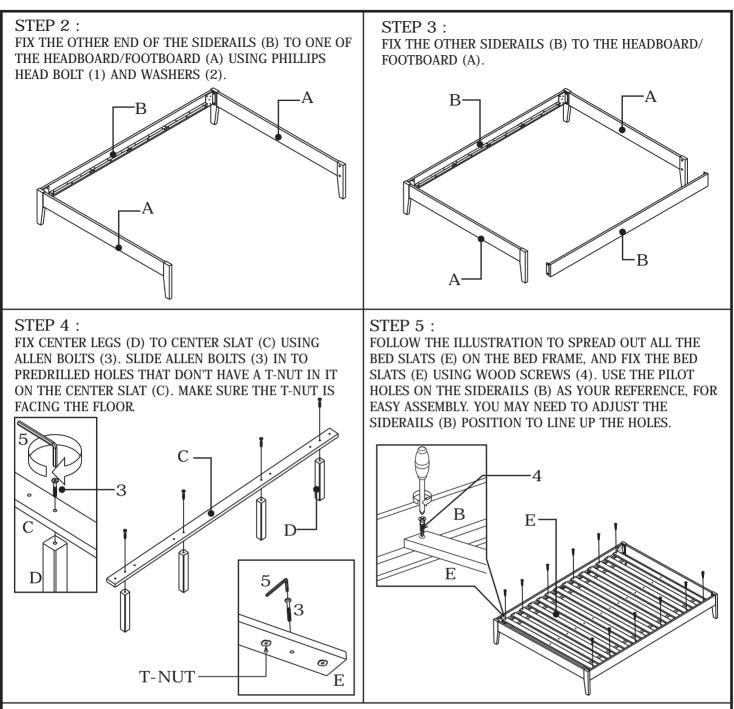



## STEP 6 :

SLIDE IN THE CENTER SLAT (C) UNDER THE BED SLATS (E). USE THE 1ST, 2ND, 5TH, 10TH, 13TH AND 14TH PRE-DRILLED HOLES ON BED SLATS (E) FROM HEADBOARD/FOOTBOARD (A) SIDE. FIX THE CENTER SLAT (C) TO THE BED SLATS (E) BY SLIDING IN THE ALLEN BOLTS (3) THROUGH THE HOLES FROM THE TOP OF BED SLATS (E) TO THE CENTER SLAT (C).

TIGHTEN ALL BOLTS AND SCREWS BEFORE USAGE.

