

ASSEMBLY INSTRUCTION MADE IN CHINA

T650-00A


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

Before you start assembly: Please read all instructions carefully before beginning the assembly process.

It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.


CAUTION: For your safety, this product requires two people to lift.

Assembled Dimensions

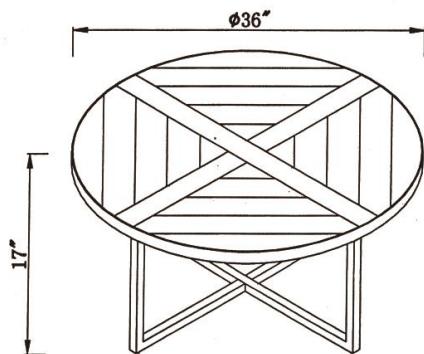

10 MINUTES


APPROXIMATE ASSEMBLY TIME

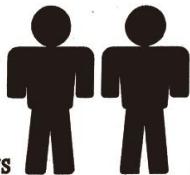

REQUIRED ASSEMBLY SPACE

ITEM NO.: T650-00A

PART LIST

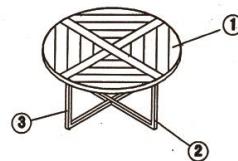

NO.		PART LIST	QTY
(1)		WOOD TABLE TOP	1
(2)		U SHAPE METAL LEG	1
(3)		L SHAPE METAL LEG	2

HARDWARE LIST


	2x		16x		18x		18x		1x		1x
A		B		C		D		E		F	
COUNTER SINK HEX BOLT	$\phi 1/4 \times 3/4"$	FLAT HEAD HEX BOLT	$\phi 1/4 \times 3/4"$	SPRING WASHER	$\phi 1/4"$	FLAT WASHER	$\phi 1/4" \times 16$	4MM	4MM	STRAIGHT HEXAGONAL (FOR POWER DRILL)	

2x 1x


A E

16x 16x 16x 1x

B C D E

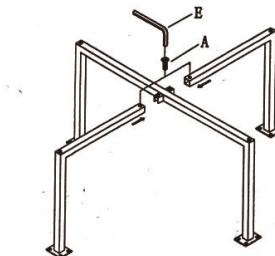

STEP 1

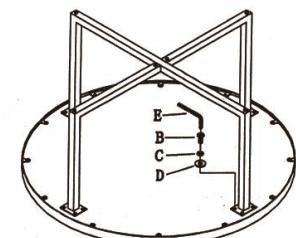

STEP 2

Note: please do not tighten firmly any screw before you put all of them in place.