


Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

Step 1: Remove both drawers

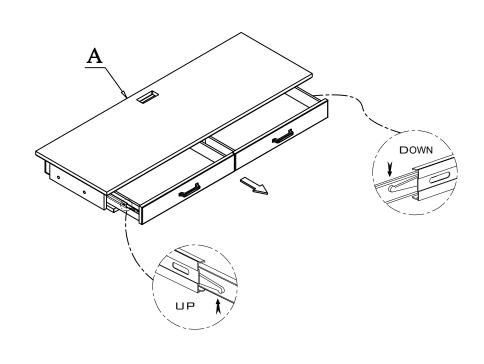


email: info@riverside-furniture.com

Osborne Home Office Assembly Instructions Page 2 of 4


Made in Viet Nam

Step 3: Do not fully tighten the bolts

Step 2: Do not fully tighten the bolts

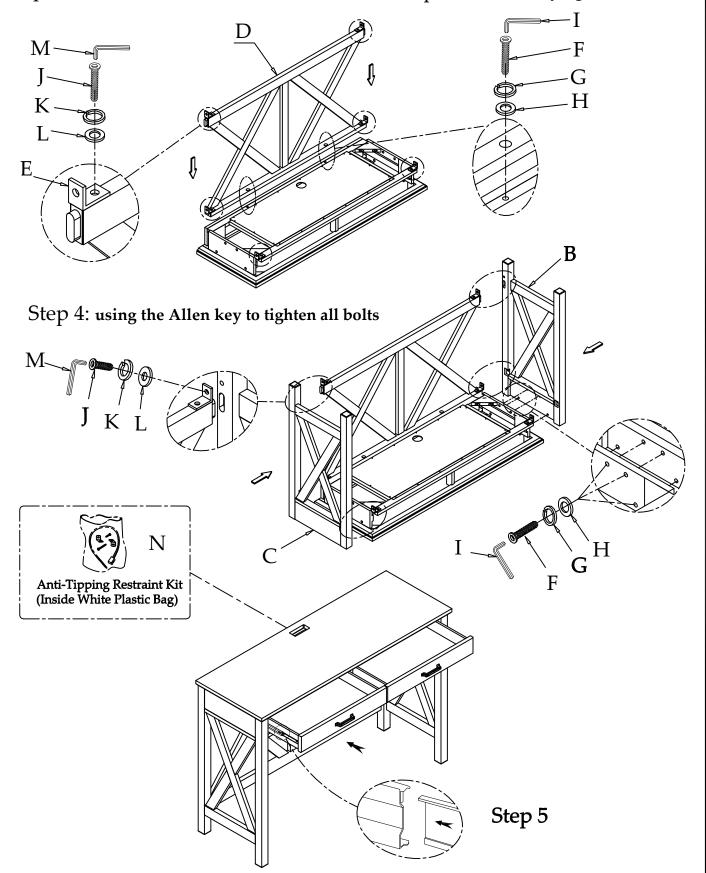

For product and personal safety, Anti-Tip Restraint Kit has been included with this cabinet which can help to minimize the risk of the cabinet accidentally tipping forward, if used and properly installed

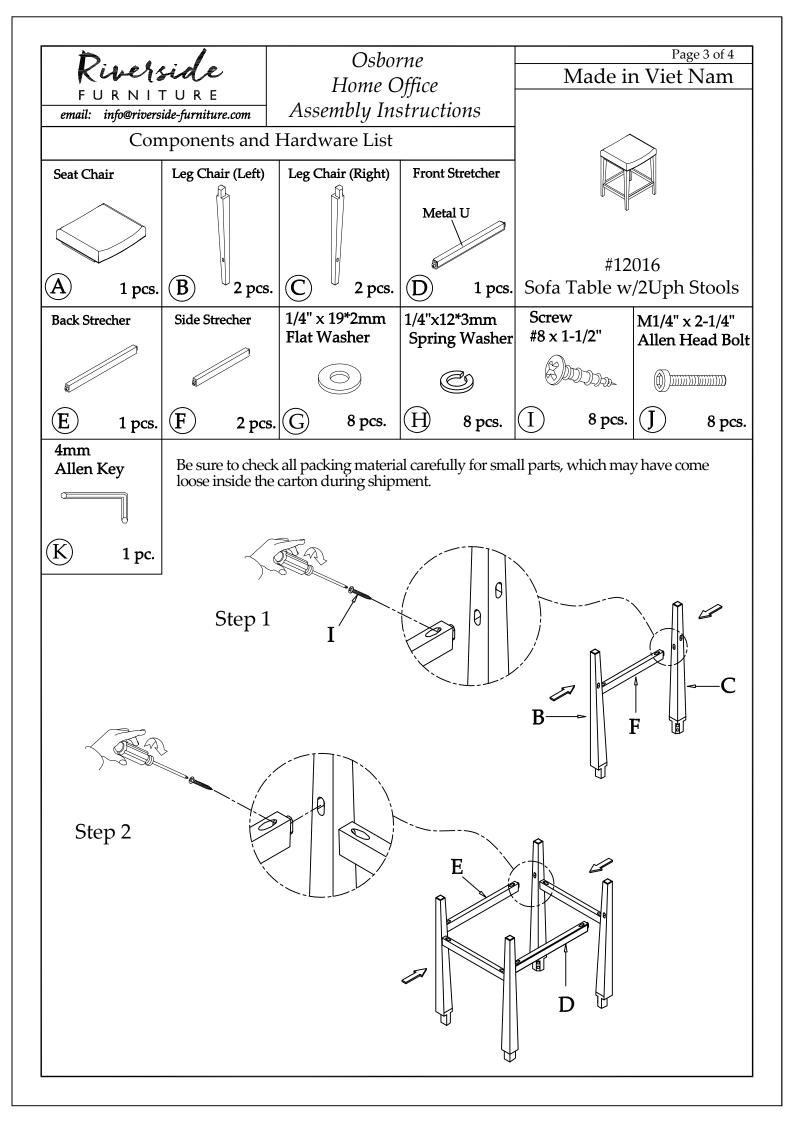


Made in Viet Nam

Riverside

email: info@riverside-furniture.com

Osborne Home Office Assembly Instructions

Step 3

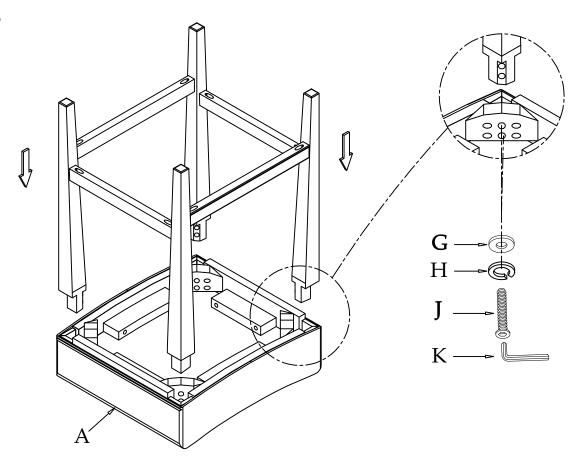

Complete

