

### ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

600536P(B1&B2) Sleeper Sofa Bed

REVISION 0: 07/25/2025

PAGE 1 OF 8

COASTERFURNITURE.COM



### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

### PARTS IDENTIFICATION

#### **B1 (BOX 1)**

BT (BOX T)							
Α	BACKREST		1PC	В	LAF SEAT		1PC
D	BACK CUSHION		1PC	E	PILLOW		2PCS
F	LEG	( <del></del>	2PCS	G	FOOT	<b>©</b>	4PCS
н	CASTER	<b>A</b>	2PCS				
B2 (BOX 2)							

A	BACKREST		1PC	С	RAF SEAT		1PC
D	BACK CUSHION		1PC	E	PILLOW		2PCS
F	LEG		2PCS	G	FOOT	©	4PCS
Н	CASTER	Q	2PCS	I	CONNECTING WIRE	7	1PC
J	ADAPTER		1PC	K	PLUG		1PC

PAGE 2 OF 8

COASTERFURNITURE.COM

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

### **HARDWARE IDENTIFICATION**

#### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 600536P(B1)

1	PAN HEAD SCREW (#8 x 45mm - BLK)		8PCS
2	BOLT (1/4" x 20mm - BLK)		4PCS
3	FLAT WASHER (1/4" x 20mm - BLK)	•	4PCS
4	ALLEN WRENCH (M4 x 70mm - BLK)		1PC
5	BRACKET (M4 x 70mm - BLK)	\	2PCS

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 600536P(B2)

1	PAN HEAD SCREW (#8 x 45mm - BLK)		8PCS
2	BOLT (1/4" x 20mm - BLK)	(g) <b>1738</b>	4PCS
3	FLAT WASHER (1/4" x 20mm - BLK)	•	4PCS
4	ALLEN WRENCH (M4 x 70mm - BLK)		1PC
5	BRACKET (M4 x 70mm - BLK)	<del>\</del>	2PCS


#### NOTE:

Phillips head screw driver is required in the assembly process. However, manufacturer does not provide this item.


### **ASSEMBLY INSTRUCTIONS**



### STEP 1

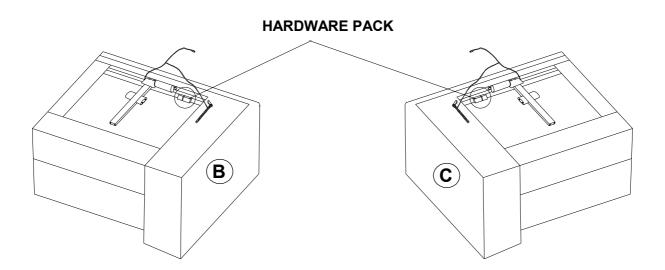

### STEP 2

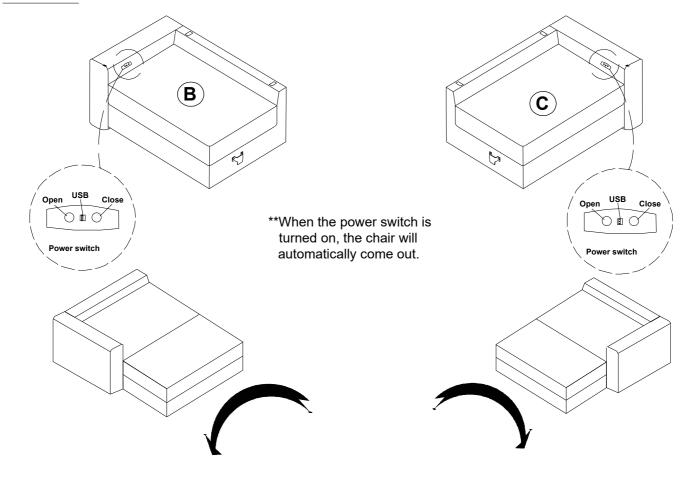


### **ASSEMBLY INSTRUCTIONS**


### STEP 3



COASTERFURNITURE.COM

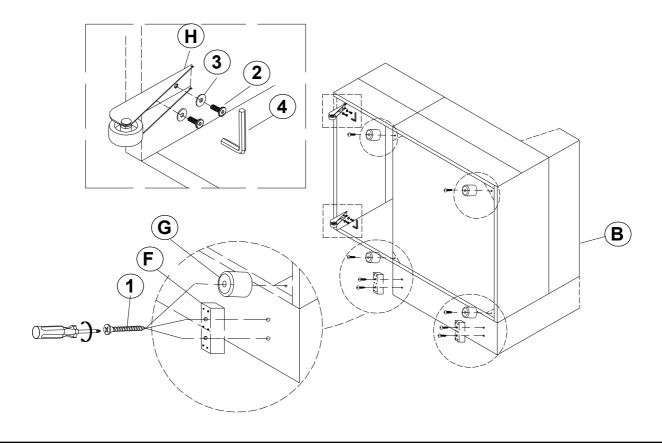

### STEP 4

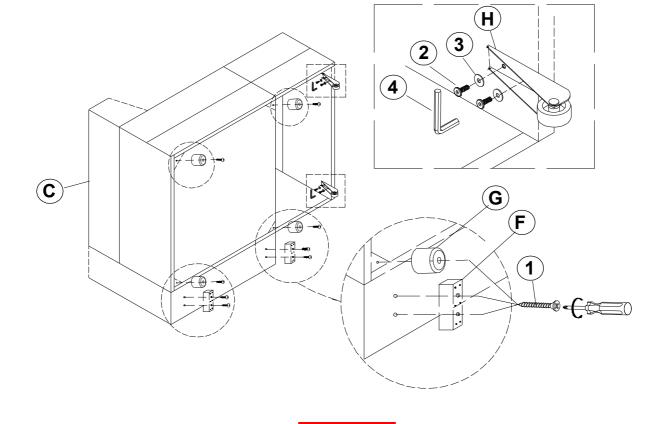


PAGE 5 OF 8


### **ASSEMBLY INSTRUCTIONS**



### STEP 5

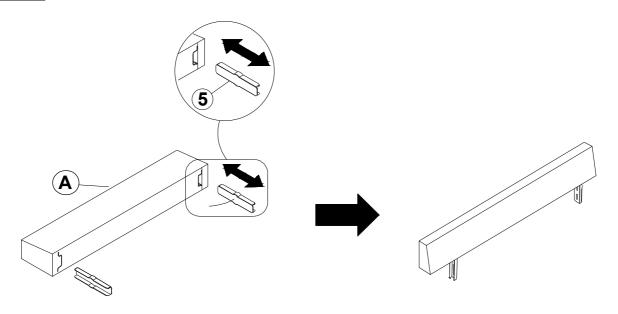


### STEP 6

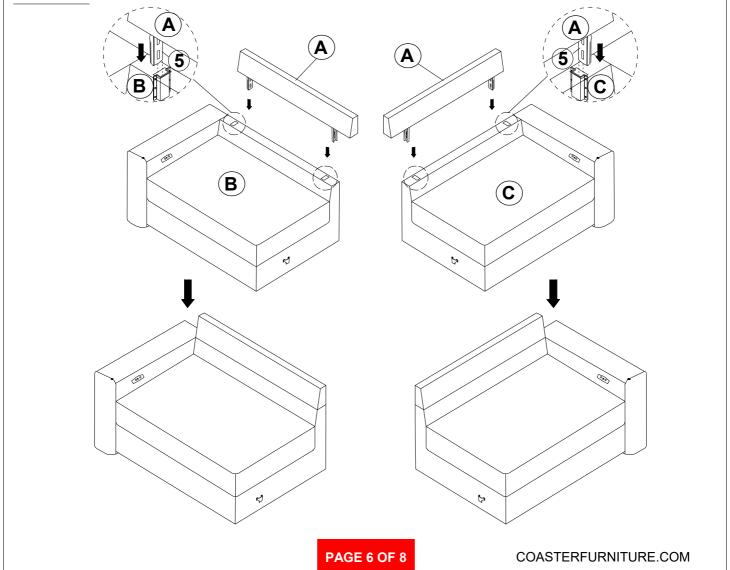


### **ASSEMBLY INSTRUCTIONS**



### STEP 7

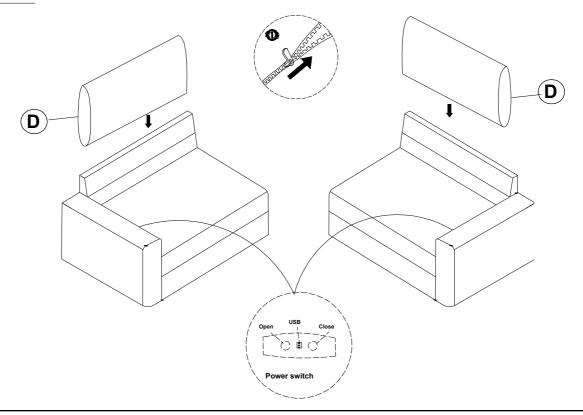


### STEP 8

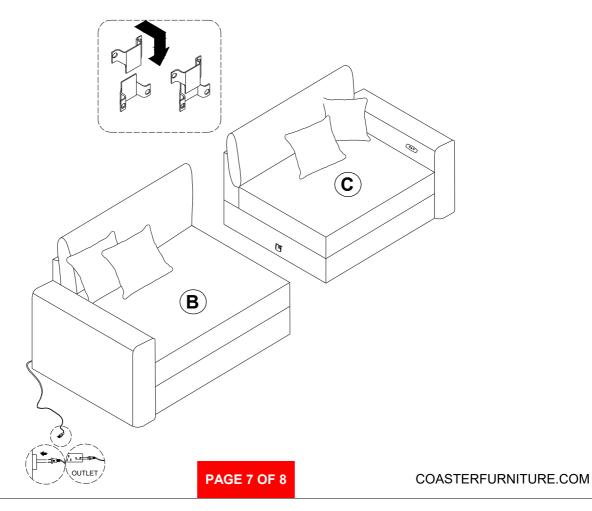

# COASTER


**ASSEMBLY INSTRUCTIONS** 


## STEP 9 COMPLETE

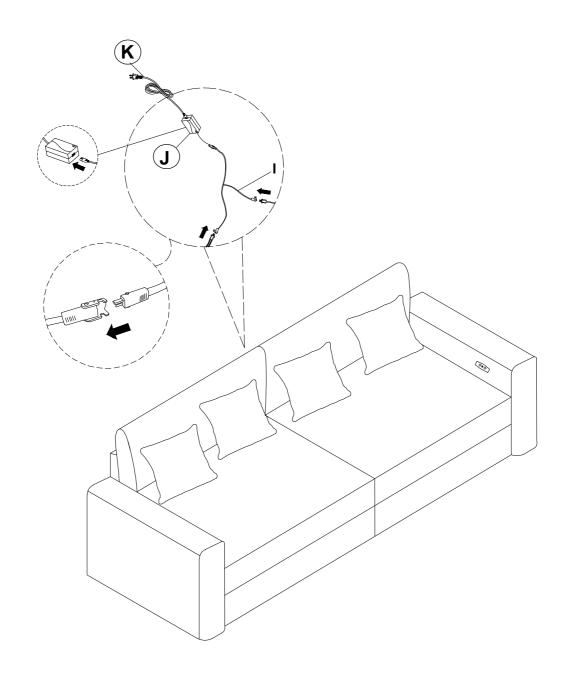





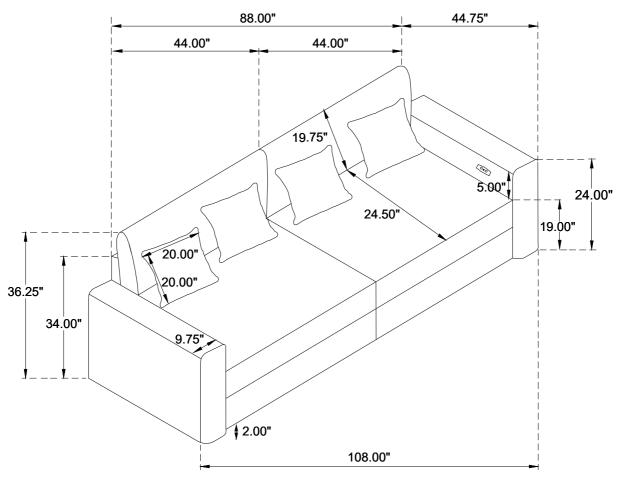

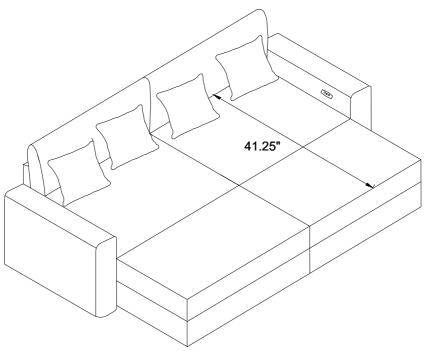

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM