



# ASSEMBLY INSTRUCTIONS

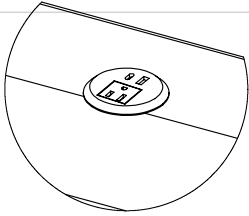

THE POWER STRIP CAN BE REMOVED




## STEP 1: SURFACE PREPARATION

WITH ASSISTANCE, PLACE THE DESK TOP UPSIDE DOWN ON A CLEAN, FLAT, AND PROTECTED SURFACE TO PREVENT DAMAGE.

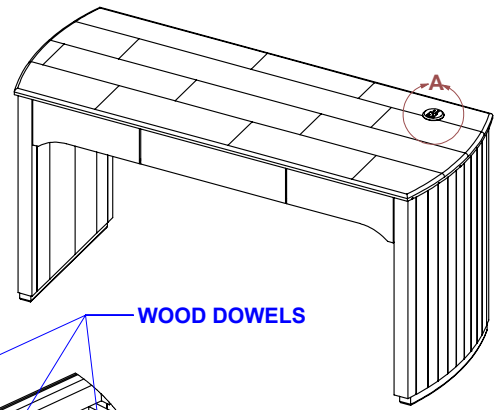

## STEP 2: LEG INSTALLATION

ALIGN THE LEGS WITH THE PREDRILLED HOLES ON THE UNDERSIDE OF THE DESK TOP. INSERT THE 10 x 40 WOODEN DOWELS INTO THE CORRESPONDING HOLES TO GUIDE AND REINFORCE THE JOINT, AS SHOWN IN PICTURE B.

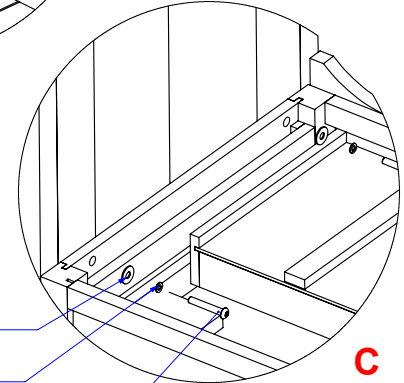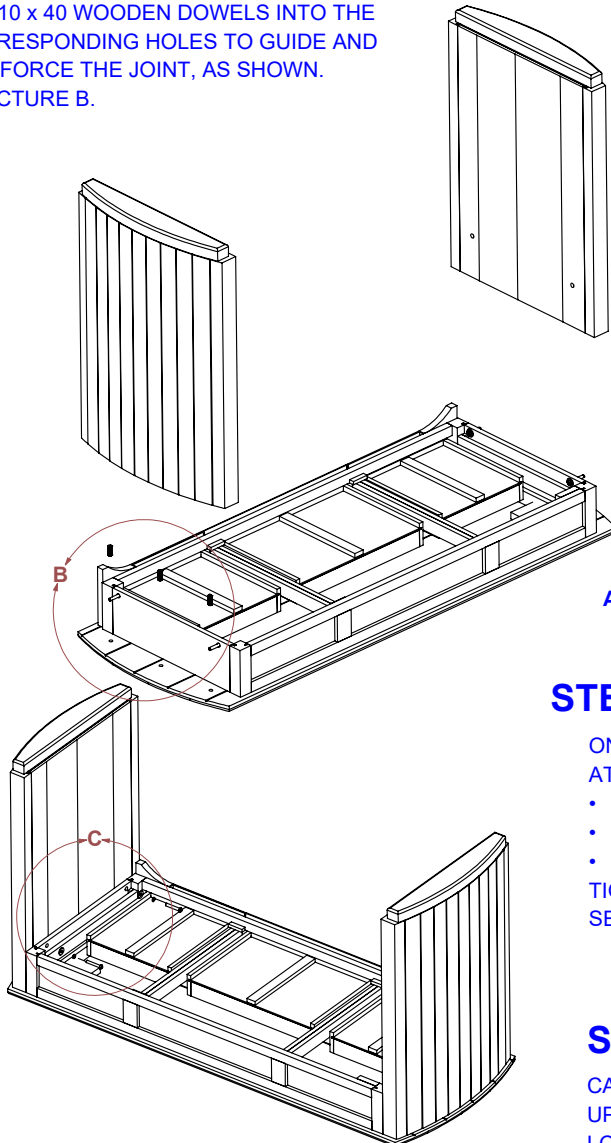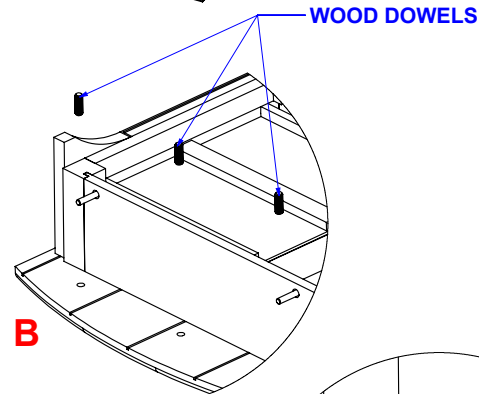

FLAT WASHER 5/16"

LOCK WASHER 5/16"

ALLOY BUTTON SOCKET CAP SCREW  
5/16 x 1-1/2"

## STEP 3: MECHANICAL FASTENING

ONCE THE LEGS ARE IN PLACE, INSERT THE FOLLOWING HARDWARE AT EACH ATTACHMENT POINT:

- 5/16" x 1-1/2" ALLOY BUTTON SOCKET CAP SCREW
- 5/16" FLAT WASHER
- 5/16" LOCK WASHER

TIGHTEN EACH SCREW USING THE 3/16" HEX KEY, ENSURING A SECURE CONNECTION AS SHOWN IN PICTURE C.

## STEP 4: FINAL POSITIONING

CAREFULLY TURN THE DESK OVER TO ITS UPRIGHT POSITION. MOVE IT TO YOUR DESIRED LOCATION.



DESCRIPTION	#
ALLOY BUTTON SOCKET CAP SCREW 5/16 X-1/2"	4
LOCK WASHER 5/16"	4
FLAT WASHER 5/16"	4
WOOD DOWELS 10 X 40	6
HEX KEY 3/16"	1

I-DSK-E019