
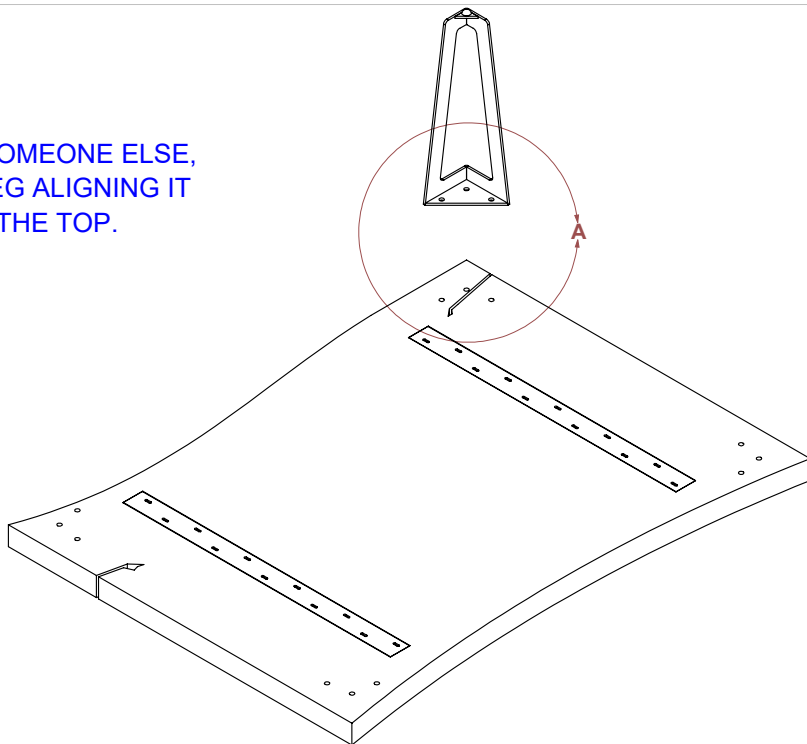



STEP 1

WITH THE HELP OF SOMEONE ELSE, PLACE THE METAL LEG ALIGNING IT WITH THE HOLES AT THE TOP.

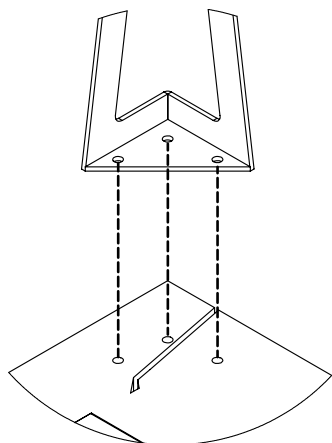


STEP 2

PLACE THE 5/16 X 1-1/2" SCREWS, ALIGNING THEM WITH THE HOLES IN THE TOP.

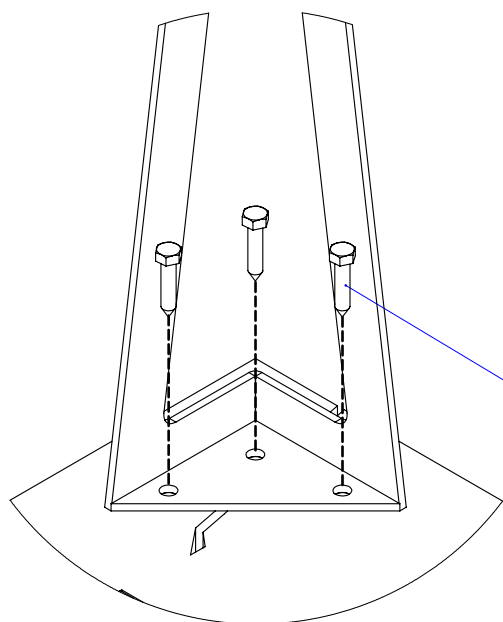

WOOD SCREW
5/16" X 1-1/2

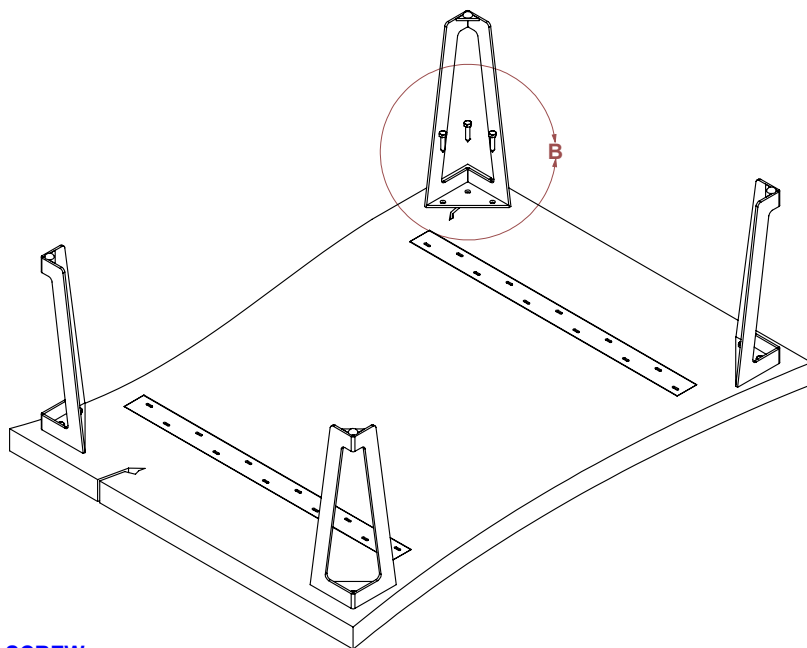

STEP 3

AS A FINAL STEP, TURN THE TABLE AND PLACE IT IN THE DESIRED LOCATION.



ASSEMBLING
INSTRUCTIONS

I-MIX-E014

DESCRIPTION	#
WOOD SCREW 5/16" X 1-1/2	12

ITEM	DESCRIPTION	#
1TOR109	TORNILLO PIJA MADERA 5/16" X 1-1/2	12
RECUERDA QUE SE TIENE QUE PINTAR EL TORNILLO DE URBAN MATE		



ASSEMBLING
INSTRUCTIONS

I-MIX-E014