

ASSEMBLY INSTRUCTIONS

**MODEL : KATE
KING BED (4 + 8)**

(Box 1)
BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs
D	Bed Slat	4 pcs
E	Bed Slat Support	8 pcs


(Box 2)
BOX OF SIDE RAIL

No	ITEM	Qty
F	Side Rail	2 pcs


(Box 1)
HARDWARE LIST

No	ITEM	Qty
1	Csk M4 x 32mm	8 pcs
2	JCBC M6 x 30mm	6 pcs
3	SPRING WASHER 1/4" Rbw	6 pcs
4	Flat Washer 1/4" ID x 13mm OD Blk	6 pcs
5	ALLEN KEY m4x65mm Blk	1 pc


STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT (2) with Spring Washer (3), Flat washer (4) and securing with ALLEN KEY (5).

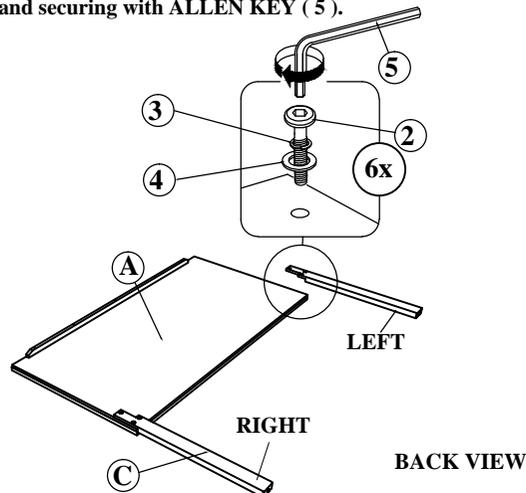

STEP 2 : Hook SIDE RAIL (F) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).

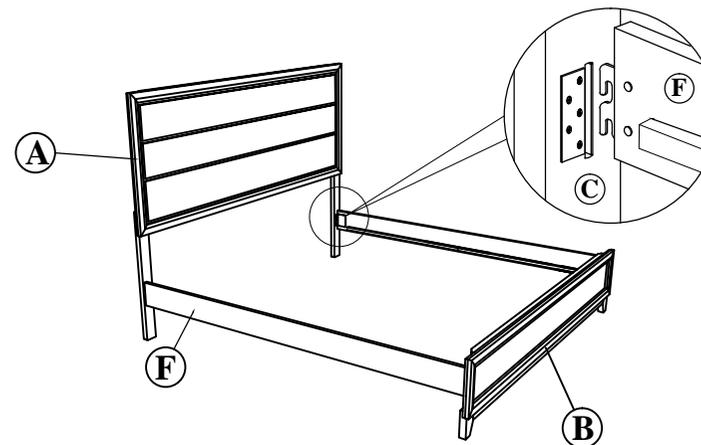

STEP 3 : Fix the Bed Slats Support (E) to Bed Slats (D) as Shown and fix the Bed Slats to Side Rail (F) by using CSK Screw (1). Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

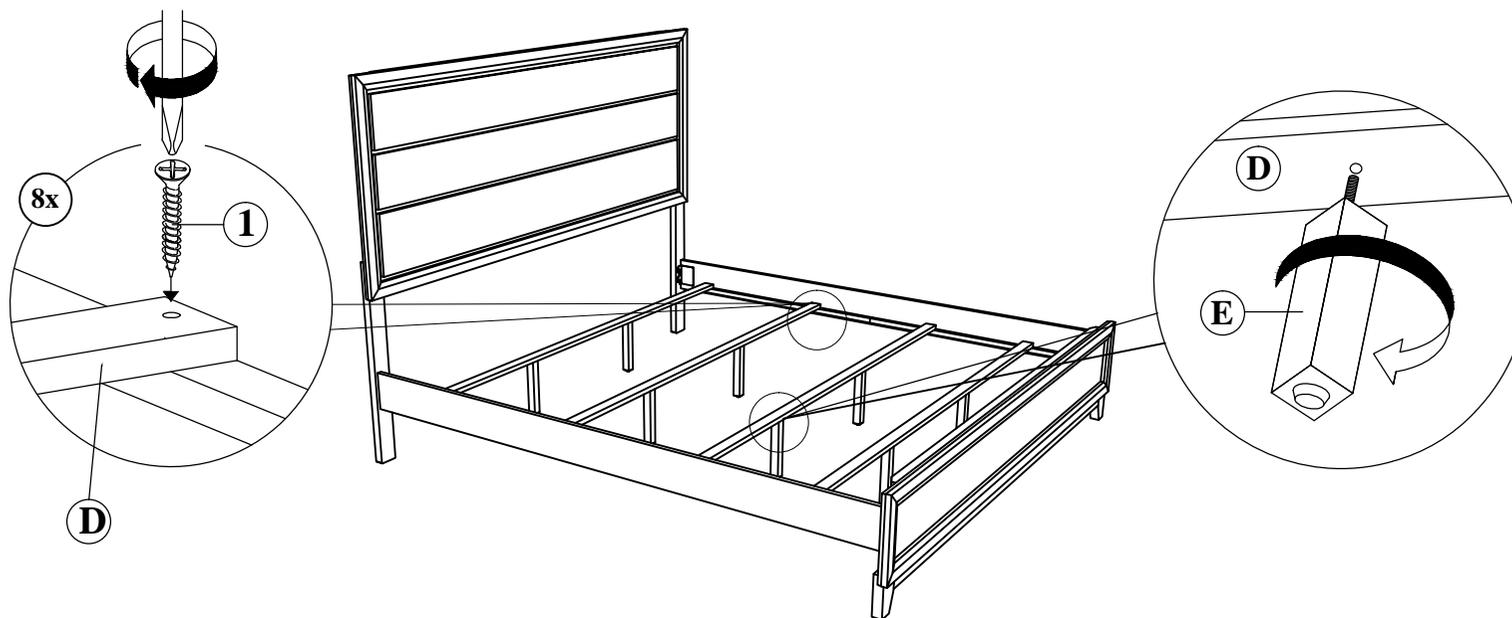

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

MODEL : KATE
QUEEN & FULL BED (4 + 4)

(Box 1)
BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs
D	Bed Slat	4 pcs
E	Bed Slat Support	4 pcs


(Box 2)
BOX OF SIDE RAIL

No	ITEM	Qty
F	Side Rail	2 pcs


(Box 1)
HARDWARE LIST

No	ITEM	Qty
1	Csk M4 x 32mm	8 pcs
2	JCBC M6 x 30mm	6 pcs
3	SPRING WASHER 1/4" Rbw	6 pcs
4	Flat Washer 1/4" ID x 13mm OD Blk	6 pcs
5	ALLEN KEY m4x65mm Blk	1 pc


STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT (2) with Spring Washer (3), Flat washer (4) and securing with ALLEN KEY (5).

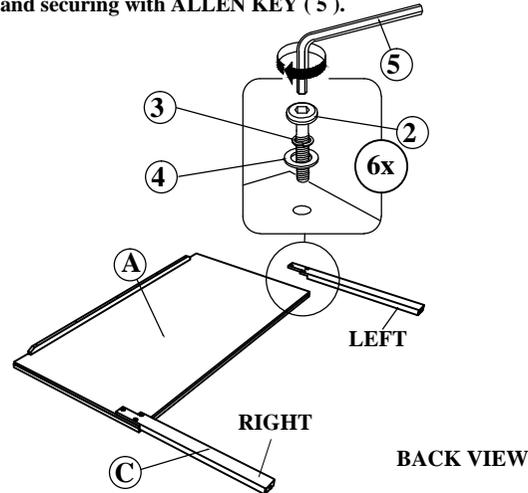

STEP 2 : Hook SIDE RAIL (F) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).

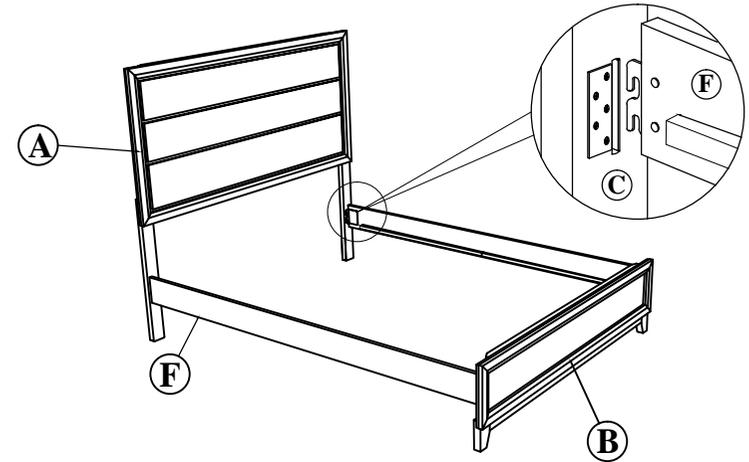

STEP 3 : Fix the Bed Slats Support (E) to Bed Slats (D) as Shown and fix the Bed Slats to Side Rail (F) by using CSK Screw (1). Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

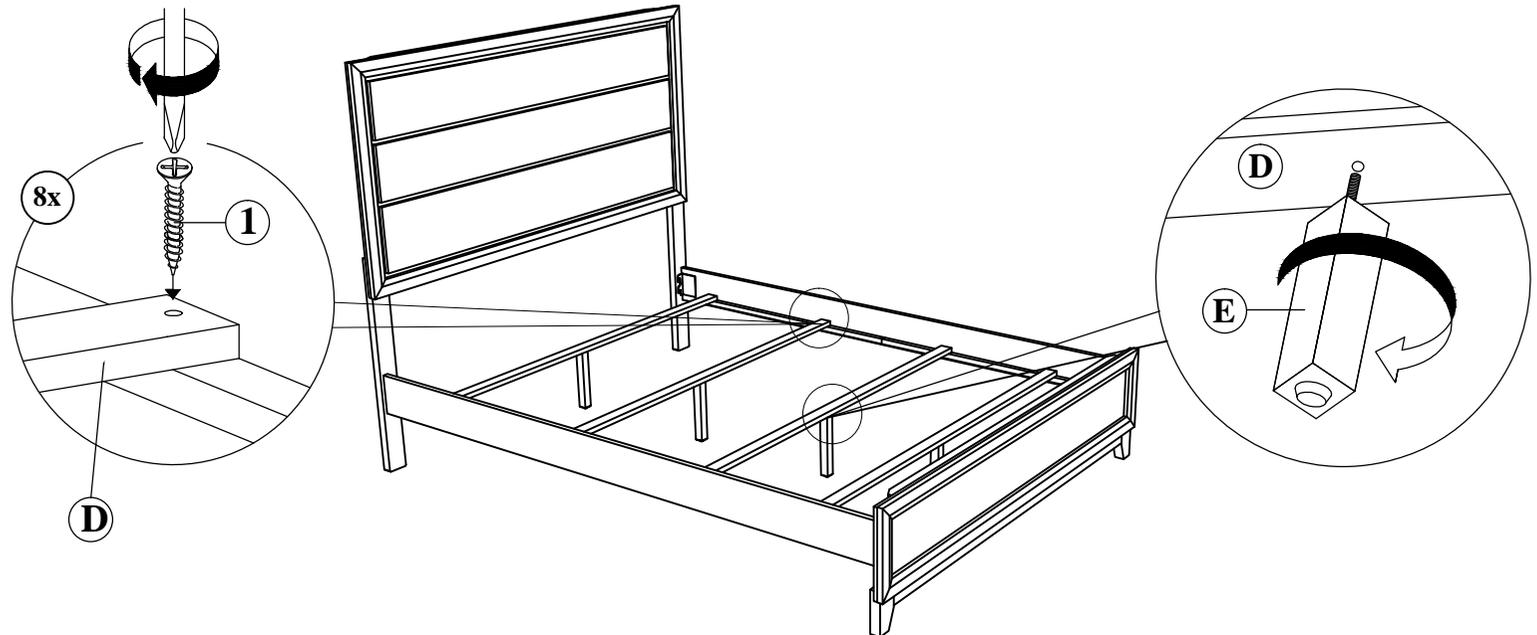


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


ASSEMBLY INSTRUCTIONS

**MODEL : KATE
NIGHT STAND**

STEP 1 : Pull the top drawer and take out the Bunfoot carton (B). Attach the Bunfoot (B) at the bottom Night Stand (A) used JCBC (1)with Spring Washer (2) Flat Washer (3) and Tighten with Allen Wrench (4).

(Box 1)
BOX OF NIGHT STAND

No	ITEM	Qty
A	NIGHT STAND 	1 pc
B	BUN FOOT 	4 pcs

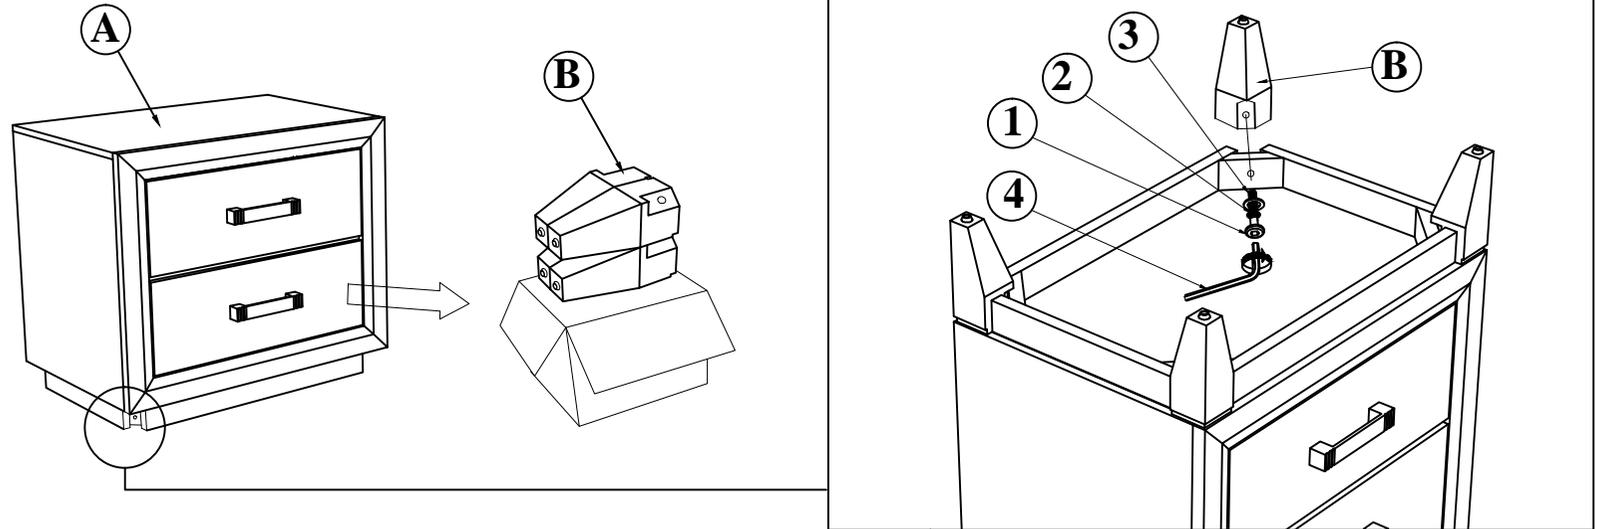

(Box 1)
HARDWARE LIST

No	ITEM	Qty
1	JCBC M8 x 50mm 	4 pcs
2	SPRING WASHER 5/16" Rbw 	4 pcs
3	Flat Washer 5/16" ID x 22mm OD Blk 	4 pcs
4	ALLEN KEY m5x65mm Blk 	1 pc




COMPLETED ASSEMBLY


NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

**MODEL :
KATE CHEST**

STEP 1 : Pull the top drawer and take out the Bunfoot carton (B). Attach the Bunfoot (B) at the bottom Chest (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and Tighten with Allen Wrench (4).

(Box 1) BOX OF CHEST		
No	ITEM	Qty
A	CHEST 	1 pc
B	BUN FOOT 	4 pcs

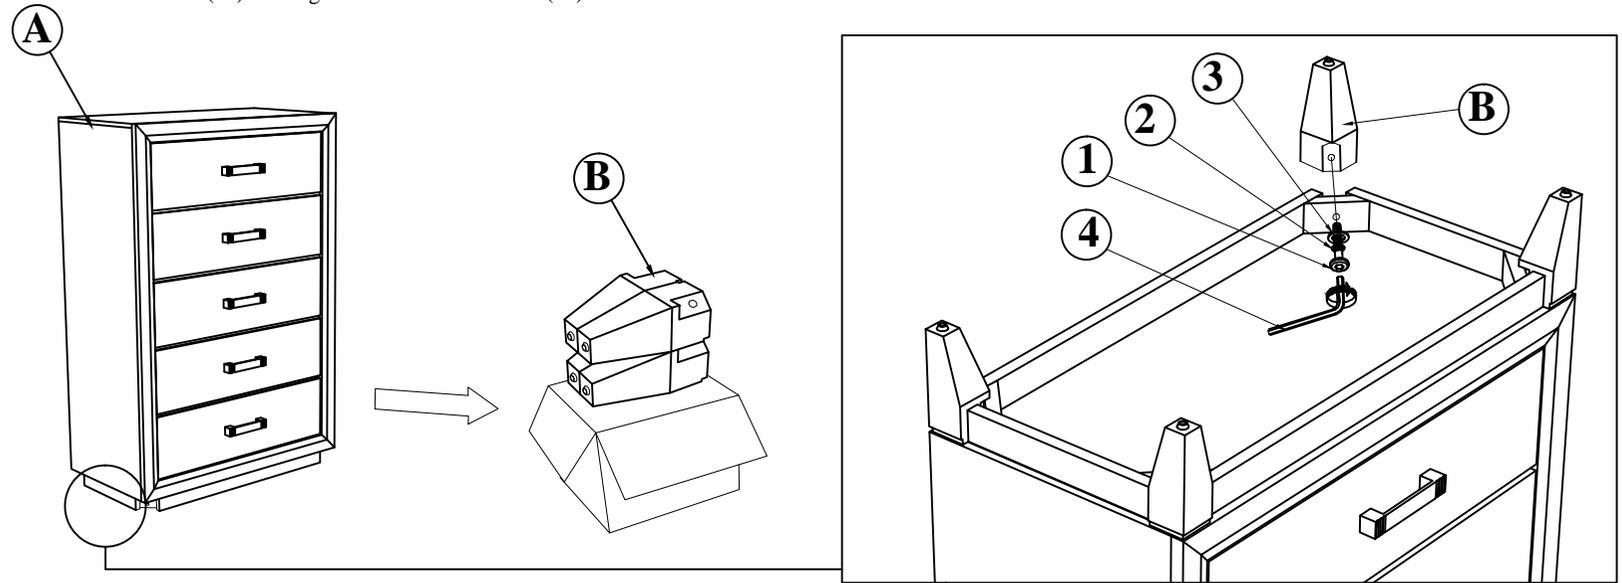

(Box 1) HARDWARE LIST		
No	ITEM	Qty
1	JCBC M8 x 50mm 	4 pcs
2	SPRING WASHER 5/16" Rbw 	4 pcs
3	Flat Washer 5/16"ID x 22mmOD Blk 	4 pcs
4	ALLEN KEY m5x65mm Blk 	1 pc



COMPLETED ASSEMBLY


NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.



ASSEMBLY INSTRUCTIONS

**MODEL :KATE
DRESSER**

STEP 1 : Pull the top drawer and take out the Bunfoot carton (B). Attach the Bunfoot (B) at the bottom Dresser (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and Tighten with Allen Wrench (4).


(Box 1)
BOX OF CHEST

No	ITEM	Qty
A	DRESSER 	1 pc
B	BUN FOOT 	4 pcs

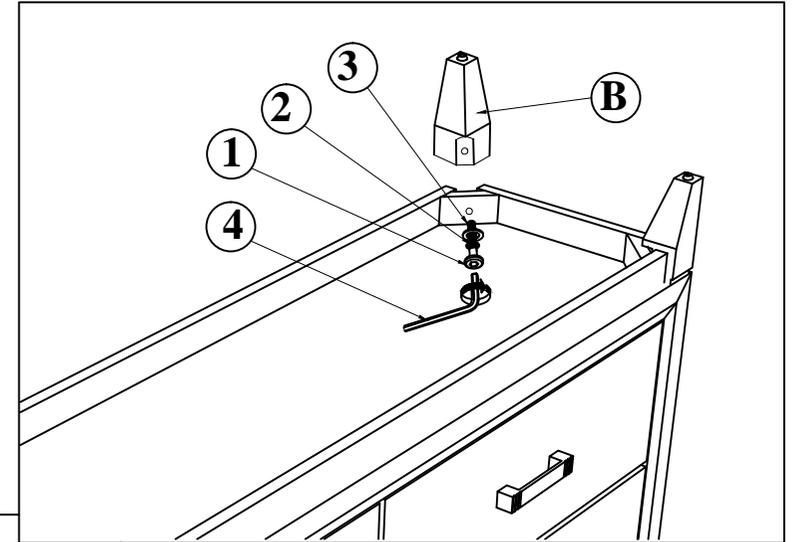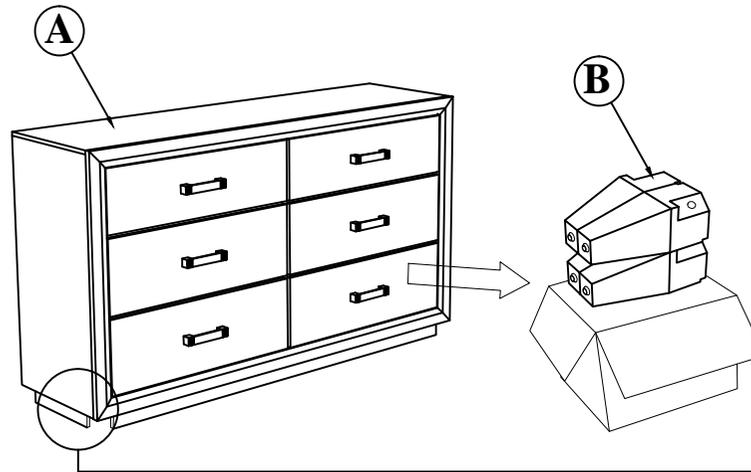

(Box 1)
HARDWARE LIST






No	ITEM	Qty
1	JCBC M8 x 50mm 	4 pcs
2	SPRING WASHER 5/16" Rbw 	4 pcs
3	Flat Washer 5/16"ID x 22mmOD Blk 	4 pcs
4	ALLEN KEY m5x65mm Blk 	1 pc

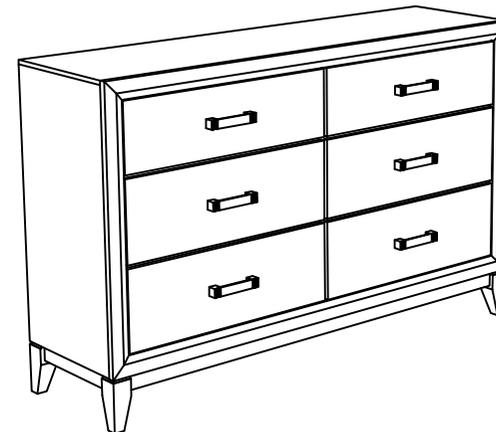

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

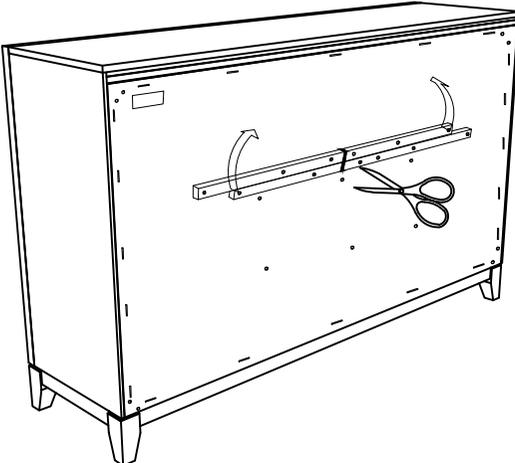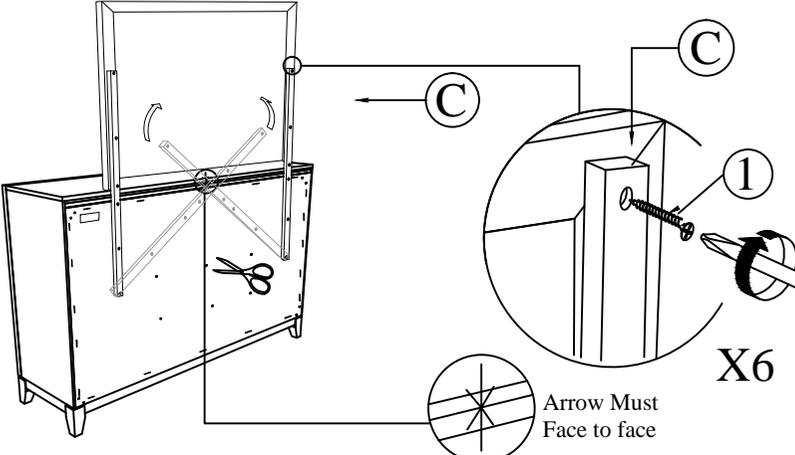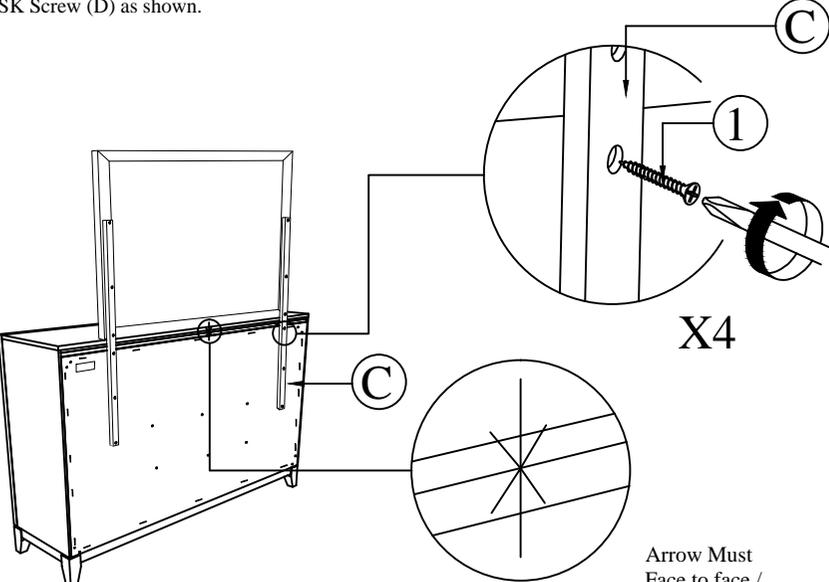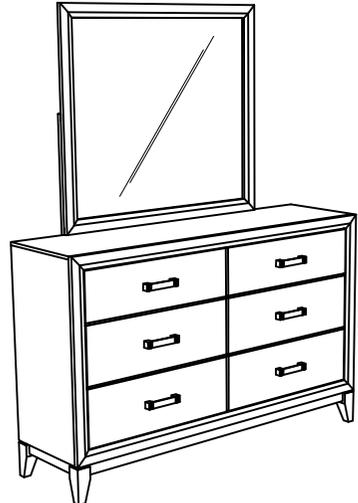MODEL: KATE DRESSER & MIRROR			STEP 1 / ETAPE 1 : Cut of the Raffia String from the back of DRESSER (B).	STEP 2 / ETAPE 2 : Turn the MIRROR SUPPORT RAIL (C) upward at the back of DRESSER (B), Place the MIRROR FRAME (A) on the top of DRESSER (B). Tighnten with CSK Screw (D).
(Box 1) BOX OF MIRROR				
NO	ITEM	QTY		
A	MIRROR 	1 PC		
(Box 2) BOX OF DRESSER			STEP 3 / ETAPE 3 : Tighten the CSK Screw (D) as shown.	
NO	ITEM	QTY		
B	DRESSER 	1 PC		
C	MIRROR SUPPORT RAIL 	2 PCS	 <p style="text-align: right;"><u>COMPLETED</u> <u>ASSEMBLY</u></p>	
(Box 1) BOX OF MIRROR				
NO	ITEM	QTY		
1	CSK SCREW M4 X 32MM 	10 PCS		

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.