
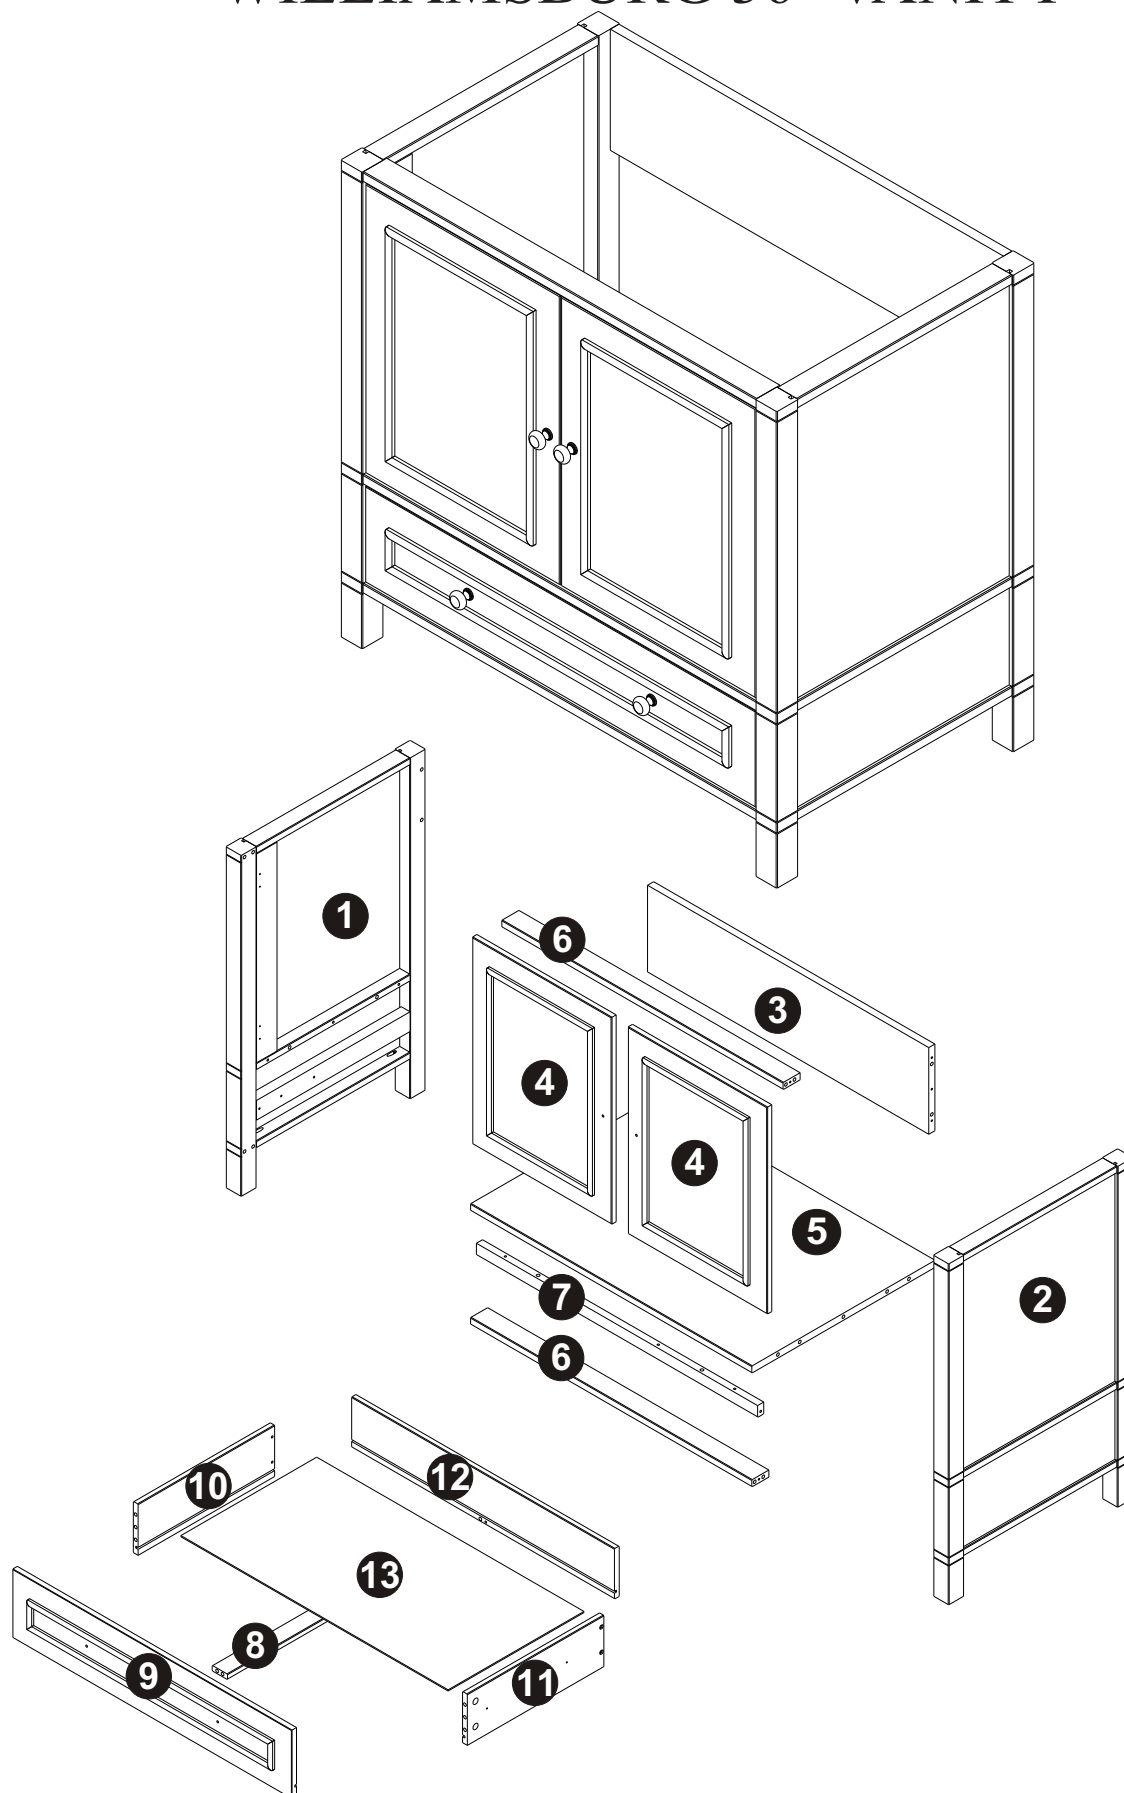









ASSEMBLY INSTRUCTIONS

WILLIAMSBURG 36" VANITY



A	 Ø8x30mm	22
B	 Ø6x10mm	06
C	 Ø3,5x30mm	20
D	 Ø4x22mm	04
E	 Ø3,5x14mm	20
F	 Ø3,5x14mm	12
G		02
H		12
I		04
J		04
K		04
L		02
M	 Ø3,5x14mm	02

REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at ``[www.boltonfurniture.com](http://www.boltonfurniture.com)``.



Tools Required


Phillips Tool







Hammer
* These tools are not
supplied by the
manufacturer

01

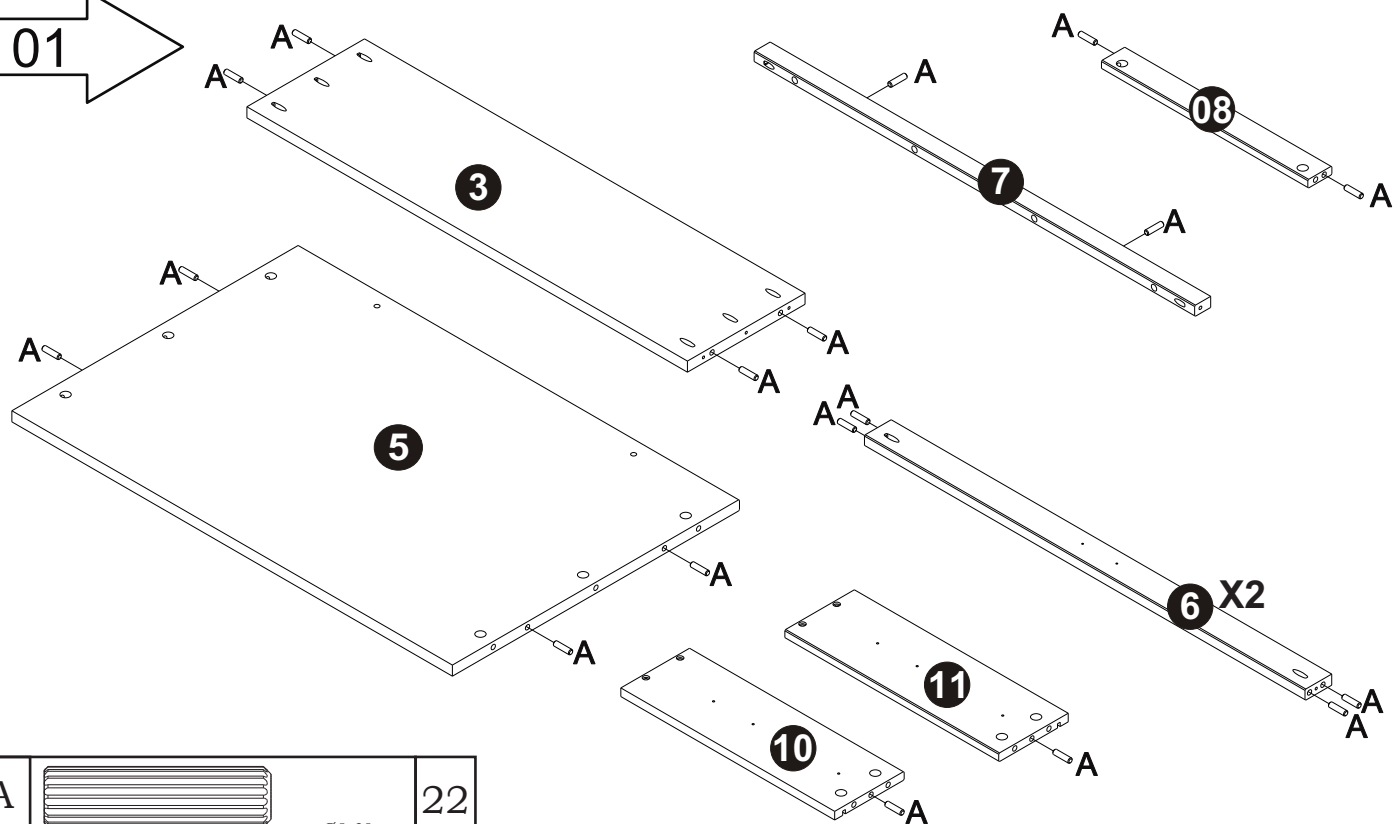


02

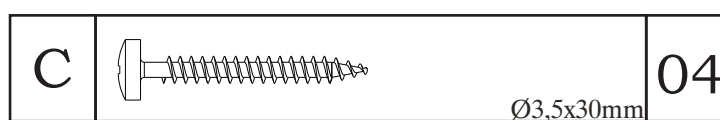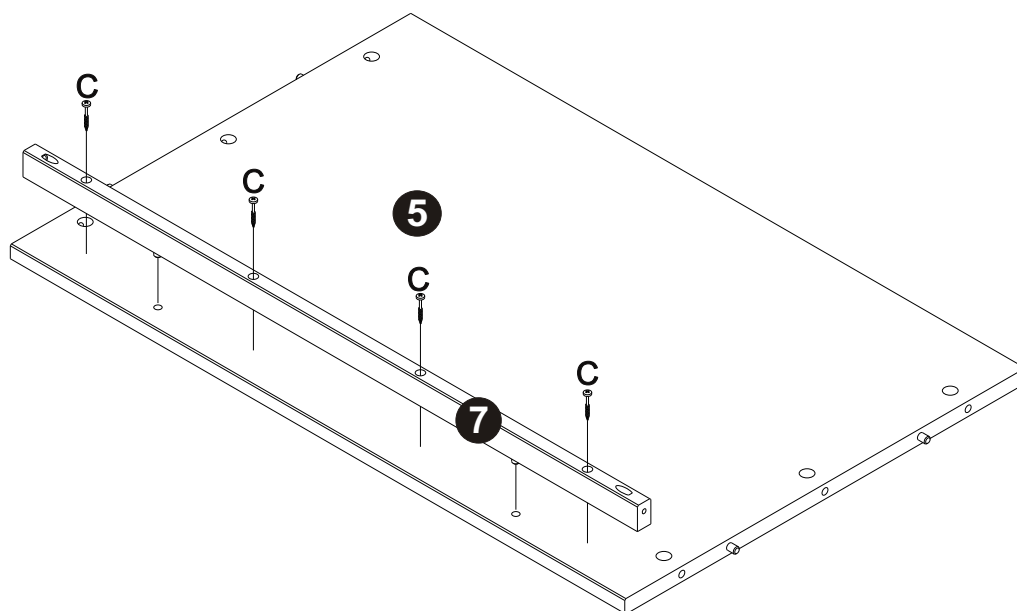

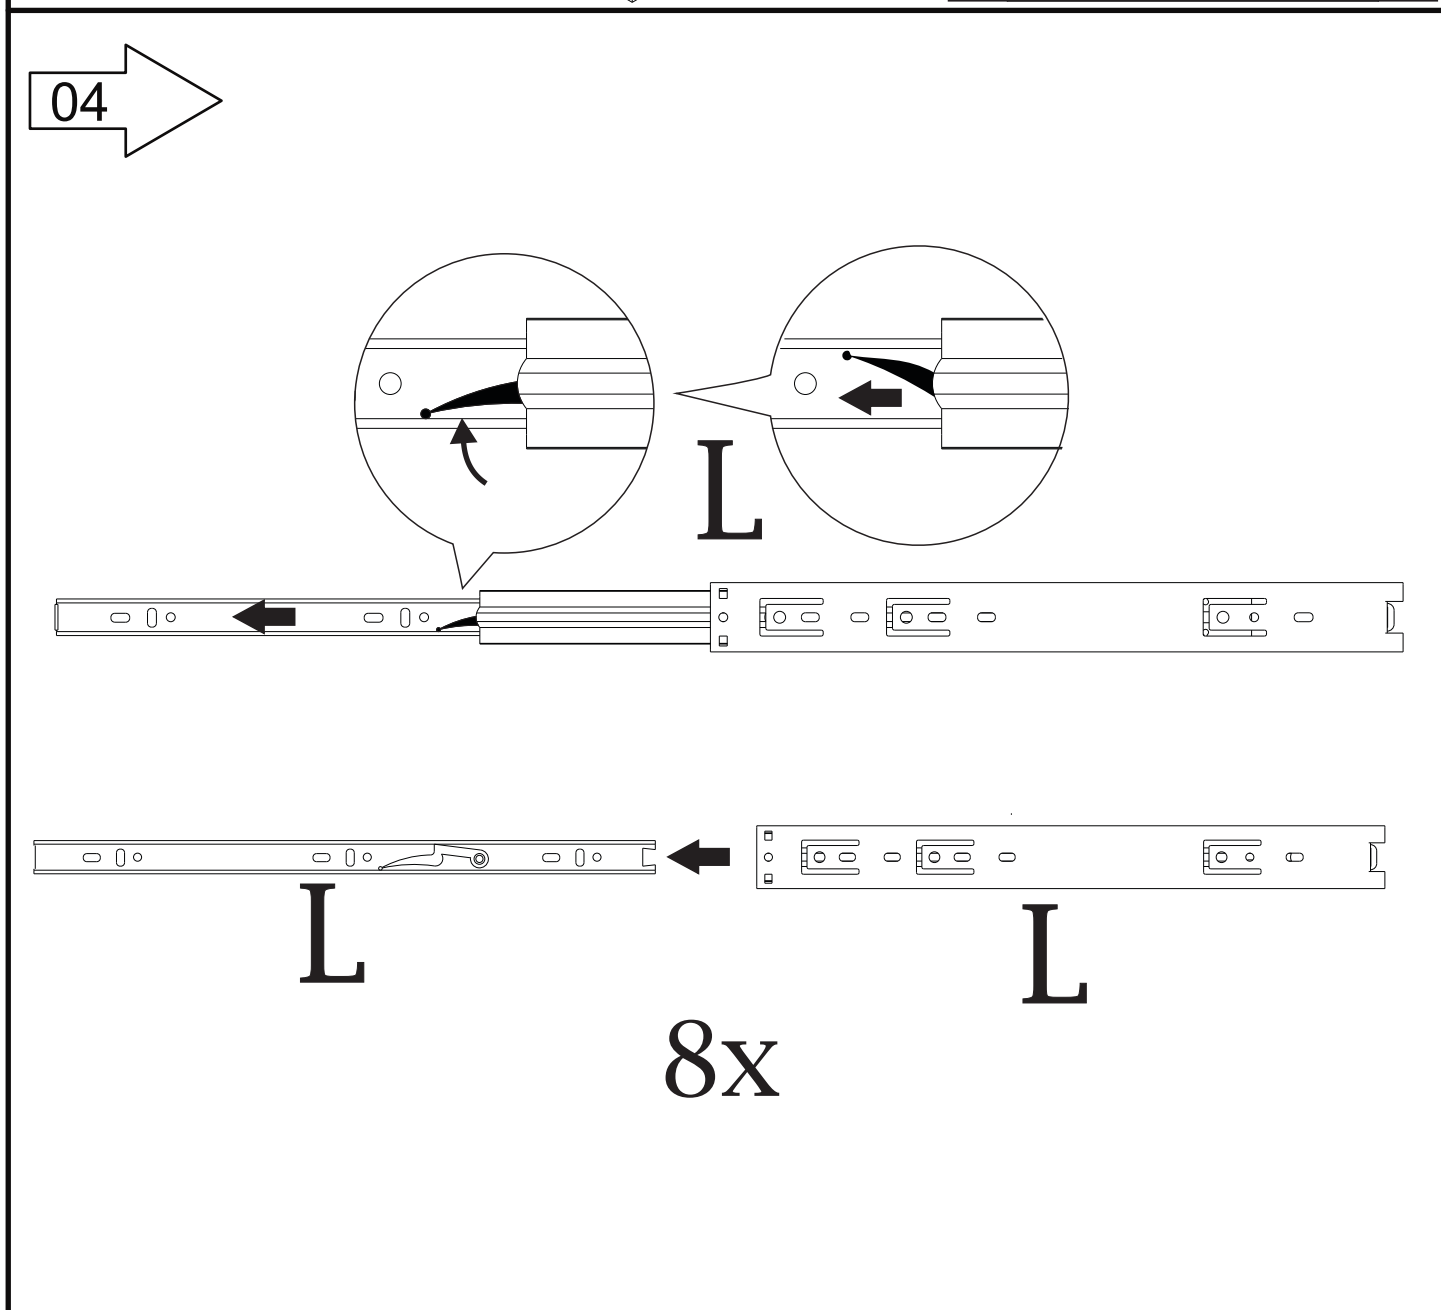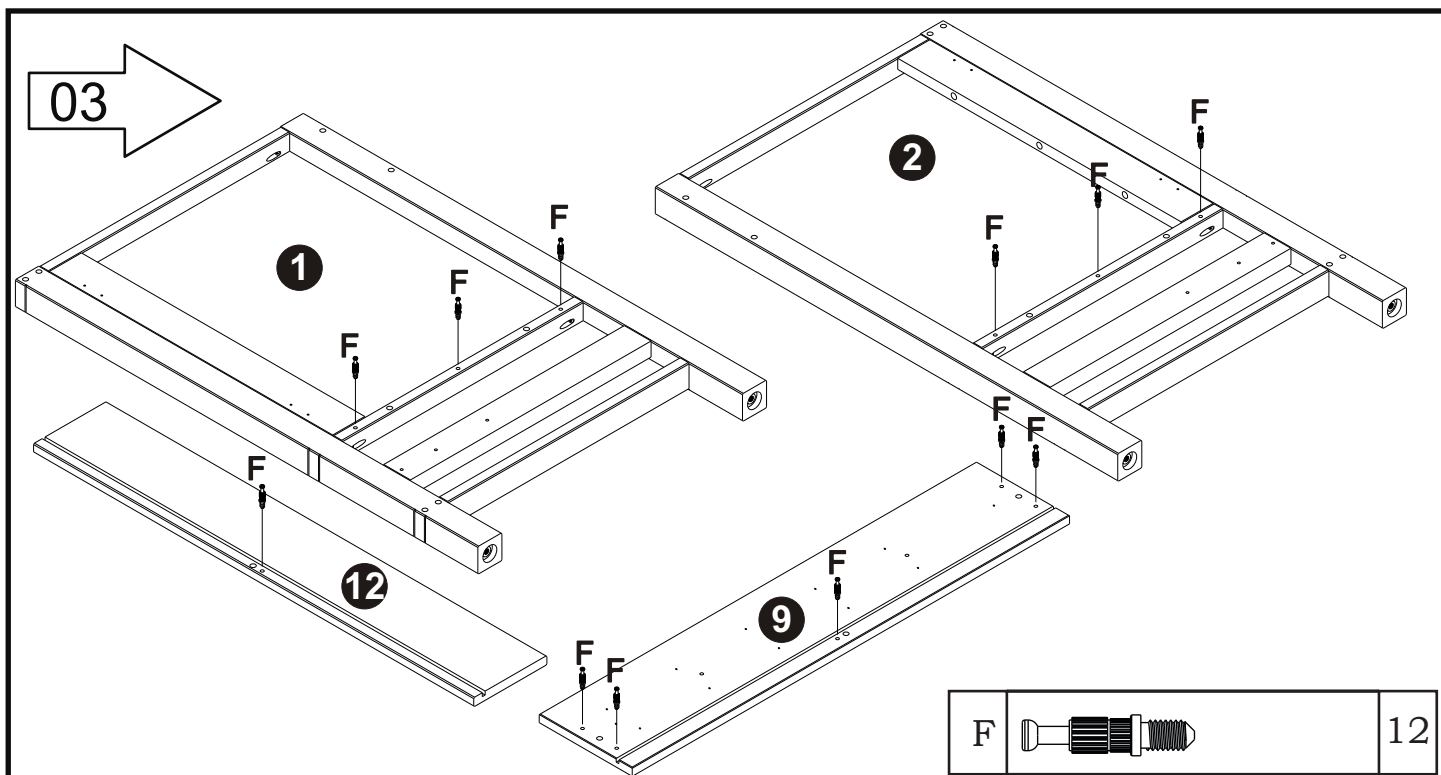



05

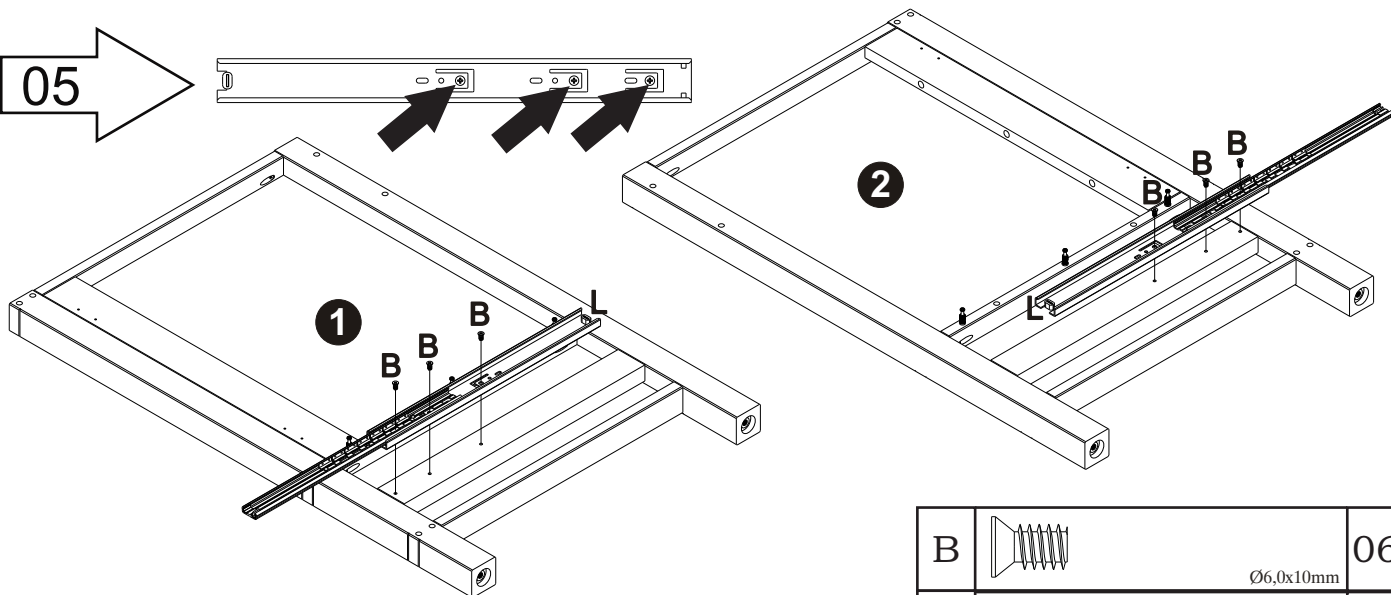


B		06
Ø6,0x10mm		
L		02


06

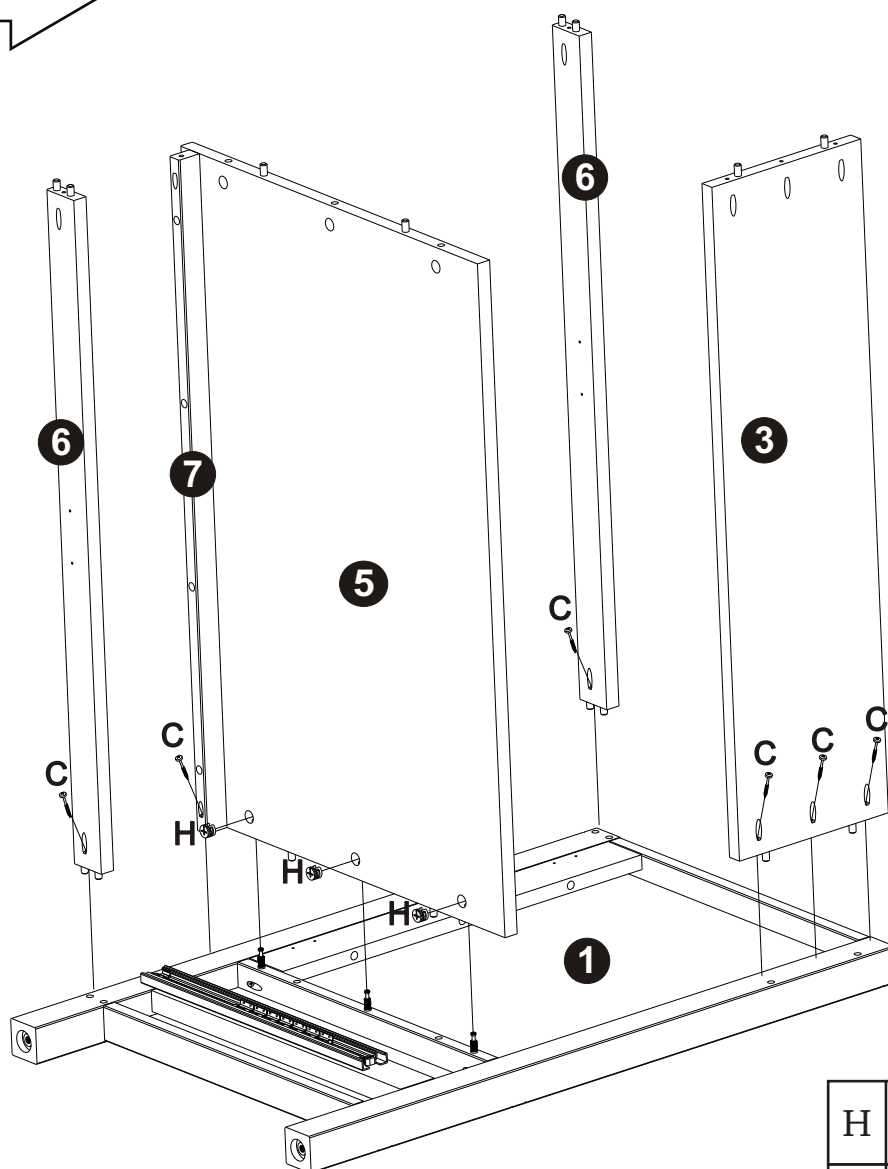


H		03
C		06
Ø3,5x30mm		


07

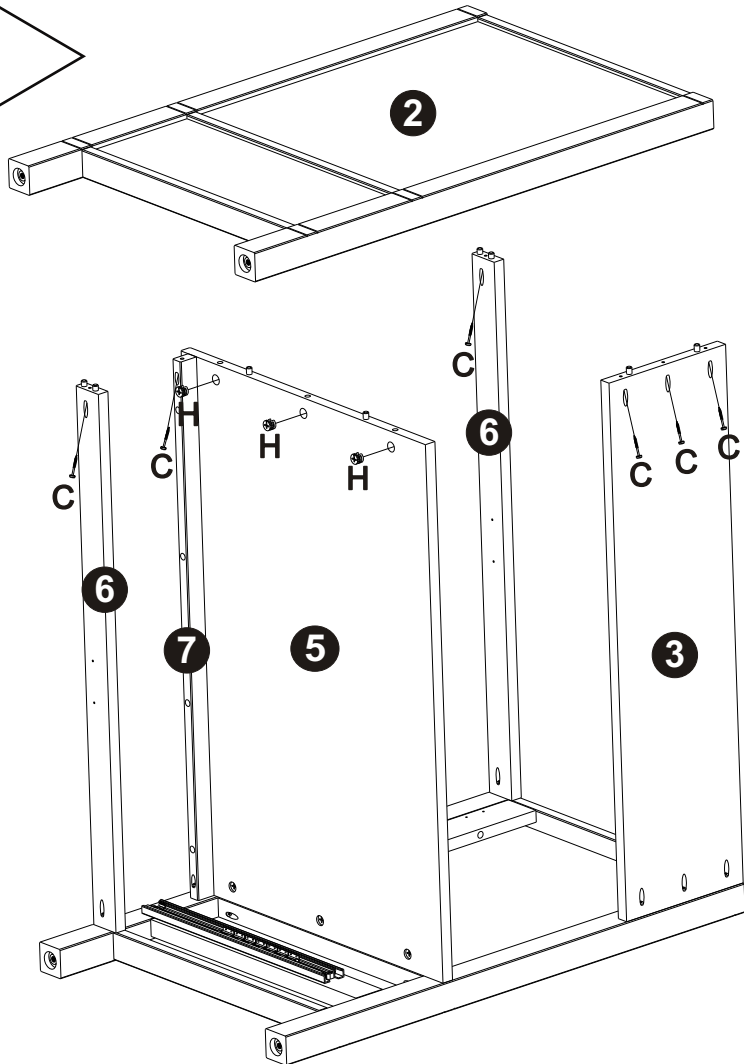



H		03
C	 Ø3,5x30mm	06


08

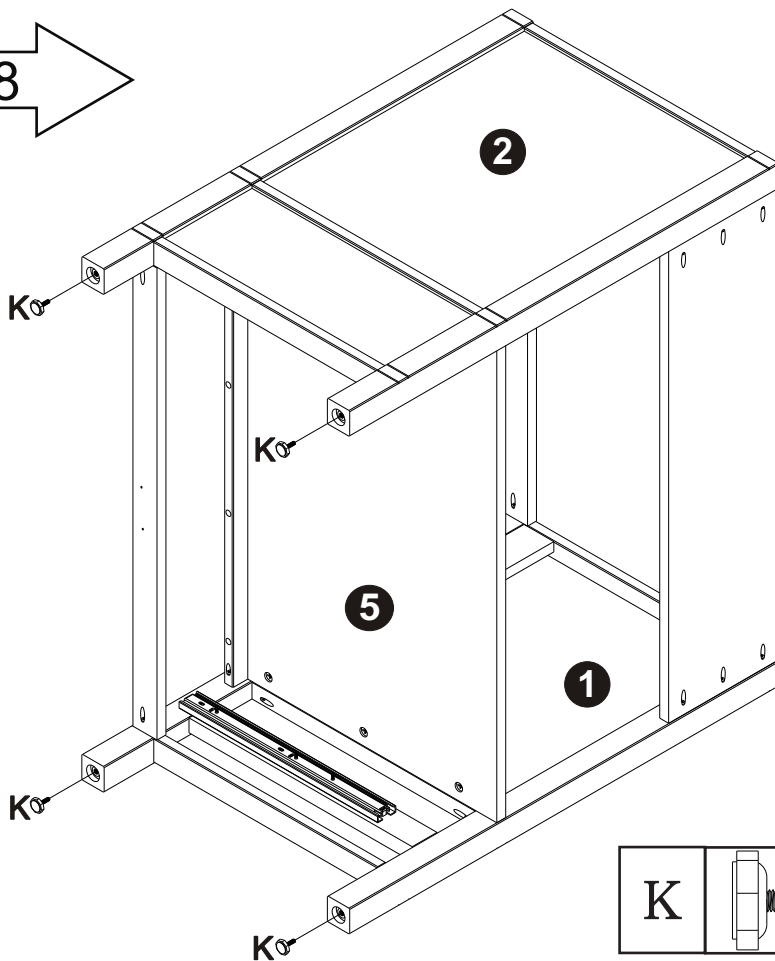

K		04
---	--	----


09

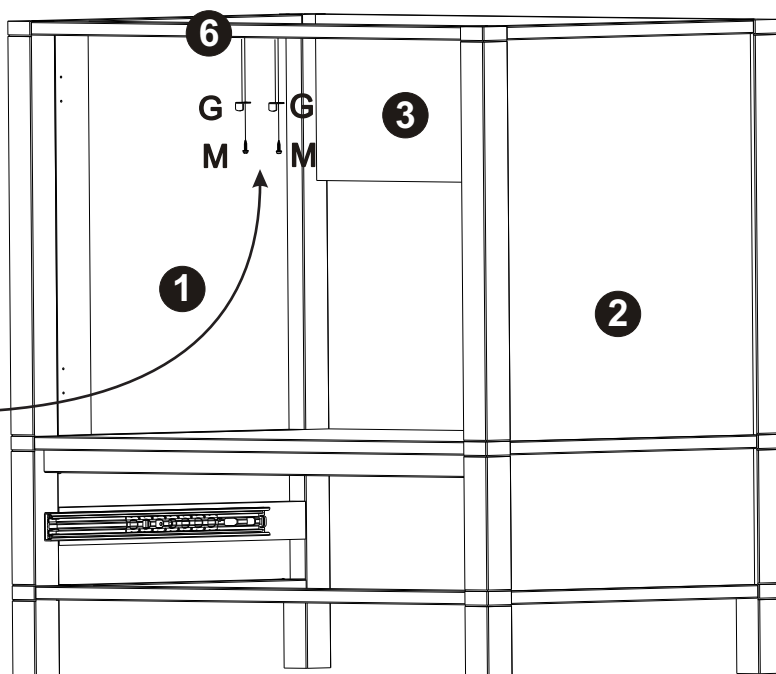
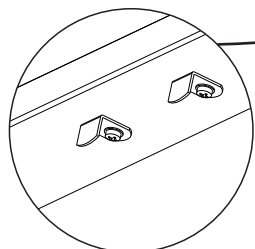


M		02
Ø3,5x14mm		
G		02


10


X2

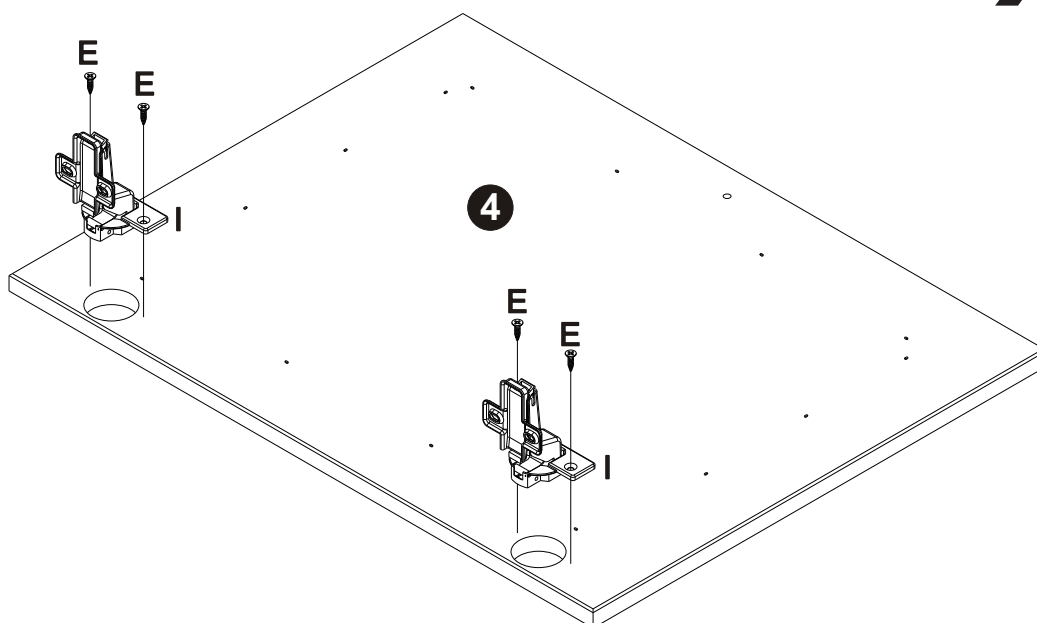




E		08
Ø3,5x14mm		
I		04





11

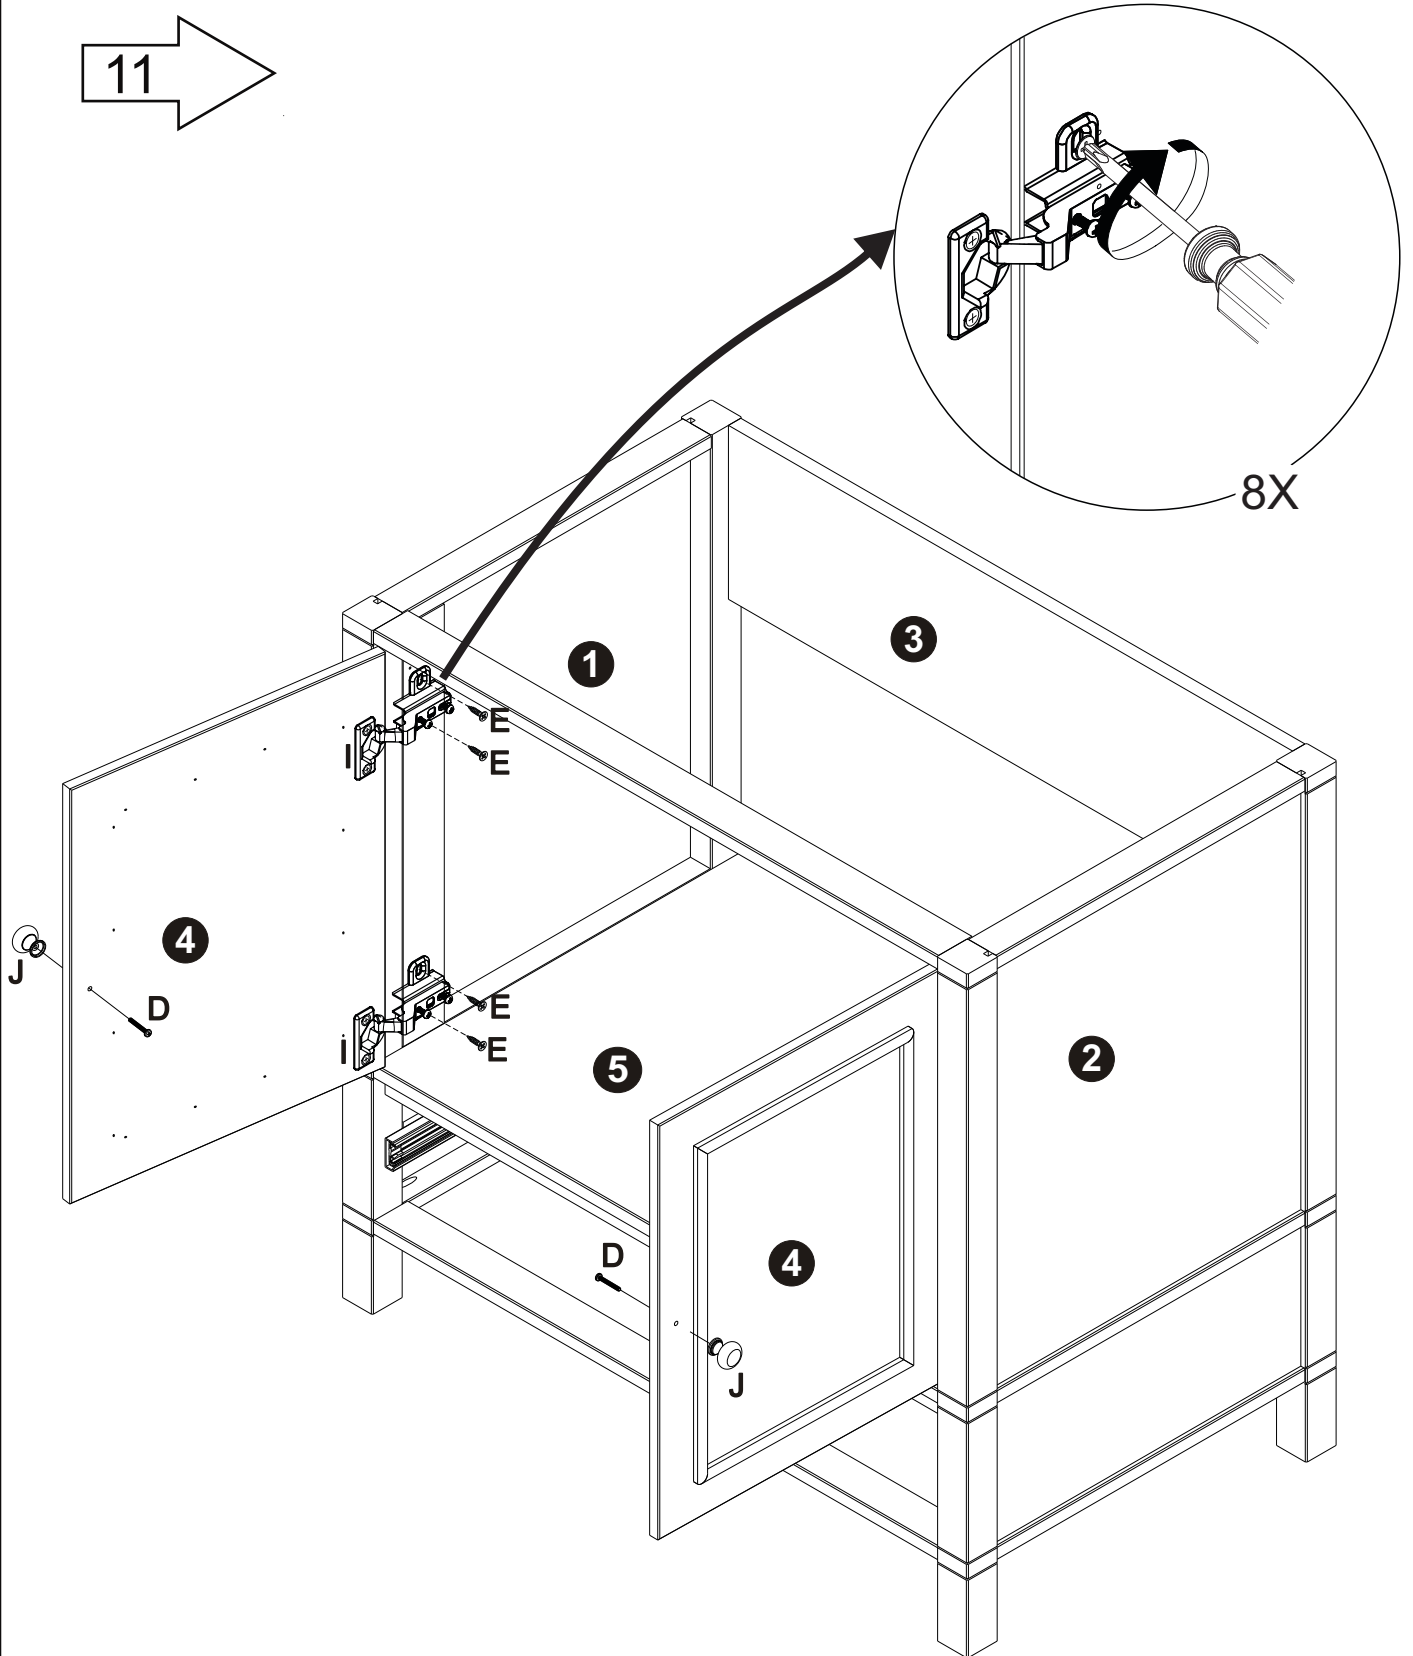


E		Ø3,5x14mm	08
D		Ø4x22mm	02
J			02

12

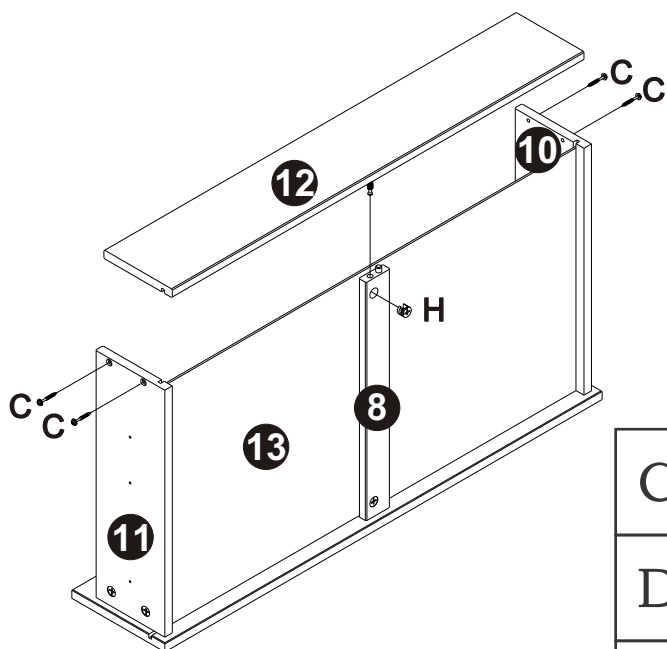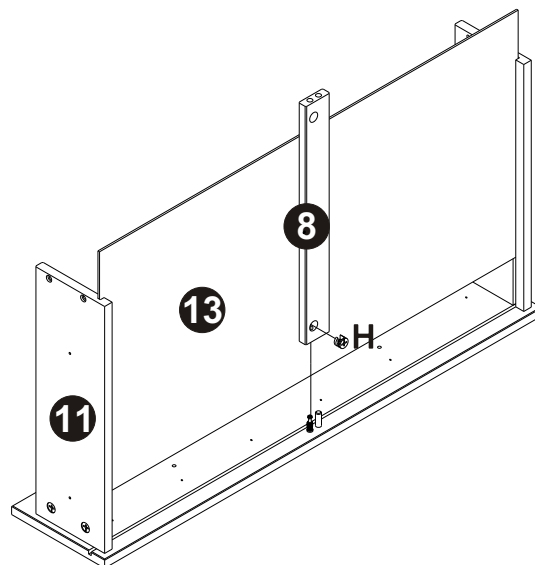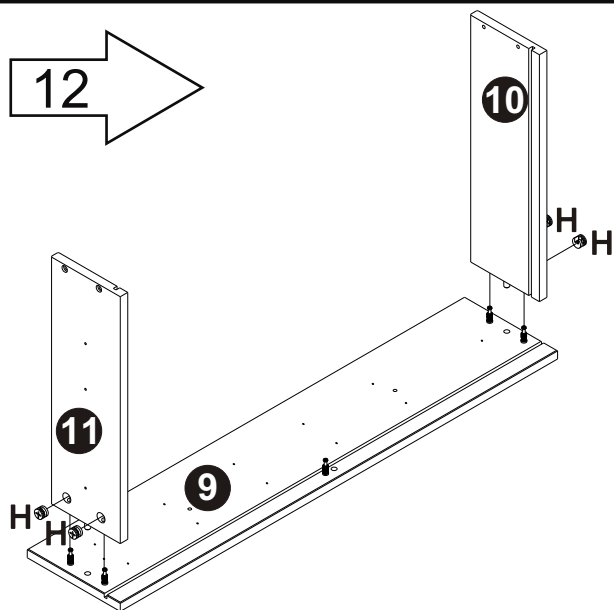

C		Ø3,5x30mm	04
D		Ø4x22mm	02
E		Ø3,5x14mm	04
H			06
J			02
L			02

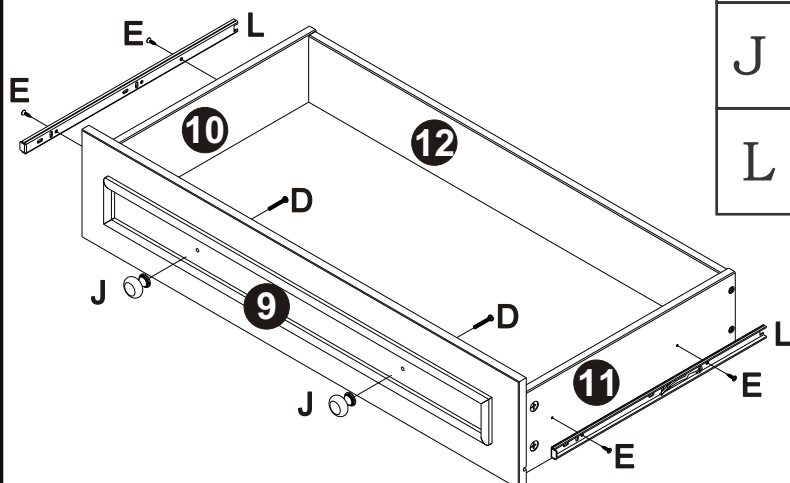

13

