email: info@riverside-furniture.com

Cascade Dining Room Assembly Instructions

Front Leg (Right)


Allen Head Bolt

(9)


5/16"-18 x 2"

Page 1 of 2

Made in Viet Nam

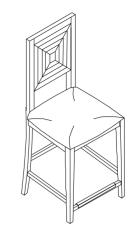

73443 UPH WOOD-BK CNTR STOL 2IN

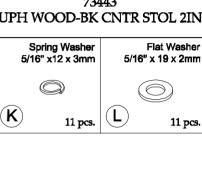


Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

Components and Hardware List Chair Back **Seat Cushion** Front Leg (Left) (C) (\mathbf{D}) 1 pc. 1 pc. 1 pc. Side Stretcher (Left) Side Stretcher (Right) Allen Head Bolt 5/16"-18 x 1-3/4" F (\mathbf{G}) (\mathbf{H}) $(\mathbf{1})$ 3 pcs. 1 pc. 1 pc. Tool Required Wood Screw Allen Key 5mm #8 x 1-1/4" Phillips Screwdriver M) (N)6 pcs. 1 pc.

STEP 1: Do not fully tighten the bolts

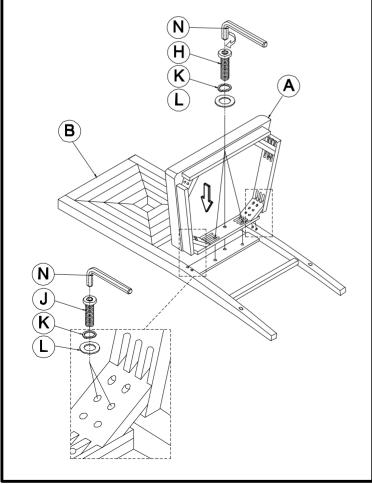

STEP 2: Do not fully tighten the screws

Front Stretcher

Allen Head Bolt

5/16"-18 x 3-1/4"

1 pc.


4 pcs.

 (E)

(**J**

1 pc.

4 pcs.

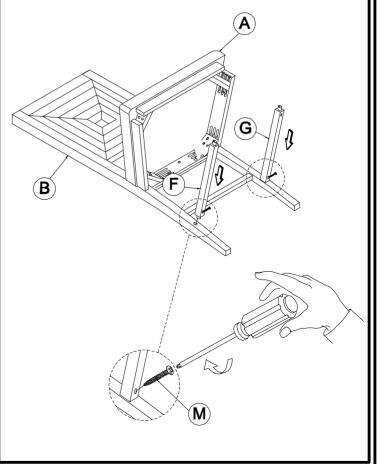

Riverside


email: info@riverside-furniture.com

Cascade Dining Room Assembly Instructions


Made in Viet Nam

73443 UPH WOOD-BK CNTR STOL 2IN



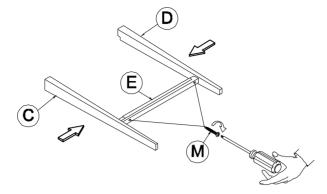

STEP 4: Using the Allen Key to tighten all bolts

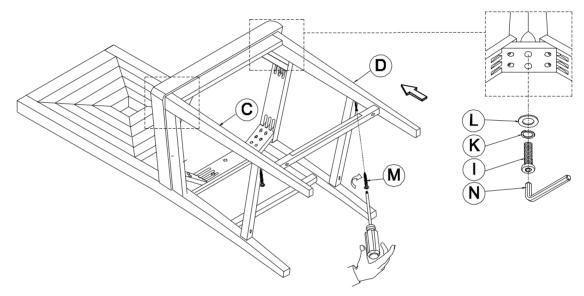

STEP 5: Using the Philips Head Screw driver to tighten all screws

COMPLETE

