



TOV

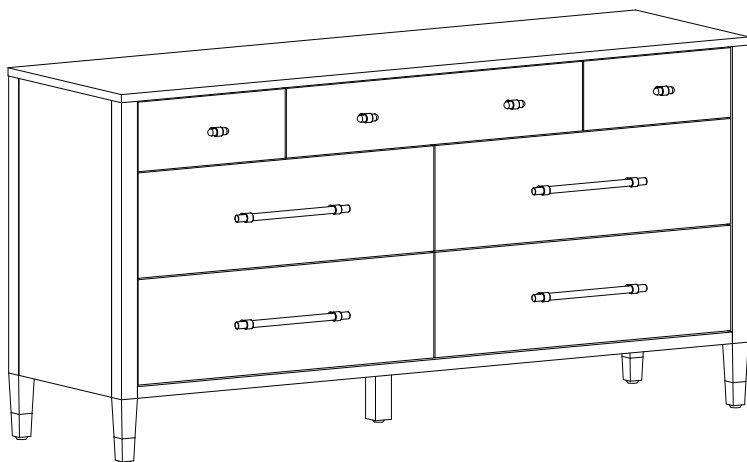

Brandyss Dresser

DON'T BE BORING.

Hardware and Components

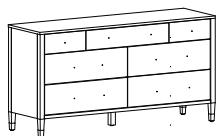


----- **A** x 1 Dresser



----- **B** x 2 Anti-Tip Kits (set)



Step 1

The ATK is attached on the back panel of the Dresser.

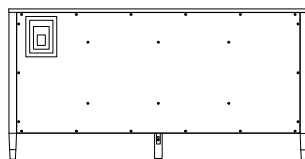



Step 2

A. The handles of the top drawers (3 upper drawers) are installed inside the drawers. Open the drawers, unscrew, and remove the handles.

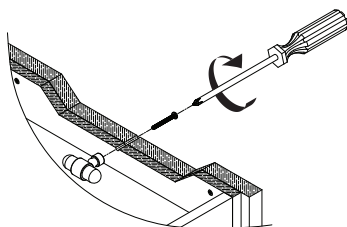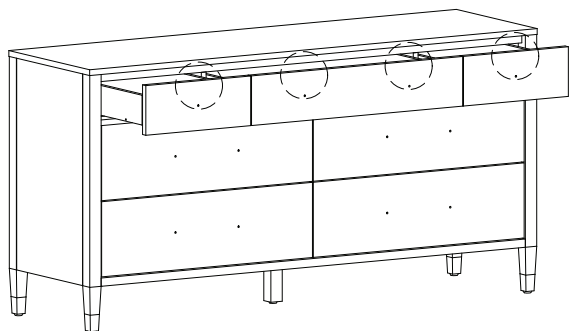


Step 3

A. Attach the handles onto the outside of the top drawers (3 upper drawers) using the screws.

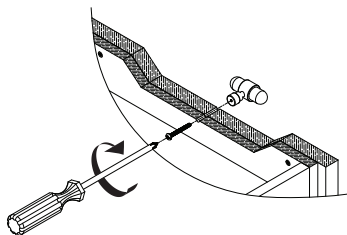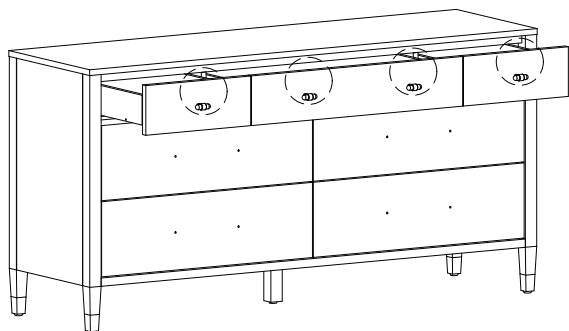

Step 4


A. The handles of the bottom drawers (4 lower drawers) are installed inside the drawers. Open the drawers, unscrew, and remove the handles.

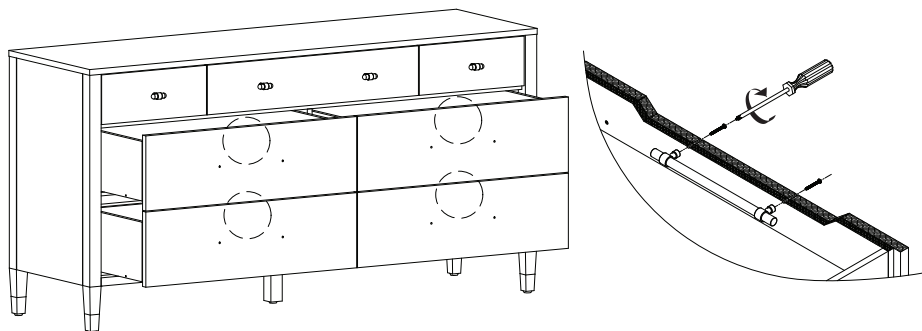

Step 5


A. Attach the handles onto the outside of the bottom drawers (4 lower drawers) using the screws.

B. Adjust the leveler if needed. Complete!

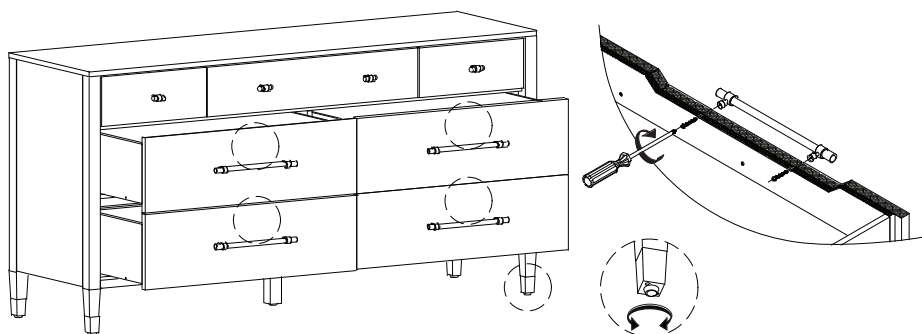


Step 6

Install the Anti-Tip Kits (B) to the back of the Dresser (A), and attach it securely to the wall.

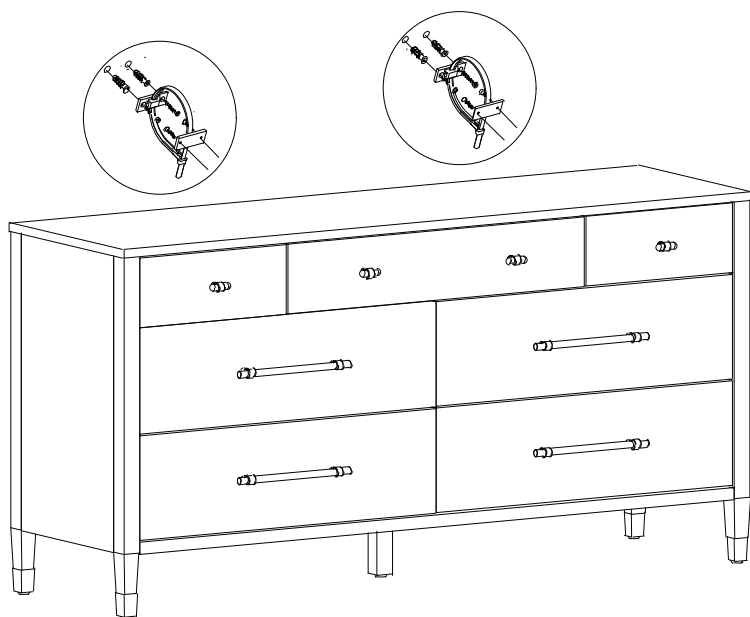

Step 7

Complete!

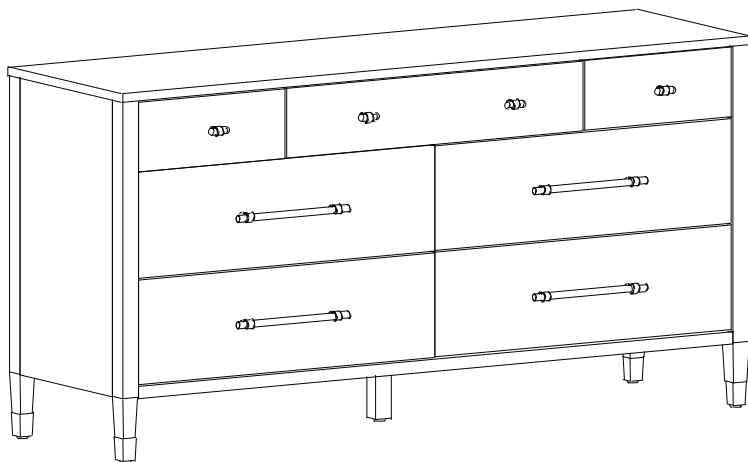

Stuck?

Contact our team @ 516-888-3355

Scan for product care!



TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture

 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.