


Alaterre Furniture



Toilet Hutch with Mixed Storage

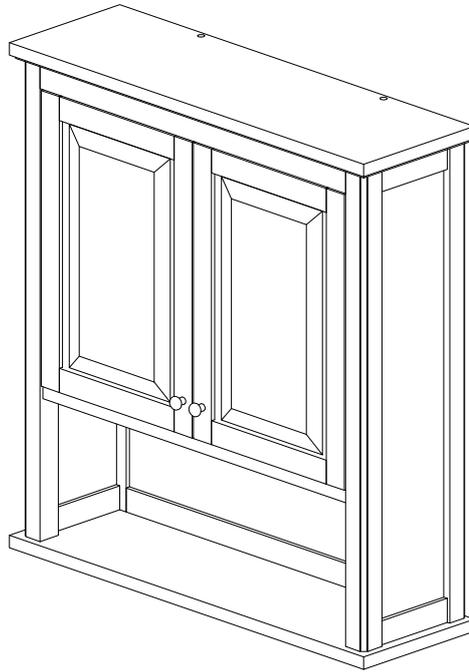


Thank you for purchasing the Toilet Hutch with Mixed Storage from ALATERRE FURNITURE. We have found it helpful to have a second person present during the assembly process.

Toilet Hutch with Mixed Storage Assembly Instructions

Parts

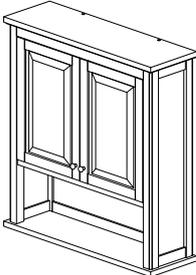NO.	DRAWING	DESCRIPTION	QTY
A		TOILET HUTCH	1
B		SHELF	1
C		FRENCH CLEAT	1

NO.	DRAWING	DESCRIPTION	QTY
D		M6x45MM BOLT	4
E		4x40MM	4
F		SHELF CLIP	4
G		ALLEN KEY	1
I		ANTI-TIP	1

Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish


Step 3

Remove Table Top of Toilet Base by unscrewing 4 pre-installed Hex Bolts (D).

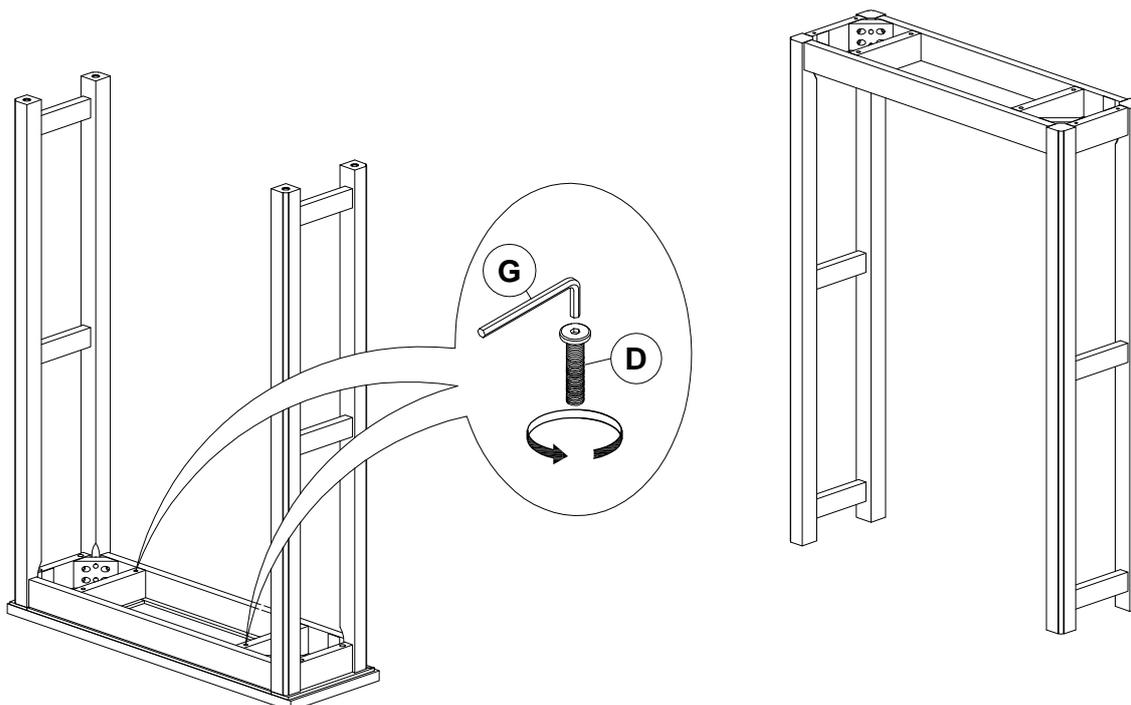


Step 4

Open the doors of Toilet Hutch (A), Insert 4-Shelf Clips (F) in Holes on Side Frames. Set Shelves (B) on Shelf Clips (F).

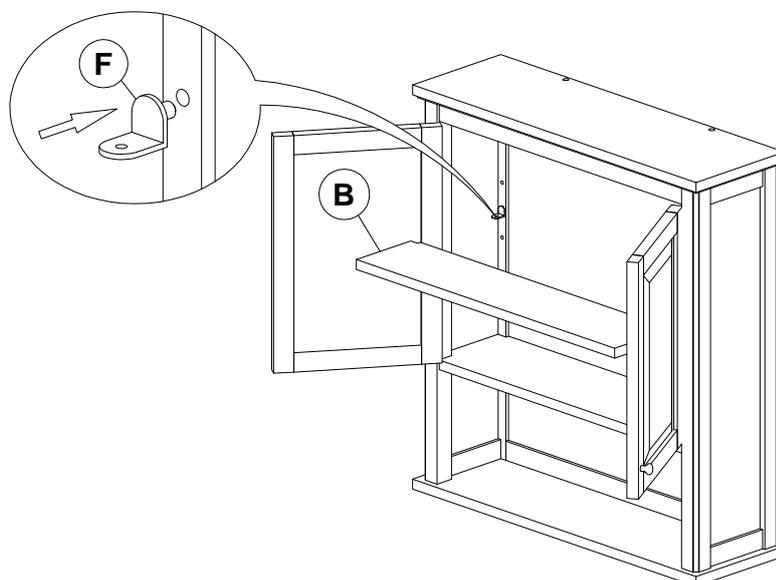

Step 5

Attach Toilet Hutch (A) on Toilet Base using 4-M6x45MM Hex Bolts (D). NOTE: TIGHTEN ALL BOLTS AT THIS TIME !

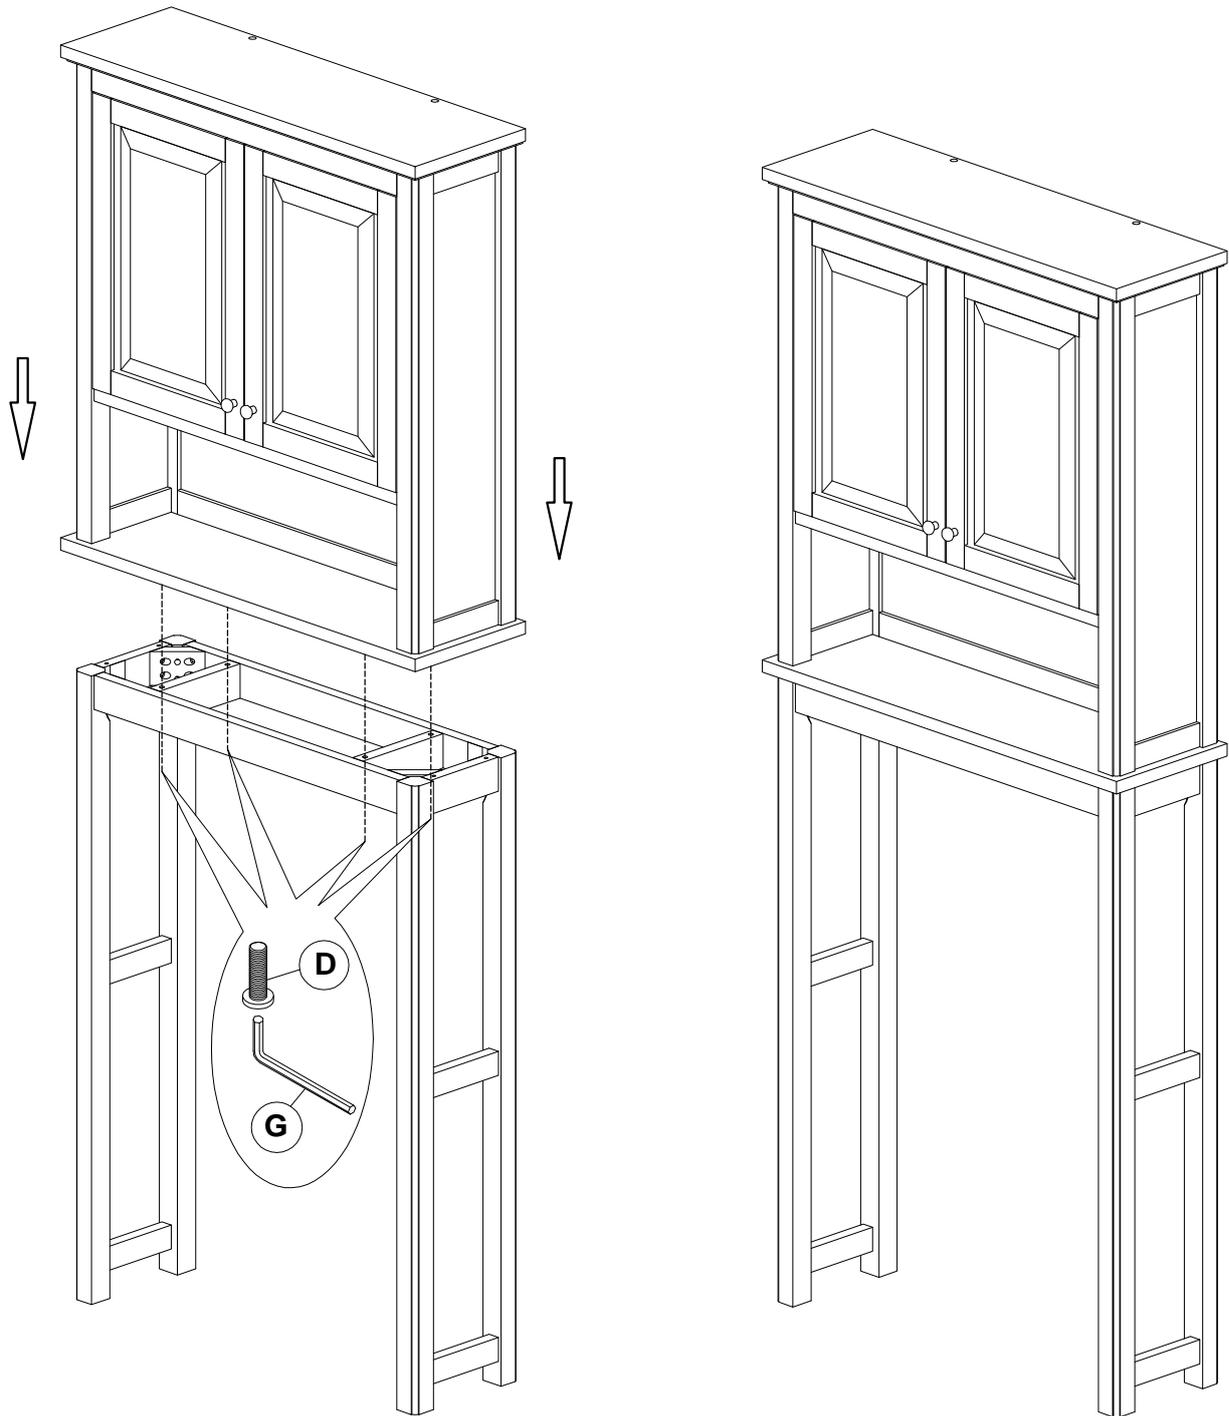

CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

REPLACEMENT PARTS:

For best service, to order replacement parts go to www.alaterrefurniture.com. Use the order form on the website to order your replacement parts. Thank You!

IF YOU WANT TO HANG ON THE WALL

Step 1



Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish


Step 3

Remove the French Cleat (C) from the back of the Toilet Hutch (A) by unscrewing 2 pre-installed Wood Screws (E). Locate studs behind drywall in desired location. Attach French Cleat (C) to Wall Studs in at least 2 locations with Wood Screws (E)

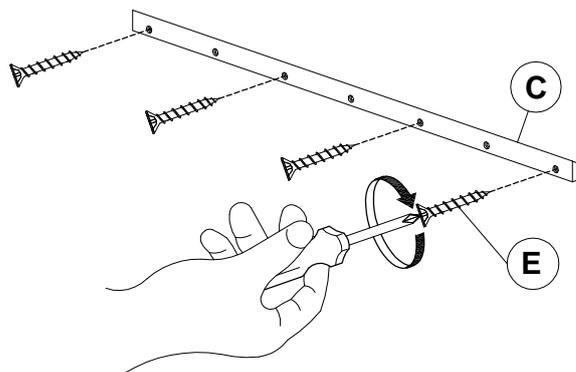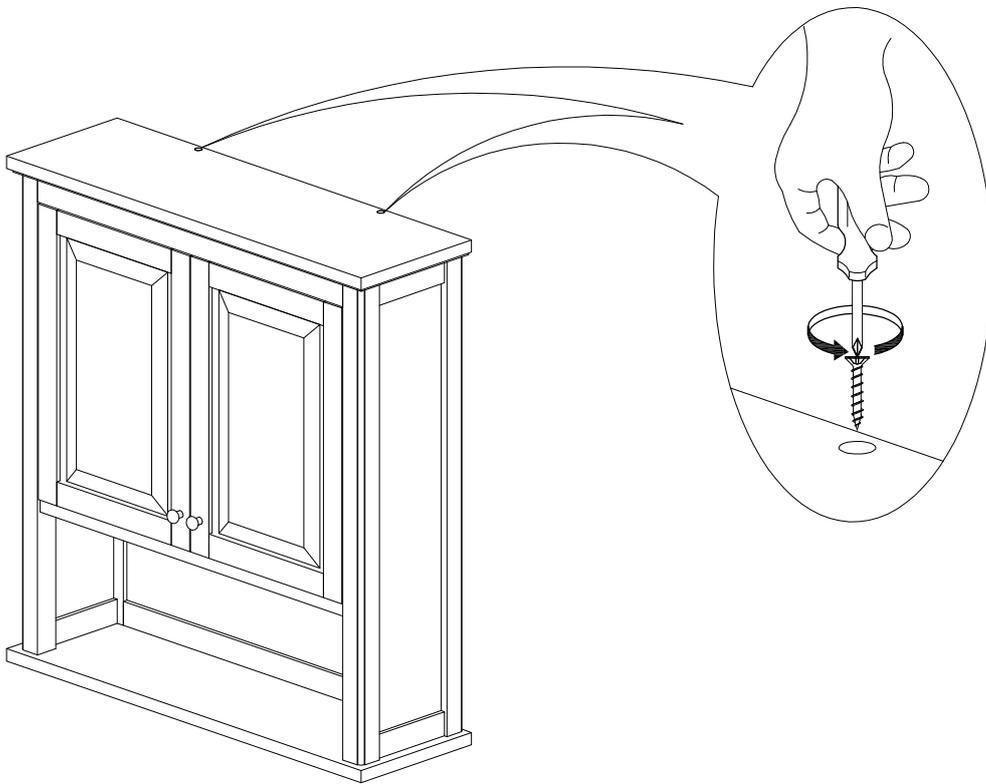


Step 4

Open the doors of Toilet Hutch (A), Insert 4-Shelf Clips (F) in Holes on Side Frames at desired location. Place Shelves (B) on Shelf Clips (F).

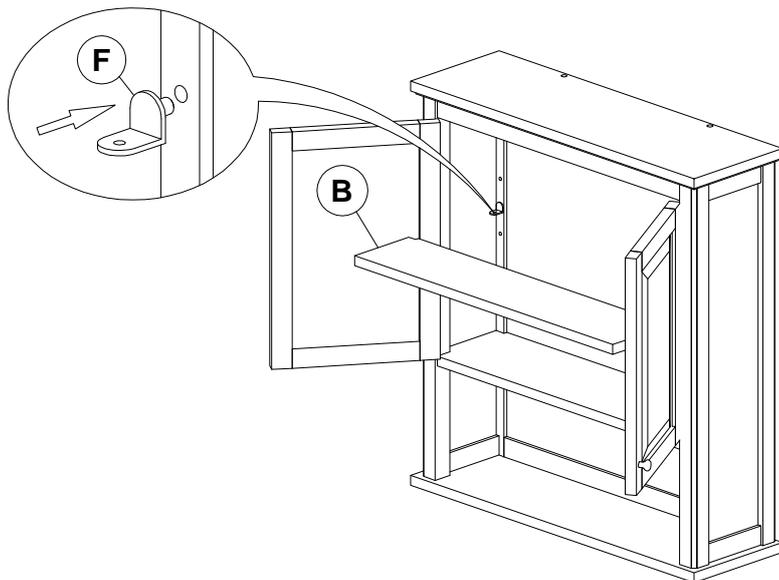

Step 5

Set Toilet Hutch (A) on French Cleat (C). Secure Toilet hutch (A) to French Cleat (C) by installing 2 Wood Screws (E).

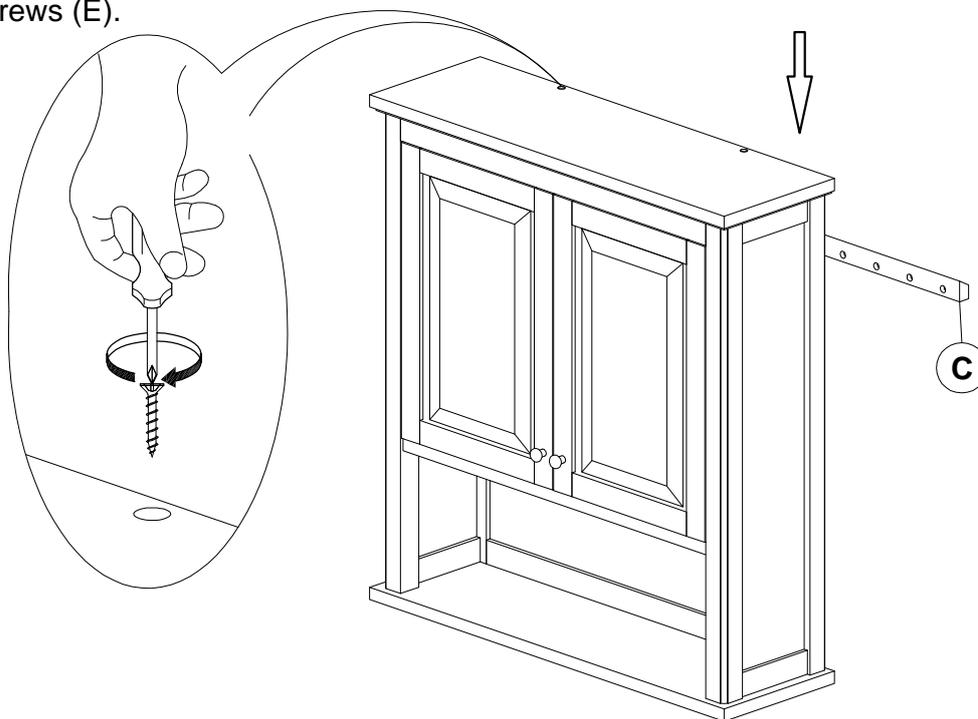

CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

REPLACEMENT PARTS:

For best service, to order replacement parts go to www.alaterrefurniture.com. Use the order form on the website to order your replacement parts. Thank You!