

New  
Classic  
FURNITURE

# ASSEMBLY INSTRUCTIONS

B677-050 ANDOVER 60" DRESSER W/DOORS


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.

PARTS LIST			
ITEM	DRAWING	DESCRIPTION	QTY
A		DRESSER	1 PC
B		SUPPORT LEG	1 PC



## STEP 1

Place the Dresser (A) upside down on a soft and flat surface to assemble the support Leg (B) to the Dresser (A).

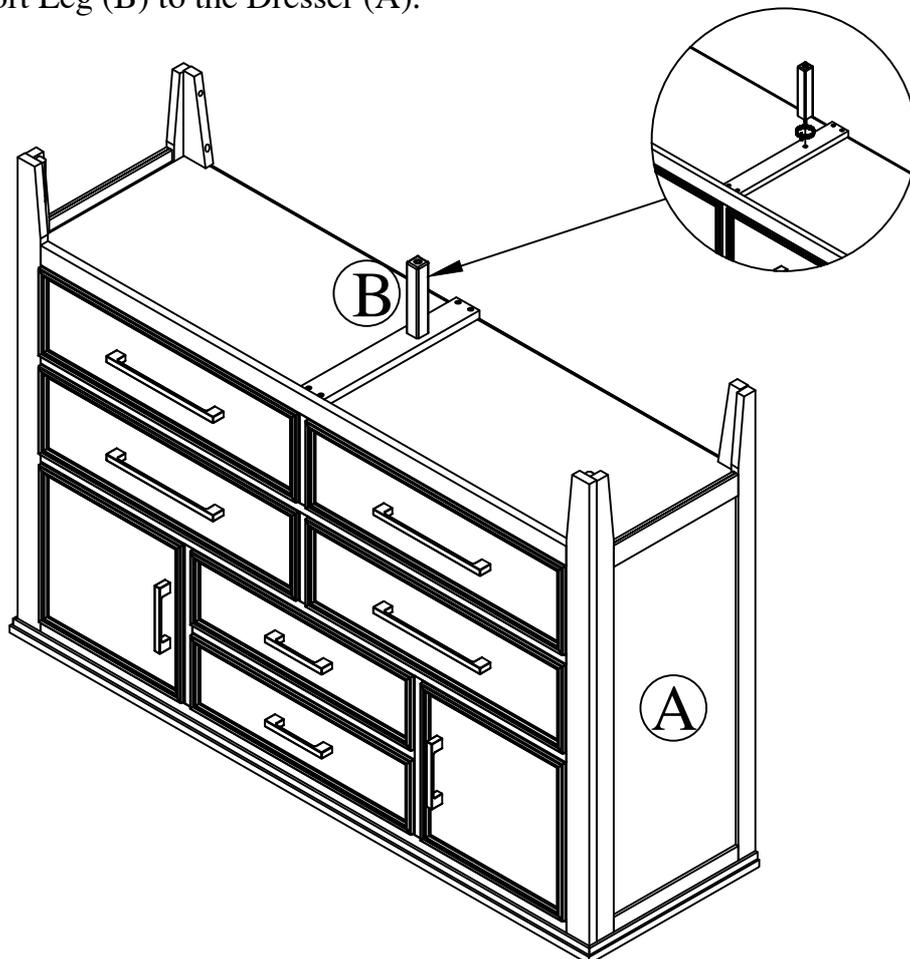

THE ANTI TIPPING HARDWARE  
IS LOCATED AT THE DRESSER  
BACK PANEL

NOTE: MUST TIGHTEN SCREW PERIODICALLY. WITH USE SCREWS WILL BECOME LOOSE CHECK THIGHT OF ALL SREWS EVERY 6-8 WEEKS.

MADE IN MALAYSIA