








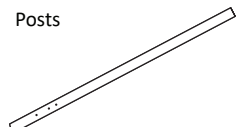


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HDFBP



CODE	QTY	HARDWARE
1	4	¼" x 2¾" Allen Bolts 
2	4	¼" x 1¼" Allen Bolts 
3	4	Flat Washers 
4	4	Spring Washers 
5	4	Hex Nuts 
6	1	Allen Wrench 
7	1	Open Wrench 
8	2	Finials 

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	Headboard Grill 	B	2	Posts 

The Bed Frame * is not included. Sold separately.

⚠ WARNING

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.

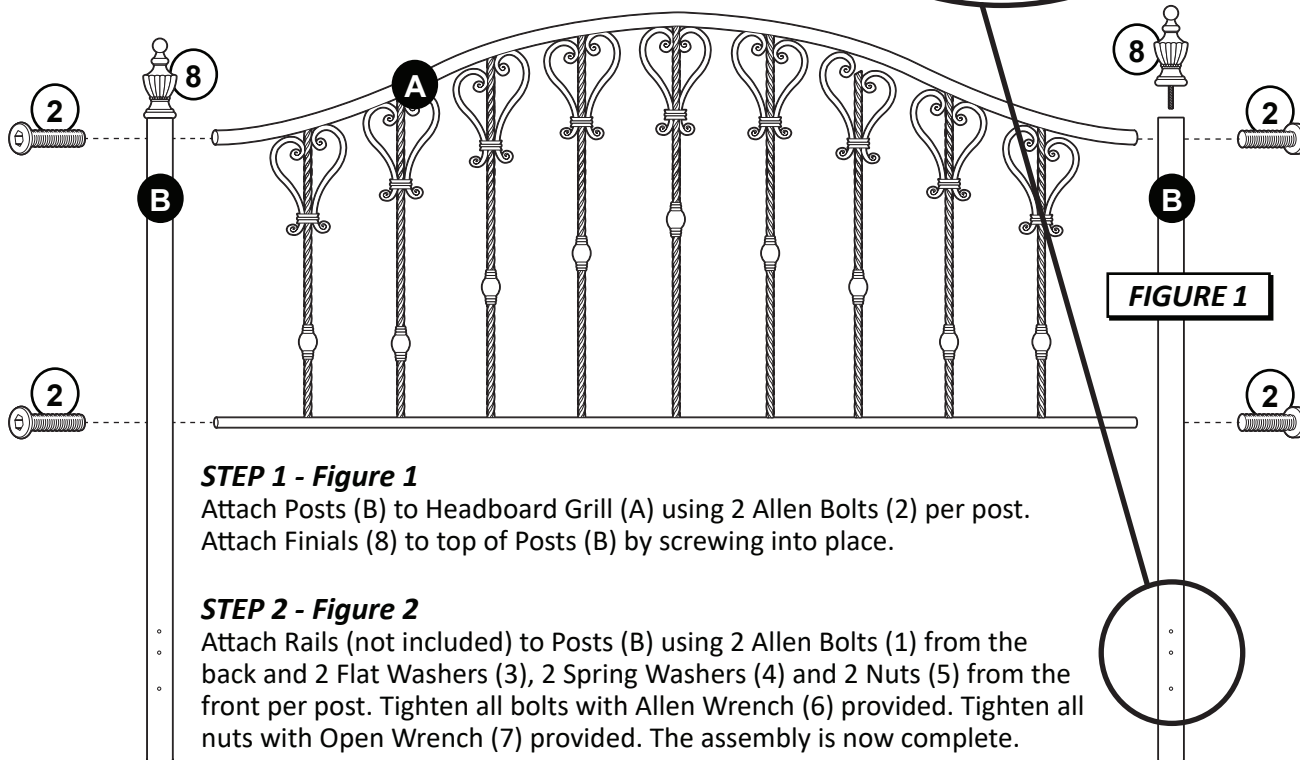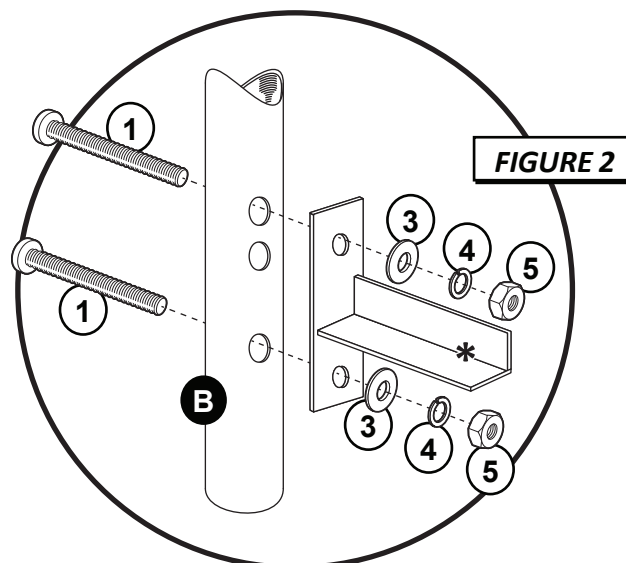











STEP 1 - Figure 1


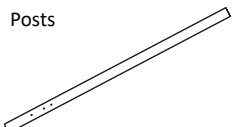
Attach Posts (B) to Headboard Grill (A) using 2 Allen Bolts (2) per post.
Attach Finials (8) to top of Posts (B) by screwing into place.


STEP 2 - Figure 2

Attach Rails (not included) to Posts (B) using 2 Allen Bolts (1) from the back and 2 Flat Washers (3), 2 Spring Washers (4) and 2 Nuts (5) from the front per post. Tighten all bolts with Allen Wrench (6) provided. Tighten all nuts with Open Wrench (7) provided. The assembly is now complete.

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000 **HDFBP**

CODE	QTY	HARDWARE
1	4	¼" x 2¾" Allen Bolts 
2	2	Finials 
3	4	¼" x 1" Allen Bolts 
4	12	Flat Washers 
5	12	Spring Washers 
6	8	Hex Nuts 
7	2	Adapter Plates 
8	1	Open Wrench 
9	4	¼" x 1¼" Allen Bolts 
10	1	Allen Wrench 

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	Headboard Grill 	B	2	Posts 

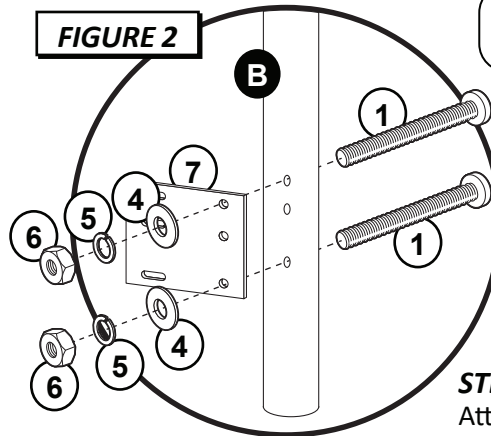

The Bed Frame (*) is not included. Sold separately.

STEP 1 - Figure 1


Attach Posts (B) to Headboard Grill (A) using 2 Allen Bolts (9) per post. Attach Finials (2) to top of Posts (B) by screwing into place.

STEP 2 - Figure 2

Attach Adapter Plates (7) to Posts (B) using 2 Allen Bolts (1) from the back and 2 Flat Washers (4), 2 Spring Washers (5) and 2 Hex Nuts (6) from the front.

STEP 3 - Figure 3

Attach Rails (not included) to Posts (B) using 2 Allen Bolts (3), 2 Spring Washers (5), and 2 Flat Washers (4) from the back and 2 Flat Washers (4), 2 Spring Washers (5) and 2 Nuts (6) from the front per post. Tighten all bolts with Allen Wrench (10) provided. Tighten all nuts with Open Wrench (8) provided. The assembly is now complete.

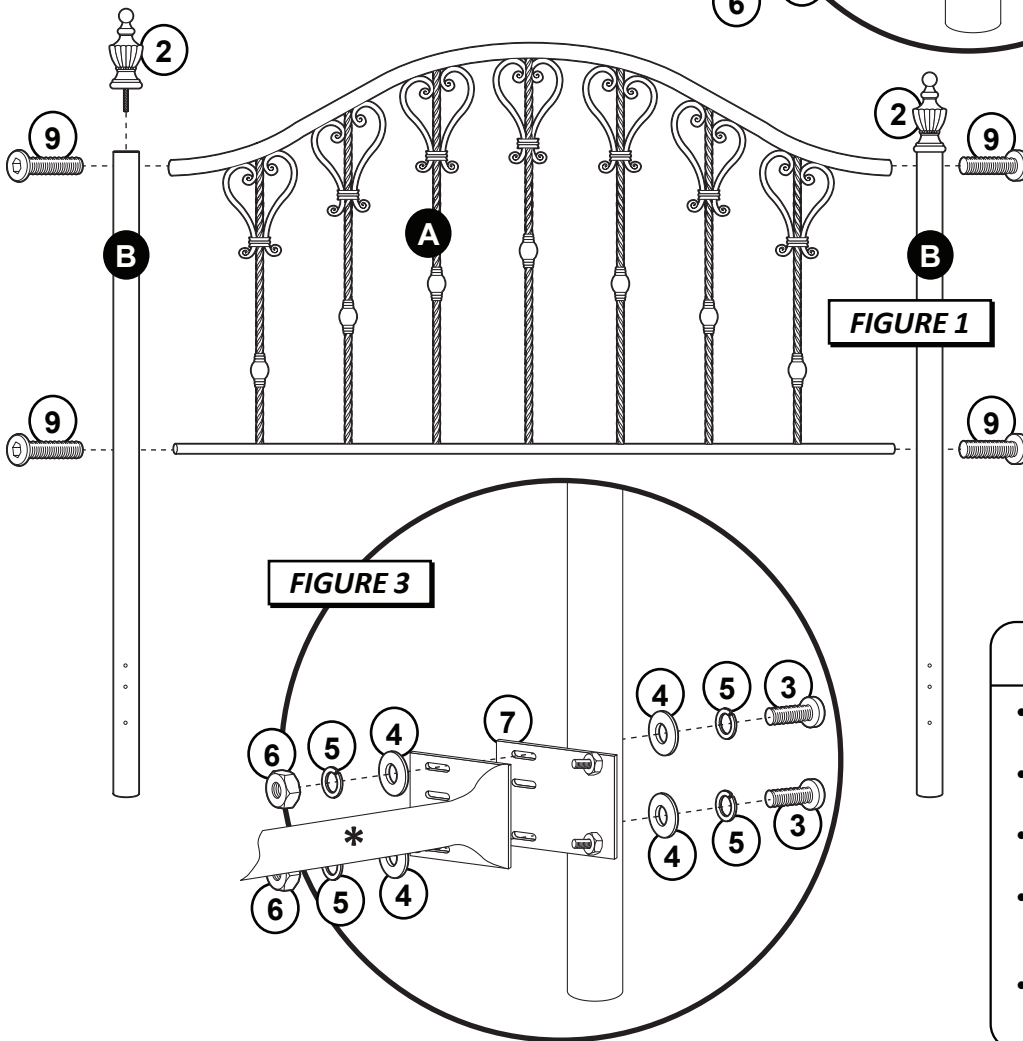










⚠ WARNING


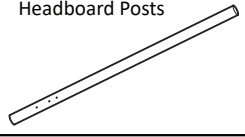

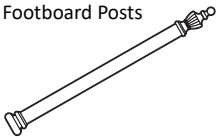
- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000


HDFBP

CODE	QTY	HARDWARE
1	4	¼" x 2¾" Allen Bolts 
2	2	Finials 
3	4	¼" x 1" Allen Bolts 
4	8	Flat Washers 
5	8	Spring Washers 
6	4	Hex Nuts 
7	1	Allen Wrench 
8	1	Open Wrench 
9	8	¼" x 1¼" Allen Bolts 

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	Headboard Grill 	B	2	Headboard Posts 
C	1	Footboard Grill 	D	2	Footboard Posts 

STEP 1 - Figure 1

Attach Headboard Posts (B) to Headboard Grill (A) using 2 Allen Bolts (9) per post. Attach Finials (2) to top of Posts (B) by screwing into place.

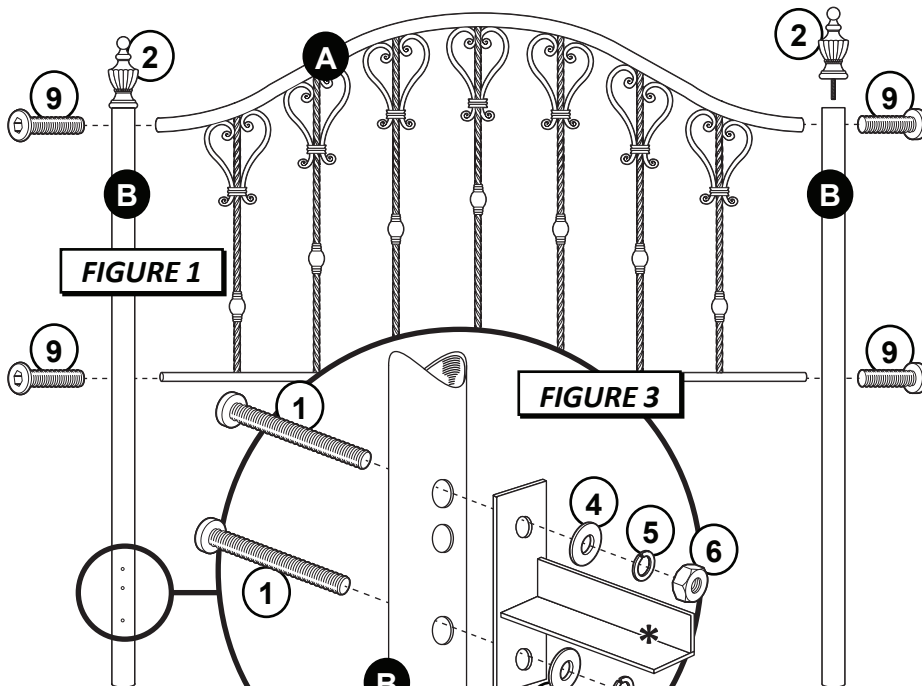

STEP 2 - Figure 2

Attach Footboard Posts (C) to Footboard Grill (D) using 2 Allen Bolts (9) per post.

STEP 3 - Figure 3

Attach Bed Frame (*Not Included) to each Headboard Post (B) using 2 Allen Bolts (1) from the back and 2 Flat Washers (4), 2 Spring Washers (5) and 2 Hex Nuts (6) per post.

STEP 4 - Figure 4

Attach Bed Frame (*Not Included) to each Footboard Post (D) using 2 Allen Bolts (3), 2 Spring Washers (5) and 2 Flat Washers (4) per post. Tighten all bolts with Allen Wrench (7) provided. Tighten all nuts using Open Wrench (8) provided. The assembly is now complete.

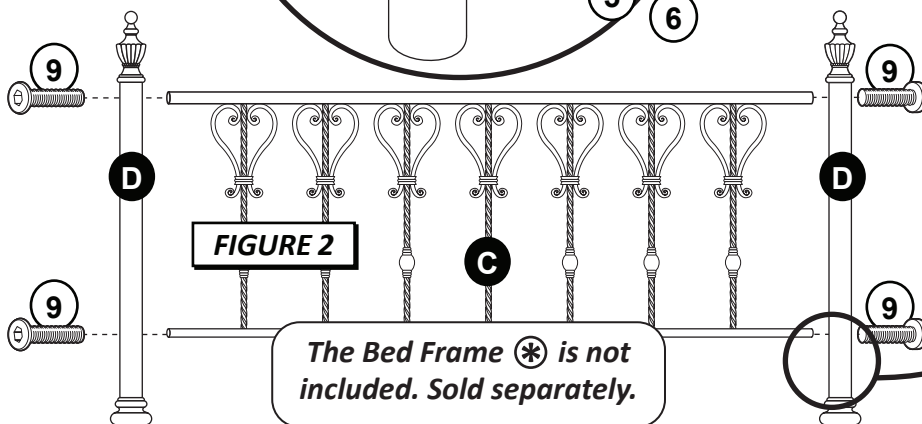


FIGURE 3

FIGURE 4

The Bed Frame * is not included. Sold separately.