


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

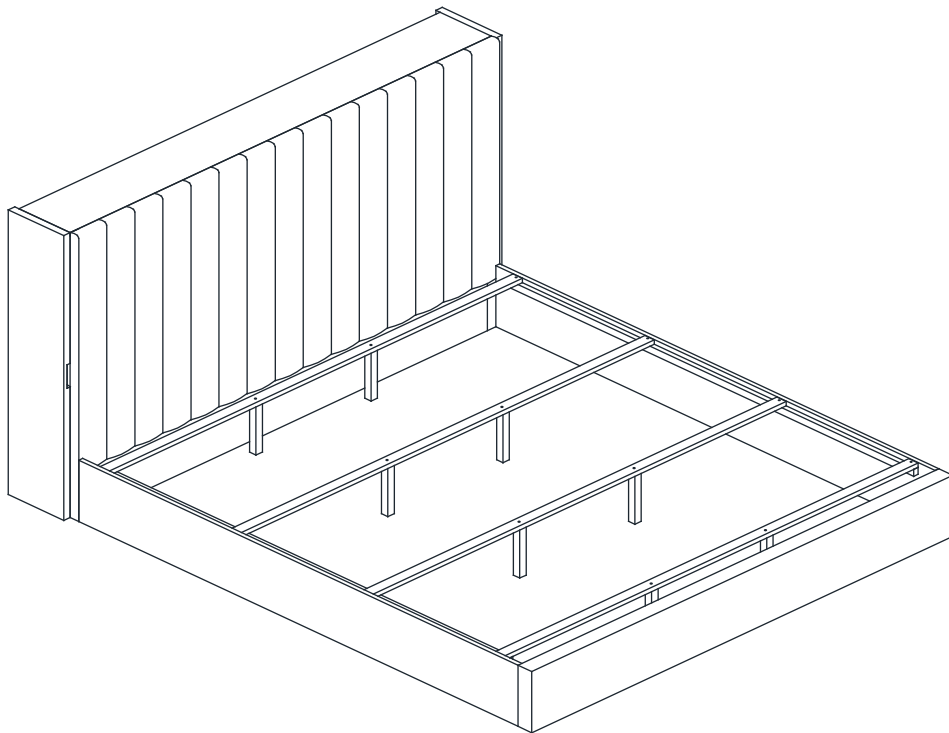

Fine Furniture for every stage of life

223111KE (B1&B2)
Eastern King Bed

ITEM: 223111KE (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A	HEADBOARD PANEL		1PC	H	LEFT SHELF INSIDE PANEL		1PC
B	HEADBOARD SUPPORT		3PCS	I	SHELF BACK PANEL		2PCS
C	HEADBOARD TOP PANEL		1PC	J	SHELF FRONT PANEL		6PCS
D	DIVIDER PANEL		2PCS	K	SHELF TOP PANEL		4PCS
E	LEFT BOOK CASE SIDE PANEL		1PC	L	SHELF BOTTOM PANEL		2PCS
F	RIGHT SHELF INSIDE PANEL		1PC	M	CASTER WITH SCREW		8SETS
G	RIGHT BOOKCASE SIDE PANEL		1PC	N	FOOTBOARD		1PC

B2 (BOX 2)

O	BED RAIL		2PCS	Q	BED SLAT SUPPORT WITH LEVELER		8PCS
P	BED SLAT		4PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 223111KE (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223111KE (B1)

1	SHORT BOLT (M8 x 30MM - RBW)		8PCS	6	FLAT HEAD SCREW (M4 x 32MM - RBW)		8PCS
2	MEDIUM BOLT (M6 x 35MM - RBW)		56PCS	7	CAM BOLT (7MMx 24MM - RBW)		4PCS
3	LONG BOLT (M6 x 40MM - RBW)		26PCS	8	CAM LOCK (15MM x 9.5MM - RBW)		4PCS
4	LOCK WASHER (1/4" x 12 Ø - RBW)		74PCS	9	SMALL ALLEN WRENCH (M4 x 100MM - BLK)		1PC
5	FLAT WASHER (1/4" x 19 Ø - RBW)		74PCS	10	BIG ALLEN WRENCH (M5 x 65MM - BLK)		1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.


ITEM: **223111KE (B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 1

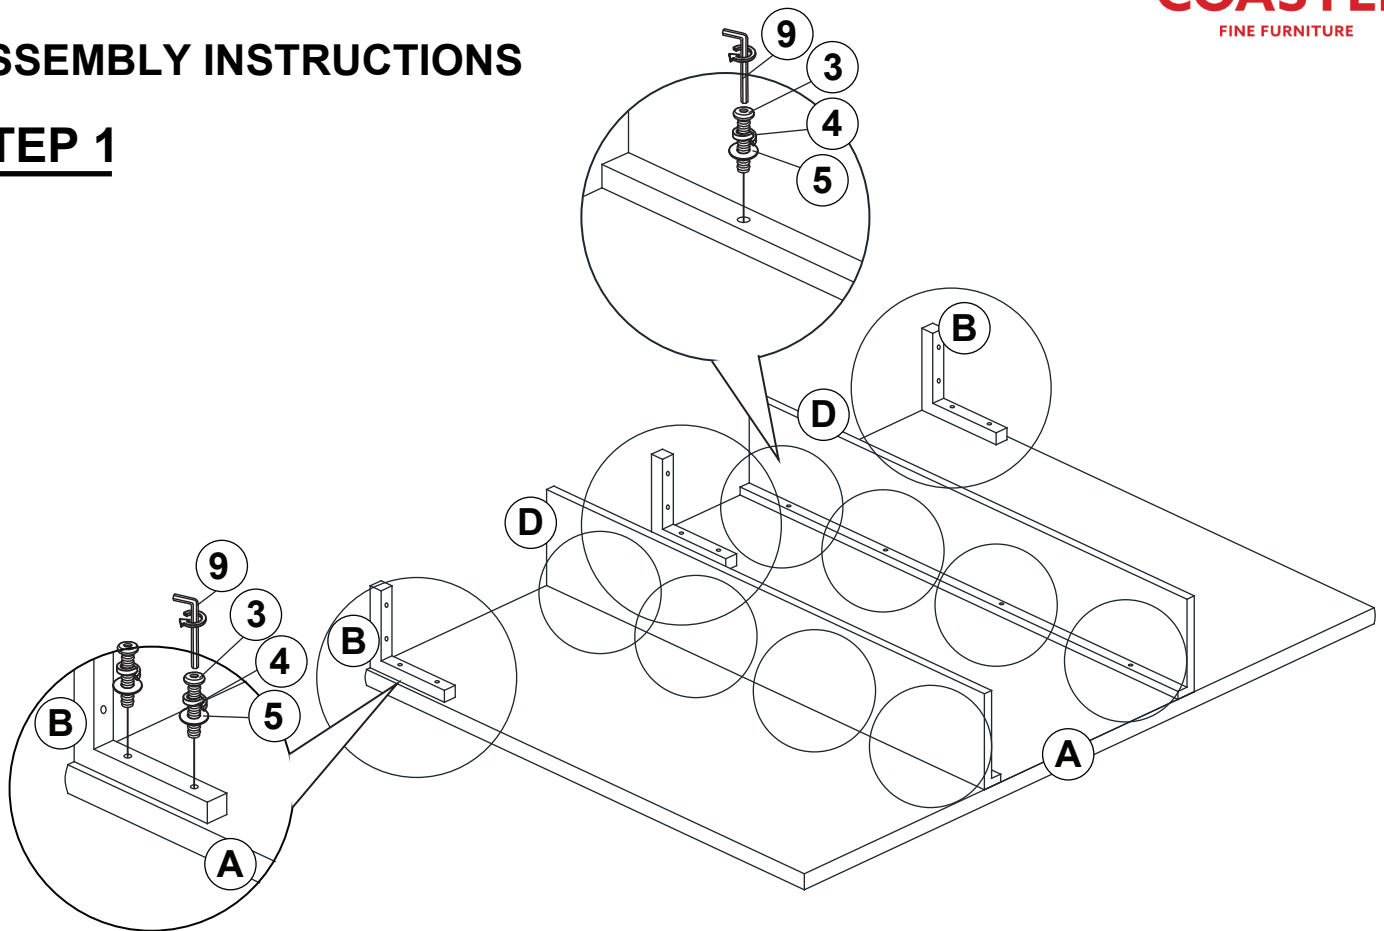

STEP 2

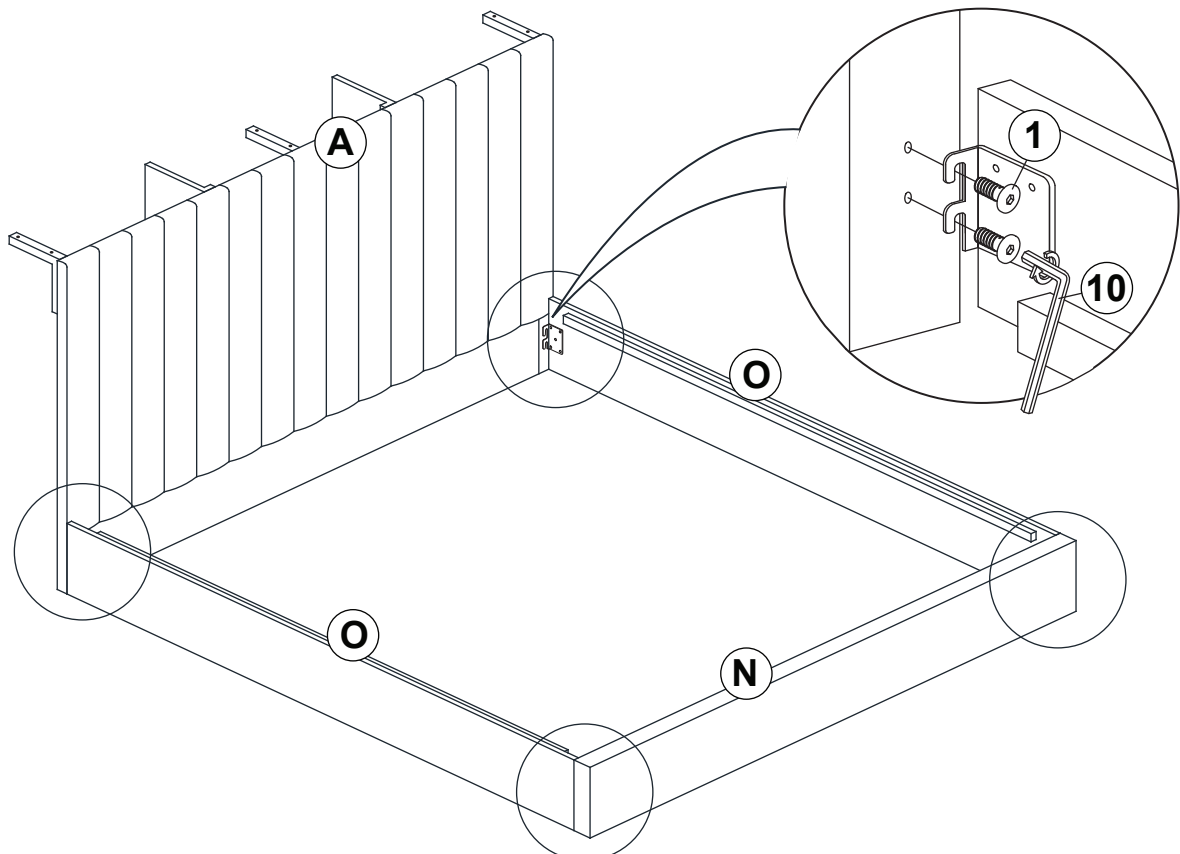


ITEM: **223111KE (B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 3

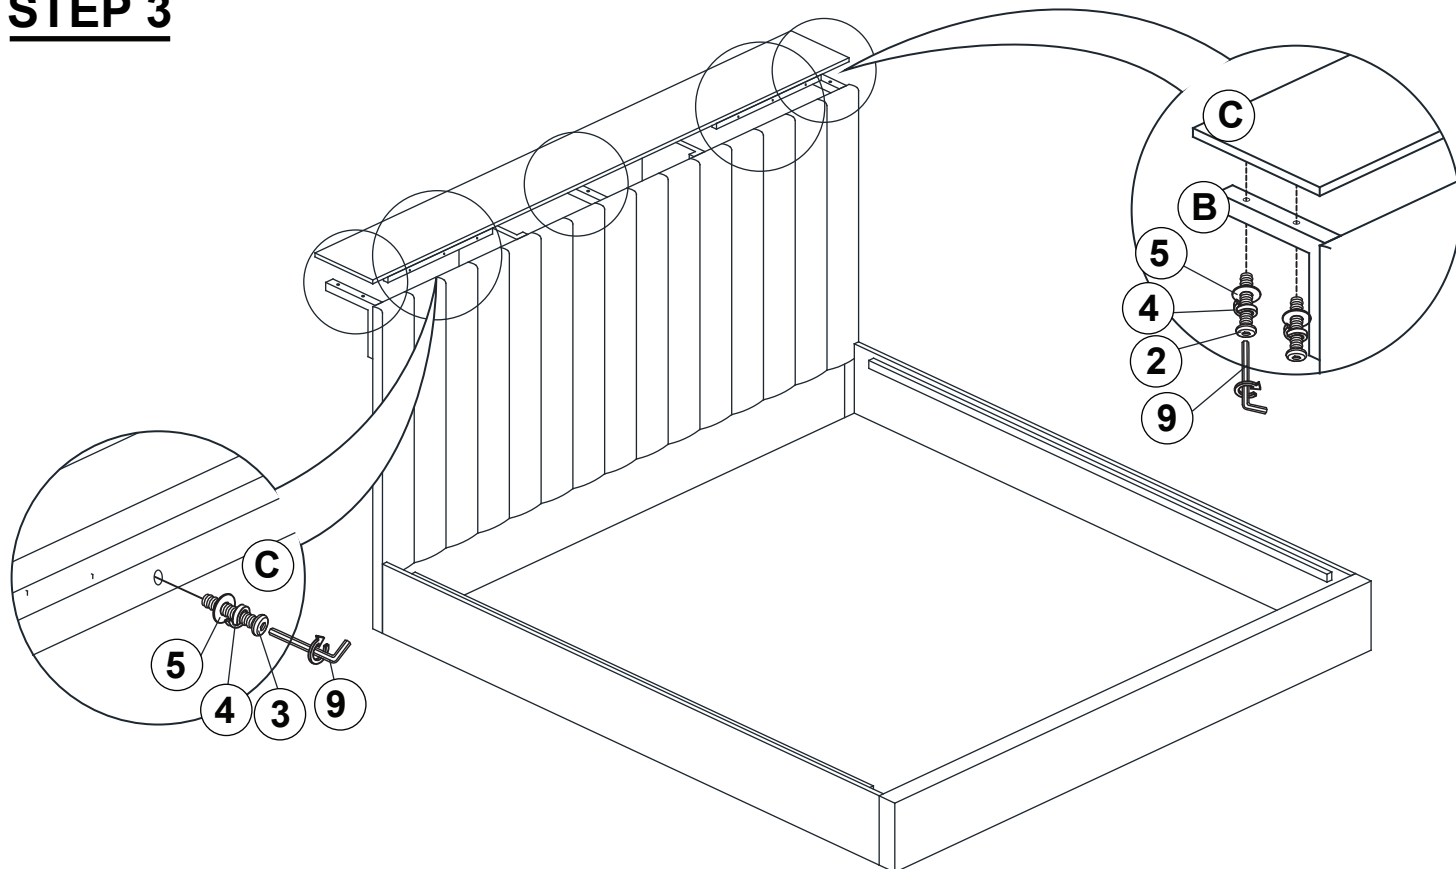

STEP 4

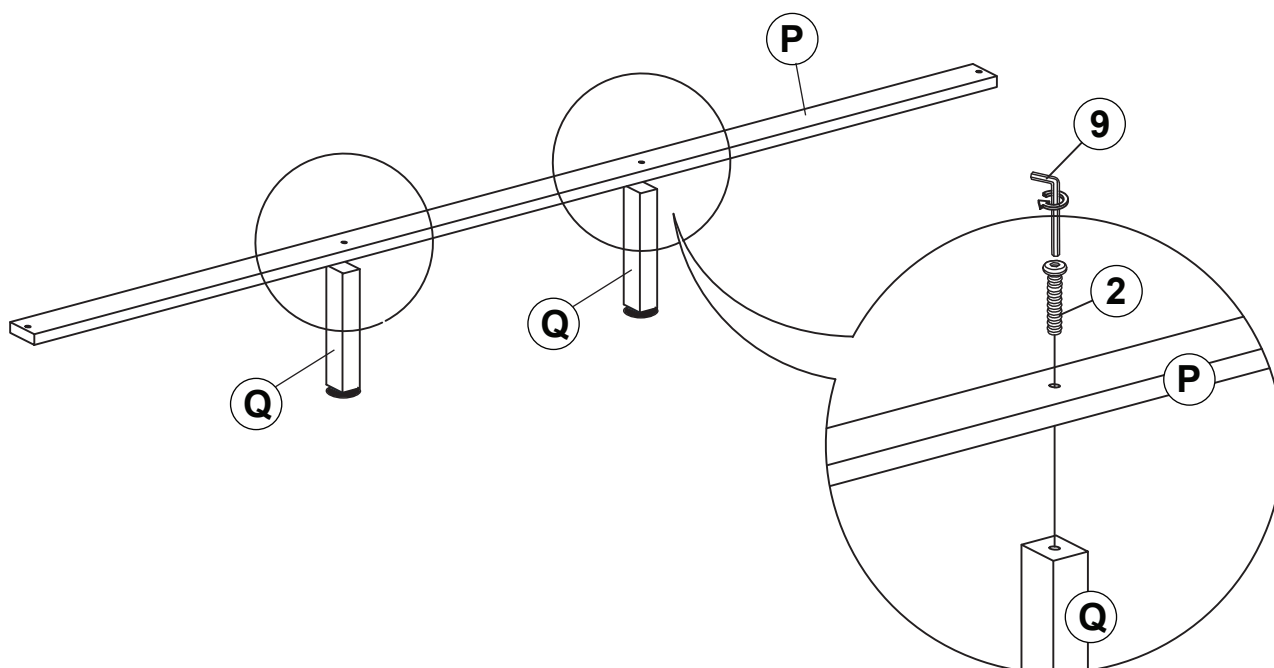


ITEM: **223111KE (B1&B2)**




ASSEMBLY INSTRUCTIONS


STEP 5

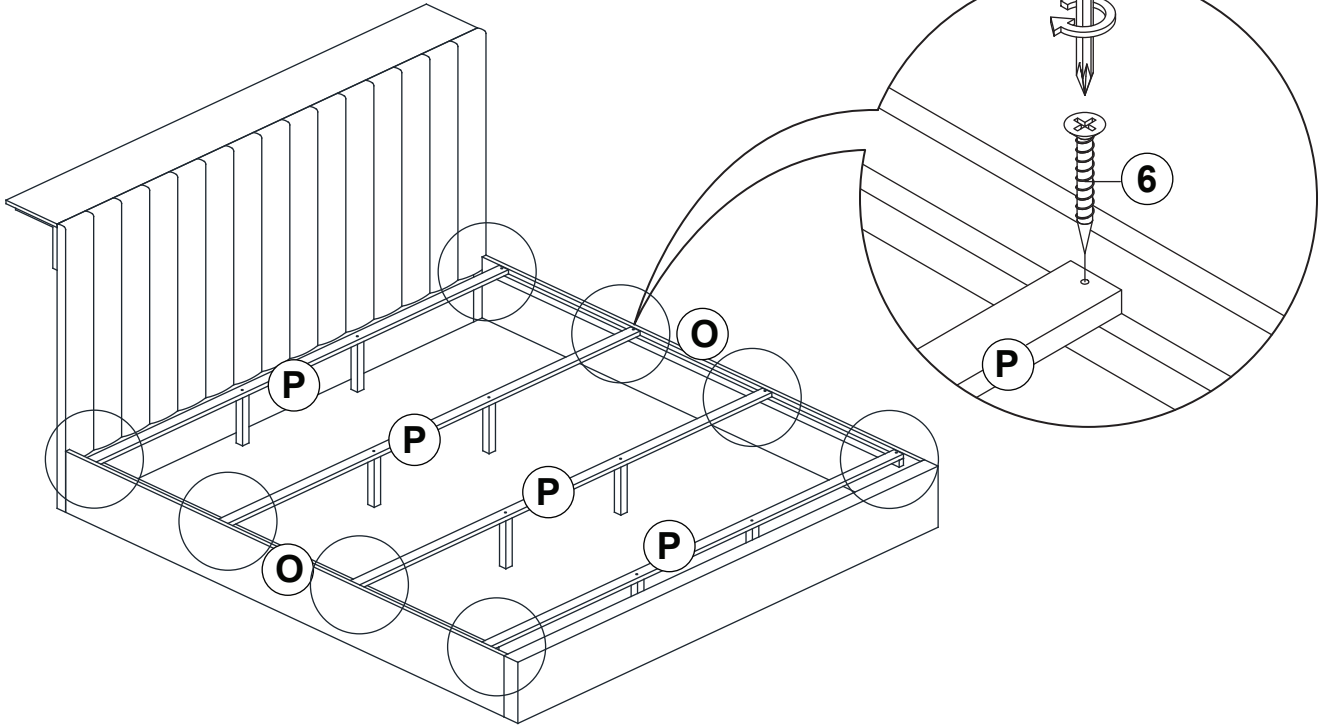

STEP 6

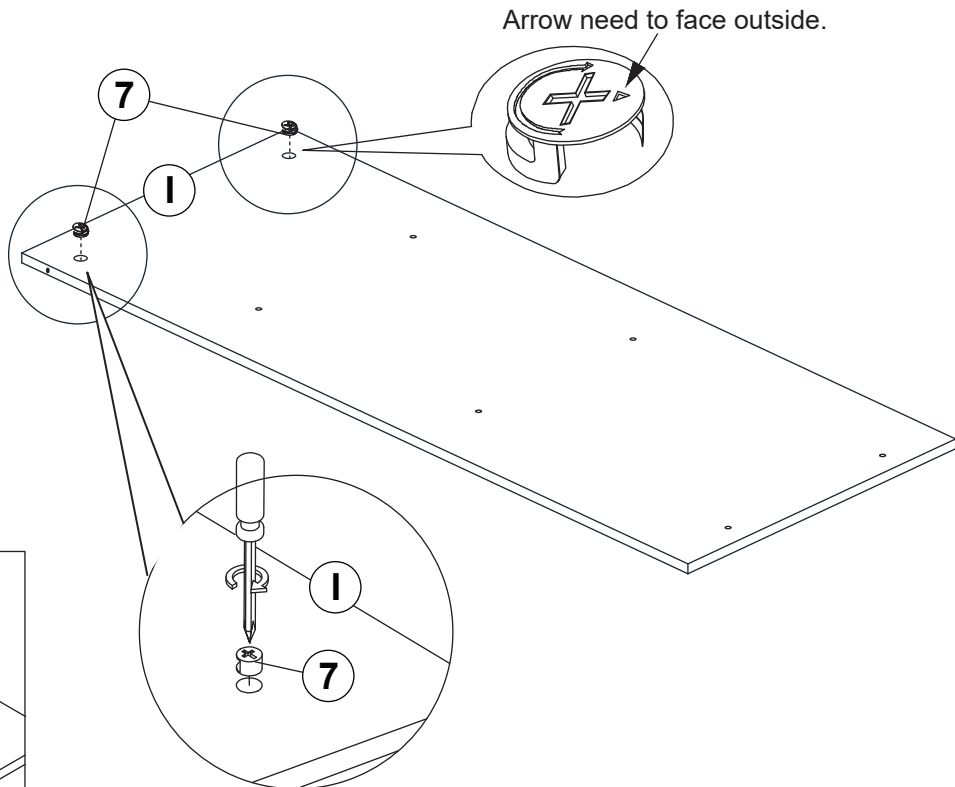


Assembled become like this.

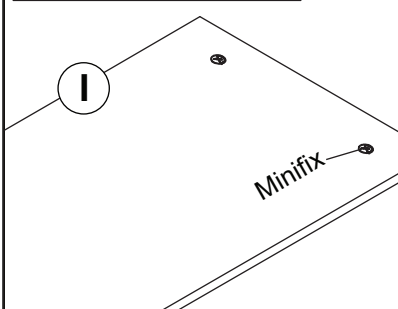


ITEM: **223111KE (B1&B2)**

ASSEMBLY INSTRUCTIONS


STEP 7

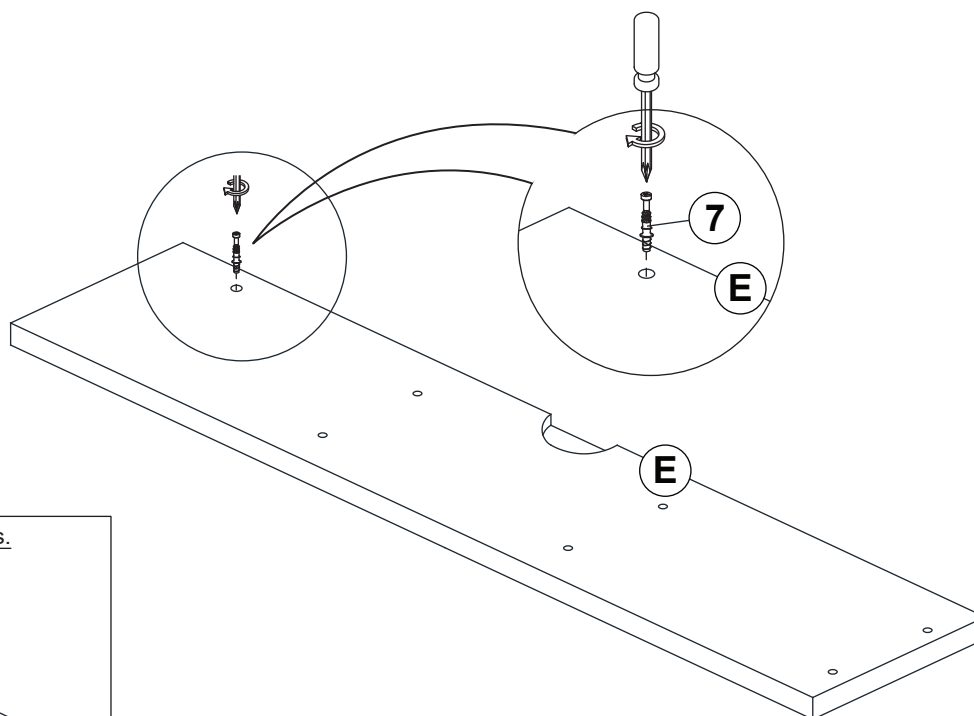


Assembled become like this.

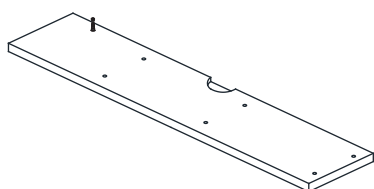

STEP 8

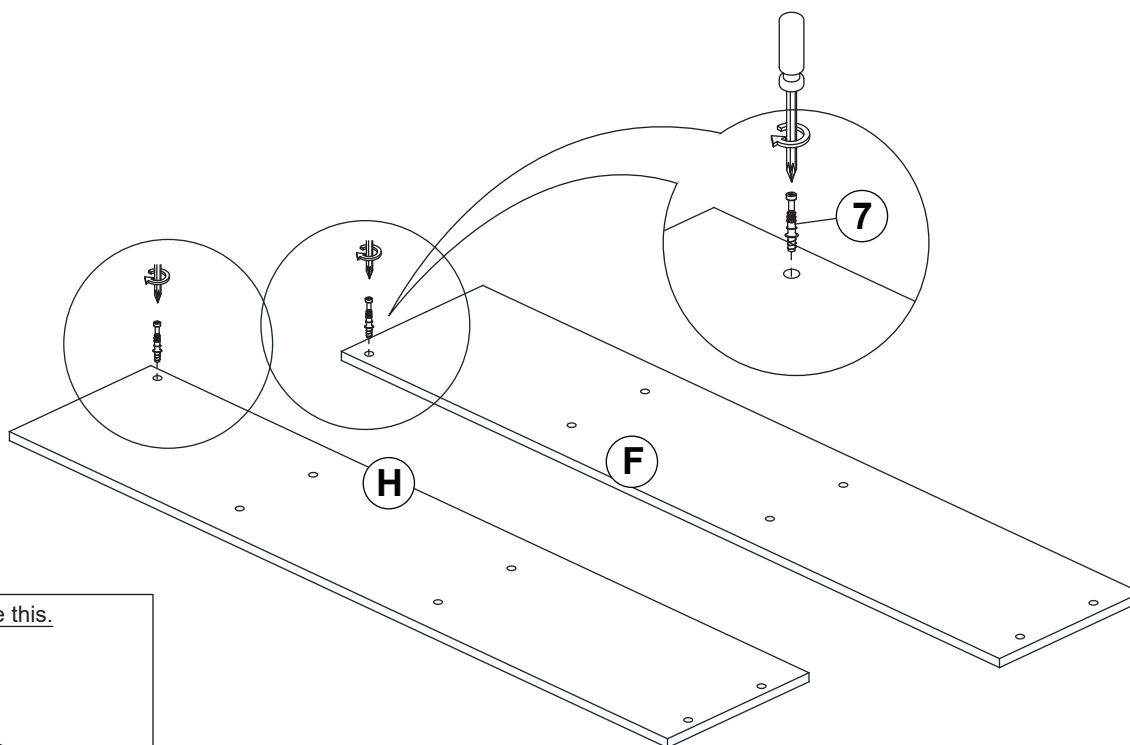


Assembled become like this.

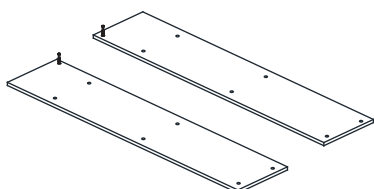


ITEM: **223111KE (B1&B2)**

ASSEMBLY INSTRUCTIONS


STEP 9

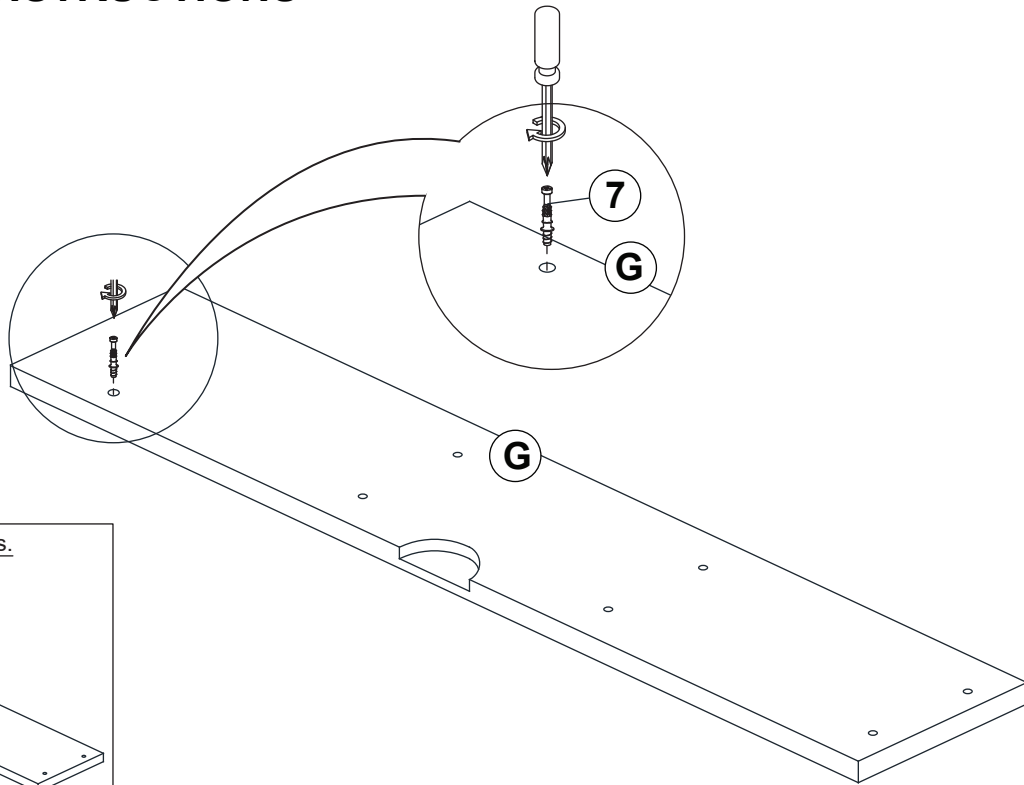

Assembled become like this.

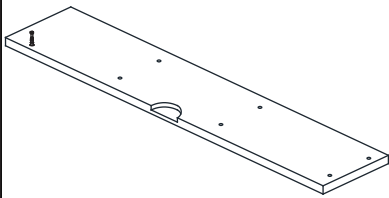


STEP 10

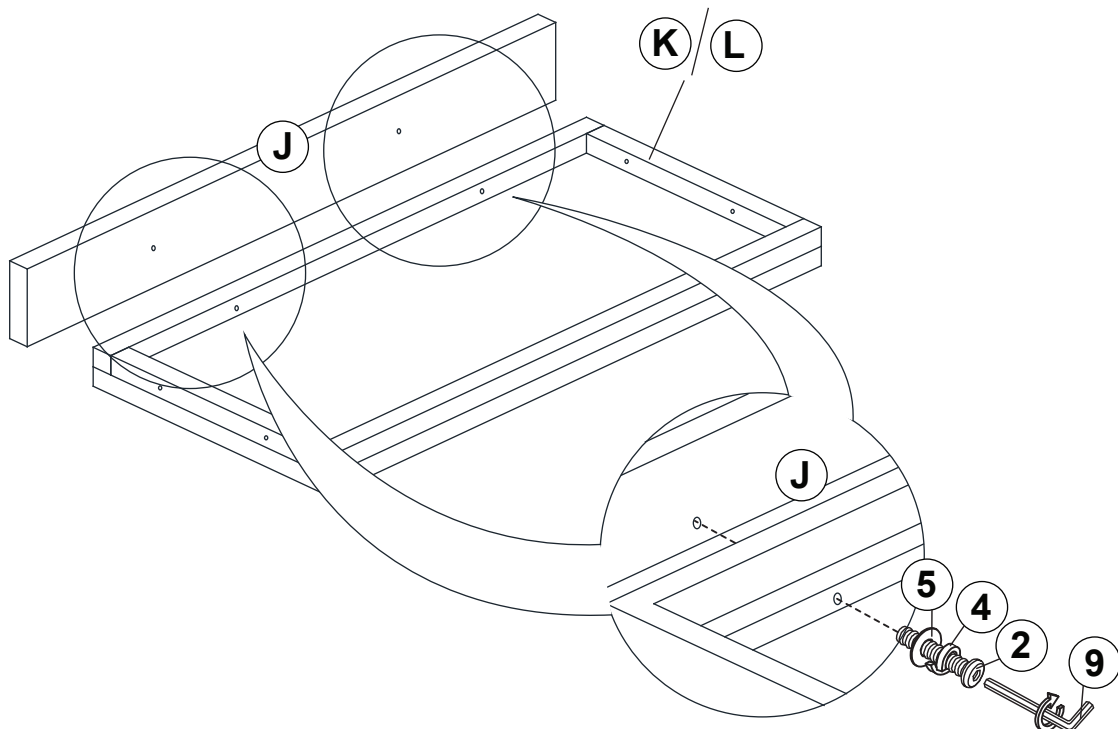


ITEM: **223111KE (B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 11

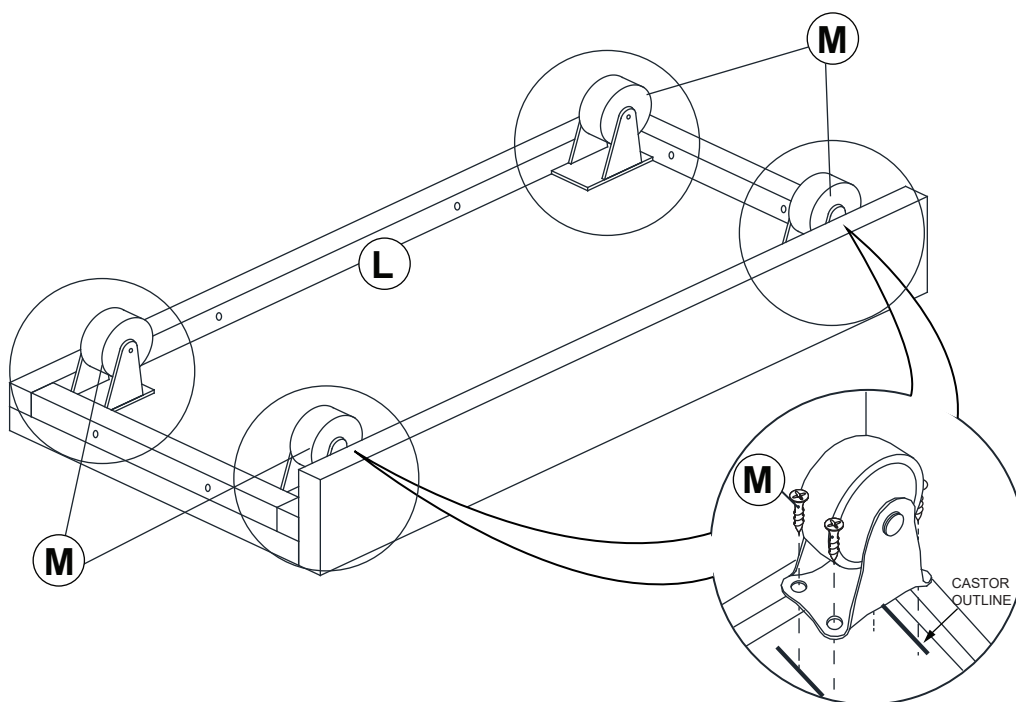


STEP 12

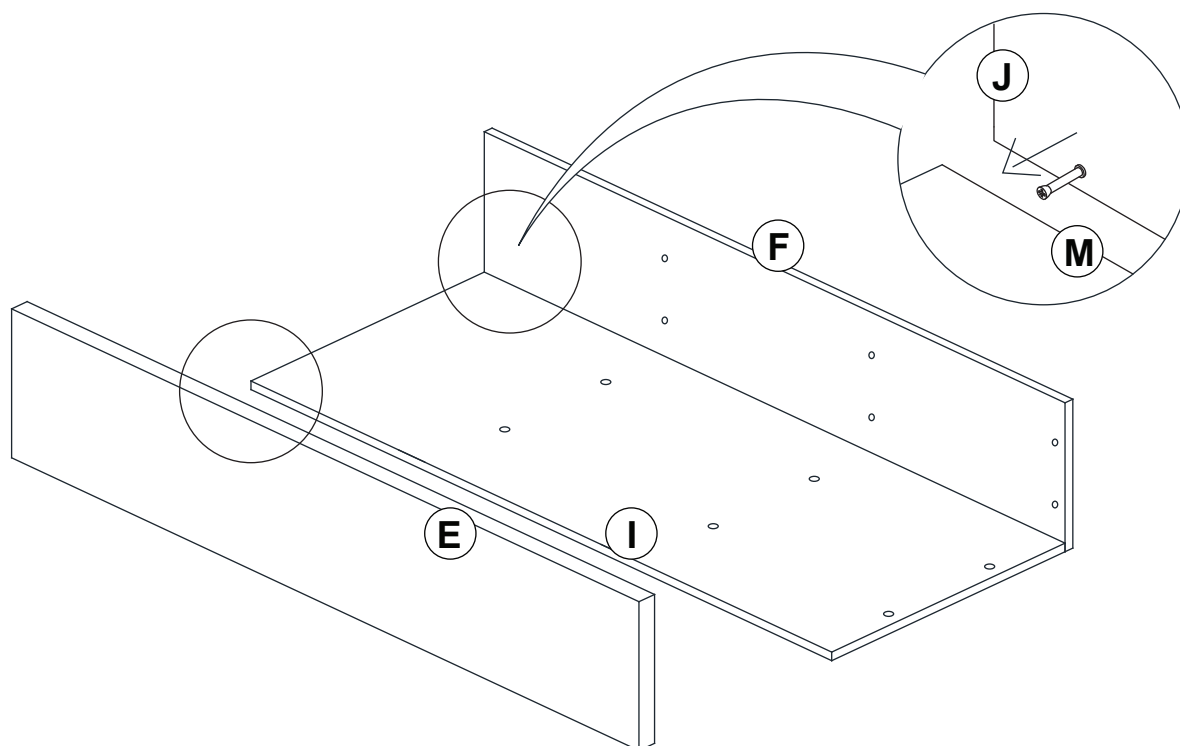


ITEM: **223111KE (B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 13

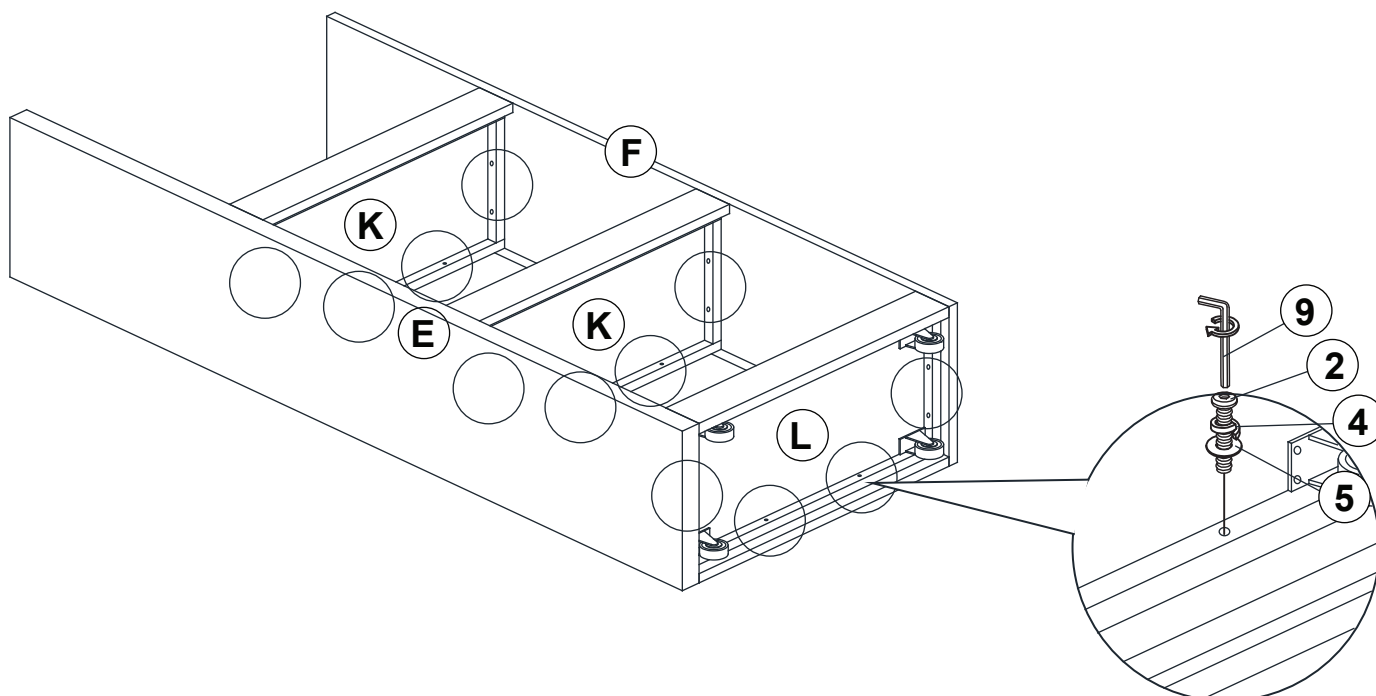


STEP 14

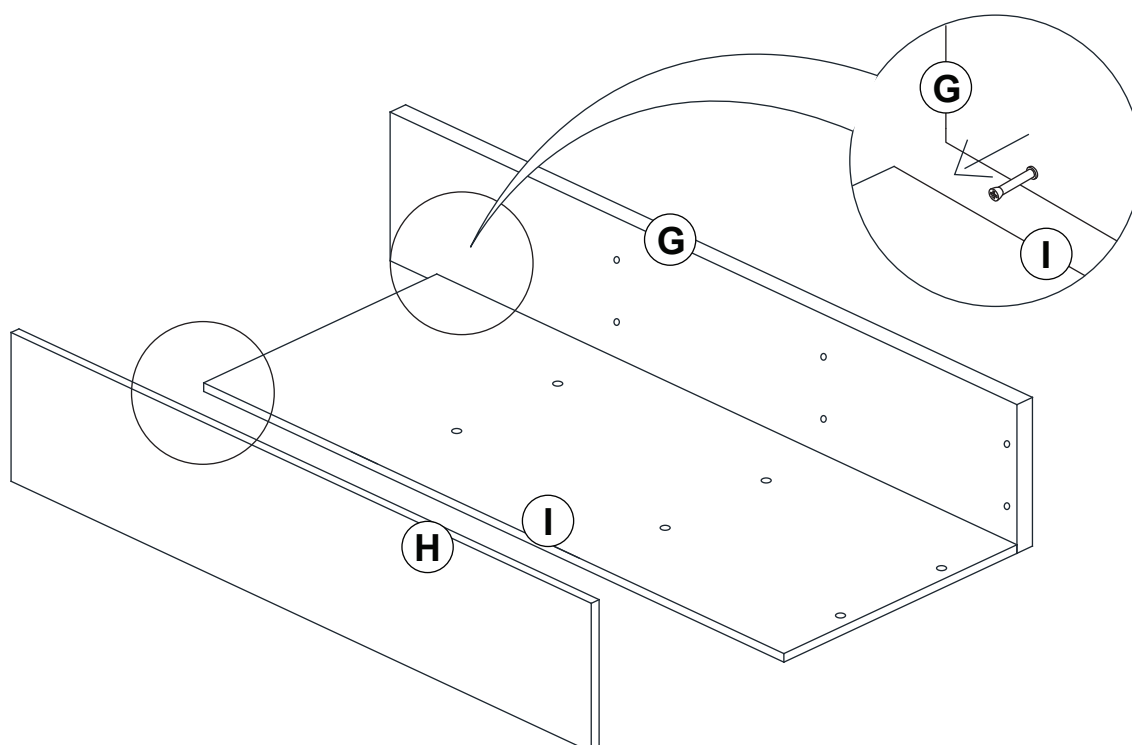


ITEM: **223111KE (B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 15

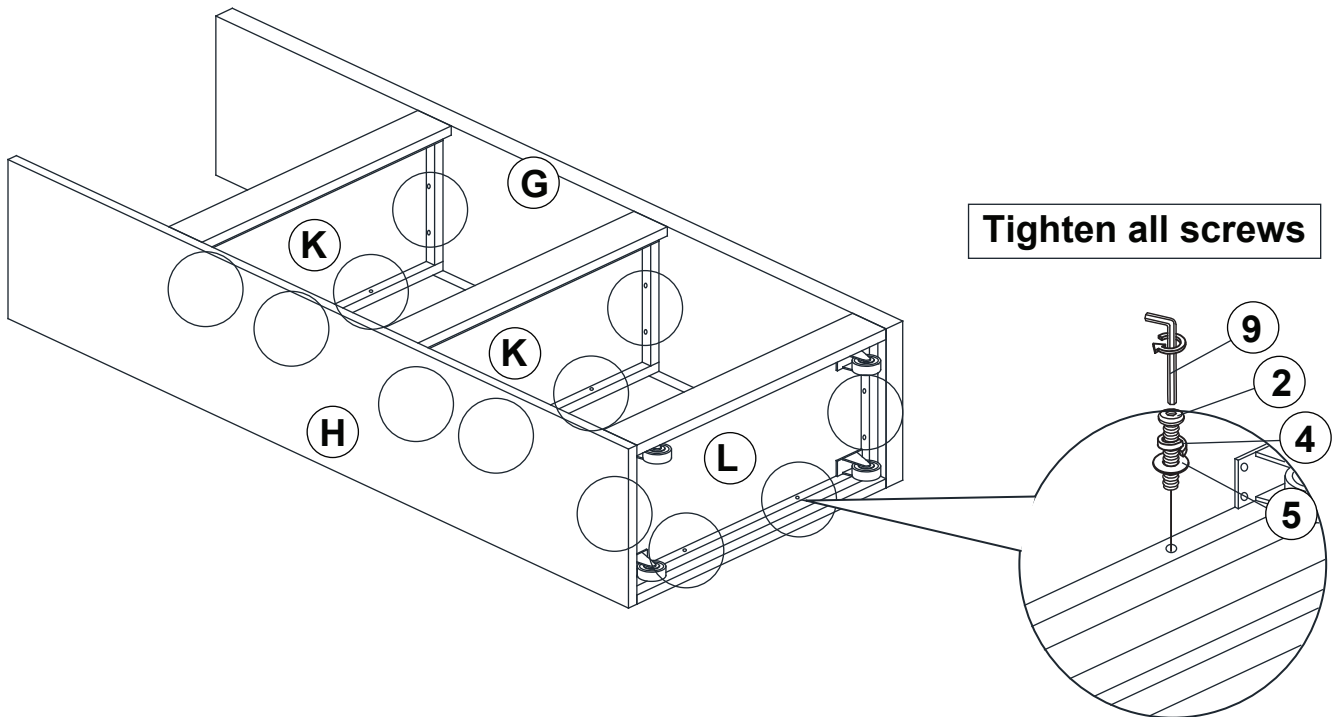

STEP 16

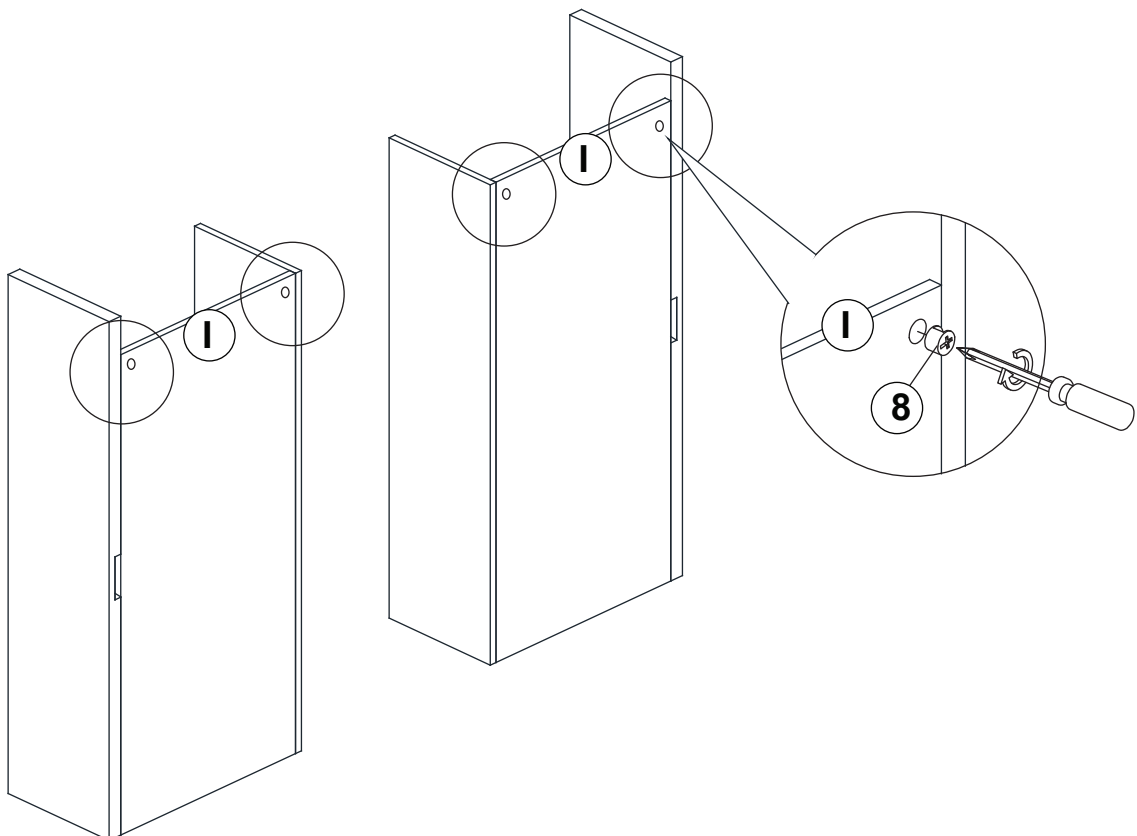


ITEM: **223111KE (B1&B2)**



ASSEMBLY INSTRUCTIONS

STEP 17


COMPLETE

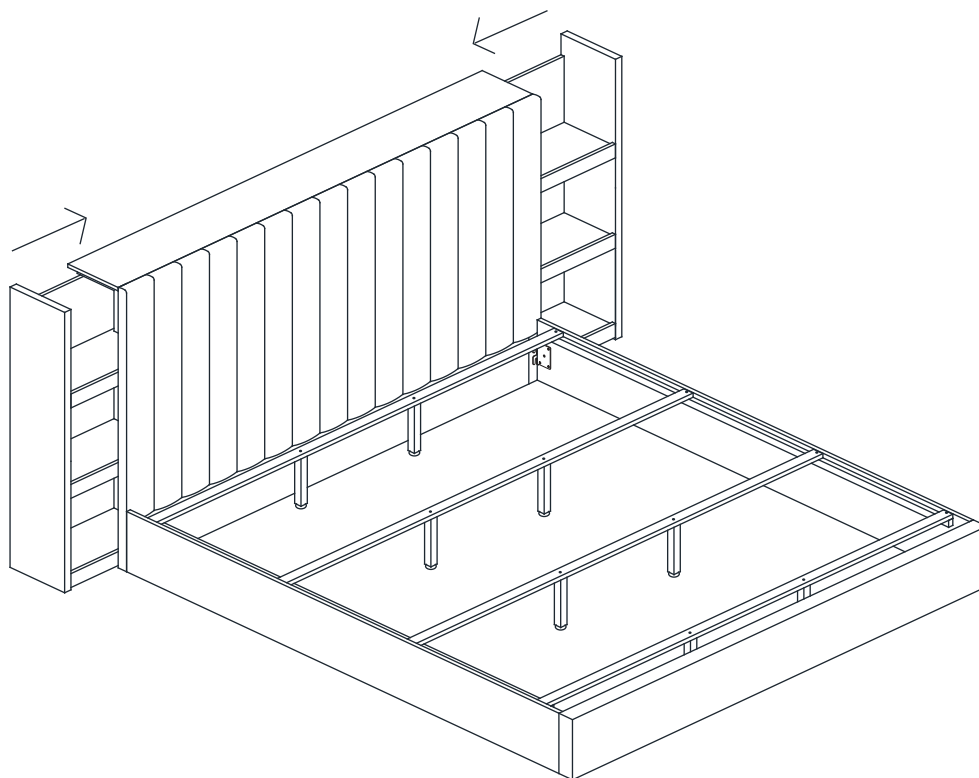

ITEM: **223111KE (B1&B2)**



Inner Size : 76.50"W x 80.00"D

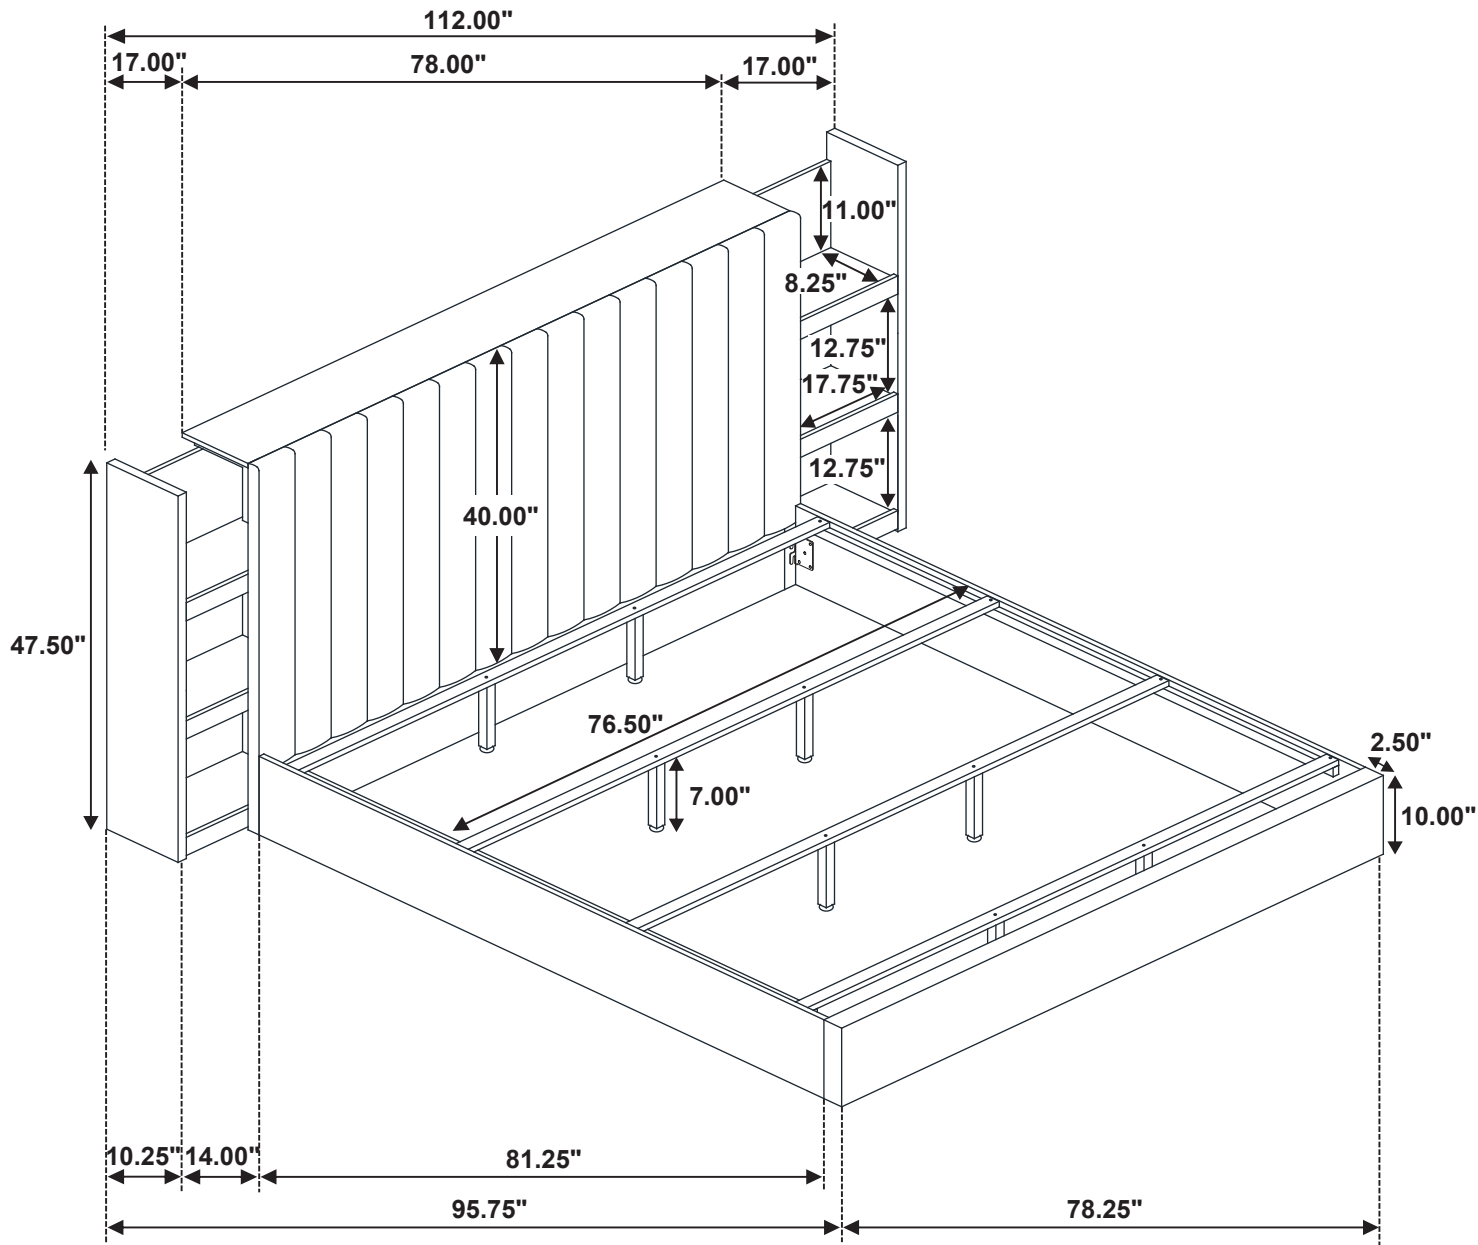

Note : Dimension tolerance $\pm 5\%$