

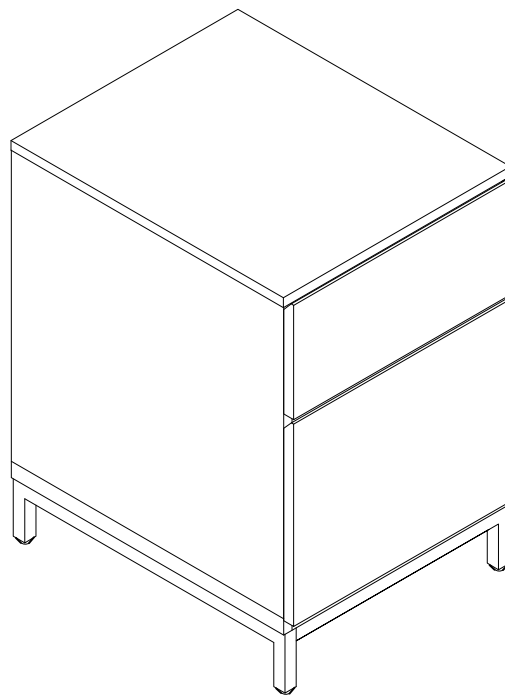
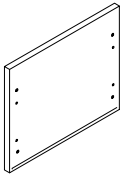





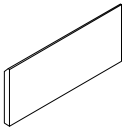




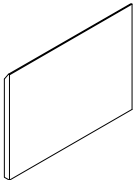
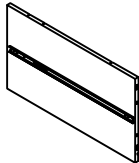
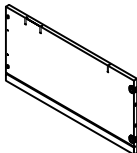










File Cabinet
CF1320

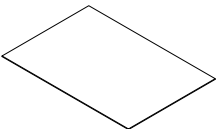

PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Back Panel 1 PC
F 	G 	H 	I 	J 
Base 1 PC	Top Drawer Front Panel 1 PC	Top Drawer Left Panel 1 PC	Top Drawer Right Panel 1 PC	Top Drawer Back Panel 1 PC
K 	L 	M 	N 	O 
Top Drawer Bottom Panel 1 PC	Bottom Drawer Front Panel 1 PC	Bottom Drawer Left Panel 1 PC	Bottom Drawer Right Panel 1 PC	Bottom Drawer Back Panel 1 PC
P 				
Bottom Drawer Bottom Panel 1 PC				

HARDWARE LIST

<div>#1</div>  <div>Ø8*30mm</div>	<div>#2</div> 	<div>#3</div> 	<div>#4</div> 	<div>#5</div> 
<div>Wood Dowel</div> <div>20 PCS (Extra 1)</div>	<div>Bolt</div> <div>4 PCS (Extra 1)</div>	<div>Flat Washer</div> <div>4 PCS (Extra 1)</div>	<div>Allen Wrench</div> <div>1 PC</div>	<div>Screw</div> <div>12 PCS (Extra 1)</div>
<div>#6</div>  <div>Aluminum Rod</div> <div>2 PCS</div>				

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Please do not use tools to assemble this unit unless specifically indicated.

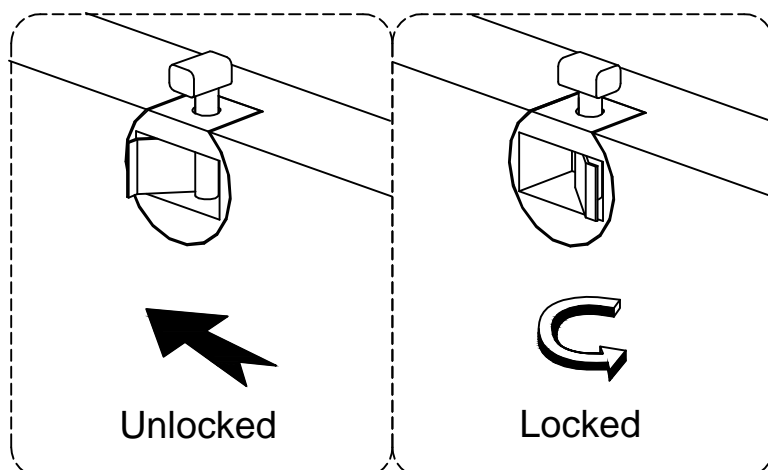


Reference the images above any time the instructions state "lock the hardware".
Note: Be sure to check all hardware is locked when completed.


Step 1. Attach top drawer panels (parts H & I) to top drawer back panel (part J) using wood dowels (part #1) and lock the hardware. Slide top drawer bottom panel (part K) into grooves of assembled unit (parts H, I & J). Attach top drawer front panel (part G) to assembled unit (parts H, I & K) using wood dowels (part #1) and lock the hardware.

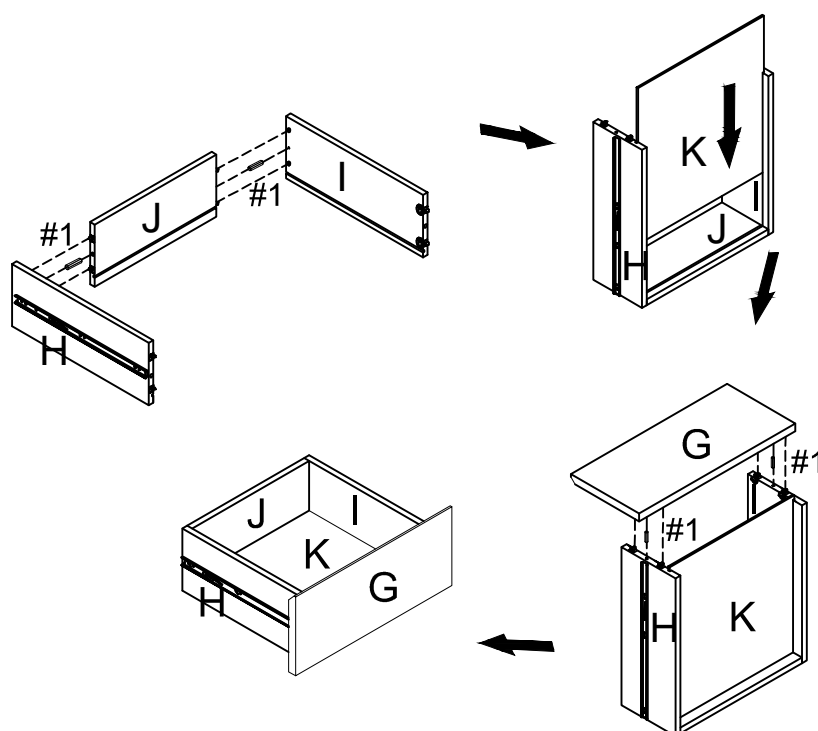


Step 2. Attach bottom drawer panels (parts M & N) to bottom drawer back panel (part O) using wood dowels (part #1) and lock the hardware. Slide bottom drawer bottom panel (part P) into grooves of assembled unit (parts M, N & O). Attach bottom drawer front panel (part L) to assembled unit (parts M, N & P) using wood dowels (part #1) and lock the hardware. Insert aluminum rods (part #6) into place as shown.

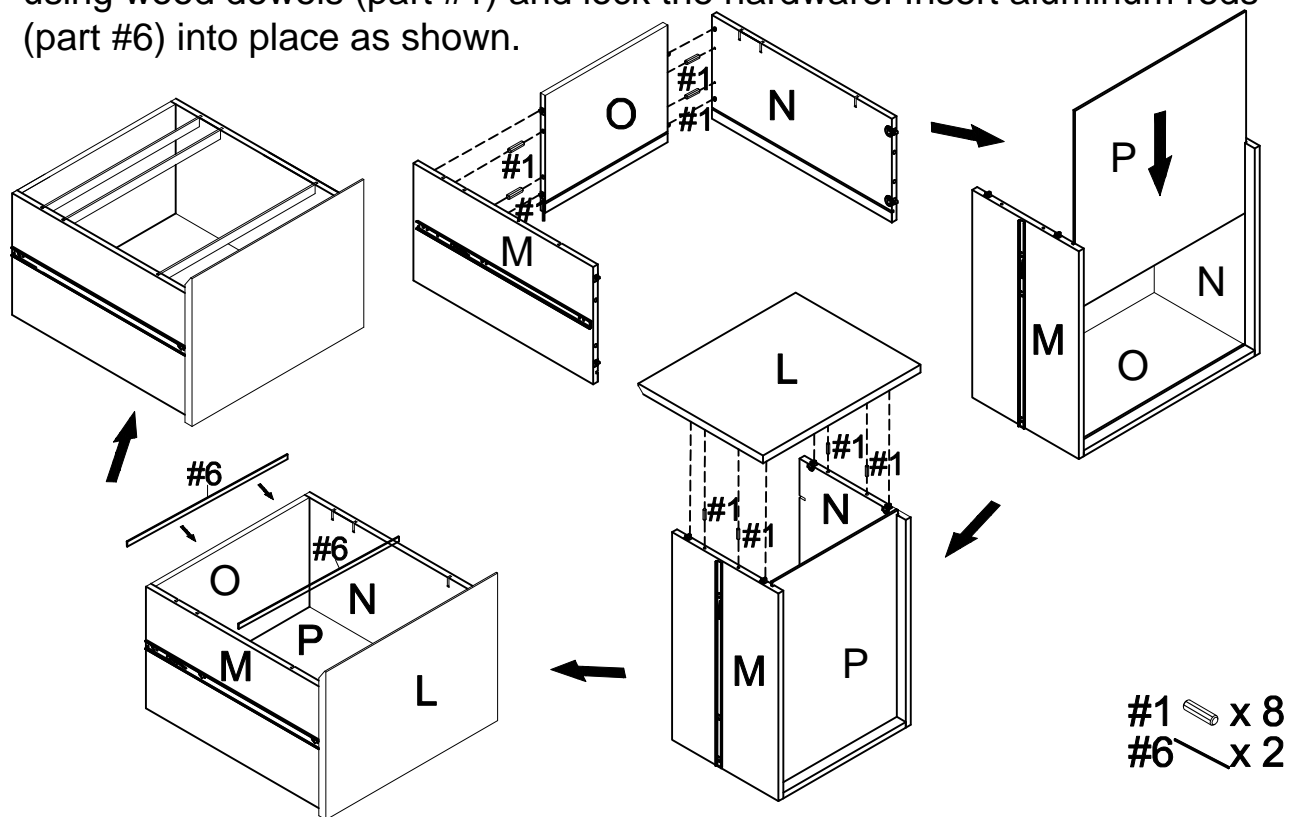

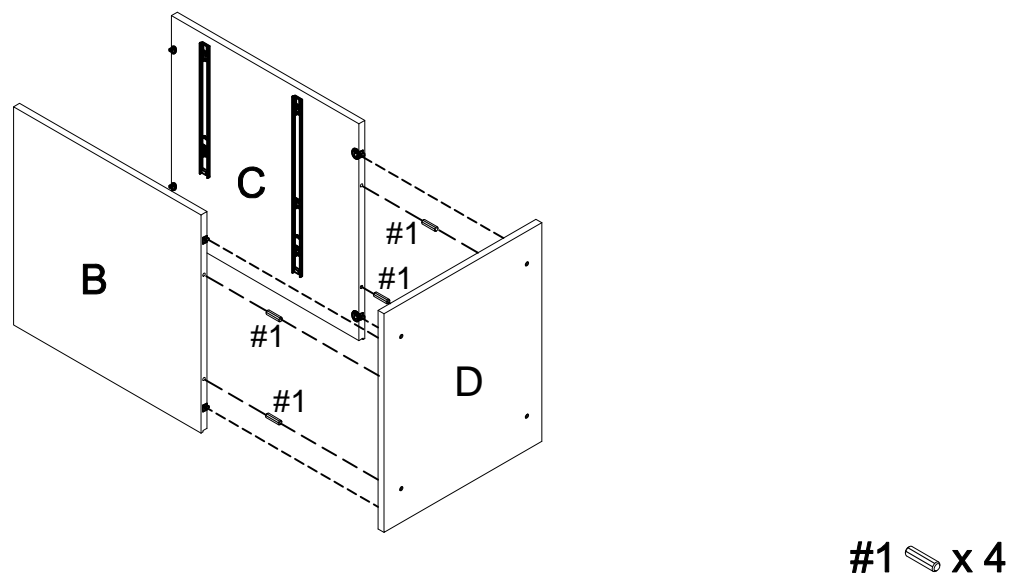


Step 3. Attach panels (parts B & C) to bottom panel (part D) using wood dowels (part #1) and lock the hardware.

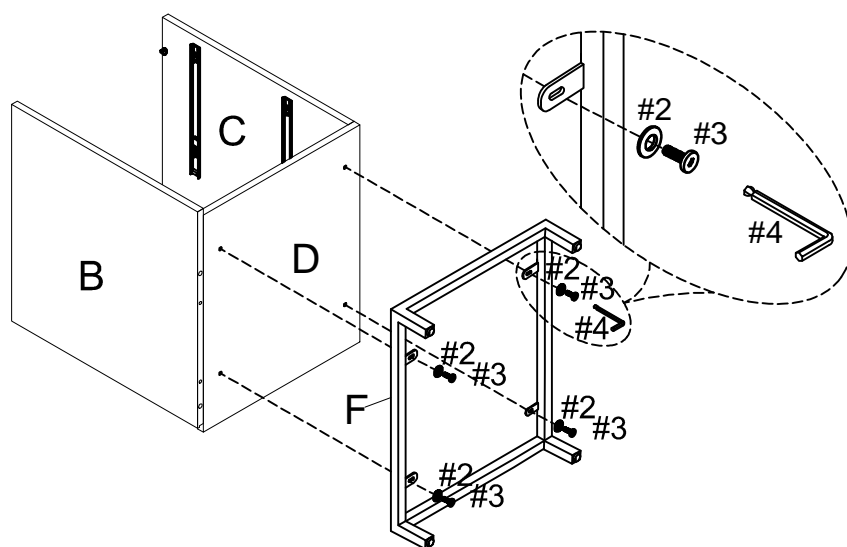


Step 4. Attach base (part F) to bottom panel (part D) using bolts (part #2), flat washer (part #3) and allen wrench (part #4).




#2  x 4
 #3  x 4
 #4  x 1

Step 5. Carefully turn unit upright. Attach top panel (part A) to assembled unit (parts B & C) using wood dowels (part #1) and lock the hardware.

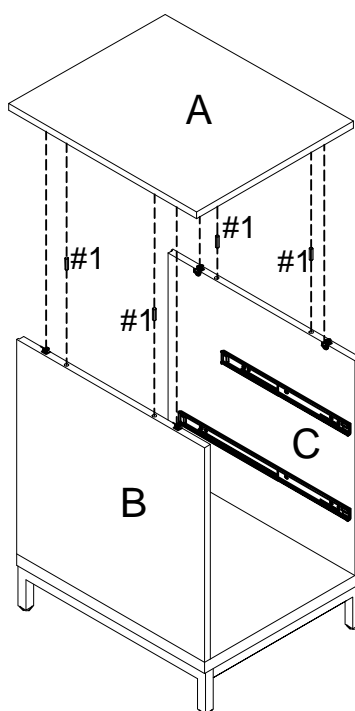

#1  x 4

Step 6. Attach back panel (part E) to assembled unit (parts A, B, C & D) using screws (part #5) and phillips head screwdriver.

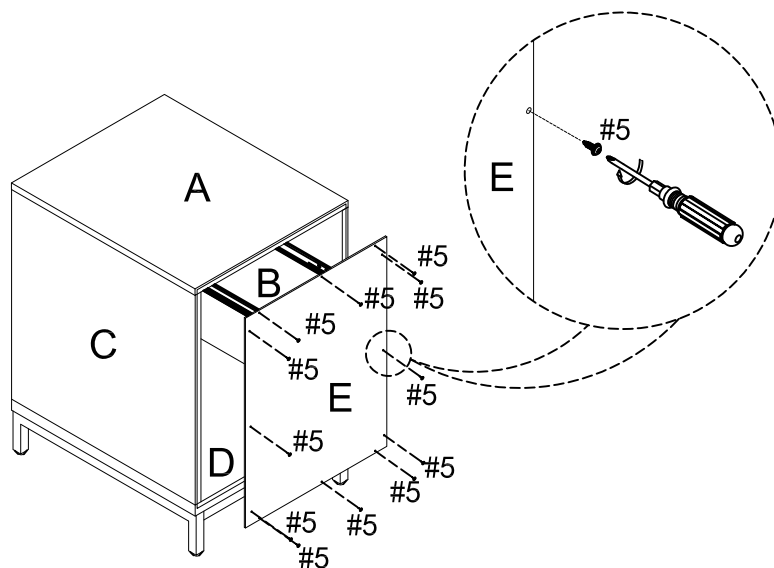

#5  x 12

Step 7. Slide assembled drawers into place.

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

