
Riverside FURNITURE

email: info@riverside-furniture.com

Rosalie
Home Office
Assembly Instructions

Made in Viet Nam




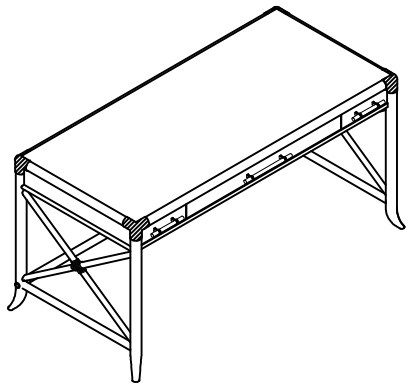


30631
Writing Desk


Warning :
- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.

Important Use Information: We recommend using coasters, placemats and trivets when placing hot or cold containers on this item. It is also recommended to quickly cleanup any spills to minimize exposure to moisture. Doing so will prolong the life and look of the item for many years.


Components & Hardware List

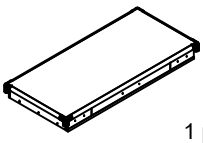Top Assembly  Ⓐ 1 pc.	Leg Assembly (Left)  Ⓑ 1 pc.	Leg Assembly (Right)  Ⓒ 1 pc.	Allen Head Bolt M8-32 x 35mm  Ⓓ 12 pcs.	Lock Washer Ø9 x Ø13mm  Ⓔ 12 pcs.
Flat Washer Ø8 x Ø20mm  Ⓕ 12 pcs.	Stretcher  Ⓖ 1 pc.	Wood Screw Ø4 x 50mm  Ⓗ 2 pcs.	Allen Key 4 x 110mm  Ⓘ 1 pc.	Furniture Tipping Restraint Kit  Ⓙ 1 pc.
Tool Required (not provided) Phillips Screwdriver 				


STEP 1:Remove two outside drawers

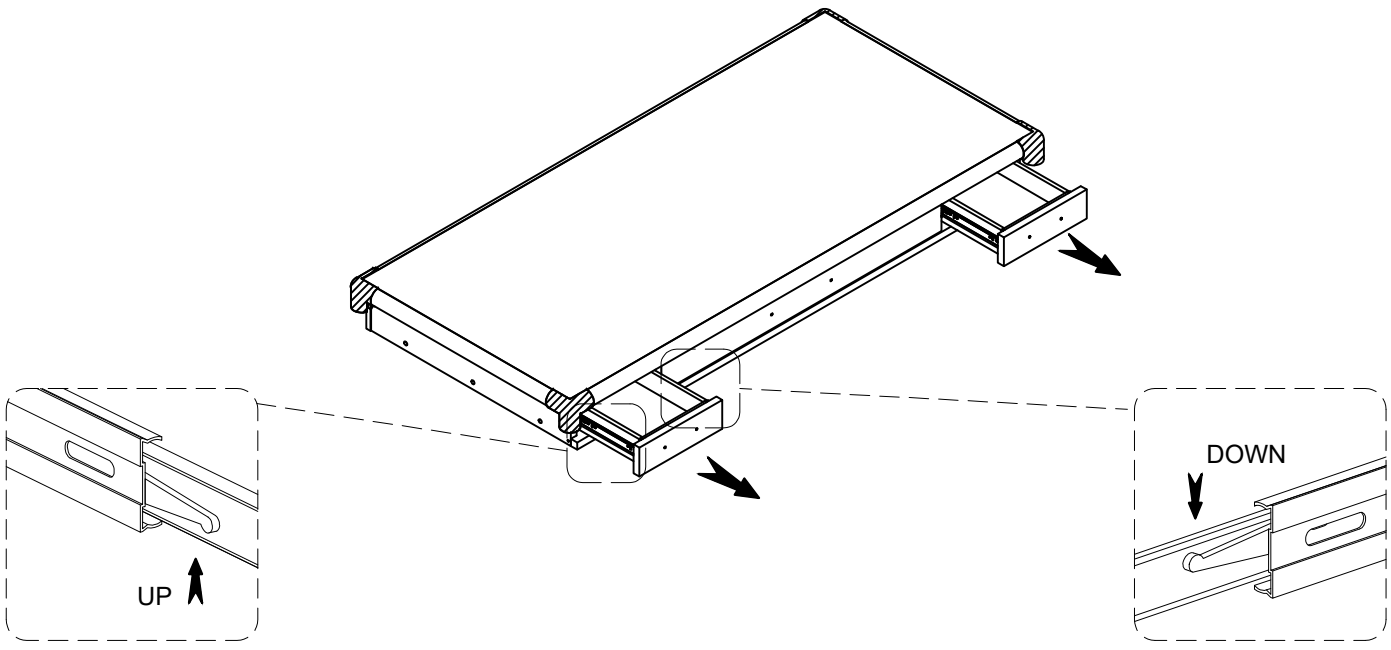


STEP 2: 1) Attach leg assemblies (B&C), do not fully tighten.
2) Slide stretcher (G) into place.
3) Tighten bolts (D,E,F)
4) Tighten wood screw (H), do not over tighten.

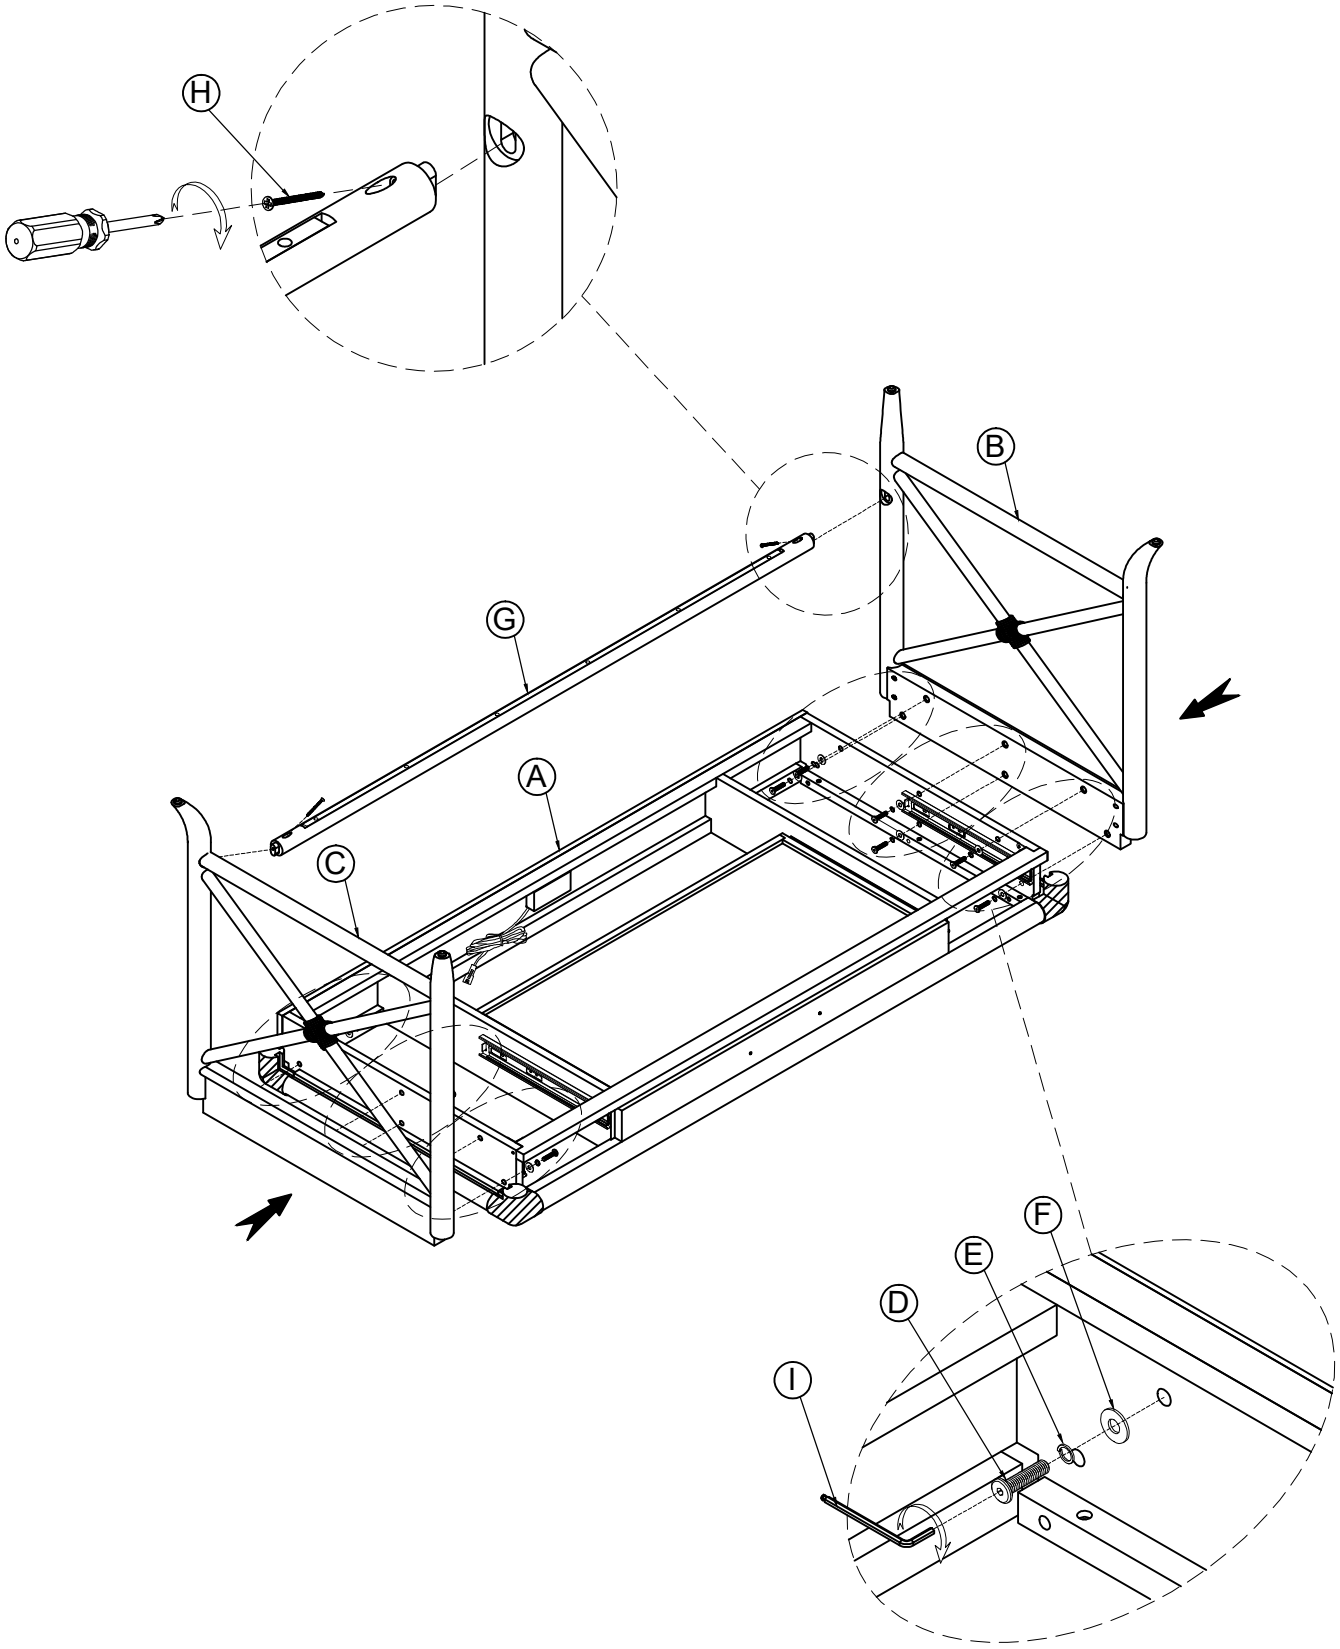

STEP 3: Install two outside drawers

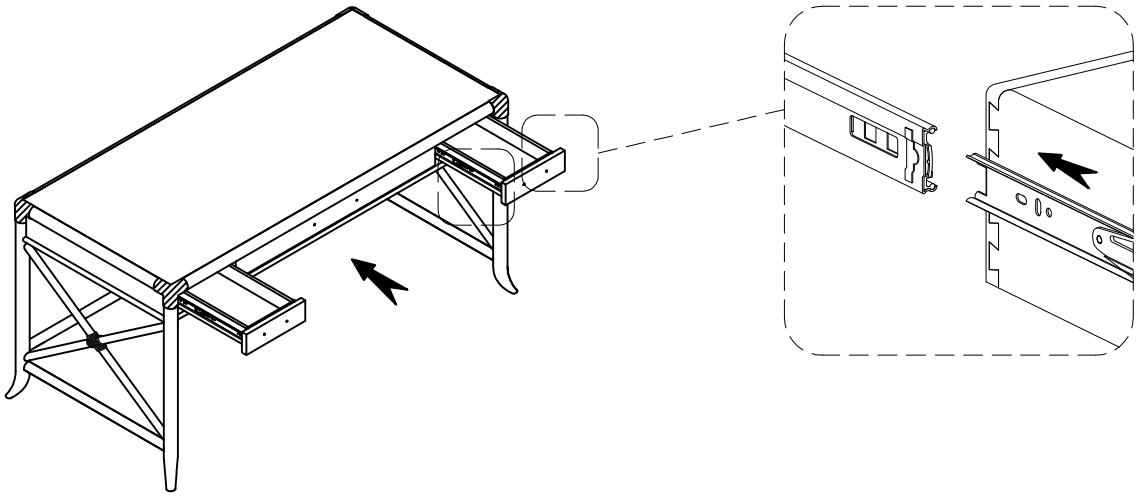


STEP 4:

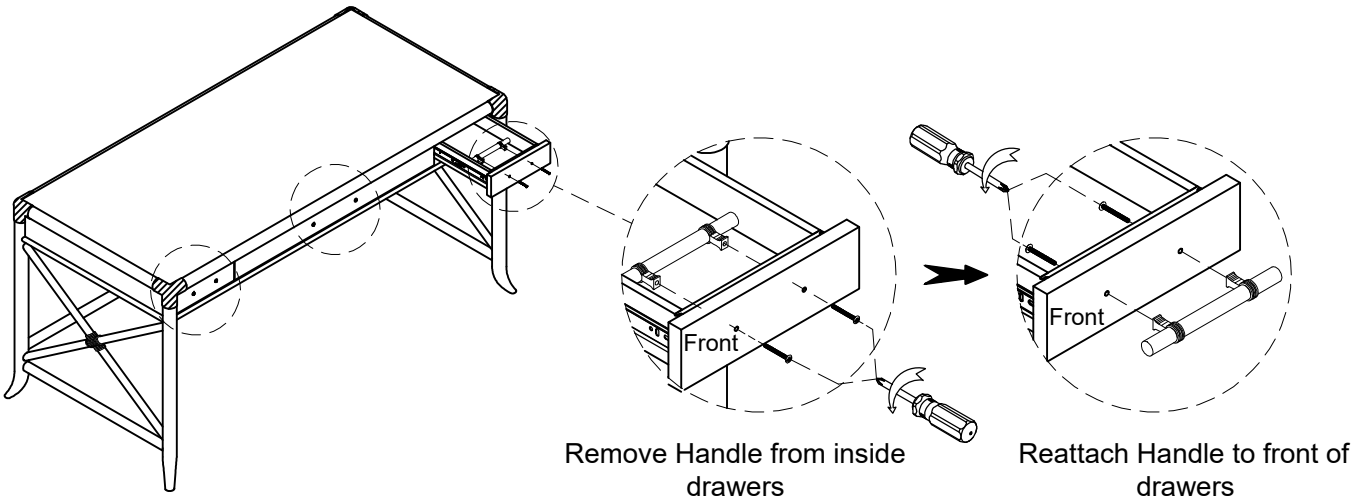

Remove Handle from inside drawers

Reattach Handle to front of drawers

STEP 5:

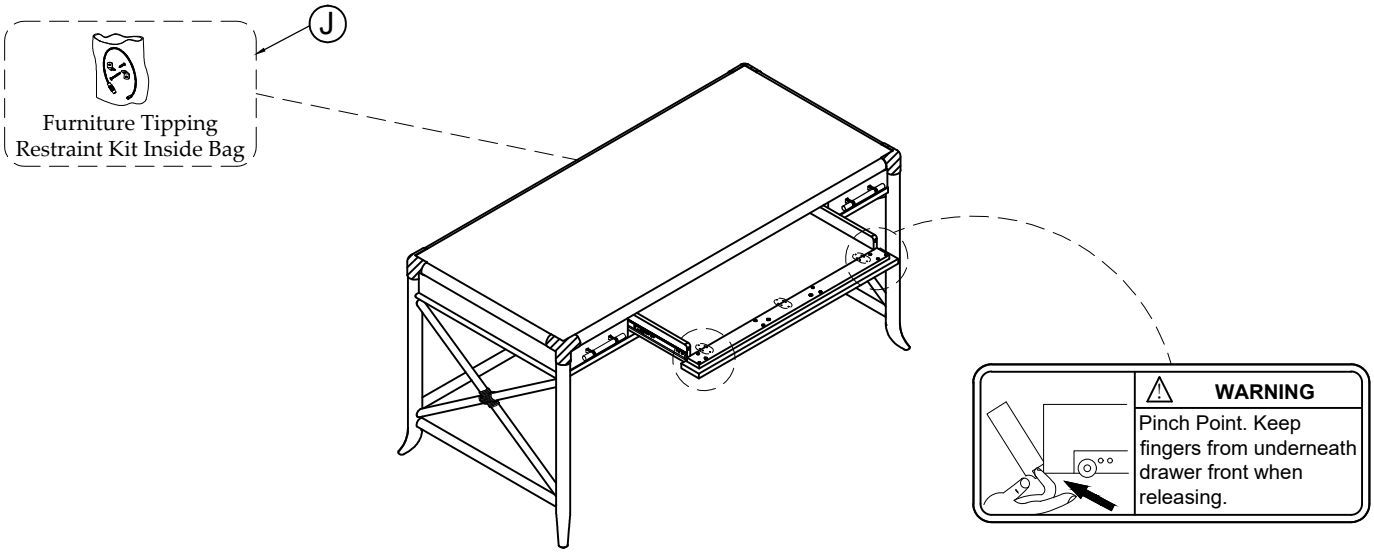

For product and personal safety, a Furniture Tipping Restraint kit has been included with this unit which can help to minimize the risk of the unit accidentally tipping forward, if used and properly installed per the manufacturer's instructions.