


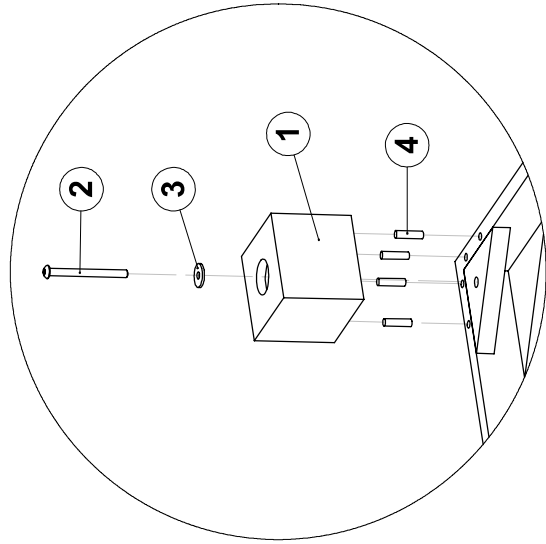

DETAIL B


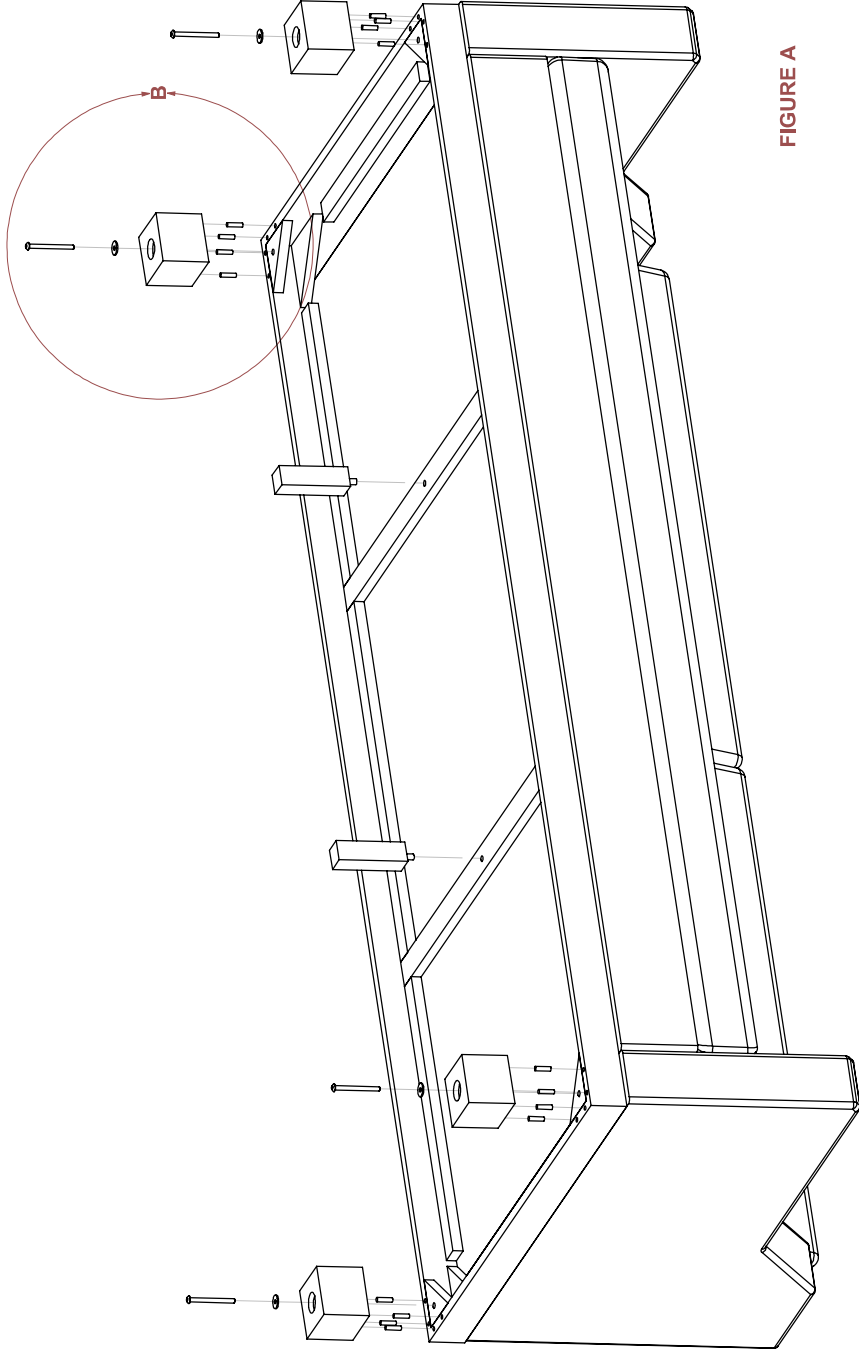


FIGURE A

- 1.- TURN THE SOFA UPSIDE DOWN ON A CLEAN AND FLAT SURFACE.
- 2.- PLACE 4 WOOD DOWELS IN EACH LEG.
- 3.- ALIGN EACH CORNER WITH THE DOWELS HOLES AND PRESS THEM INTO THE HOLES ON EACH LEG.
- 4.- PLACE A FLAT WASHER ON EACH SCREW AND ALIGN THEM IN THE HOLES ON EACH LEG.
- 5.- TIGHTEN THE SCREWS UNTIL THE LEG FEELS FIRM.
- 6.- ONCE THE LEGS ARE INSTALLED, MOVE THE SOFA BACK TO ITS ORIGINAL POSITION.

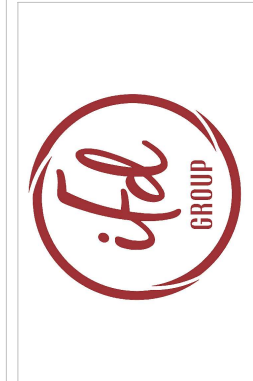

ASSEMBLING INSTRUCTIONS

I-IUP-MIX

ITEM #	DESCRIPTION	#
1	LEGS	4
2	BOTTOM SOCKET SCREW 5/16" x 3 1/2"	4
3	FLAT WASHER 5/16"	4
4	WOODEN DOWELS 8 x 30 mm	16
5	ALLEN KEY 1/4"	1

IUP298-ACH / IUP117-ACH

ITEM	DESCRIPTION	#
1TOR106	TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1PER001	PERNO DE MADERA 8 x 30	16
1HER383	LLAVE ALLEN 1/4 (MUEBLE)	1

IUP298-LOV / IUP117-LOV

ITEM	DESCRIPTION	#
1TOR106	TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1PER001	PERNO DE MADERA 8 x 30	16
1HER383	LLAVE ALLEN 1/4 (MUEBLE)	1

IUP298-SOF / IUP117-SOF

ITEM	DESCRIPTION	#
1TOR106	TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1PER001	PERNO DE MADERA 8 x 30	16
1HER383	LLAVE ALLEN 1/4 (MUEBLE)	1

IUP298-CSE-LF / IUP117-CSE-LF

ITEM	DESCRIPTION	#
1TOR106	TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1PER001	PERNO DE MADERA 8 x 30	16
1HER383	LLAVE ALLEN 1/4 (MUEBLE)	1

IUP298-LOV-RT / IUP117-LOV-RT

ITEM	DESCRIPTION	#
1TOR106	TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1PER001	PERNO DE MADERA 8 x 30	16
1HER383	LLAVE ALLEN 1/4 (MUEBLE)	1

IUP298-ALC / IUP117-ALC

ITEM	DESCRIPTION	#
1TOR106	TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1PER001	PERNO DE MADERA 8 x 30	16
1HER383	LLAVE ALLEN 1/4 (MUEBLE)	1

IUP298-OTT / IUP117-OTT

ITEM	DESCRIPTION	#
1TOR106	TORNILLO ALLEN CAB. BOLA 5/16" x 3 -1/2" NEGRO	4
1RON003	RONDANA PLANA 5/16" x 1" GALV	4
1PER001	PERNO DE MADERA 8 x 30	16
1HER383	LLAVE ALLEN 1/4 (MUEBLE)	1



ASSEMBLING INSTRUCTIONS

I-IUP-MIX