






MFI MODUS
FURNITURE
INTERNATIONAL

E. SLAT SUPPORT 1 PC

The diagram illustrates the assembly of the slat support. It includes a perspective view of the assembled unit with label B, a side view of the slat support with label E, a detail of the slat support with label D, and a perspective view of the slat support with label C.


PCS

A line drawing of a bed frame. The headboard is at the top right, featuring a square frame with two diagonal braces forming an 'X' shape. The footboard is at the bottom left, featuring a similar square frame with two drawers integrated into it, each with a horizontal handle. The bed base consists of numerous parallel slats. The entire frame is supported by four legs.

1	ALLEN BOLT M8 x 30 MM	16 PCS	2	WASHER M8/19	16 PCS	3	ALLEN KEY (4MM)	02 PCS	4	SCREW M4 x 30MM	24 PCS
											
<p>TOOL REQUIRED</p> <p>PHILLS HEAD SCREW DRIVER NOT PROVIDED</p> <div data-bbox="927 1982 1187 2085">  </div>											


STEP 1:

ATTACH ONE SIDE RAIL (F) TO THE HEADBOARD (A) USING FOUR ALLEN BOLTS (1) AND FLAT WASHERS (2). ONLY FINGER TIGHTEN THE BOLTS!

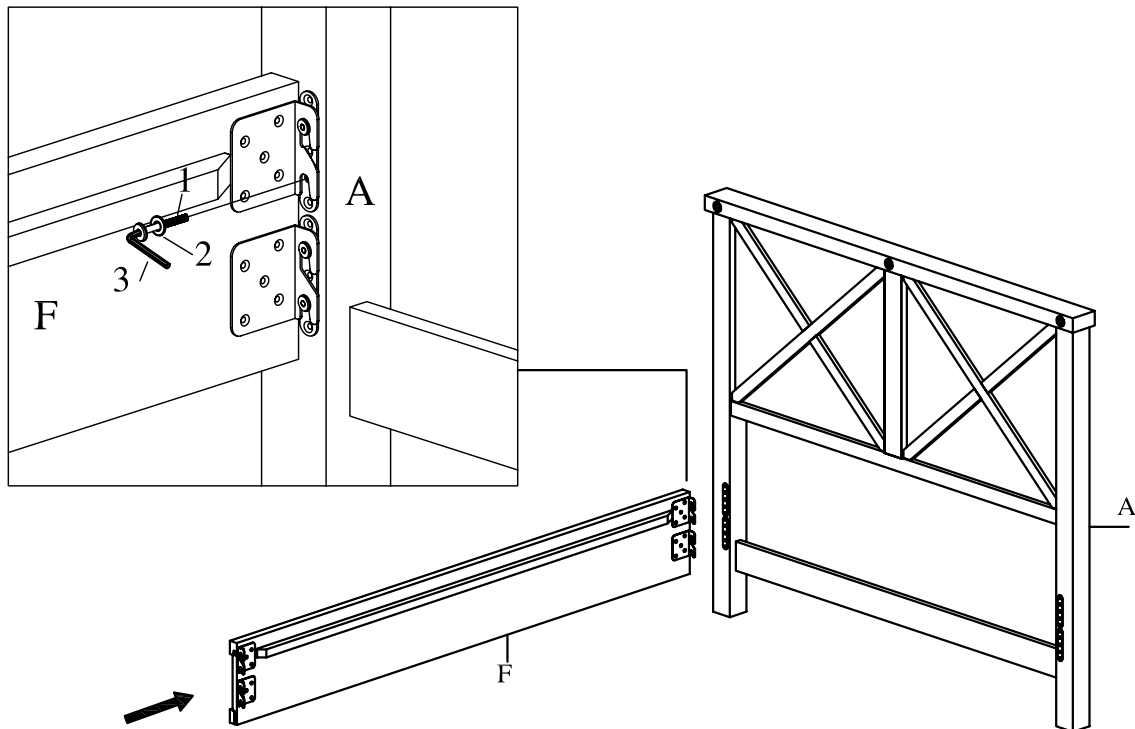


STEP 2:

ATTACH THE FOOTBOARD (B) TO THE ATTACHED SIDE RAIL WITH FOUR ALLEN BOLTS AND FLAT WASHERS. ONLY FINGER TIGHTEN THE BOLTS!

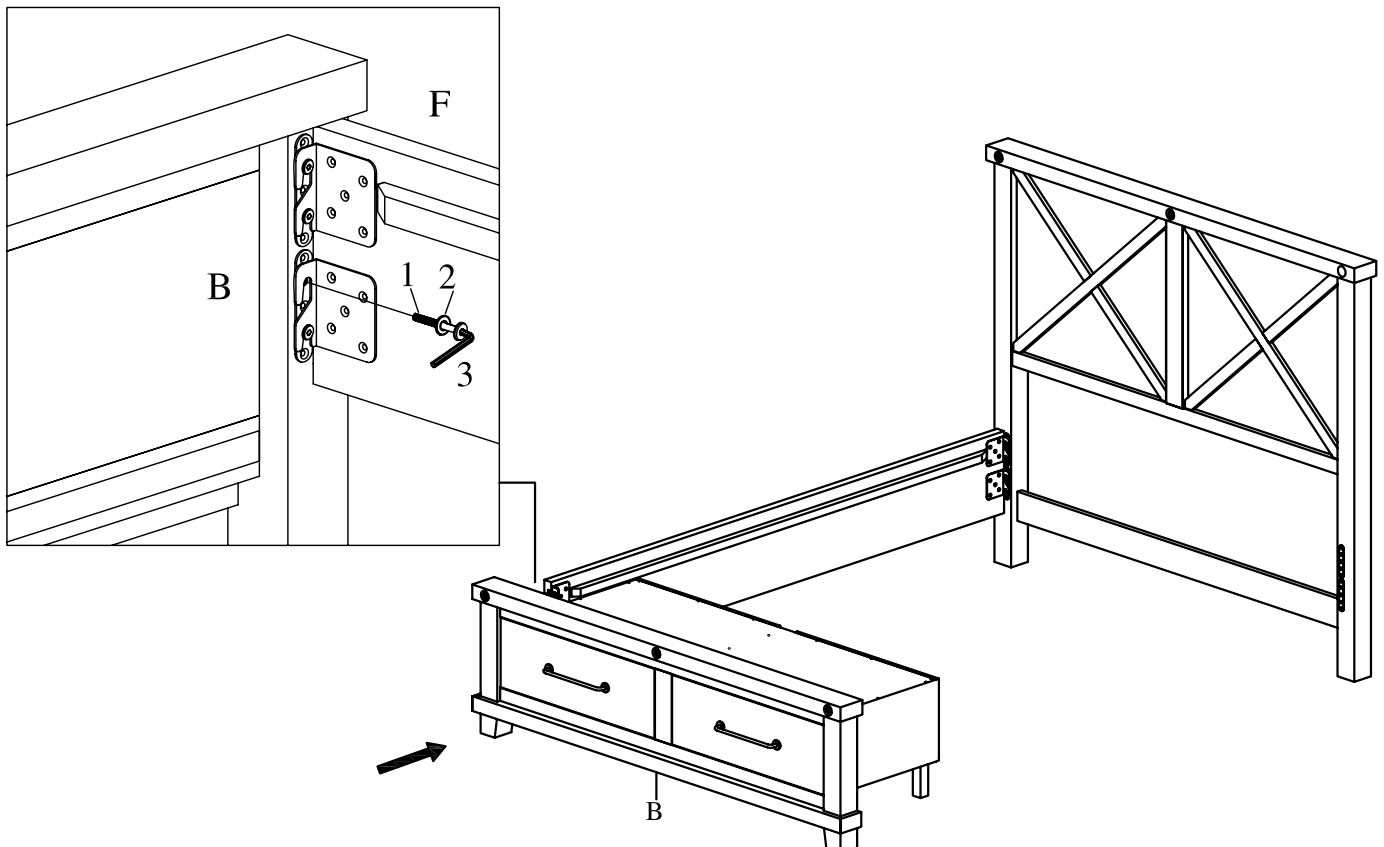


STEP 3:

ATTACH THE SECOND SIDE RAIL TO THE BED ASSEMBLY USING EIGHT ALLEN BOLTS AND FLAT WASHERS. TIGHTEN ALL BOLTS, INCLUDING THOSE FROM STEP 1 & 2, COMPLETELY WITH ALLEN KEY (3).

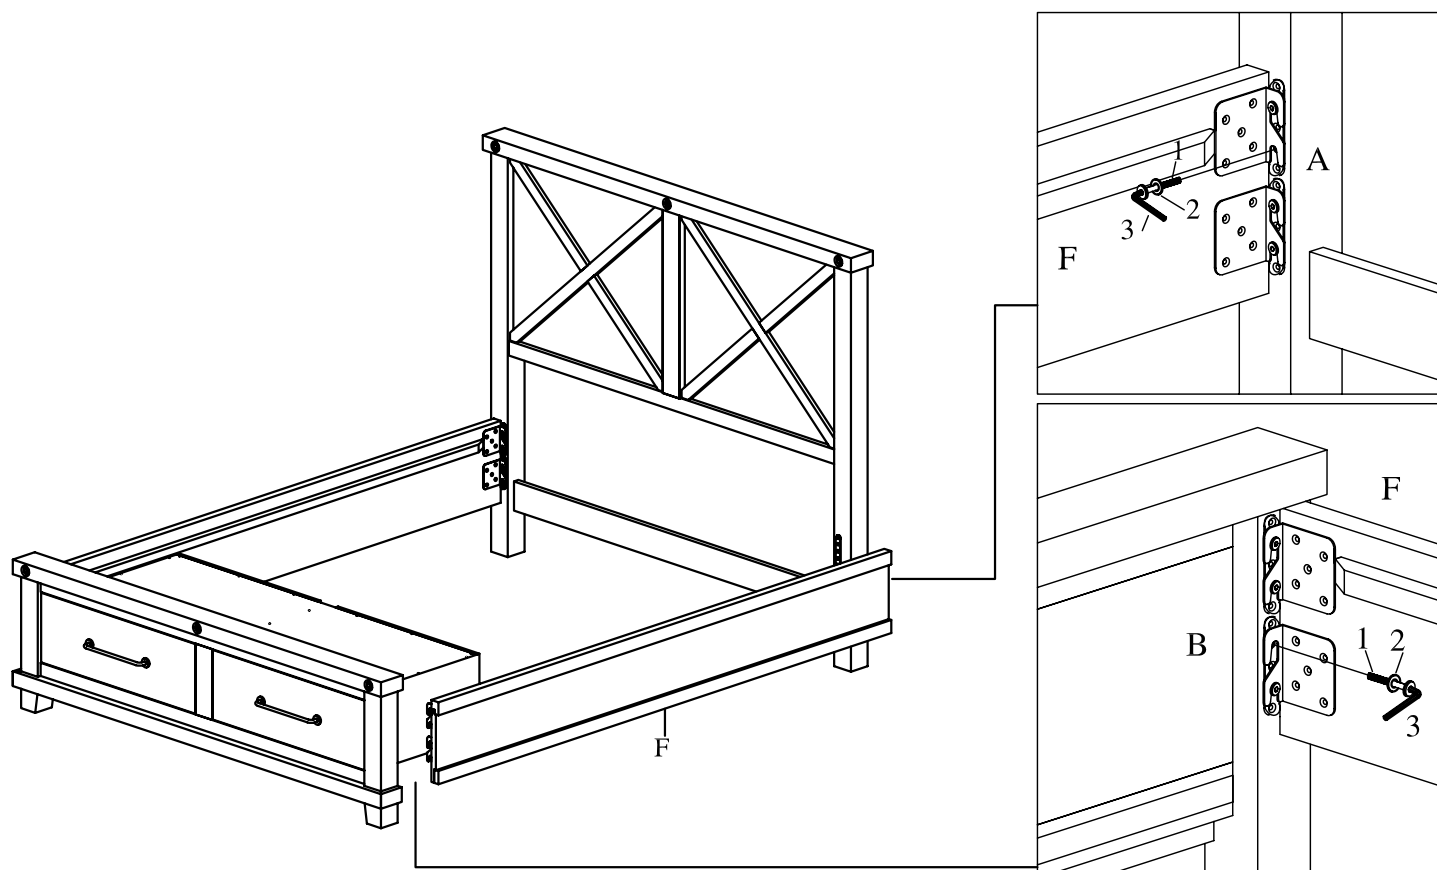


STEP 4:

LINING UP THE HOLES ON THE CENTER SLAT SUPPORT (E) WITH THE CORRESPONDING HOLES ON THE SLAT ROLL (C), SECURE THE TWO TOGETHER BY SCREWING IN THE CENTER SLAT SUPPORTS (D) CLOCKWISE.

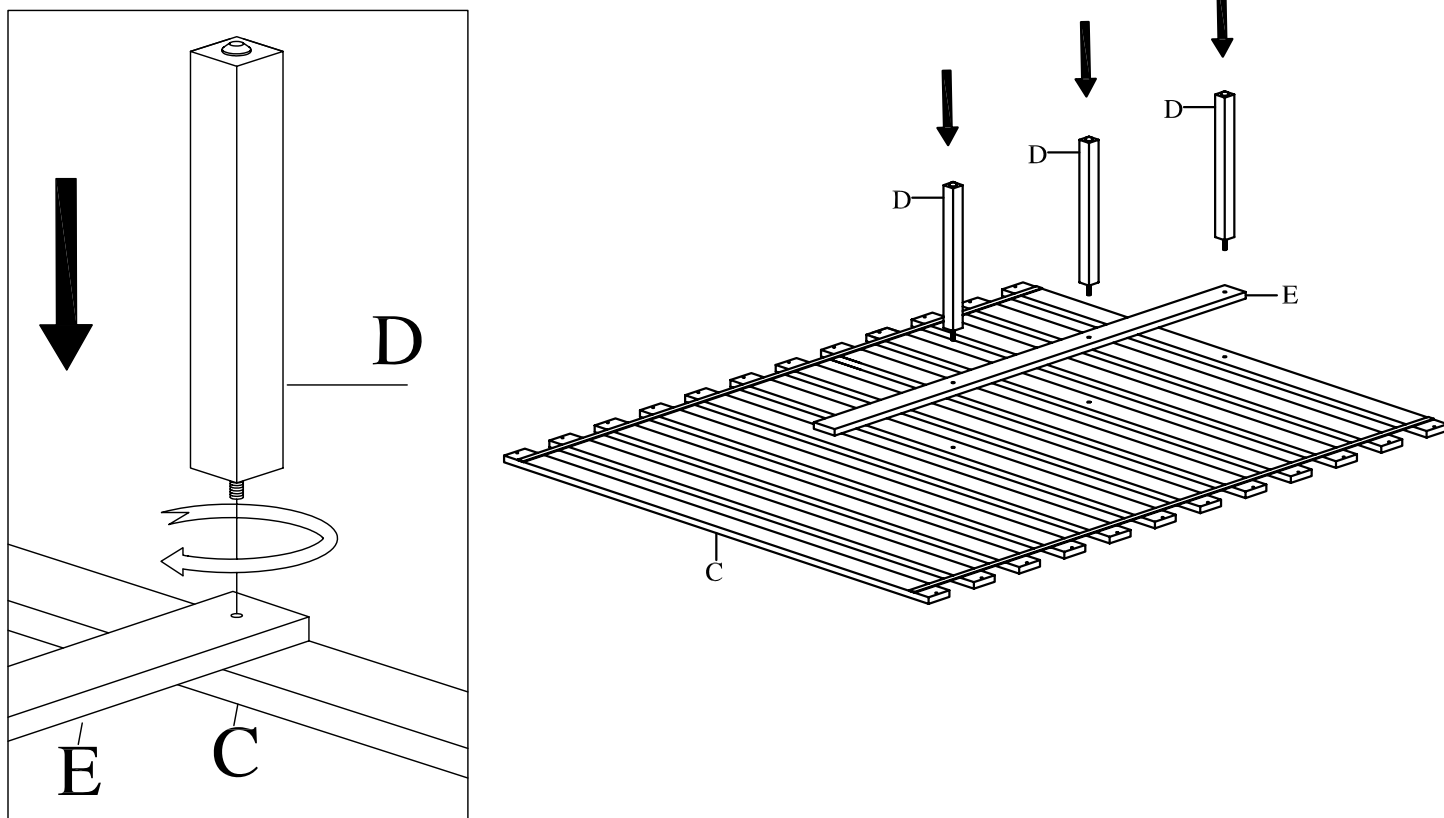


STEP 5:

WITH THE HELP OF A SECOND PERSON, PLASE THE SLAT ASSEMBLY ONTO THE BED ASSEMBLY. FOLLOWING THE ILLUSTRATION, CONNECT THE SLATS TO THE BED ASSEMBLY WITH THE WOOD SCREWS (4).

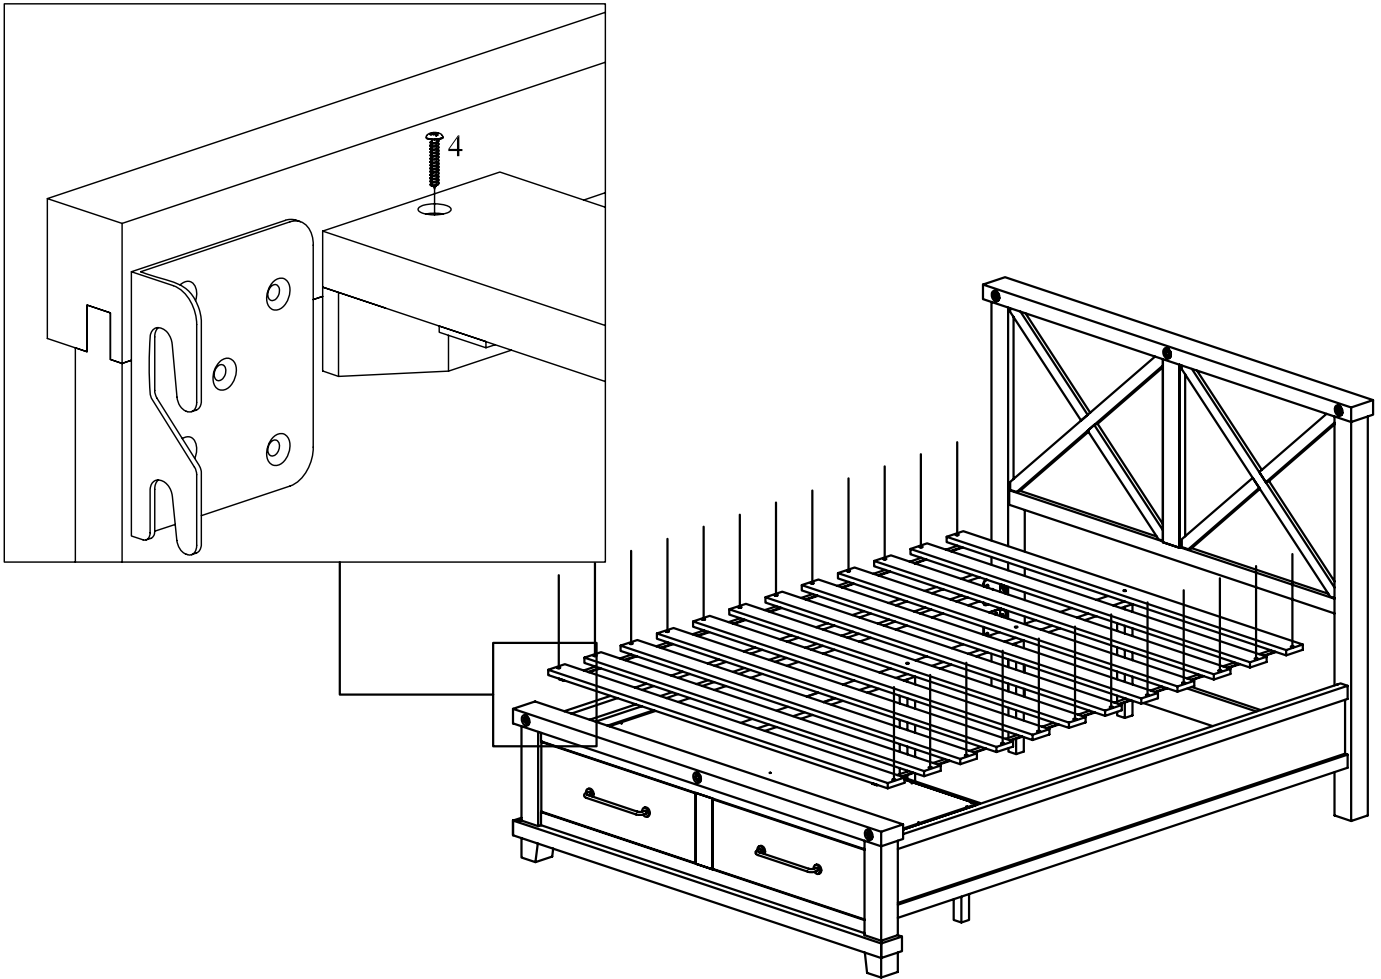

STEP 6:

ASSEMBLY COMPLETE

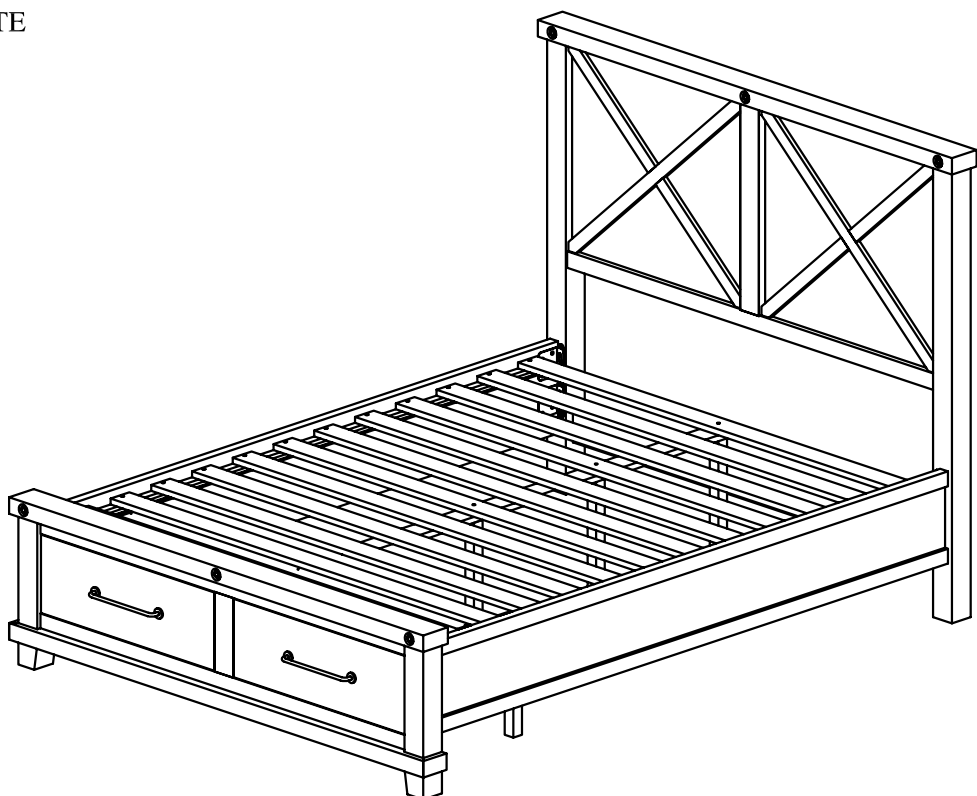


MFI

MODUS
FURNITURE
INTERNATIONAL

BOX#1

A. HEADBOARD 1PC

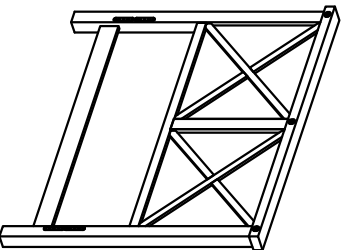

STORAGE QUEEN BED ASSEMBLED

BOX#2

B. FOOTBOARD 1PC


C. SLAT ROLL 1PC

D. SLATS SUPPORT 3 PCS


E. BOTTOM SLAT 1 PC




D



13.

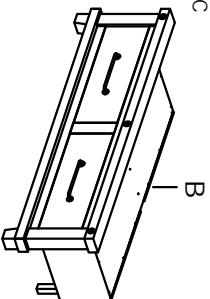

— B


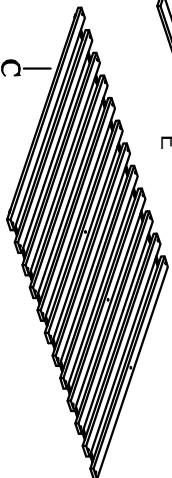


Q-





BOX#3

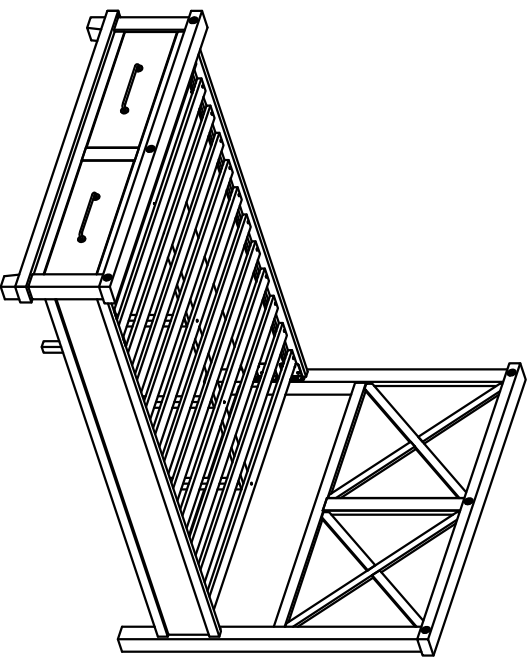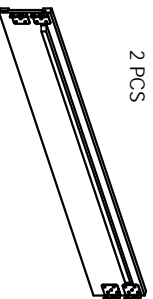F. SIDERAILS

2 PCS




HARDWARE ARE PACKED IN BOX

1	ALLEN BOLT M8 x 30 MM	16 PCS	2	WASHER M8/19	16 PCS	3	ALLEN KEY (4MM)	02 PCS	4	SCREW M4 x 30MM	24 PCSS
											


TOOL REQUIRED

PHILLS HEAD SCREW
DRIVER NOT PROVIDED




STEP 1:

FIX ONE OF THE SIDERAILS (F) TO THE HEADBOARD (A) USING ALLEN KEY (3) AND ALLEN BOLT (1) AND WASHERS (2).
DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED.

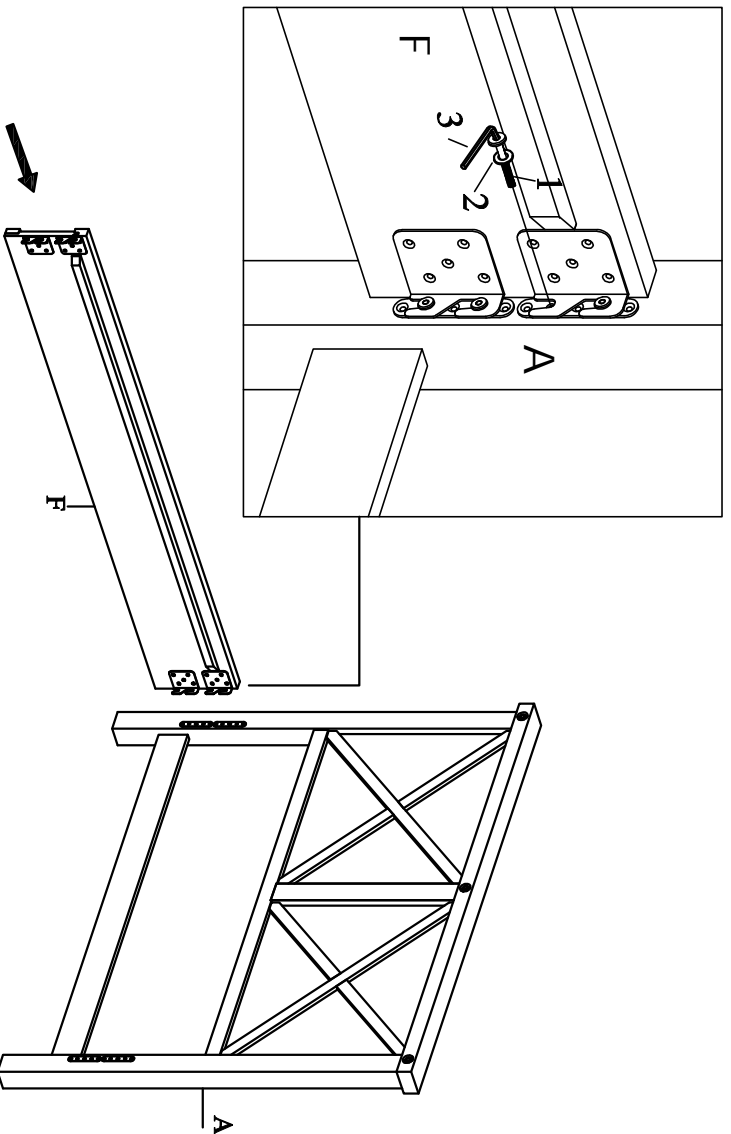

STEP 2:


FIX THE OTHER END OF THE SIDERAILS (F) TO THE FOOTBOARD (B) USING ALLEN KEY (3) AND ALLEN BOLT (1) AND WASHERS (2).
DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED

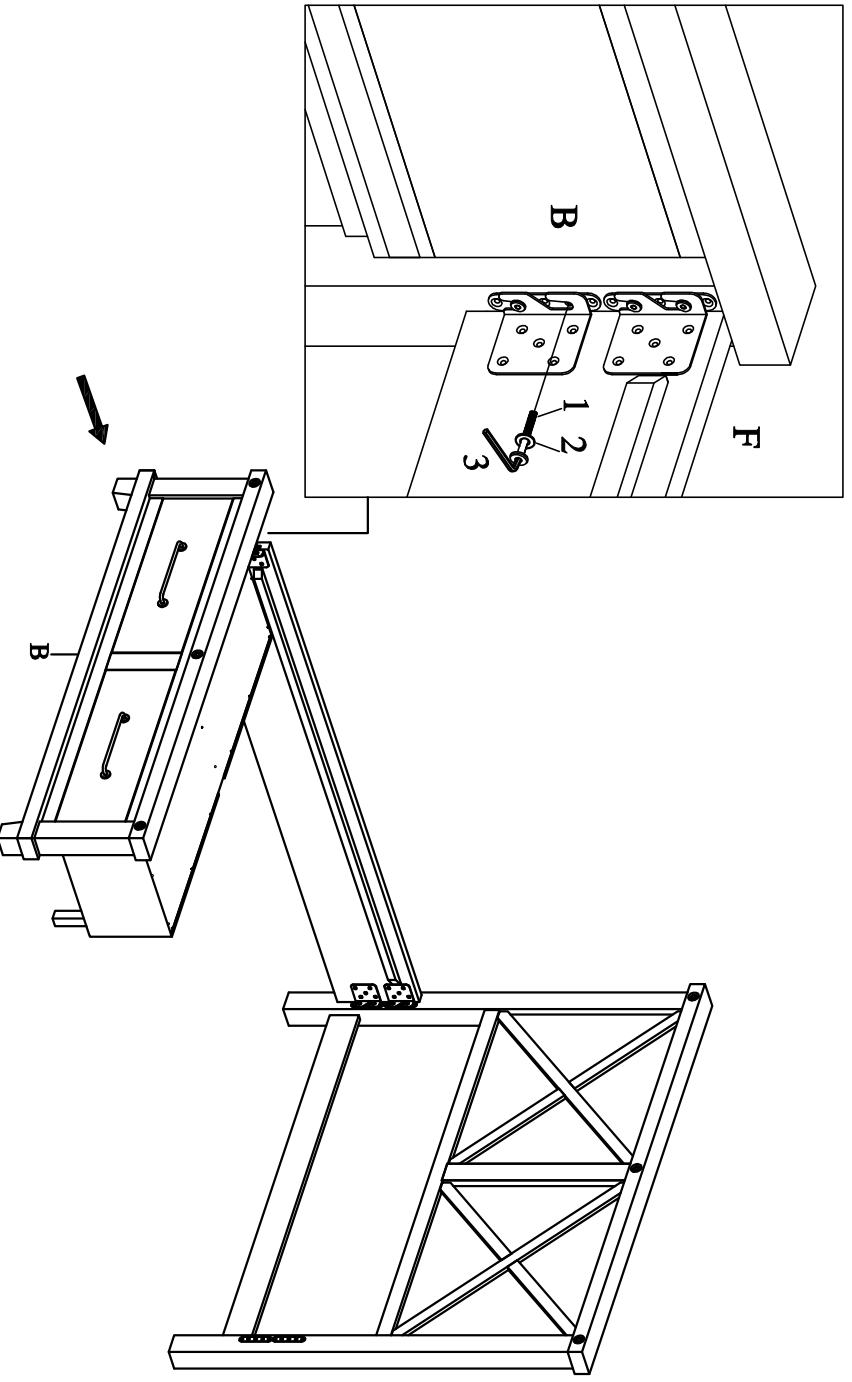

STEP 3:


FIX ONE OF THE SIDERAILS (F) TO THE HEADBOARD (A) AND FOOTBOARD (B) USING ALLEN KEY (3) AND ALLEN BOLT (1) AND WASHERS (2).

DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED

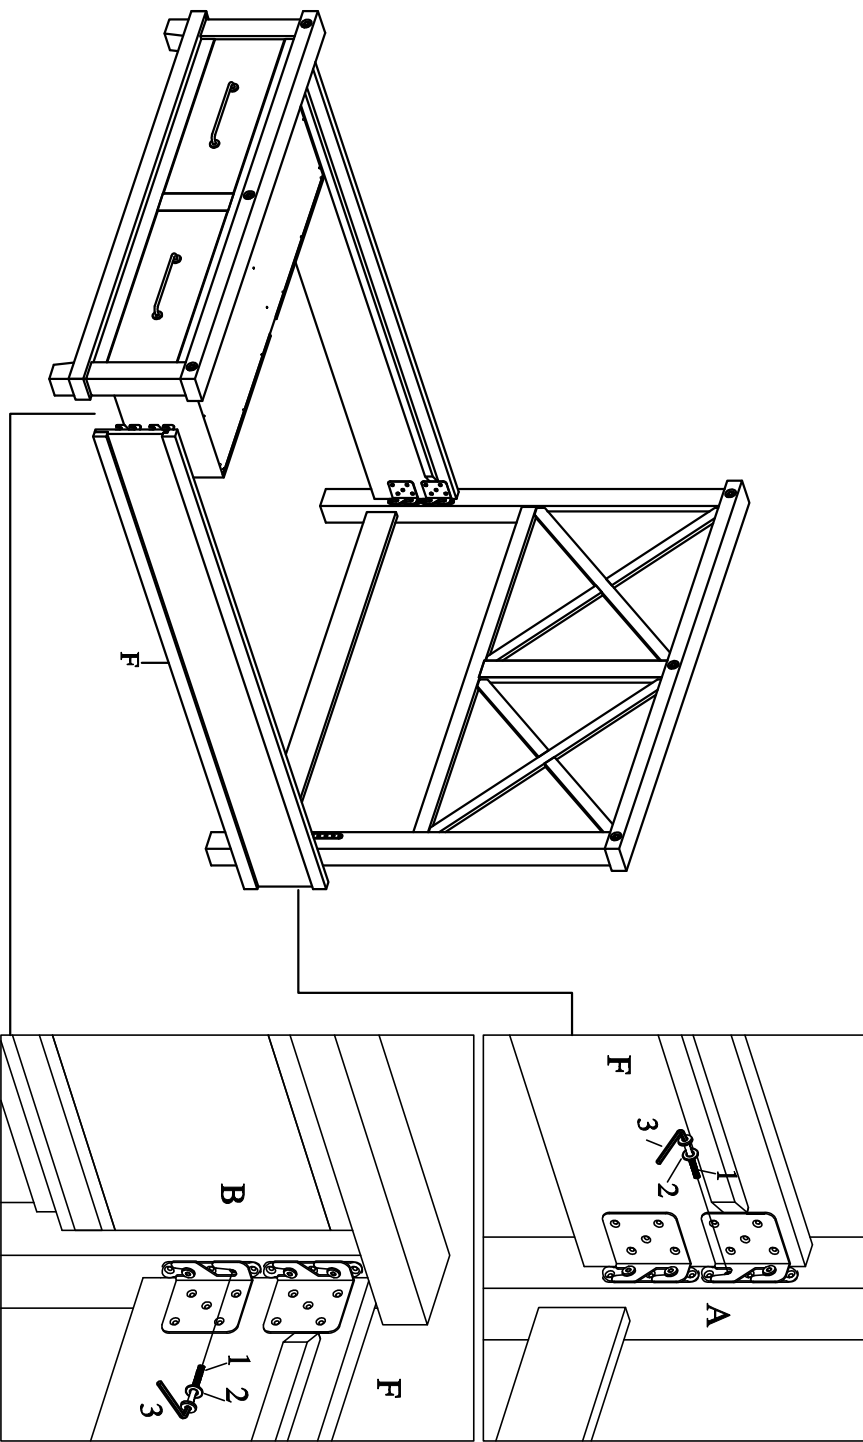


STEP 4:

ATTACH THE SLATS SUPPORT (D) TO THE BOTTOM SLAT (E) AND SLAT ROLL (C).

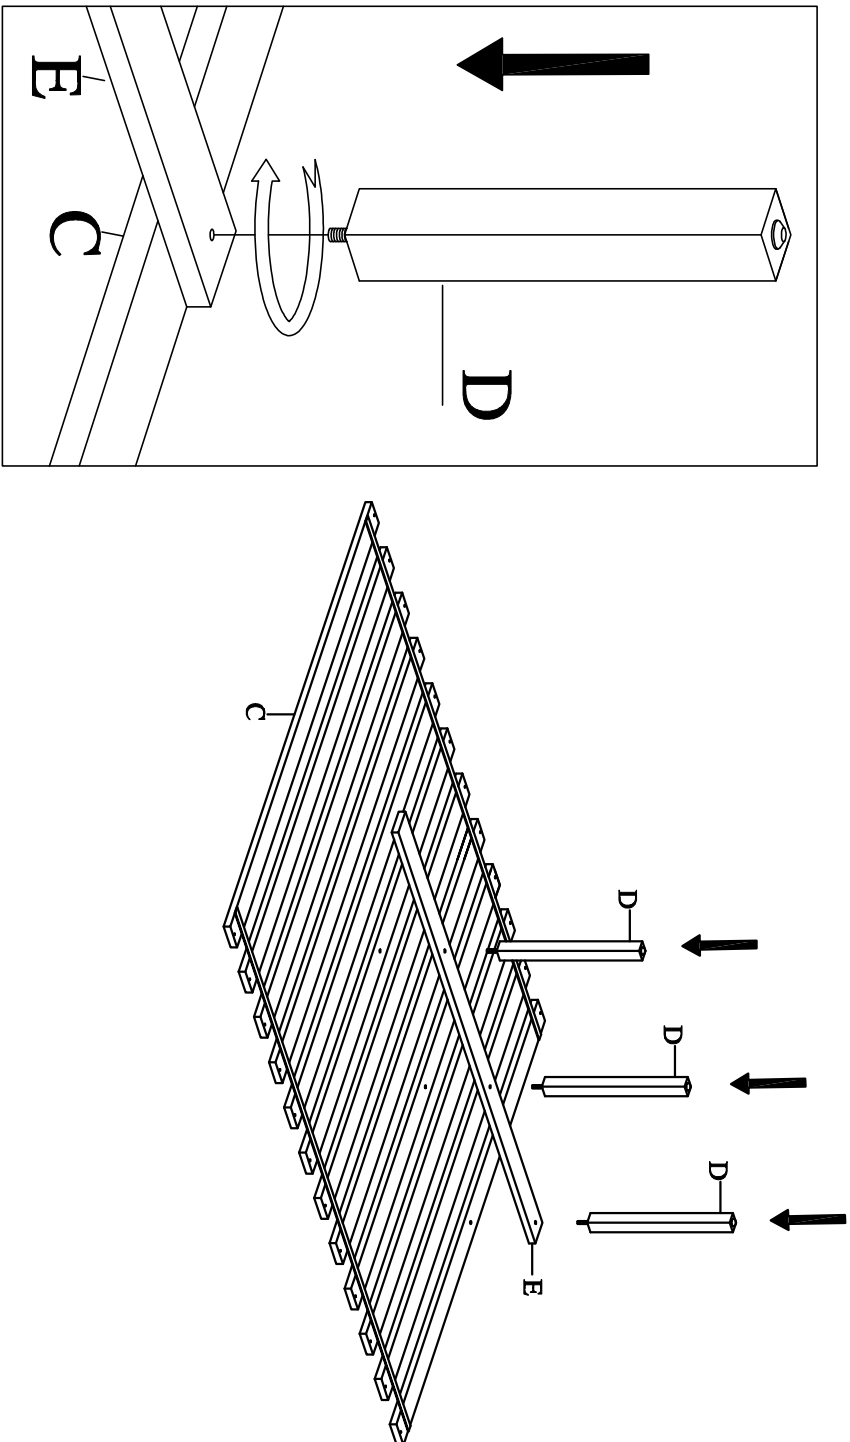


STEP 5:

FOLLOW THE ILLUSTRATION TO PLACE FIVE SLAT ROLL (C) ON THE BED FRAME, AND SECURE THE SLAT ROLL (C) USING WOOD SCREWS (4). USE THE PILOT HOLES ON THE SIDERAILS (F) AS YOUR REFERENCE FOR EASY ASSEMBLY.

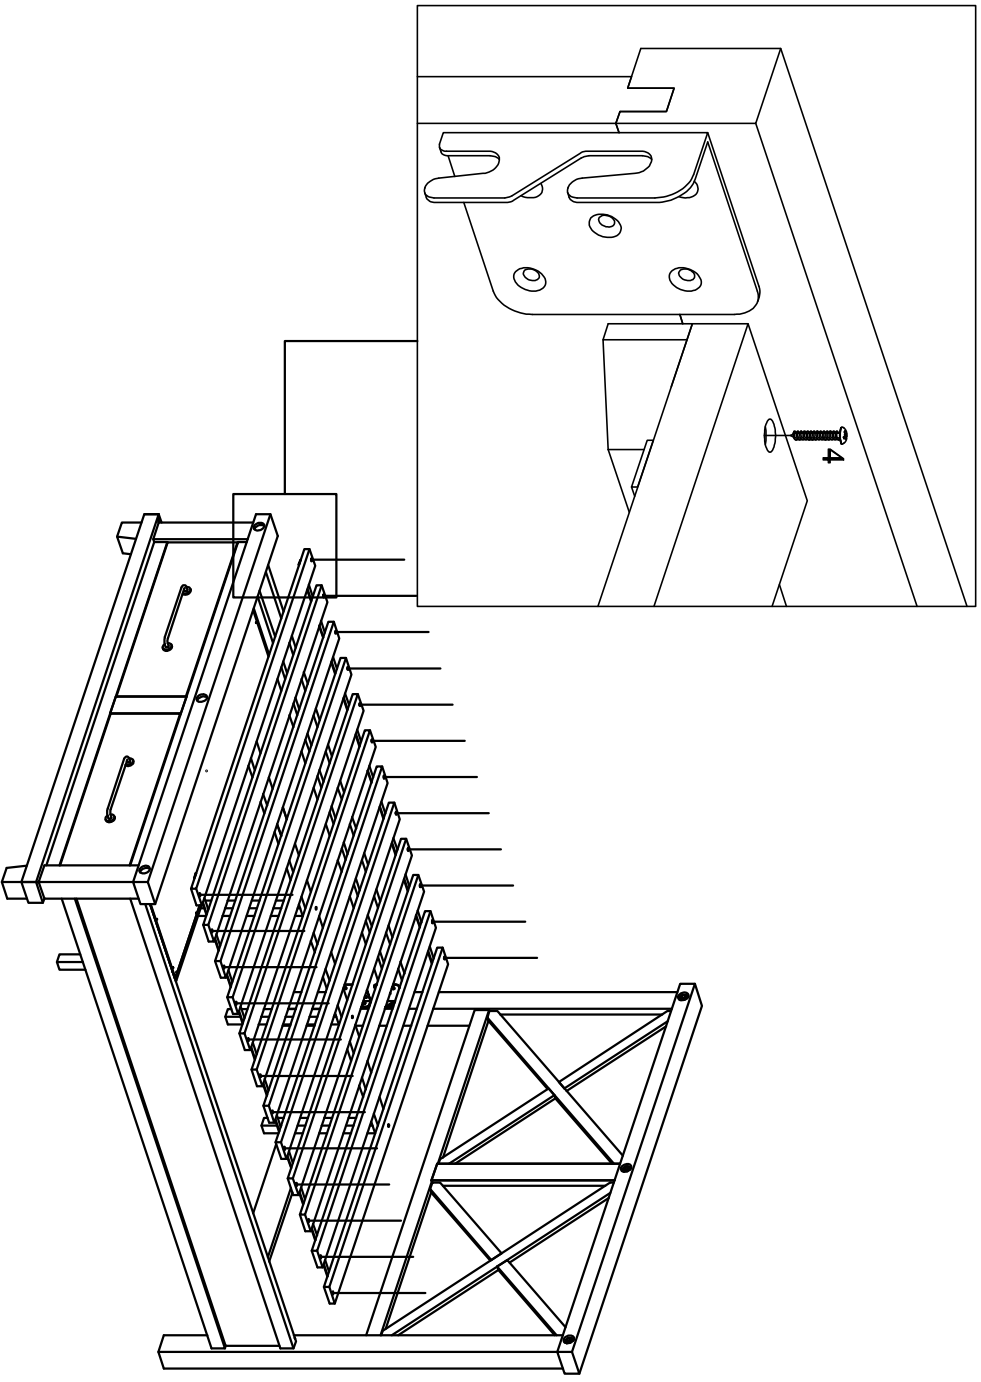

STEP 6:

ASSEMBLY COMPLETE

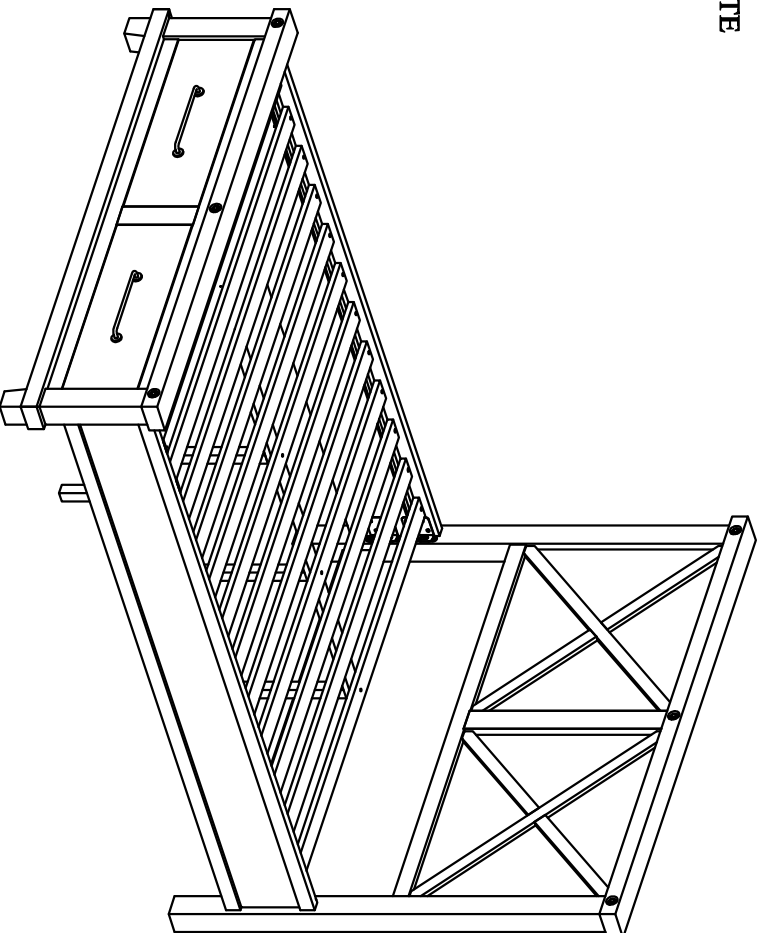


YOSEMITE STORAGE C. KING BED HBW

ASSEMBLY INSTRUCTIONS




BOX#1

A. HEADBOARD 1PC

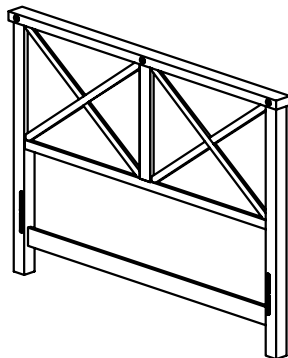


BOX#2

B. FOOTBOARD 1 PC
C. SLAT ROLL 1 PC
D. SLATS SUPPORT 6 PCS
E. BOTTOM SLATS 2 PCS

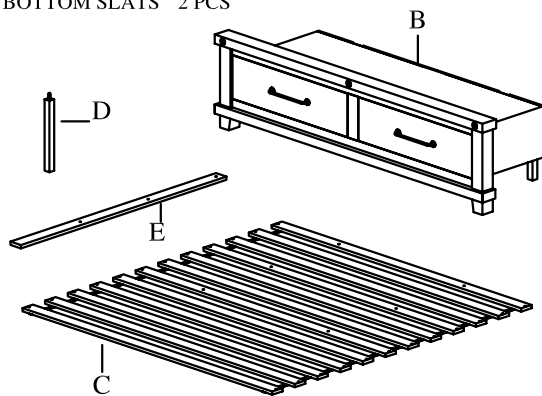


BOX#3

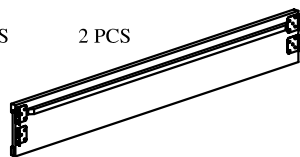




F. SIDERAILS 2 PCS

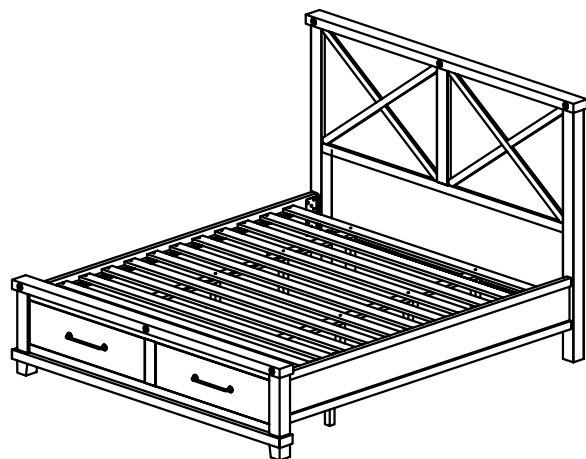

STORAGE C. KING BED ASSEMBLED




HARDWARE ARE PACKED IN BOX

1	ALLEN BOLT M8 x 30 MM	16 PCS	2	WASHER M8/19	16 PCS	3	ALLEN KEY (4MM)	02 PCS	4	SCREW M4 x 30MM	24 PCS
											
<div><div>TOOL REQUIRED</div><div>PHILLS HEAD SCREW DRIVER NOT PROVIDED</div></div> <div></div>											

STEP 1:

FIX ONE OF THE SIDERAILS (F) TO THE HEADBOARD (A) USING ALLEN KEY (3) AND ALLEN BOLT (1) AND WASHERS (2).


DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED.

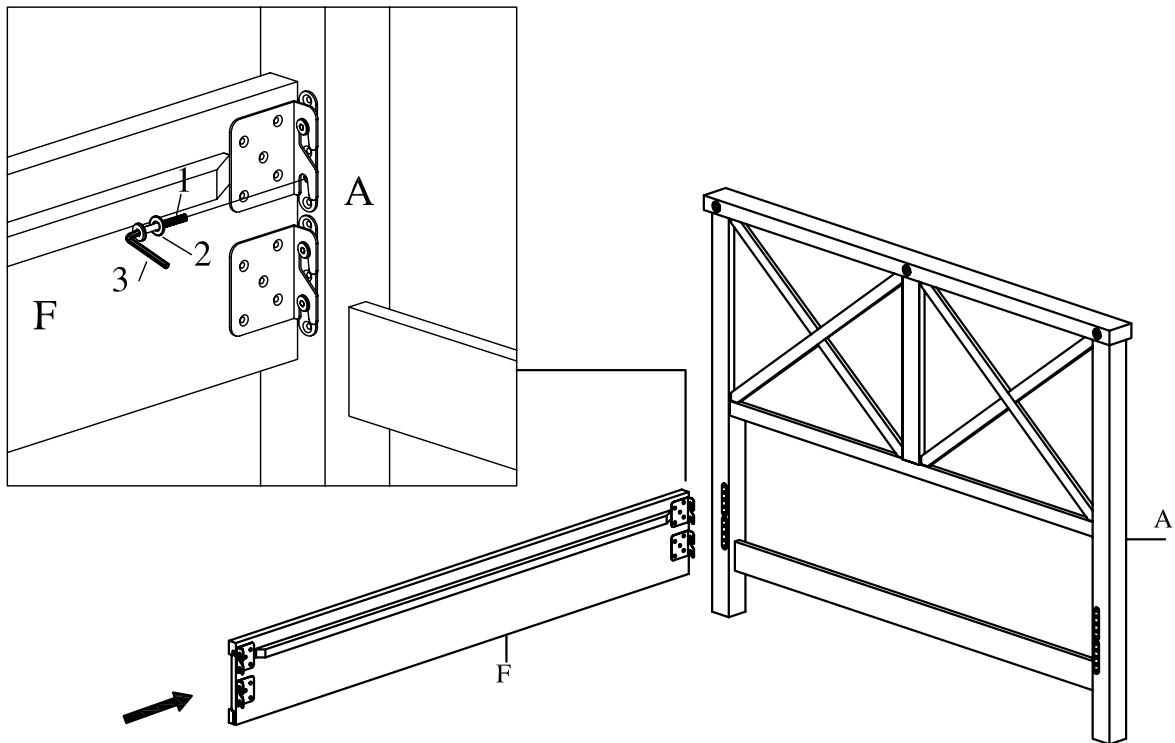

STEP 2:

FIX THE OTHER END OF THE SIDERAILS (F) TO THE FOOTBOARD (B) USING ALLEN KEY (3) AND ALLEN BOLT (1) AND WASHERS (2).


DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED

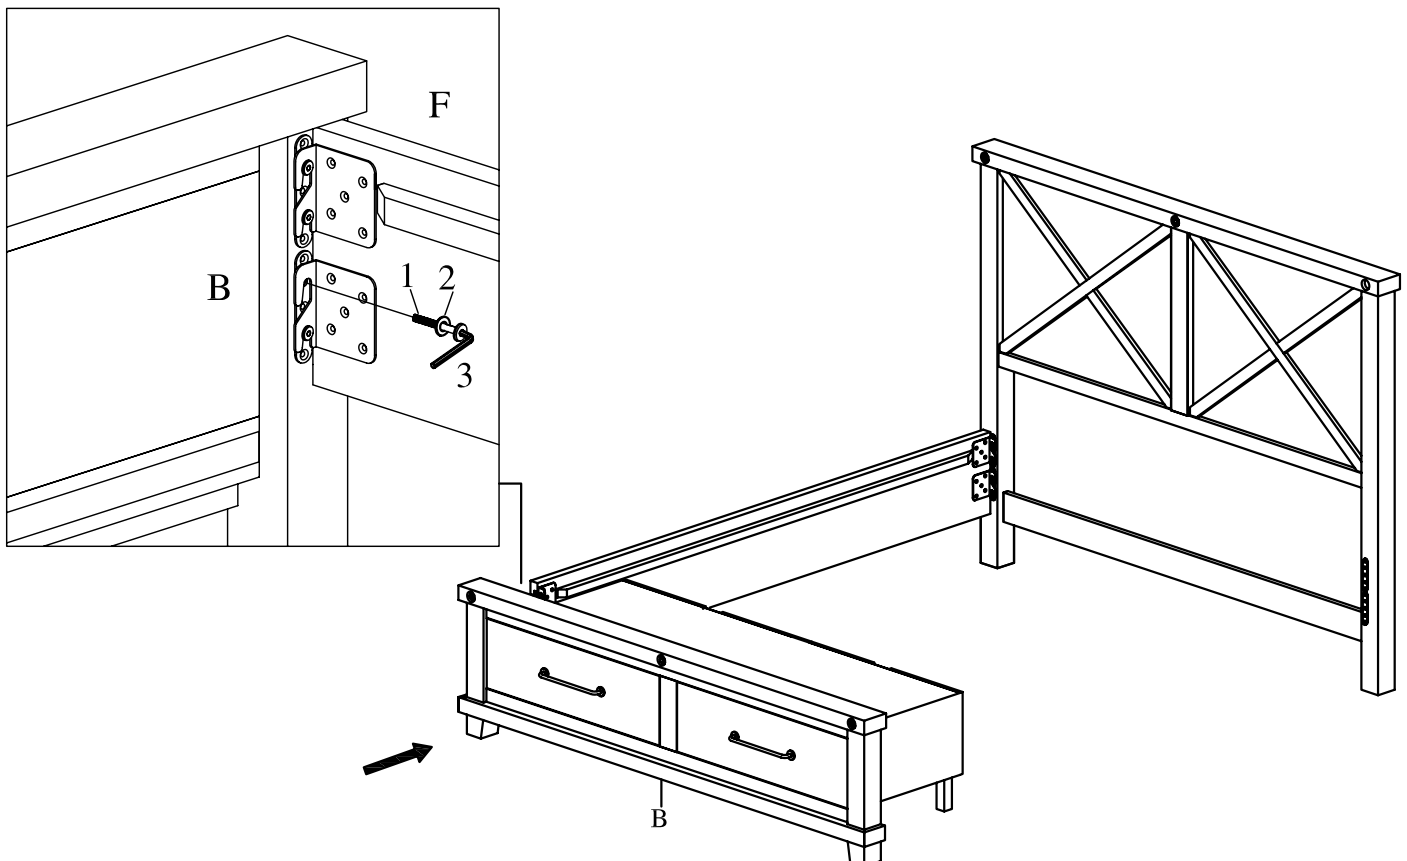

STEP 3:


FIX ONE OF THE SIDERAILS (F) TO THE HEADBOARD (A) AND FOOTBOARD (B) USING ALLEN KEY (3) AND ALLEN BOLT (1) AND WASHERS (2).

DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED

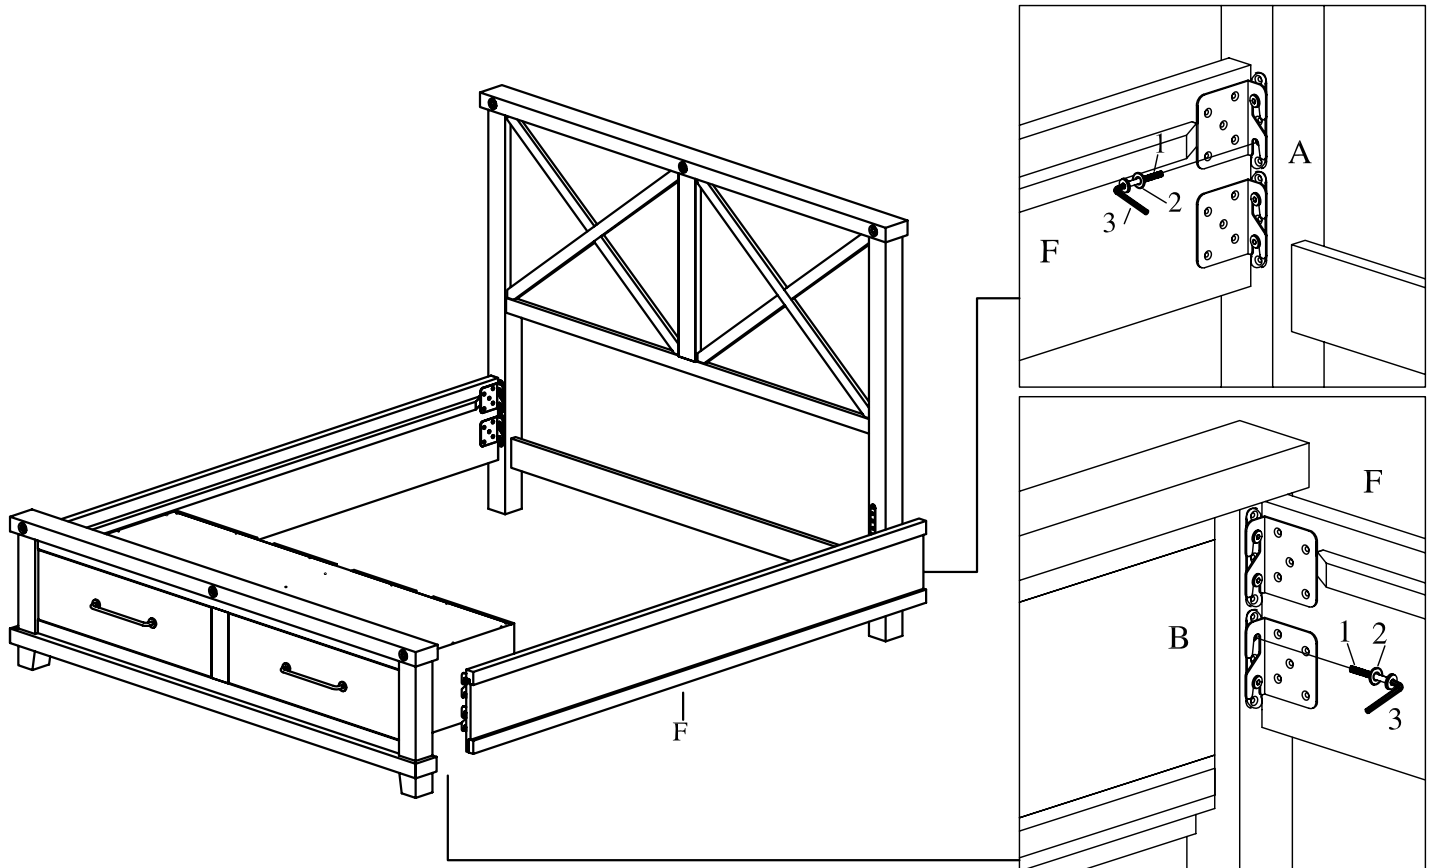


STEP 4:

ATTACH THE SLATS SUPPORT (D) TO THE BOTTOM SLATS (E) AND SLAT ROLL (C).

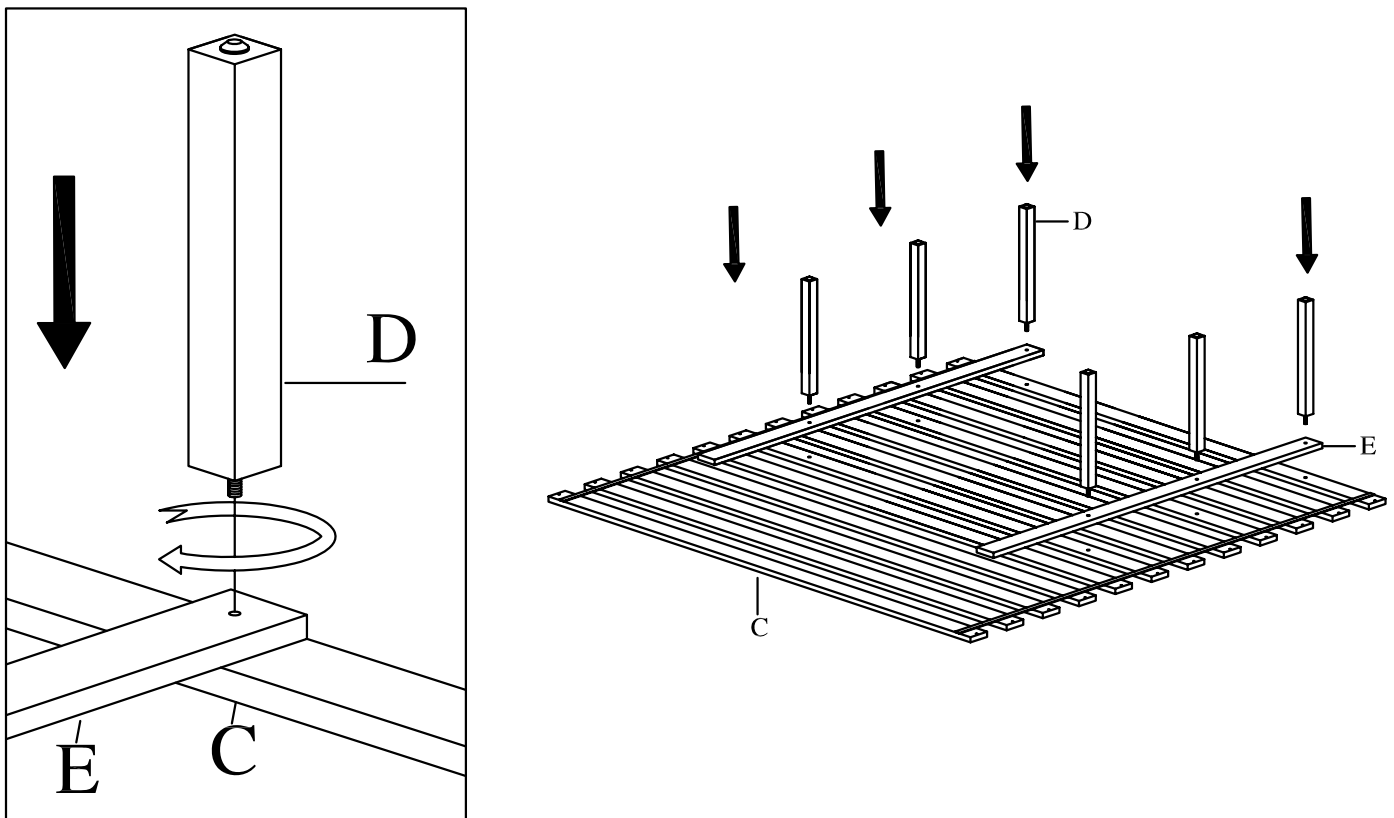


STEP 5:

FOLLOW THE ILLUSTRATION TO PLACE FIVE SLAT ROLL (C) ON THE BED FRAME. AND SECURE THE SLAT ROLL (C) USING WOOD SCREWS (4). USE THE PILOT HOLES ON THE SIDERAILS (C) AS YOUR REFERENCE FOR EASY ASSEMBLY.

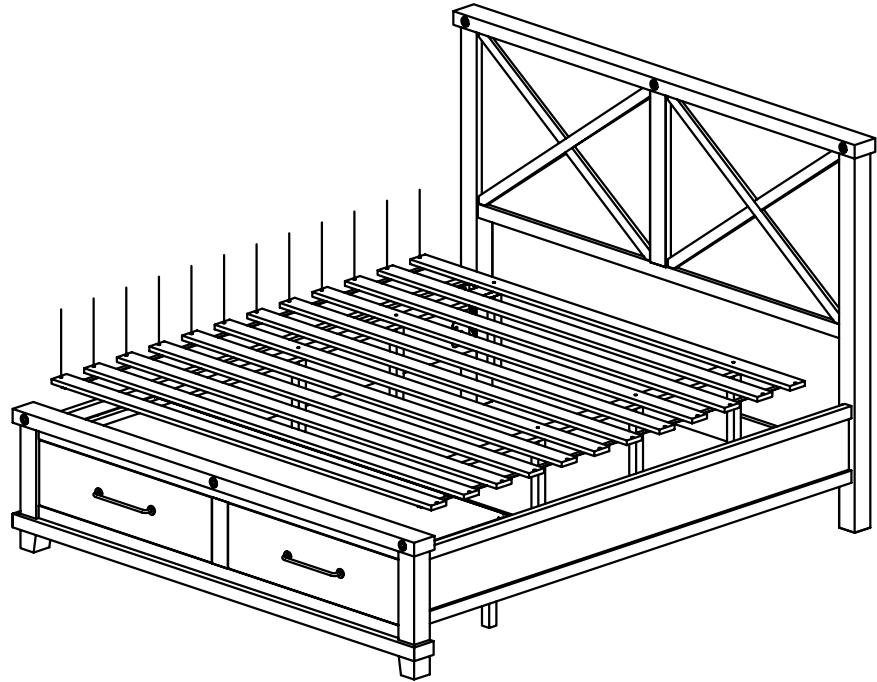

STEP 6:

ASSEMBLY COMPLETE

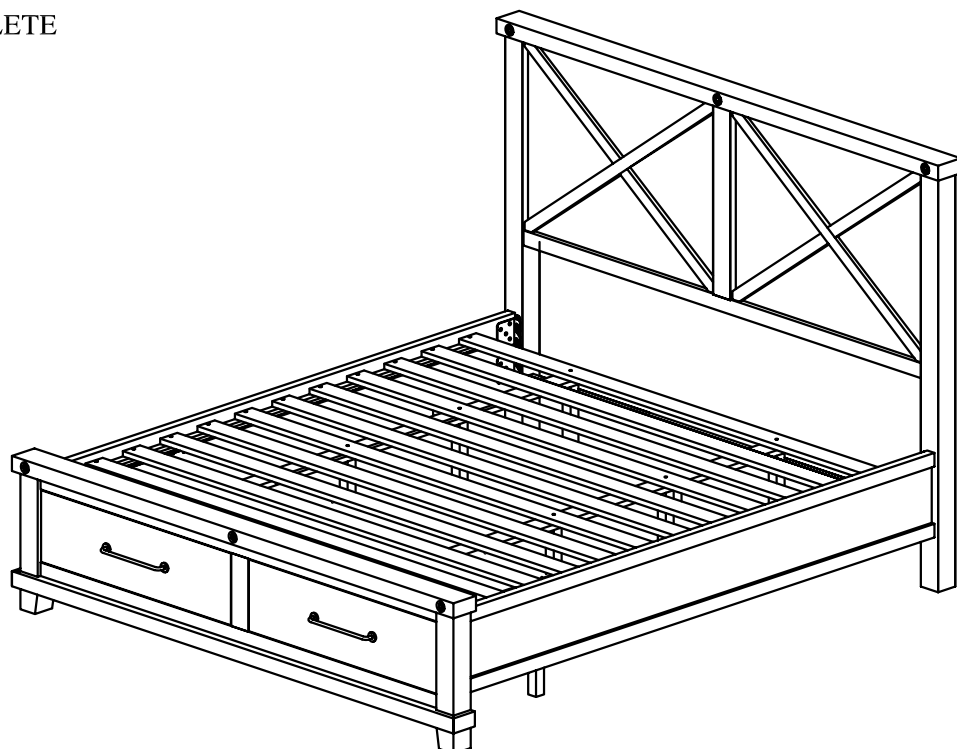


YOSEMITE STORAGE E. KING BED HBW

ASSEMBLY INSTRUCTIONS




BOX#1

A. HEADBOARD 1PC

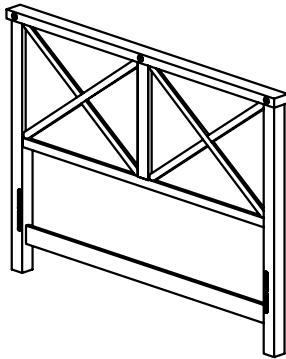


BOX#2

B. FOOTBOARD 1 PC
C. SLAT ROLL 1 PC
D. SLATS SUPPORT 9 PCS
E. BOTTOM SLATS 3 PCS

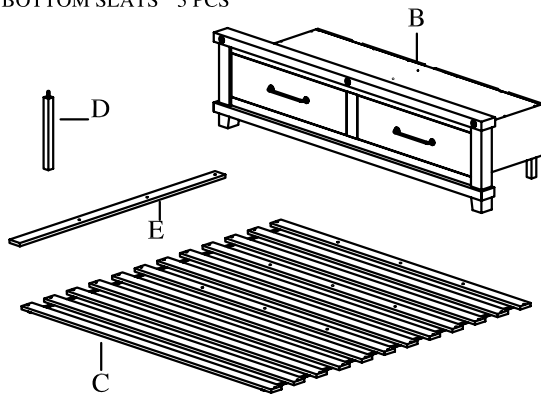


BOX#3



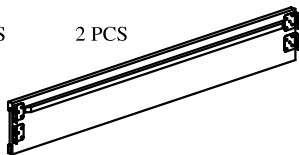


F. SIDERAILS 2 PCS

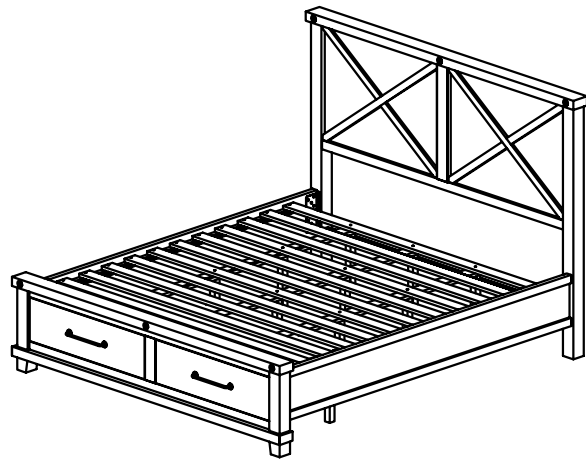

STORAGE E. KING BED ASSEMBLED




HARDWARE ARE PACKED IN BOX

1	ALLEN BOLT M8 x 30 MM	16 PCS	2	WASHER M8/19	16 PCS	3	ALLEN KEY (4MM)	02 PCS	4	SCREW M4 x 30MM	24 PCS
											
<div>TOOL REQUIRED</div> <div>PHILLS HEAD SCREW DRIVER NOT PROVIDED</div> <div></div>											

STEP 1:

FIX ONE OF THE SIDERAILS (F) TO THE HEADBOARD (A) USING ALLEN KEY (3) AND ALLEN BOLT (1) AND WASHERS (2).


DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED.

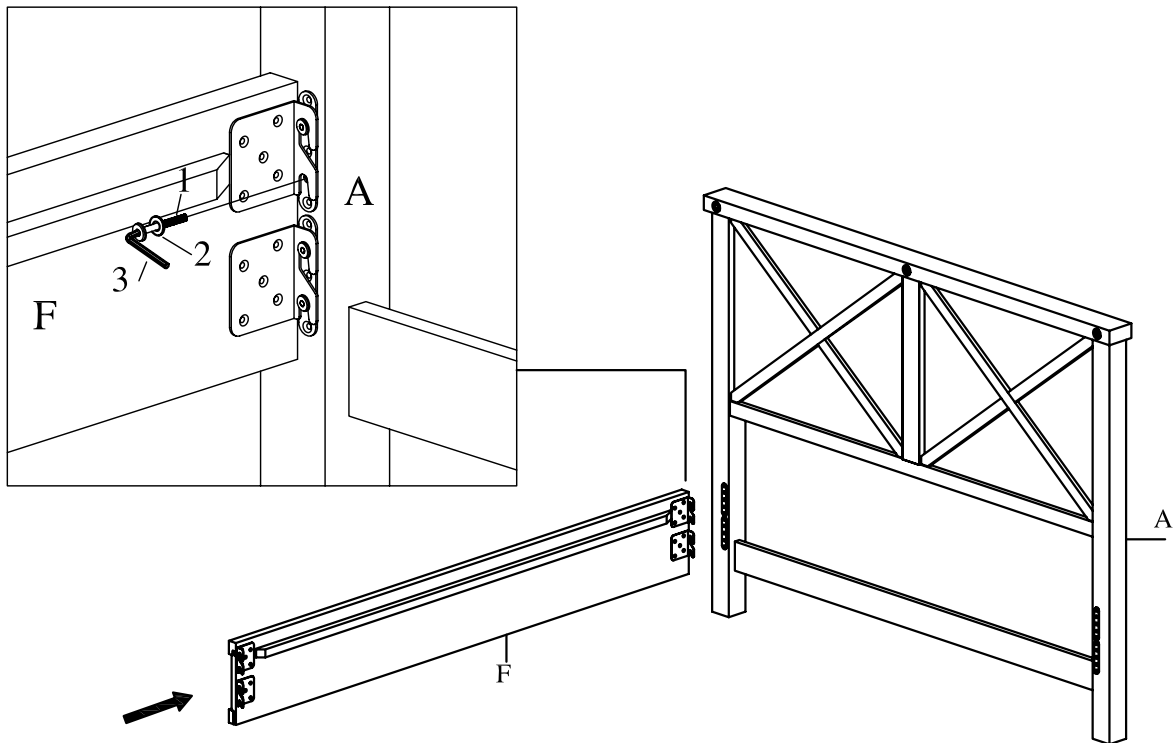

STEP 2:

FIX THE OTHER END OF THE SIDERAILS (F) TO THE FOOTBOARD (B) USING ALLEN KEY (3) AND ALLEN BOLT (1) AND WASHERS (2).


DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED

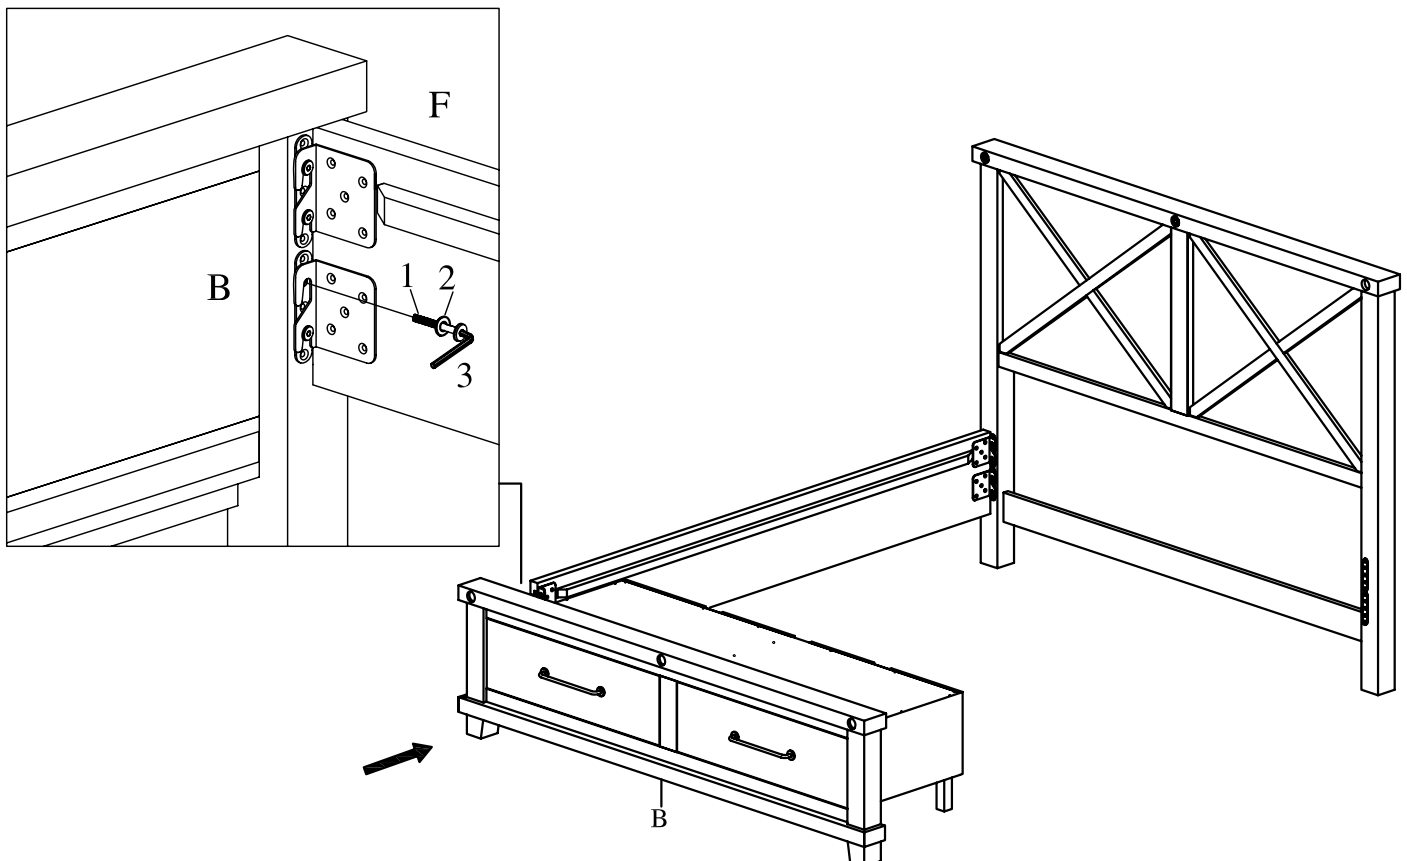

STEP 3:


FIX ONE OF THE SIDERAILS (F) TO THE HEADBOARD (A) AND FOOTBOARD (B) USING ALLEN KEY (3) AND ALLEN BOLT (1) AND WASHERS (2).

DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ASSEMBLY IS COMPLETED

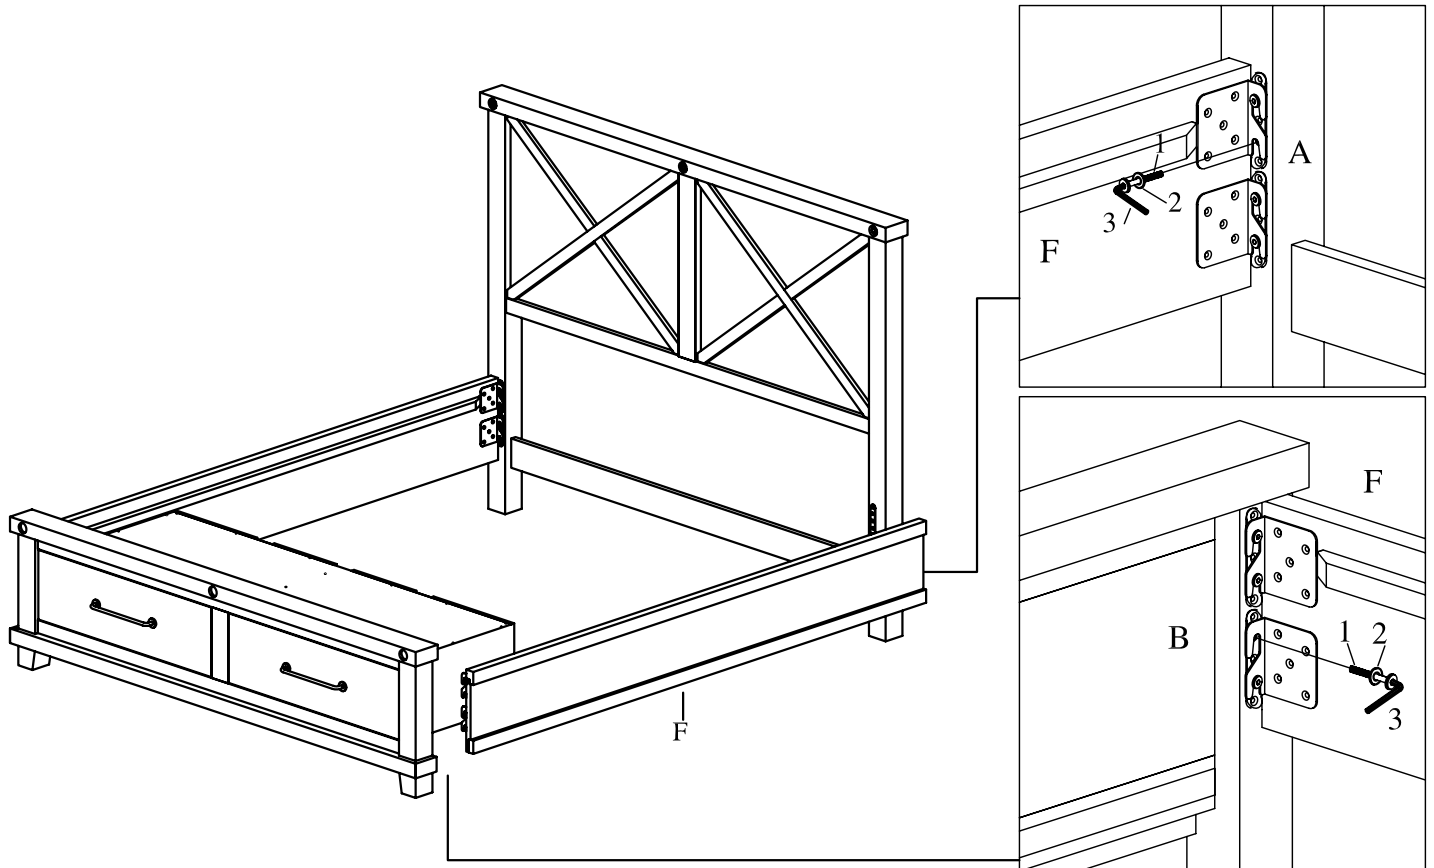


STEP 4:

ATTACH THE SLATS SUPPORT (D) TO THE BOTTOM SLATS (E) AND SLAT ROLL (C).

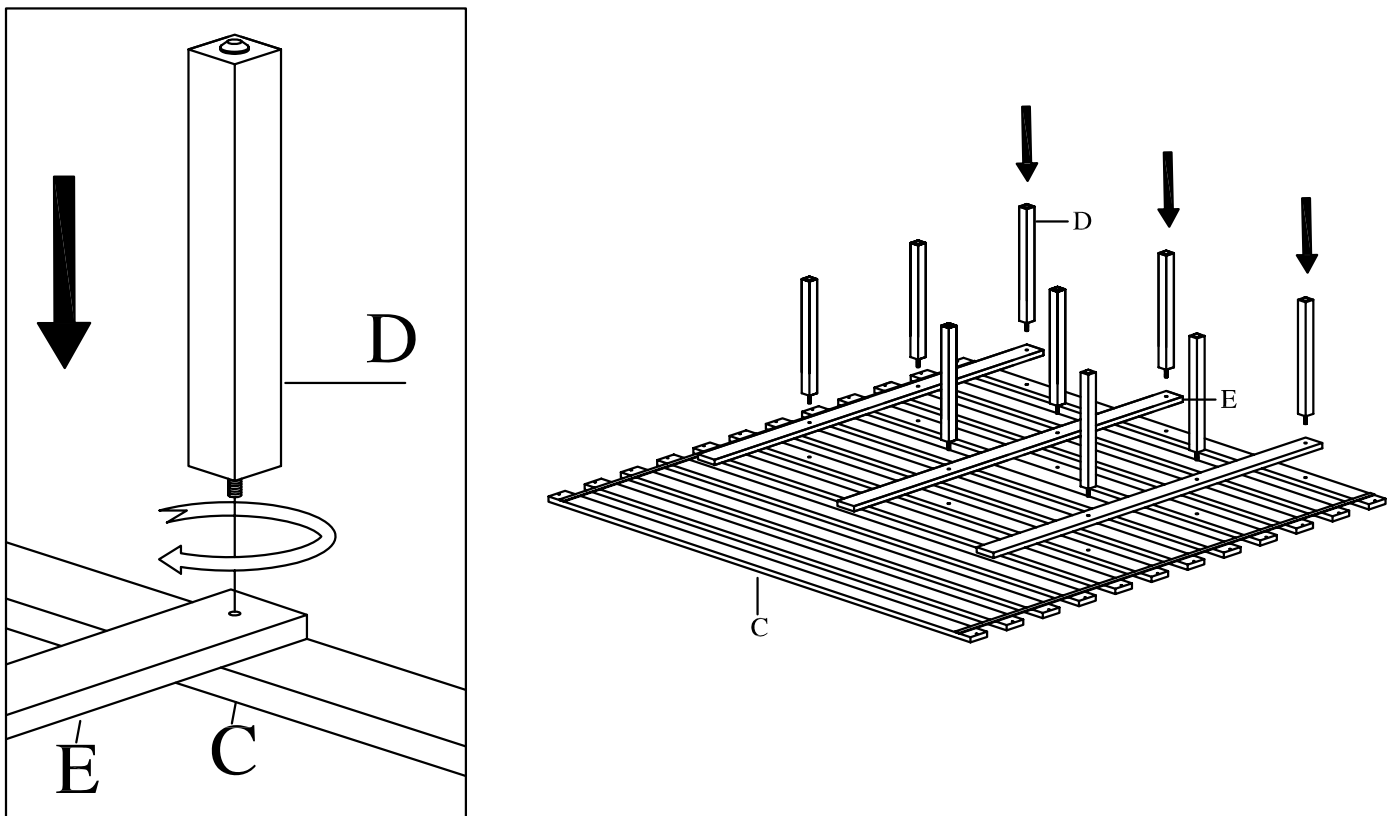

STEP 5:

FOLLOW THE ILLUSTRATION TO PLACE FIVE SLAT ROLL (C) ON THE BED FRAME. AND SECURE THE SLAT ROLL (C) USING WOOD SCREWS (4). USE THE PILOT HOLES ON THE SIDERAILS (C) AS YOUR REFERENCE FOR EASY ASSEMBLY.

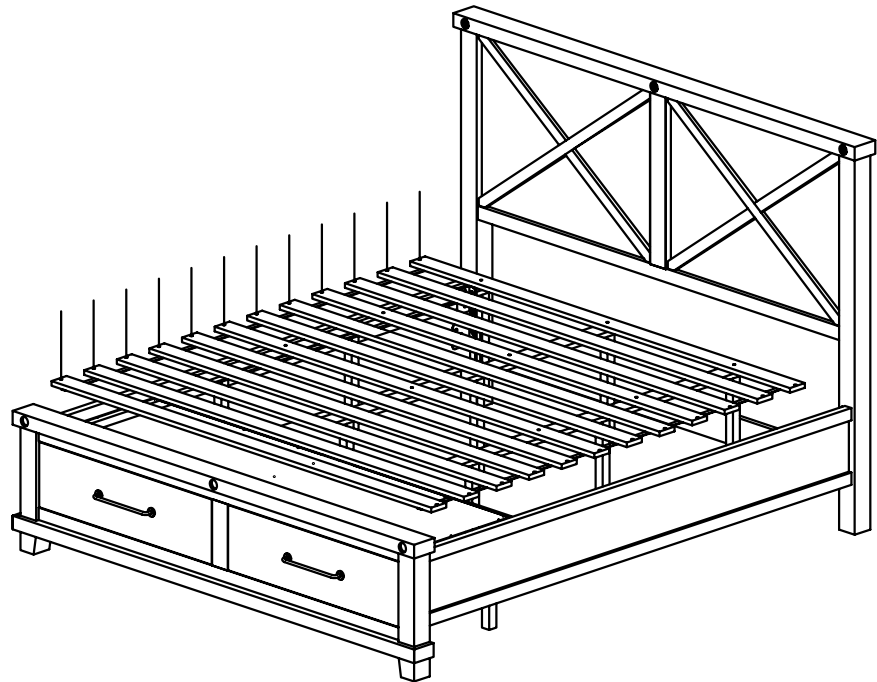

STEP 6:

ASSEMBLY COMPLETE

