
5402-025 AI

ASSEMBLY INSTRUCTION


Page 1/2

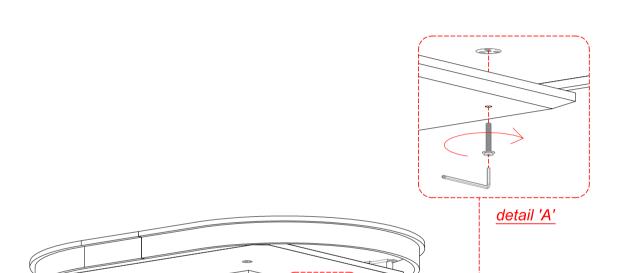

PACKING LIST:		
ITEM PARTS	Q'ty	U/M
P1. Top	1	Pc
P2. Leaf	1	Pc
P3. Base	1	Pc
HARD WARE		
Steel allen bolt & washer	4	Pcs
Steel allen open wrench	1	Pc

INSTRUCTIONS:

- 1. Assemble the base (P2) to the top (P1), then insert steel allen bolt & washer, use steel open allen wrench to turn clockwise direction securely. Refer detail 'A'
- 2. Item is ready to use.

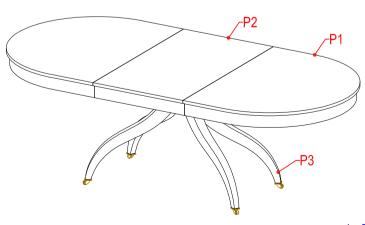

Le Tuan 6-Dec-14


5402-025 AI

ASSEMBLY INSTRUCTION

Page 2/2

WHEN OPEN LEAF

- -Open the lock of top panel (P1) see detail 'B', then open the top panel arrow guide. Refer sketch1.
- -Take the leaf panel (P2) out the top panel
- -Put the leaf panel (P2) to the top panel as per sketch 2, then close the top panel arrow guide and close the lock. Refer detail 'C'

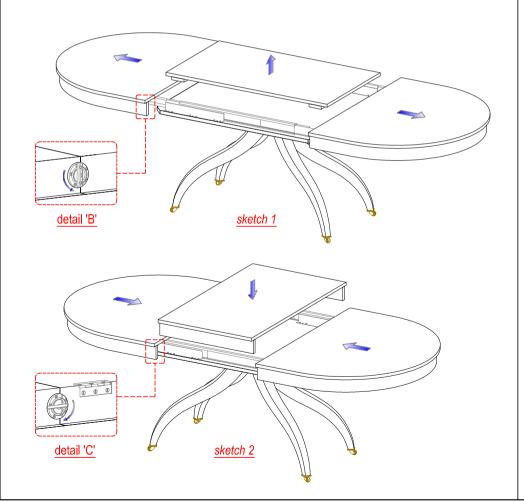

WHEN CLOSE LEAF

- -Open the lock of top panel (P1) and the leaf (P2) see detail 'D', then open the top panel arrow guide. Refer sketch 3.
- -Remove the leaf panel (P2) out the top panel
- -Put the leaf panel (P2) on the support top panel and leaf as per sketch 4, then close the top panel arrow guide and close the lock. Refer detail 'E'

