


# Top Assembly Instructions

**88 9100 106 C**  
Wood Top




**9100 Series**

## PART LIST




**W1.**  
Top  
1 pc.

## HARDWARE LIST



**X.**  
Top Support  
2 pcs.


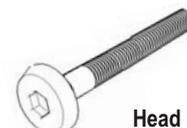


**Head Cap Bolt**  
6 pcs. (+1 extra)

# 9100 Series Top Assembly Instructions

## STEP 1

Put Top Support (X) into the pre-drilled holes, using Head Cap Bolts to attach it to the unit.

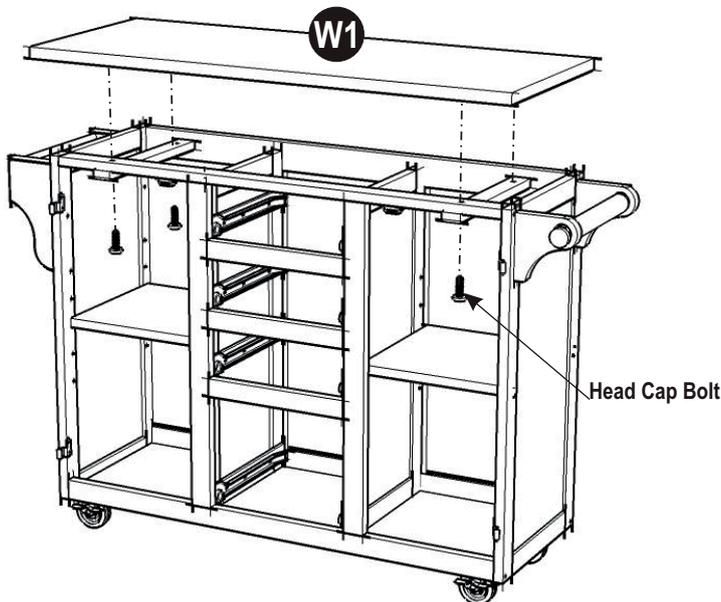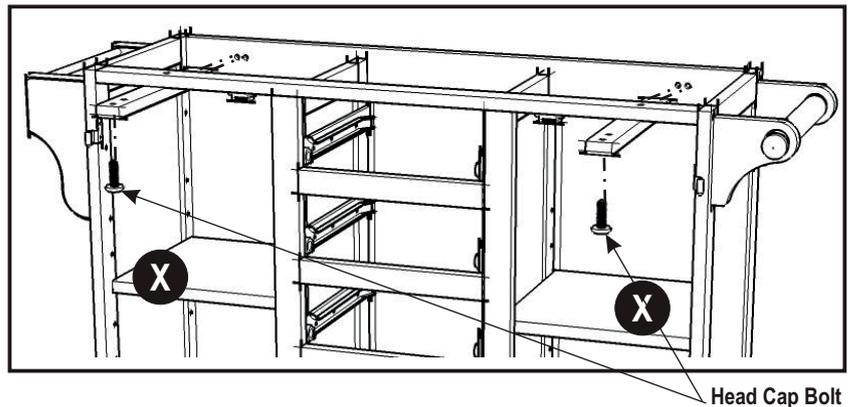

## STEP 2

Place Top (W1) onto the unit, then tighten up all Head Cap Bolts.

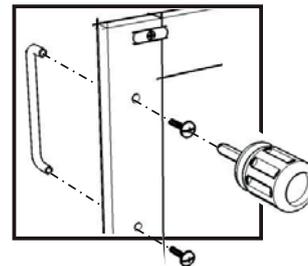


Figure 1

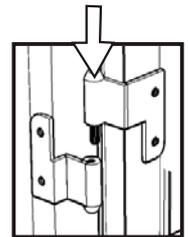


Figure 2

## STEP 3

Attach Pull Handles to Door (S) and (T), using Machine Screws. (See figure 1)

Attach Door (S) and (T) to Side Panel (A) and (B), slide the door lift hinges into the side panel lift hinges. (See figure 2)

Slide Drawers (U) and (V) into place.

