




ITEM NO: I222-422 Queen Uph HB
I222-402 Queen Rails w/ Decking
I222-403 Queen Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

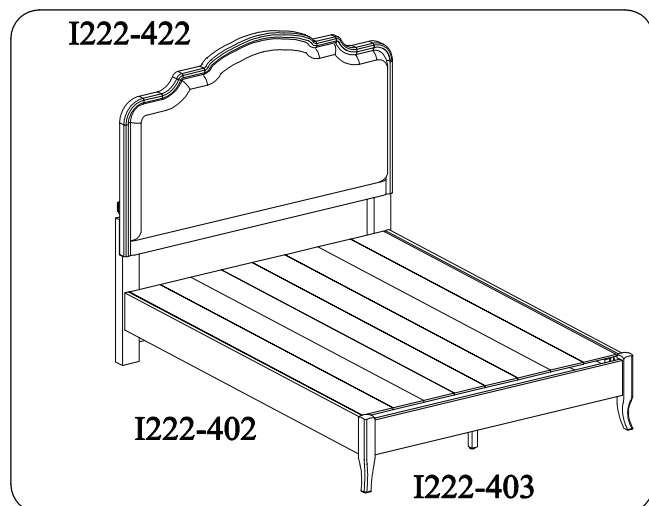

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST: I222-422

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-1/2"		10 PCS
B	Lock Washer Ø5/16"		10 PCS
C	Flat Washer Ø5/16" x 3/4"		10 PCS
D	Allen Wrench M4		1 PC

HARDWARE LIST: I222-402

No.	Description	Sketch	Quantity
E	Hanger Bolt Ø5/16" x 3"		8 PCS
F	Half Moon Washer Ø5/16"		8 PCS
G	Hex Nut Ø5/16"		8 PCS
H	Hex Wrench 13mm		1 PC
I	Wood Screw #4 x 1-1/4"		8 PCS

COMPONENTS LIST: I222-422

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC

COMPONENTS LIST: I222-402

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		4 PCS
3	Decking		8 PCS

COMPONENTS LIST: I222-403

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for slats)		4 Set


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I222-422 Queen Uph HB
I222-402 Queen Rails w/ Decking
I222-403 Queen Low Profile FB


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C).

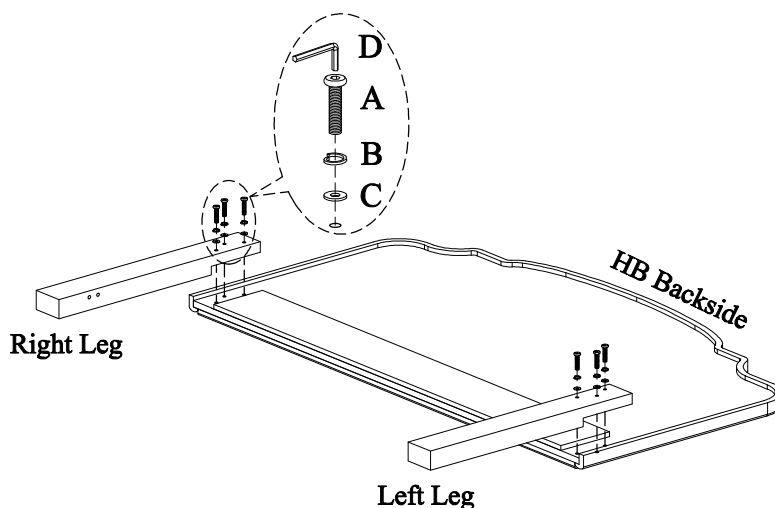

STEP 2: Attach the wood stretcher to the legs by using 4 bolts(A), lock washers(B) and flat washers(C).

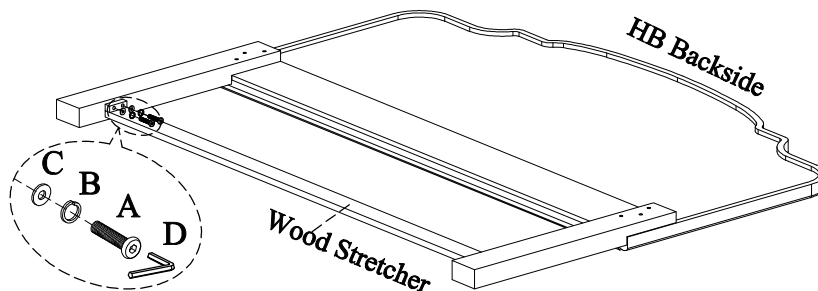

STEP 3: The side rails may be used on either side. Arrange the side rails so the slat bearers are in UPPER POSITION prior to attachment as OPTION 1 and the slat bearers are in LOWER POSITION prior to attachment as OPTION 2.

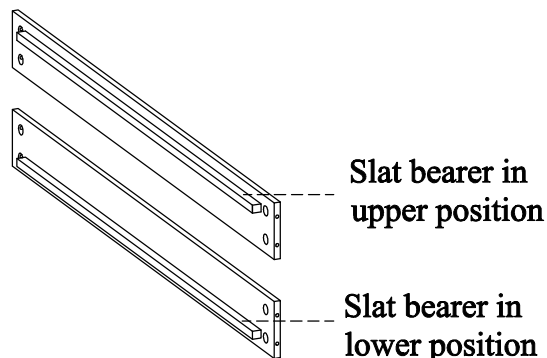




ITEM NO: I222-422 Queen Uph HB
I222-402 Queen Rails w/ Decking
I222-403 Queen Low Profile FB



OPTION 1: The side rails may be used on either side. Arrange the side rails so the slat bearers are in UPPER POSITION prior to attachment in STEP 4.

STEP 4: Screw the bolts(E) into HB & FB. Make sure the slat bearer is in the UPPER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washer(F) and hex nuts (G). Then use a hex wrench to tighten all the nuts.

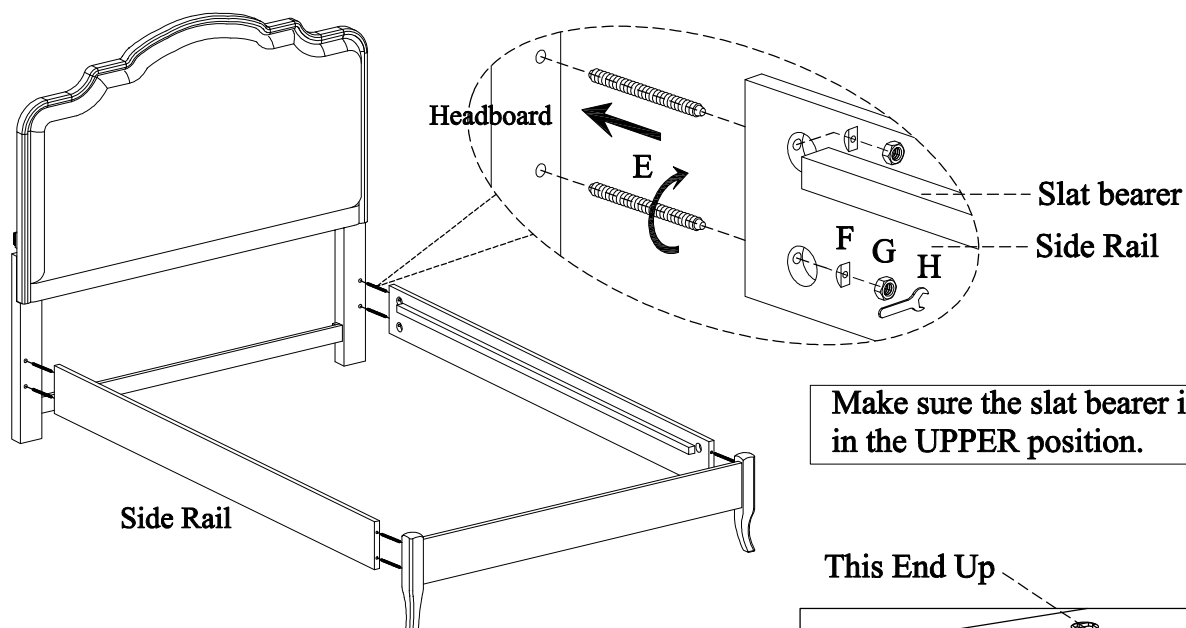

STEP 5: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

STEP 6: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (I).

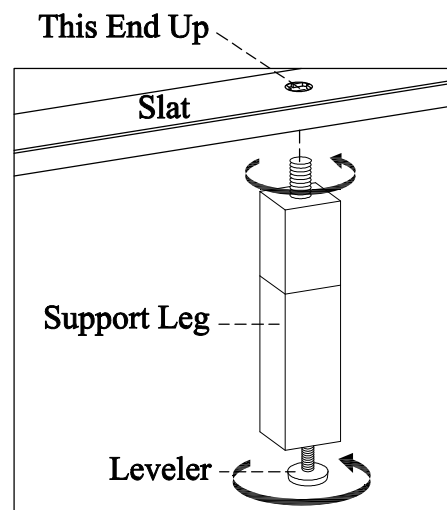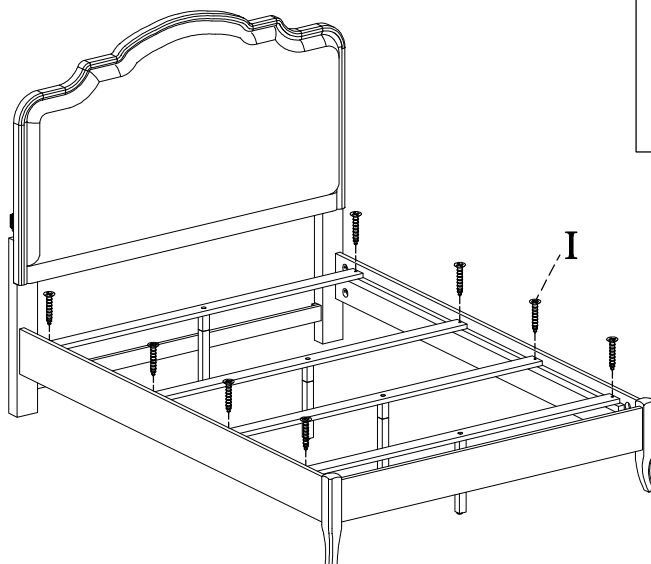




ITEM NO: I222-422 Queen Uph HB
I222-402 Queen Rails w/ Decking
I222-403 Queen Low Profile FB


STEP 7: Put the decking over the slats.

FUNCTIONALITY INSTRUCTION

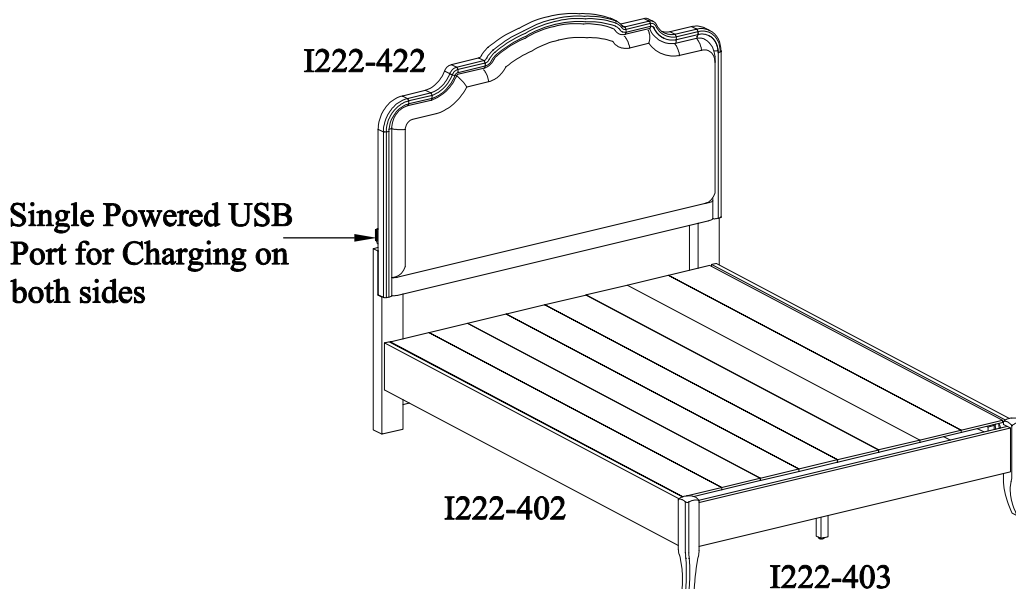

OPTION 2: The side rails may be used on either side. Arrange the side rails so the slat bearers are in LOWER POSITION prior to attachment in STEP 4.

STEP 4: Screw the bolts(E) into HB & FB. Make sure the slat bearer is in the LOWER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washer(F) and hex nuts (G). Then use a hex wrench to tighten all the nuts.


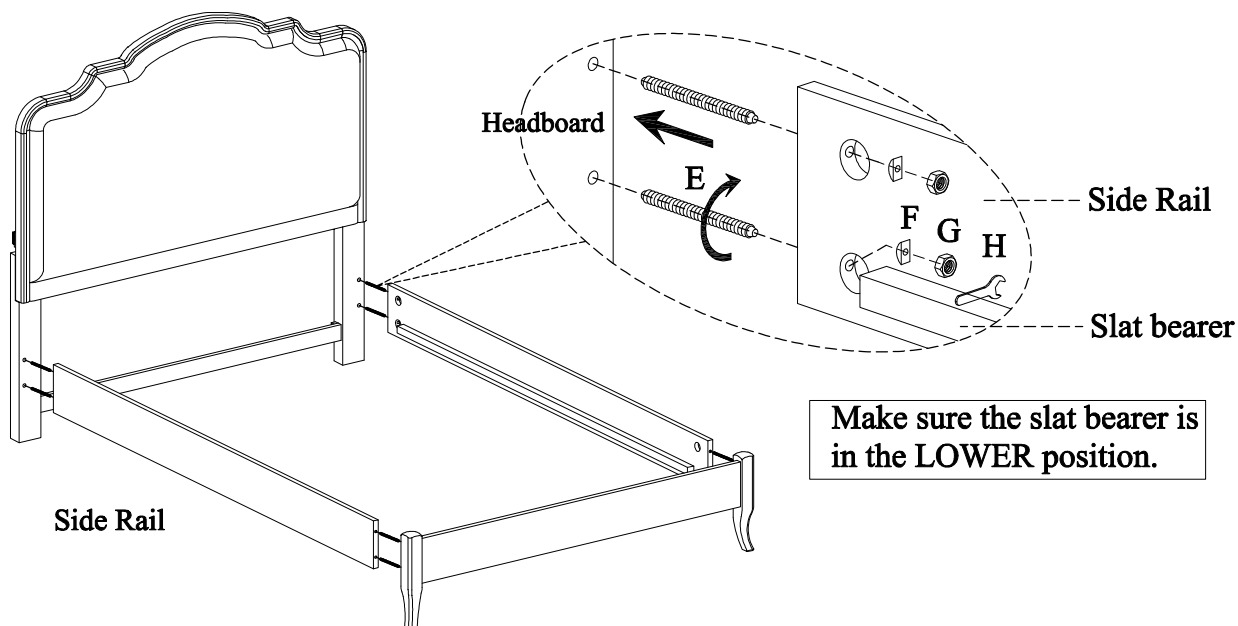





ITEM NO: I222-422 Queen Uph HB
I222-402 Queen Rails w/ Decking
I222-403 Queen Low Profile FB

STEP 5: Remove the support legs (top) as shown in the picture to the right. Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

STEP 6: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (I).

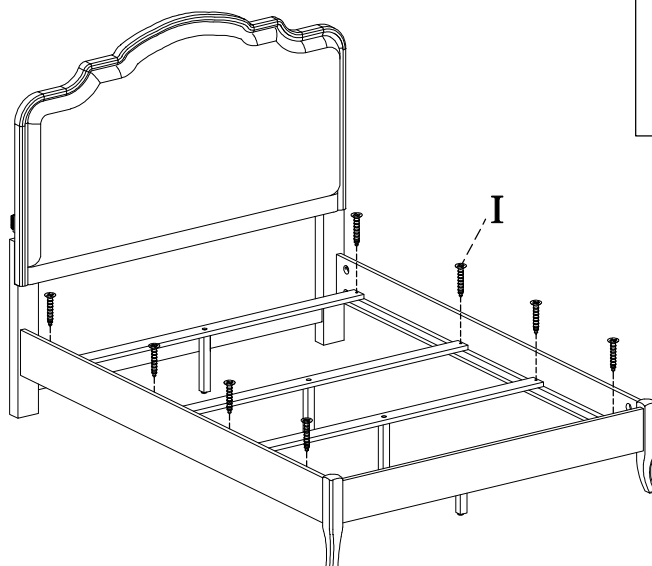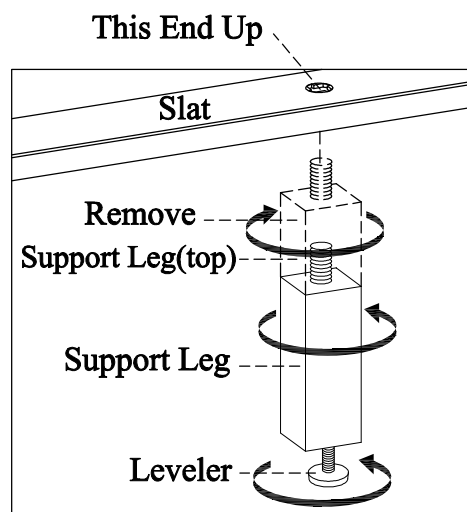

FUNCTIONALITY INSTRUCTION

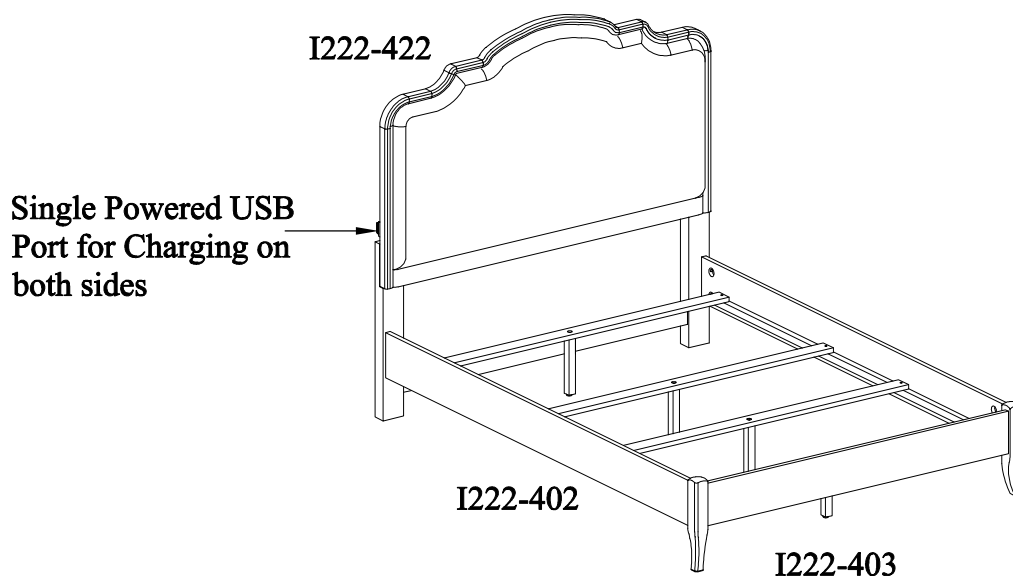




ITEM NO: I222-425 King Uph HB
I222-406 King Rails w/ Decking
I222-410 Cal King Rails w/ Decking
I222-407 King Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

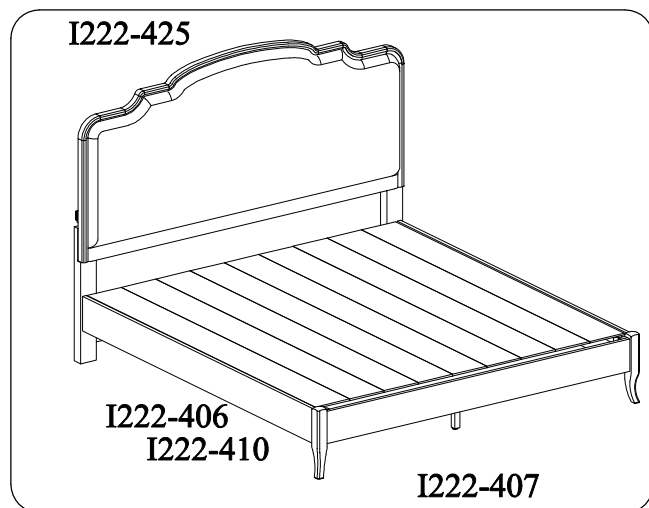

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST: I222-425

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-1/2"		10 PCS
B	Lock Washer Ø5/16"		10 PCS
C	Flat Washer Ø5/16" x 3/4"		10 PCS
D	Allen Wrench M4		1 PC

HARDWARE LIST: I222-406/410

No.	Description	Sketch	Quantity
E	Hanger Bolt Ø5/16" x 3"		8 PCS
F	Half Moon Washer Ø5/16"		8 PCS
G	Hex Nut Ø5/16"		8 PCS
H	Hex Wrench 13mm		1 PC
I	Wood Screw #4 x 1-1/4"		10 PCS
J	Wood Cap (only for 410)		8 PCS

COMPONENTS LIST: I222-425

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC

COMPONENTS LIST: I222-406

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Decking		9 PCS

COMPONENTS LIST: I222-410

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Decking		8 PCS

COMPONENTS LIST: I222-407

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for slats)		5 Set


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I222-425 King Uph HB
I222-406 King Rails w/ Decking
I222-410 Cal King Rails w/ Decking
I222-407 King Low Profile FB


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C).

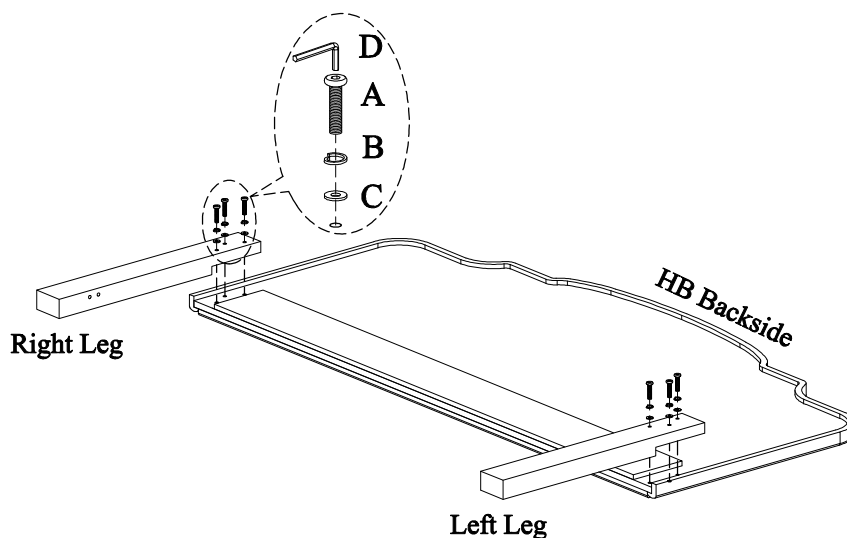

STEP 2: Attach the wood stretcher to the legs by using 4 bolts(A), lock washers(B) and flat washers(C).

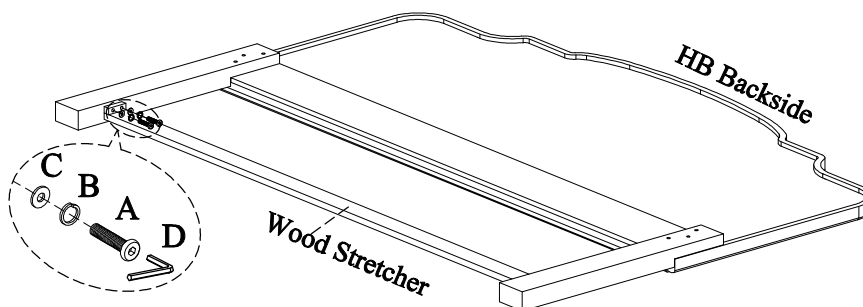

STEP 3: The side rails may be used on either side. Arrange the side rails so the slat bearers are in UPPER POSITION prior to attachment as OPTION 1 and the slat bearers are in LOWER POSITION prior to attachment as OPTION 2.

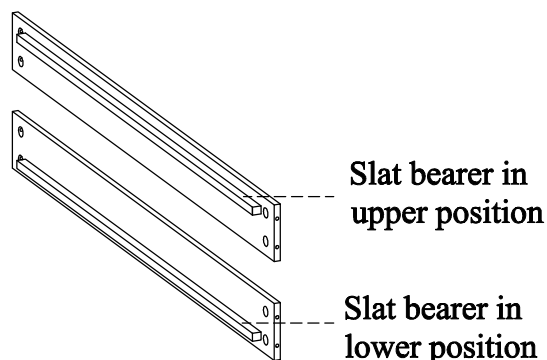




ITEM NO: I222-425 King Uph HB
I222-406 King Rails w/ Decking
I222-410 Cal King Rails w/ Decking
I222-407 King Low Profile FB


OPTION 1: The side rails may be used on either side. Arrange the side rails so the slat bearers are in UPPER POSITION prior to attachment in STEP 4.

STEP 4: Screw the bolts(E) into HB & FB. Make sure the slat bearer is in the UPPER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washer(F) and hex nuts (G). Then use a hex wrench to tighten all the nuts.

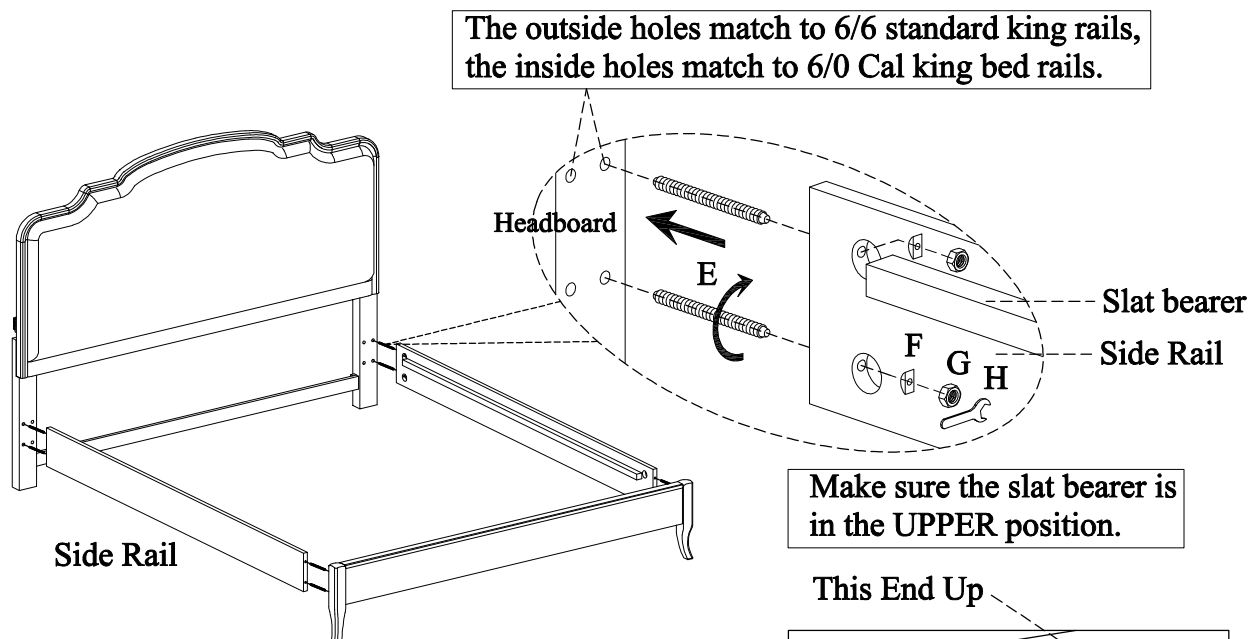

STEP 5: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

STEP 6: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (I).

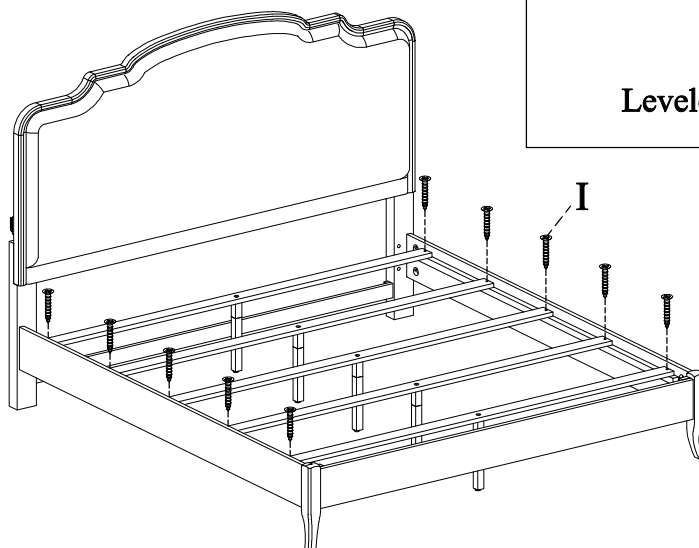




ITEM NO: I222-425 King Uph HB
I222-406 King Rails w/ Decking
I222-410 Cal King Rails w/ Decking
I222-407 King Low Profile FB


STEP 7: Put the decking over the slats.

STEP 8: For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

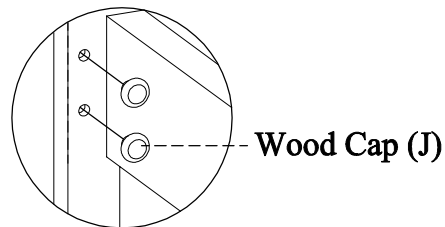

FUNCTIONALITY INSTRUCTION

I222-425

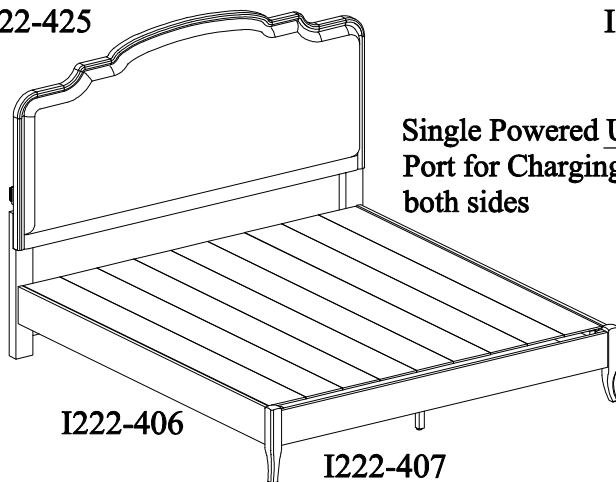


I222-406

I222-407

Standard king bed

I222-425

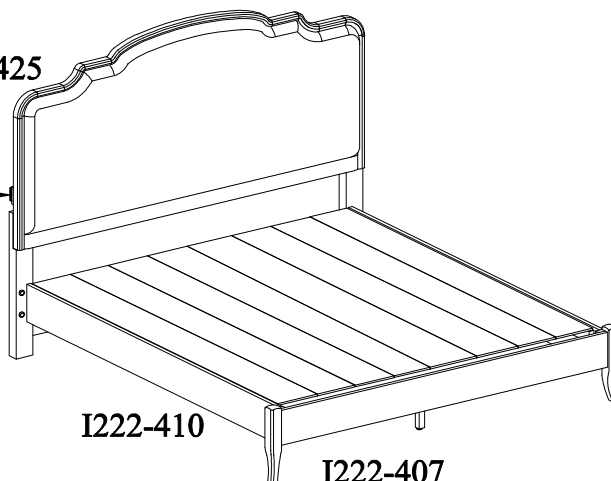

I222-410

I222-407


Cal king bed

Single Powered USB
Port for Charging on
both sides

OPTION 2: The side rails may be used on either side. Arrange the side rails so the slat bearers are in LOWER POSITION prior to attachment in STEP 4.

STEP 4: Screw the bolts(E) into HB & FB. Make sure the slat bearer is in the LOWER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washer(F) and hex nuts (G). Then use a hex wrench to tighten all the nuts.

The outside holes match to 6/6 standard king rails,
the inside holes match to 6/0 Cal king bed rails.

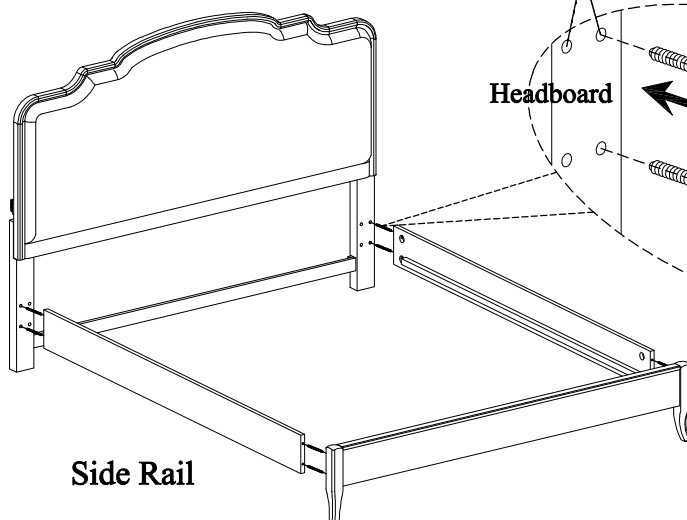

Side Rail

Headboard

E

F

G

H

Side Rail

Slat bearer



Make sure the slat bearer is
in the LOWER position.




ITEM NO: I222-425 King Uph HB
I222-406 King Rails w/ Decking
I222-410 Cal King Rails w/ Decking
I222-407 King Low Profile FB

STEP 5: Remove the support legs (top) as shown in the picture to the right. Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

STEP 6: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (I).

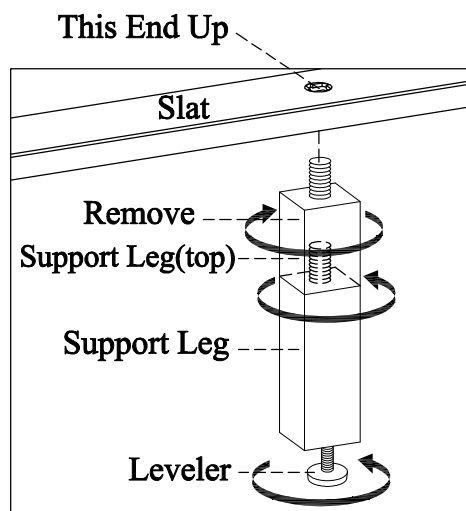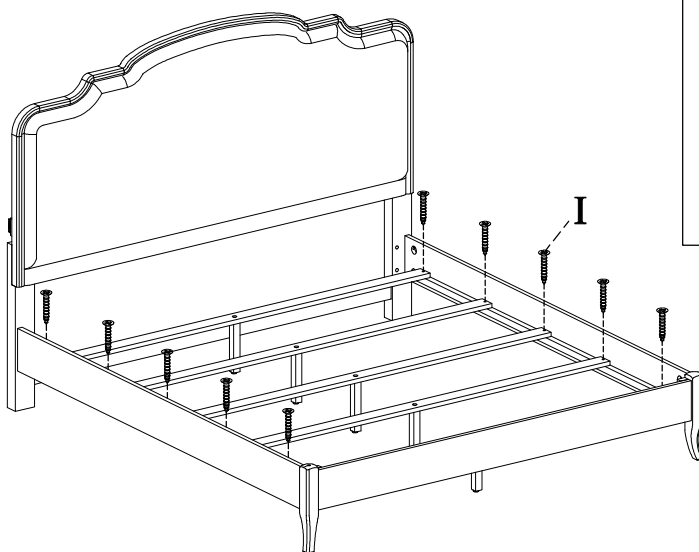


STEP 7: For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

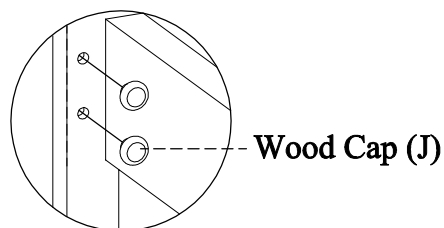

FUNCTIONALITY INSTRUCTION

I222-425

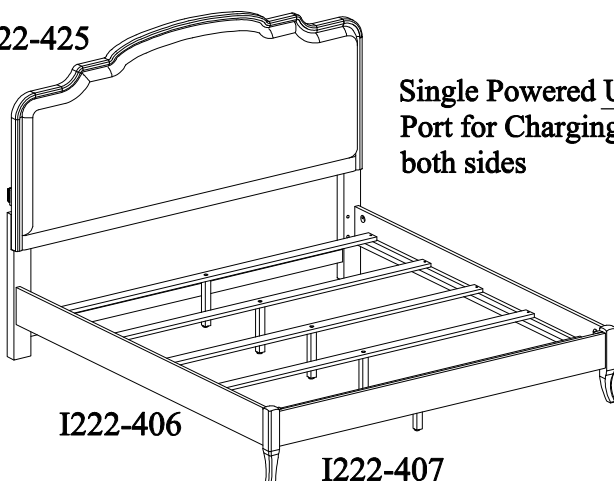


I222-406

I222-407

Standard king bed

I222-425

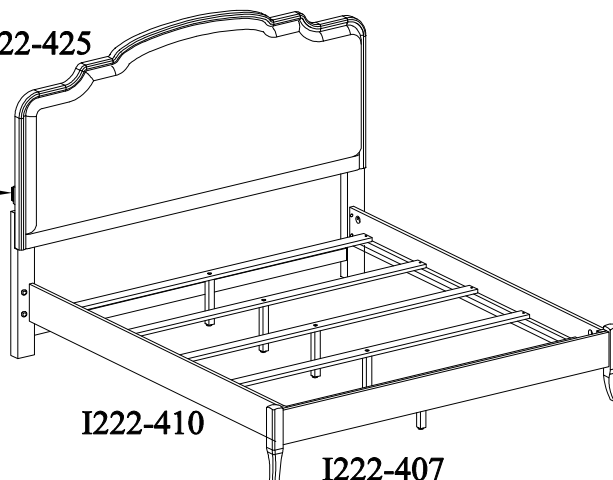

I222-410

I222-407

Cal king bed

Single Powered USB
Port for Charging on
both sides