

M113-019-102-122-H/F/R REMIX WOOD QUEEN / KING / CAL KING BED


CARACOLE MODERN

ASSEMBLY INSTRUCTIONS

TWO(2)PEOPLE AND PHILIP'S SCREWDRIVER REQUIRED

UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

- 1) Connect the side rail and headboard/footboard by bolt (F).
- 2) Assemble the side rail and headboard/footboard using the curved washer (A), flat washer (B), lock washer (C), and nut (D) by wrench (E), as shown in Diagram A.
 - * Before installing the Support Slat, determine the desired height of the side rails cleats and brackets on both headboard and footboard. The cleats have been pre-installed to the lower position (box spring level). Please see FIGURE 01.
- 3) Mount the Slats onto the cleat of Side rails with screws (H). Use a Phillips Head Screwdriver to tighten screws, as shown in Diagram B.
- 4) Stick the Bumper(G) on the legs of the Headboard and Footboard
- 5) For the slats of cal king bed only: the slats should be rotated at tilt position to install, then secure the Slats to the pre-installed L bracket with the screws (I) by screwdriver (not included), as shown in Diagram D.

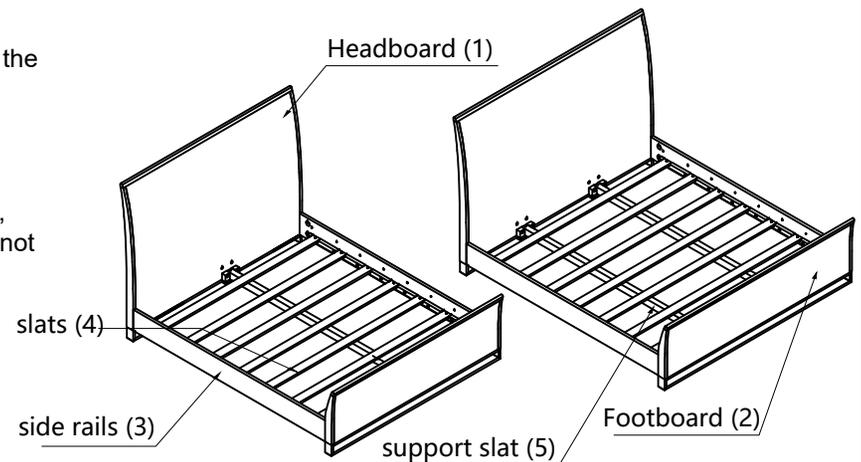

*** NOTE KEEP THIS SHEET!!! ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

Part Description	M113-019-102 Queen Bed		M113-019-122 King bed		M113-019-142 Cal King bed	
	Part No.	QTY	Part No.	QTY	Part No.	QTY
Headboard (1)	M113-019-102-H	1	M113-019-122-H	1	M113-019-122-H	1
Footboard (2)	M113-019-102-F	1	M113-019-122-F	1	M113-019-122-F	1
Side rail (3)	M113-019-102-R	2	M113-019-122-R	2	M113-019-142-R	2
Slat (4)	M113-019-102-3017	7	M113-019-122-3017	7	M113-019-142-3017	7
Slat Support (5)	M113-019-102-3018	1	M113-019-122-3018	2	M113-019-142-3018	2
RTA Hardware(6)	M113-019-102-3001	1	M113-019-122-3001	1	M113-019-142-3001	1
RTA Hardware(7)	M113-019-102-30011	1	M113-019-122-30011	1	M113-019-142-30011	1

RTA Hardware(6)			
NO.	Hardware List	Q'ty	
A	Curved Washer	8	
B	Flat Washer	8	
C	Lock Washer	8	
D	Nut	8	
E	Wrench	1	
F	Bolt	8	
G	Bumper	8	

RTA Hardware(7)				
NO.	Hardware List	Q'ty(Queen bed)	Q'ty(King bed)	Q'ty(Cal bed)
H	Screw(#8x25)	16	18	18
I	Screw(#7x15)			14