



**By Sorelle - A Division of C&T International, Inc.**  
46 Whelan Road, East Rutherford, N. J. 07073 U. S. A.  
Tel, +1(201)531 1919 Fax, +1(201)531 1920  
Website: [www.sorellefurniture.com](http://www.sorellefurniture.com)

# **Berkley 4 Drawer Chest**


## **Assembly Instruction**




### **Important Information:**

Read all instructions **BEFORE** assembling crib.  
**KEEP INSTRUCTIONS FOR FUTURE USE.**


## Assembly Parts

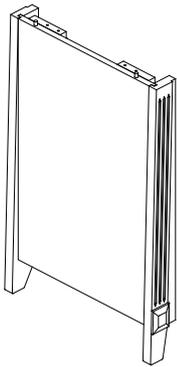


(A) Left Side Panel (x1)

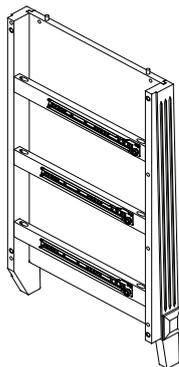


(B) Right Side Panel (x1)

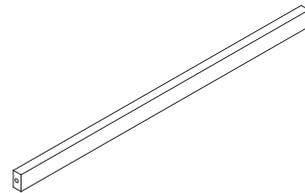


(C) Front - Top Rail(x1)

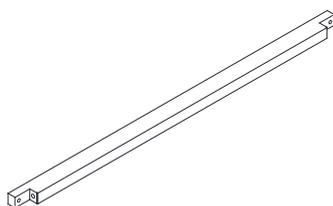


(D) Front-Middle Rail (x3)

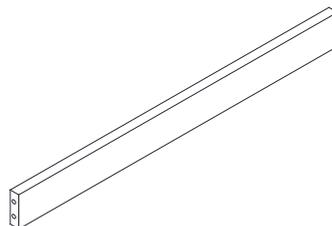


(E) Front- Bottom Rail (x1)

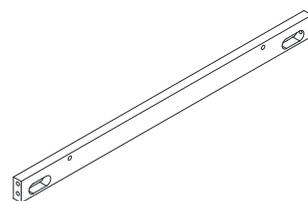


(F) Rear - Top Rail (x1)

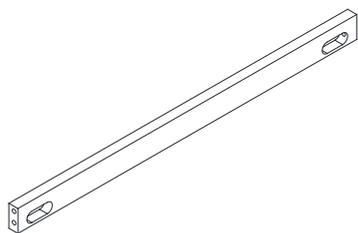


(G) Rear - Middle Rail (x1)

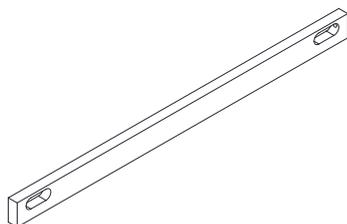


(H) Rear - Bottom Rail (x1)

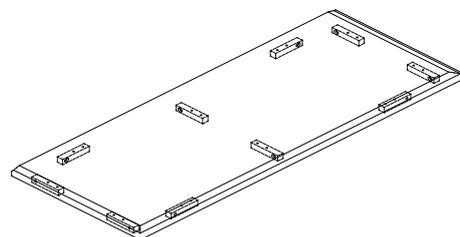


(I) Top Panel (x1)

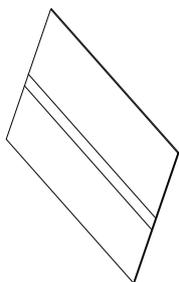


(J) Back Panel (x1)

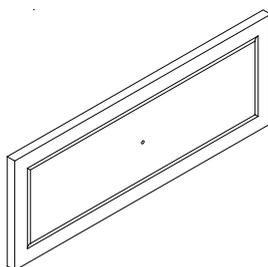


(R) Drawer Front (x4)

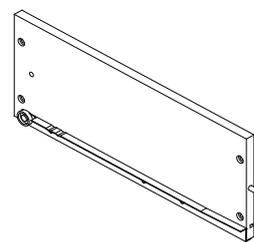


(R1) Drawer Left (x4)

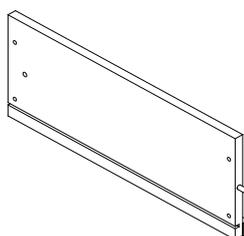


(R2) Drawer Right (x4)

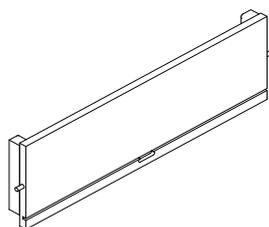

(R3) Drawer Back (x4)

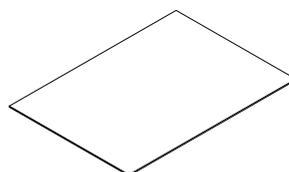


(R4) Drawer Bottom (x4)

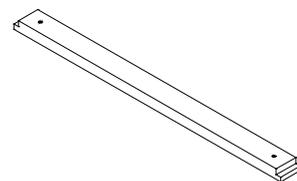

(R5) Drawer Support (x4)

**Assembly Parts**

**Hardware list**




(a) 1/4" x 1-3/8"mm Allen bolt (10 pcs)



(b). Spring Washer ( 16 pcs)



(c) Flat Washer (16 pc)



( d ) Plastic Connector (8 pcs)




( e ) Knob (x8)



( f ) 5/32 x 1"mm Allen bolt (8pcs)



(g) 8\*25 Drawer Screw (32 pcs)




( h ) Metal Connector B (4 pcs)




( i ) Metal Connector A (4pcs)



( j ) 7\*12 Drawer Screw (12 pcs)




( k ) 8\*15 Back Panel Screw (24 pcs)

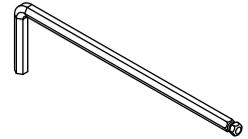


(l) Allen Key (1 pc)



(m) Wall Strap Kit (1 pc)

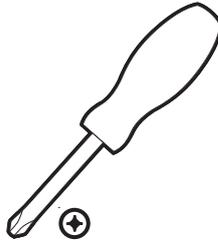

( n ) Screwdriver (1 pc)



(o) 1/4" x 1-1/8"mm Allen bolt (6 pcs)

**Berkley Double Dresser Assembly**

① Attach Rails to Right Panel (B) as Figure 1.

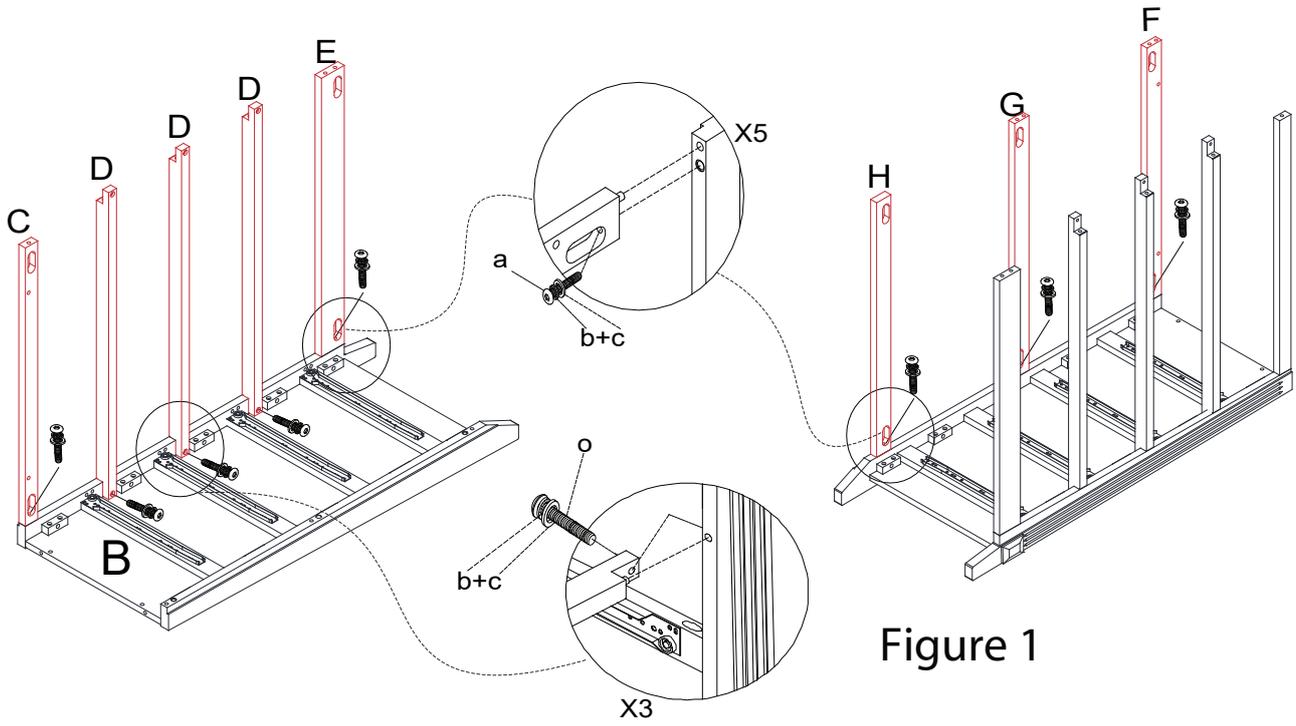


Figure 1

② Attach left side panel (A) to Rails as Fig.2


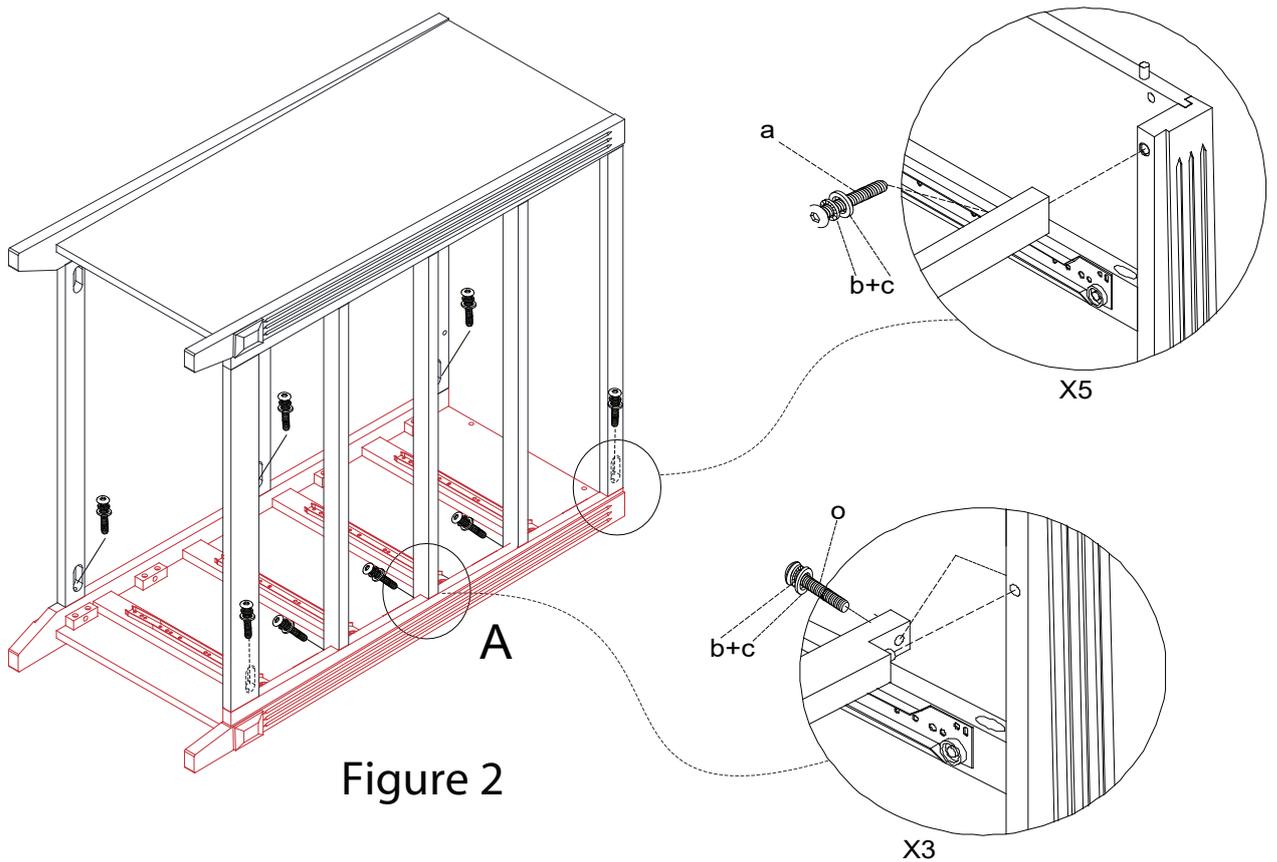


Figure 2


**Berkley Double Dresser Assembly**

- ③ Attach Top Panel (J) to Side panel as Figure 3.

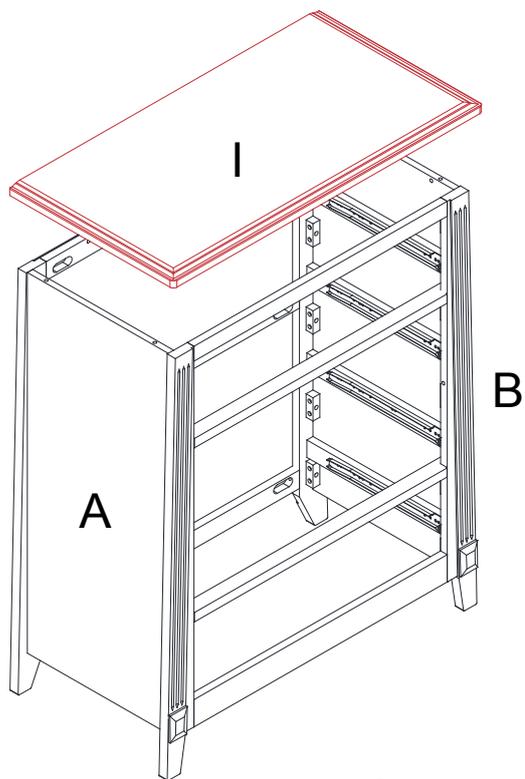

**Figure 3**


- ④ Attach Top Panel (I) to Side panels by using 8 Plastic Connector (d) as Figure 4.

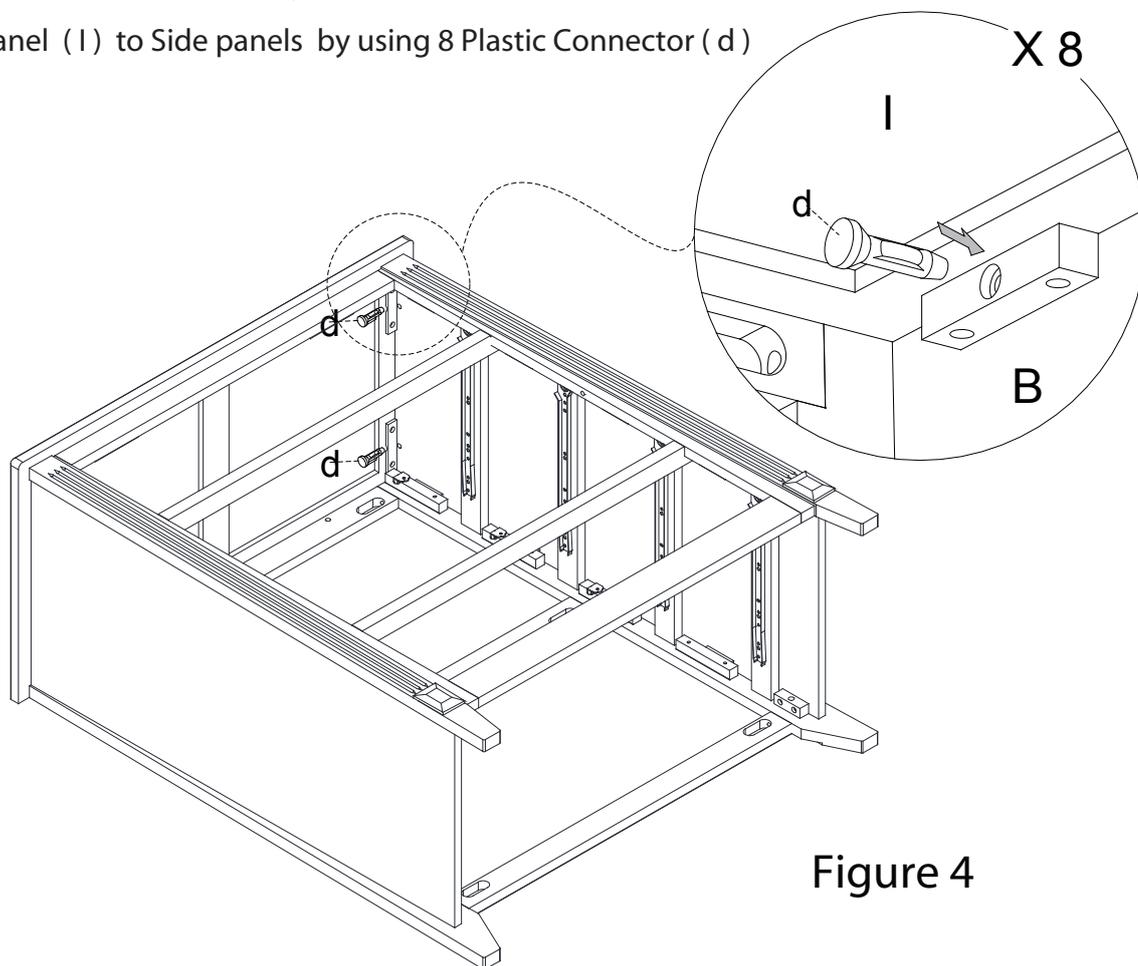


**Figure 4**

**Drawer Assembly**



1. Working on a padded flat surface, attach Drawer Sides (R1&R2) to Drawer Back (R3) with Philips Head Screw(g). *Figure 1*

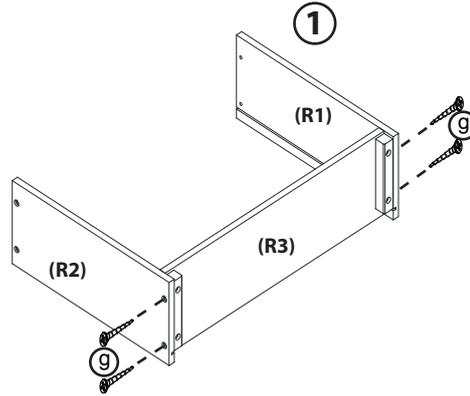

2. Slide Drawer Bottom (R4) and into drawer Bottom Support (R5) assembly. *Figure 2*

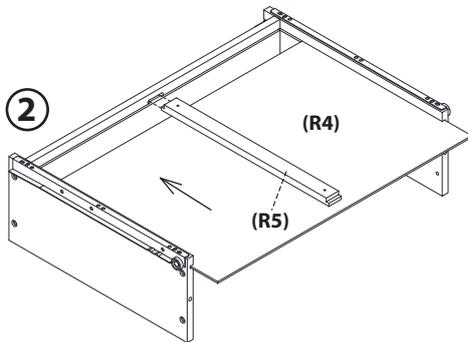


3. Secure both sides of Drawer Front (R) to drawer assembly with four (4) Screws (g). *Figure 3.*

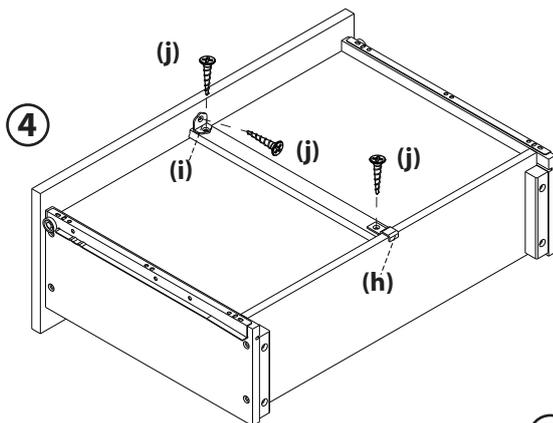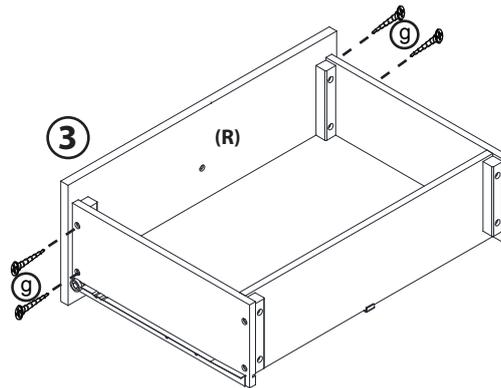

4. Attach Metal Connector A (i) and Metal Connector B (h). *Figure 4*

5. Using Drawer Knob Screw ( f ) , install one (1) Knob ( e ) on Drawer. *Figure 5.*

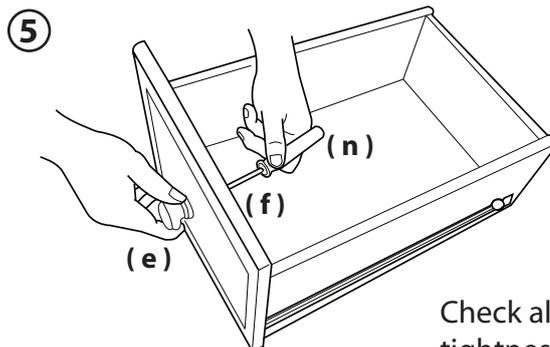

**Repeat for all drawers.  
Set drawers aside for later use.**

Check all screws for tightness.

## Berkley Double Dresser Assembly

- ⑥ Assembly the drawer as Figure 6.

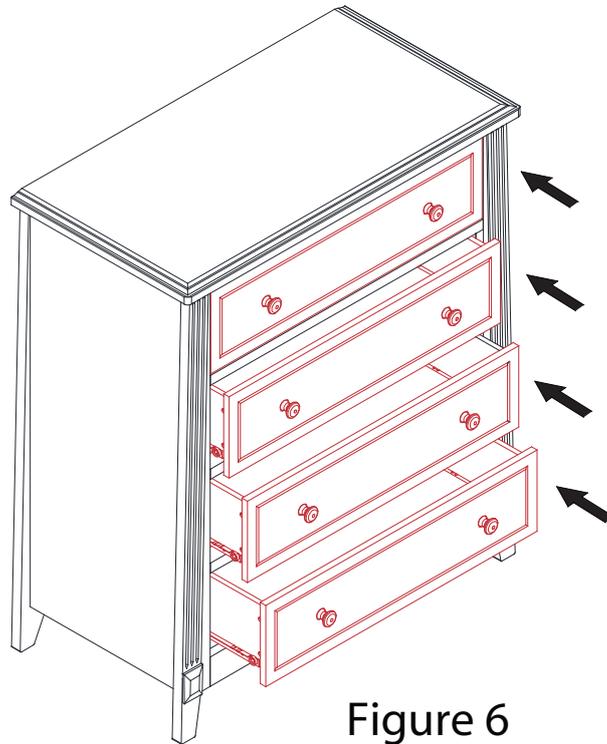


Figure 6

- ⑦ Use 24 pcs Wood Screws (d) to attach the Back Panel (K) to the dresser As shown in Figure 7..

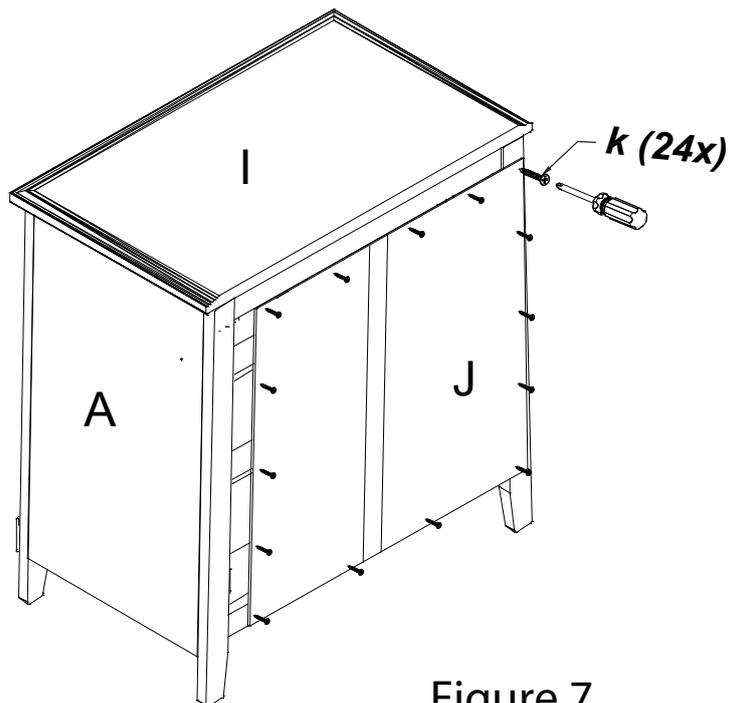


Figure 7