

**ASSEMBLY TIPS:**


1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



**Warning !**


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

**PARTS IDENTIFICATION:**


A		1PCS
B		2PCS
C		2PCS
D		1PCS
E		1PCS
F		1PCS
G		1PCS
H		4PCS

**CDEPS:**


NO	DESCRIPTION	FIGURE	QRY
I	Threaded rod (M8*70mm)		14PCS
J	Wrench		1PCS
K	Hexagonal nut (M8)		14PCS
L	Flat washer (M8)		15PCS
M	Bolt (M8*60mm)		5PCS
N	Allen key (M5)		1PCS
O	Screw (M3)		2PCS

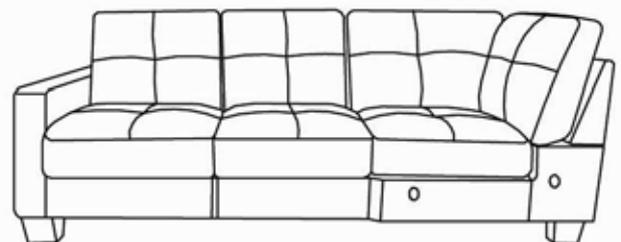


STEP:1

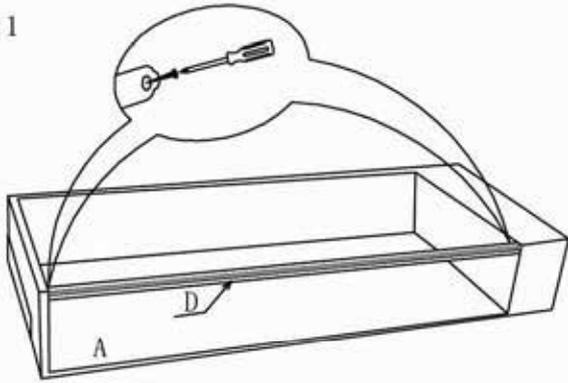


STEP:2

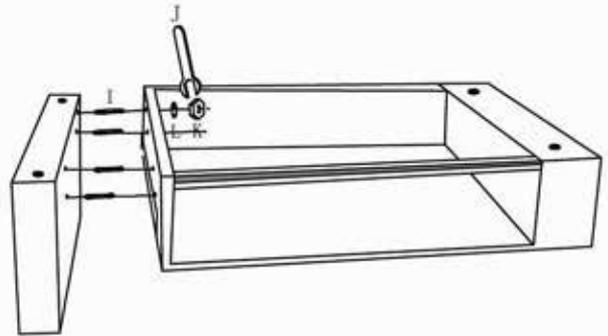


STEP:3

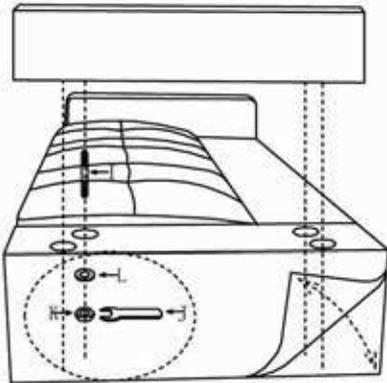


STEP:4

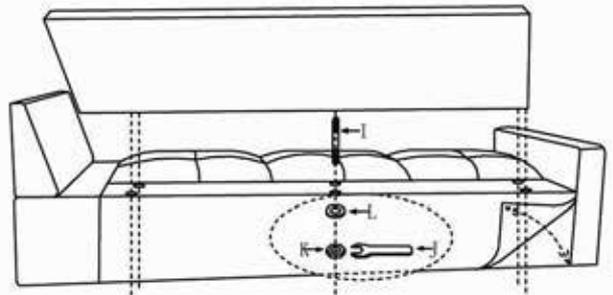


STEP:5

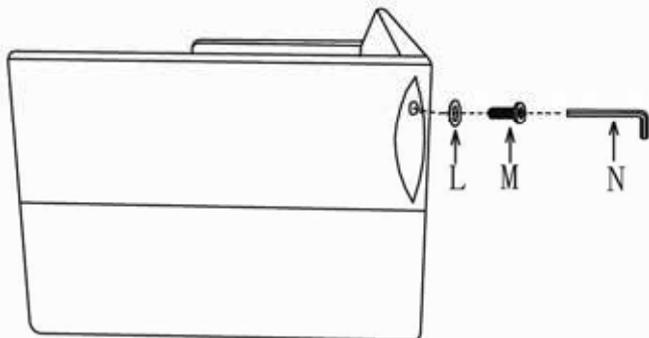

STEP:6

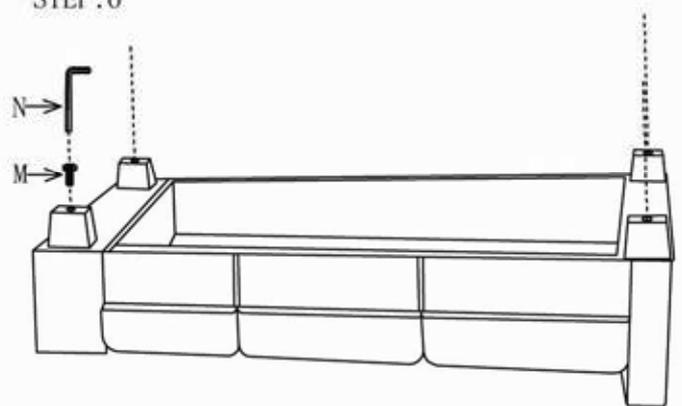

STEP:7

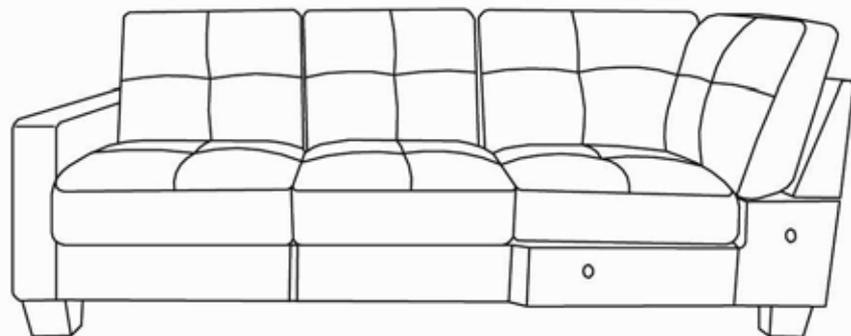

**ASSEMBLY TIPS:**


1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



**Warning !**


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

**PARTS IDENTIFICATION:**


A		1PCS
B		3PCS
C		1PCS
D		1PCS
E		1PCS
F		3PCS

**CDEPS:**


NO	DESCRIPTION	FIGURE	QRY
G	Threaded rod (M8*70mm)		12PCS
H	Wrench		1PCS
I	Hexagonal nut (M8)		12PCS
J	Flat washer (M8)		12PCS
K	Bolt (M8*60mm)		3PCS
L	Allen key (M5)		1PCS
M	Screw (M3)		2PCS

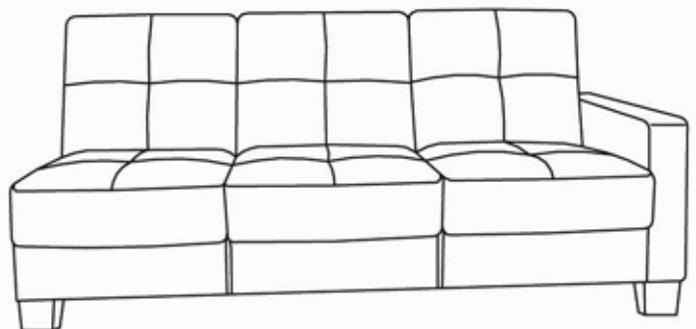


STEP:1

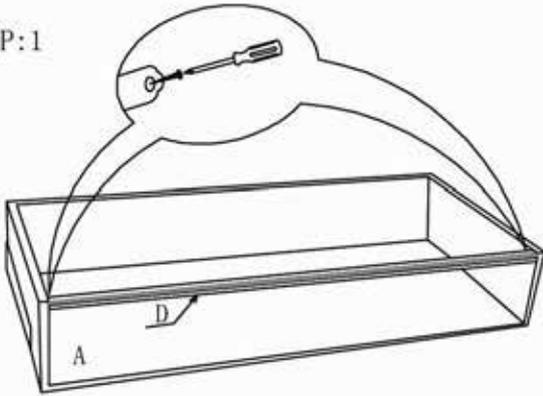


STEP:2

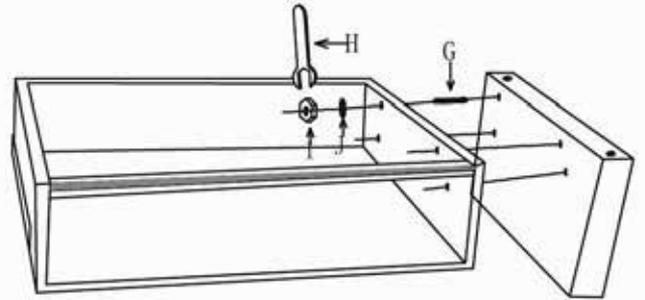


STEP:3

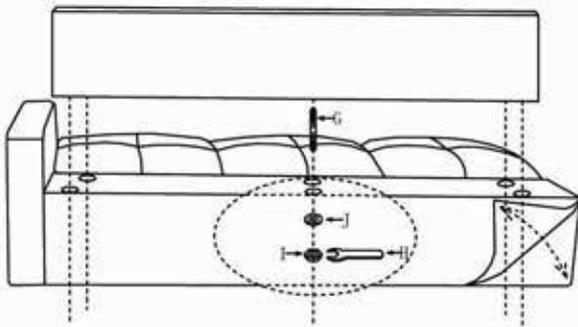


STEP:4

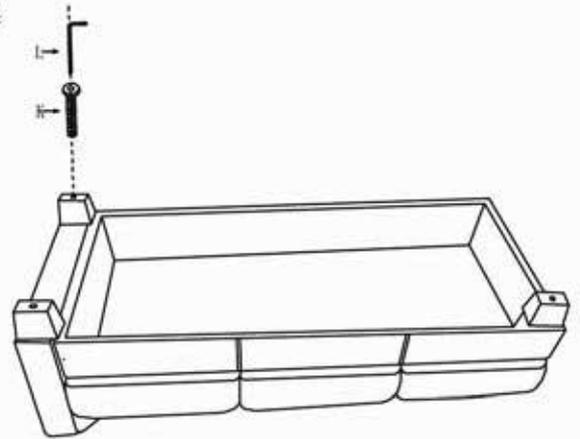

STEP:5

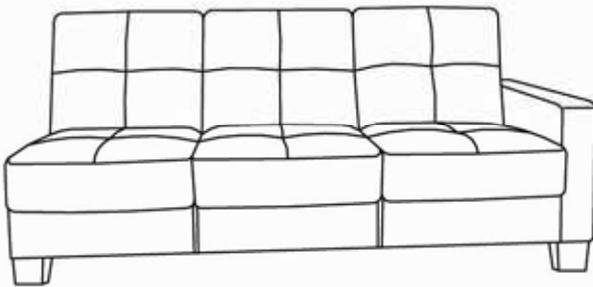

STEP:7

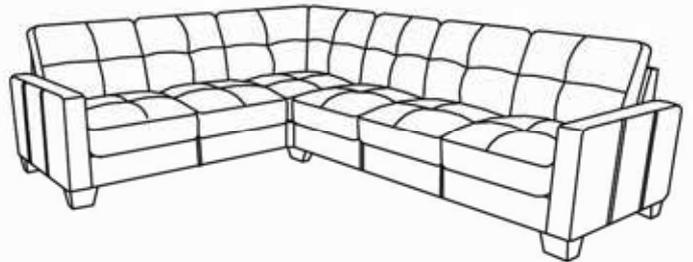

STEP:6

